

# M14

## SEMI & FULL AUTOMATIC AIRSOFT RIFLE

### WARNING :

Sale restricted to ADULTS ONLY, 18 years of age or older. Proof of age required at the moment of purchase. SALES PERSONNEL - CHECK PICTURE ID PRIOR TO SALE OF THIS PRODUCT. This airsoft gun is intended for recreational or training purposes. Do not aim or shoot at other people or domestic animal. Protective goggles and mouth protection MUST be worn when operating this airsoft gun. Misuse may cause serious injury, especially to the eyes. The owner /user should adhere to all federal and state laws governing the ownership and use of airsoft guns. CONSULT YOUR LOCAL LAW ENFORCEMENT AGENCY PRIOR TO USE. MISUSE OR UNSAFE USE MAY RESULT IN SEVERE INJURIES OR DEATH. THIS IS AN AIR OPERATED AIRSOFT GUN INTENDED FOR USE ONLY BY ADULTS OR MINORS UNDER CLOSE ADULT SUPERVISION. READ THE INSTRUCTION MANUAL CAREFULLY BEFORE USE. ANY ALTERATION AS TO THE COLORATION AND/OR MARKING OF THIS PRODUCT TO MAKE THIS PRODUCT LOOK MORE LIKE A FIREARM IS DANGEROUS, MAY CAUSE CONFUSION, MAY BE MISTAKEN TO BE A REAL FIREARM BY LAW ENFORCEMENT OFFICERS OR OTHERS AND MAY BE A CRIME. IT IS DANGEROUS AND MAY BE A CRIME TO BRANDISH OR DISPLAY THIS PRODUCT IN PUBLIC. PARENTS MUST NOT ALLOW MINORS TO TAKE THIS PRODUCT TO SCHOOL. HAVING THIS PRODUCT AT SCHOOL MAY BE A CRIME. DISTRIBUTED BY : PALCO SPORTS 8575 MONTICELLO LANE NORTH, MAPLE GROVE, MN 55369-4546 USA - [www.palcosports.com](http://www.palcosports.com)



Release magazine by pushing on the lever (1) located in front of the trigger guard and slide the magazine out of receptacle (2).



To load the magazine, slide the tab on top (1) and fill the compartment with recommended BBs (about 300 BBs) into compartment (2).



Spin the wheel located at the bottom of the magazine clockwise for about 1 minute (or you can use the key shown in the circle). Repeat operation every 150 shots.



Insert magazine in Receptacle. Respect the angle shown. If you notice some dry firing during burst, wind the wheel again.



Open stock cover as shown.




Open battery compartment.



Insert charged battery as shown in pictures and plug connector.



Battery, wires and connectors must be inserted in stock as shown in picture.

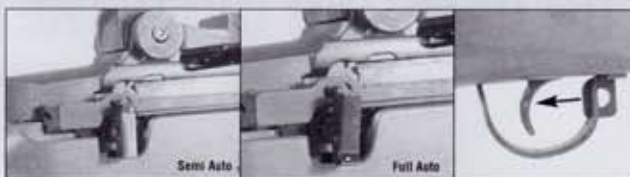

To start shooting, aim at a target, put the selector (Pict. 1 & 2) on one of two positions (Semi or Full Auto) and pull the trigger (Pict. 3)



Move the cursor to adjust Spin Up firing system. Adjust according to weight of BBs used.



Rear sight can be adjusted in Elevation and Windage with the two screws located on each side and shown on the picture.



Once finished shooting, put the shooting selector back on the "Safe" position. Make sure the rifle is stored empty of any ammunition, magazine removed.

### Notice for use



- Store the gun unloaded, and do not look down the barrel
- Treat the gun as if it were loaded



- Never aim at a person
- Do not shoot at fragile objects
- Do not point at anything you do not wish to shoot
- Keep your finger off the trigger until ready to shoot
- Those shooting and those in range should use eye



- Be careful to avoid rebounding



- Keep out of reach of children
- Store the replica with magazine removed, and the safety in locked position.
- When not in use, degas (Gas Operated guns)



- Recommended : 12g and .20g Cybergun BBs



question ?  
[info@palcosports.com](mailto:info@palcosports.com)

**PALCOSPORTS**

[www.palcosport.com](http://www.palcosport.com)