


FOLD

# THROWING as easy as 1..2..3..


**1**

**Load the Ball**

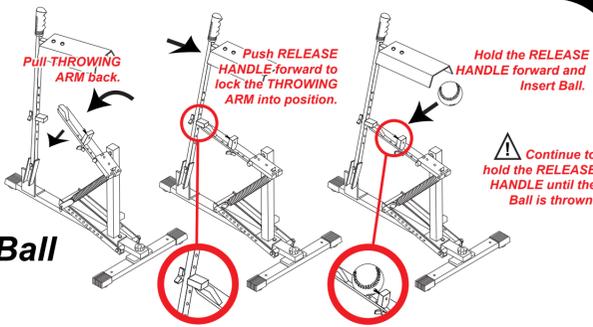

**2**

**Step on the POWER PEDAL**

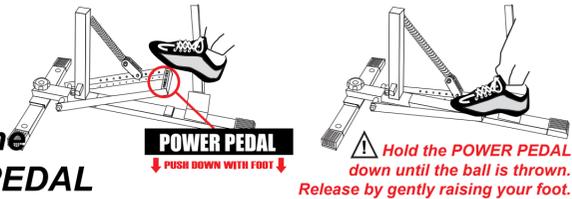

**3**

**Release the Pitch**




INSIDE



# QUICK speed adjustments

**SPEED is controlled by the SPRING setting on the POWER PEDAL and by the use of the HEIGHT adjustments on the MICRO ADJUSTMENT and the RELEASE BLOCK.**

The Chart on the lower right shows basic speed settings for baseball and softball pitches. You will need to test your settings for various types of balls.

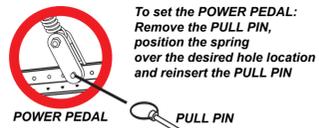

**NEVER adjust the POWER PEDAL when the THROWING ARM is pulled back and locked into position.**

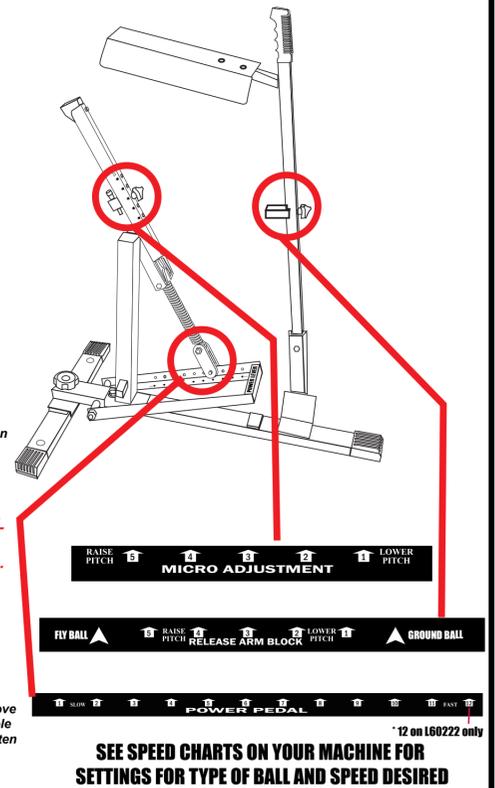 

**SEE SPEED CHARTS ON YOUR MACHINE FOR SETTINGS FOR TYPE OF BALL AND SPEED DESIRED**

INSIDE

# Frequently Asked Questions

**How do I move a pitch up and down in the strike zone?**  
Turning the screw on the MICRO ADJUSTMENT will raise and lower the pitch.



**How do I raise or lower a pitch that is out of the strike zone?**  
Reposition the micro adjustment and/or the release block. (Start with settings listed on the Speed Chart)



**How do I throw a fly ball?**  
Start with settings shown on the right and adjust as desired.



**How do I throw a ground ball?**  
Start with settings shown on the right and adjust as desired.



**How do I extend the life of my SPRING?**  
Never store your machine with the THROWING ARM pulled back and locked into position. We recommend that you replace your SPRING at the beginning of each season to ensure consistent throwing.

**Where can I buy replacement SPRINGS?**  
You can find replacement SPRINGS at many fine sporting goods outlets, or you may order SPRINGS and other parts online at: [www.gamemasterathletic.com/shop.htm](http://www.gamemasterathletic.com/shop.htm)

**Where can I find other Louisville Slugger® licensed brand training equipment or accessories?**  
Look for other items at fine sporting goods outlets or for a list of local retailers email us at [info@gamemasterathletic.com](mailto:info@gamemasterathletic.com)

Manufactured by: **GAMEMASTER** [www.gamemasterathletic.com](http://www.gamemasterathletic.com)

OUTSIDE BACK

Models: L60111 & L60222

## SETUP

### ULTIMATE PITCHING MACHINE USER'S GUIDE

**AIM YOUR PITCHING MACHINE AND ANCHOR SECURELY.**

GROUND STAKES are included to secure the pitching machine on most surfaces. However if using on loose soil or the machine is jumping you may need to obtain longer bolts and add a nut to make an EXTENDED STAKE (shown).

Removable GROUND ANCHORS can be purchased for secure permanent locations.

GROUND STAKES (included)

EXTENDED (LONG) GROUND STAKES (nut & bolt is a separate purchase)

GROUND ANCHORS (separate purchase item# L60150)

**ADJUST YOUR AIM IN SMALL MOVEMENTS.**

Loosen the FRONT STABILIZER LOCKING KNOB to angle the pitching machine left or right. Turn the pitching machine less than an inch at a time. Re-tighten when complete.

1/2" MOVEMENT LEFT OR RIGHT

**REMEMBER** that turning the pitching machine 1/2" will move the pitch 10" at a distance of 40 feet.

**WARNING:** Never operate the machine if parts are missing or broken. For adult operation only.

0913

OUTSIDE FRONT COVER

FOLD