




Assembly Instructions & User's Manual Fleur De Lis Swing

FSMVPT 2067

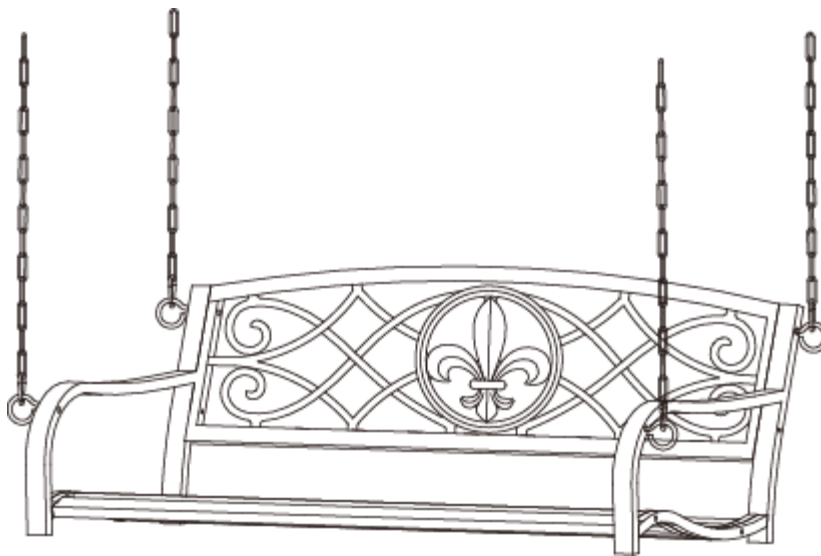

Please keep this instruction manual for future reference

Customer Service: (888) 922-2336, 7:00am to 12:00am Everyday CST

Live Chat @ Academy.com: 24/7

Made in China

Table of Contents

Warnings.....2

Tools and Parts.....2

Assembly Instructions.....4

Care and Maintenance.....6

Warranty Information.....7

Note: Before beginning assembly of product, make sure all parts are present. Compare parts with package content list and hardware contents above. If any part is missing or damaged do not attempt to assemble the unit. Contact customer service for replacement parts.

Warnings

This product requires adult assembly. Keep screws and parts away from children.

Please read this manual before assembly or use.

Do not tighten nuts or screws until assembly is complete.

Before assembly, check the package contents carefully to ensure that all part are included.




For missing or replacement parts, contact customer service at (888) 922-2336.

SKU#: 102634258 Style#: FSMVPT2067





NOTE: Mounting hardware not included

Hardware required to hang swing is not included and is the sole responsibility of the purchaser, the manufacturer assumes no responsibility for improper mounting hardware being used.











Tools Required (Included)

| | | |
|---|--------------|--|
| 1 | M6 Wrench |  |
| 2 | M10 Wrench |  |
| 3 | Allen Wrench |  |

Parts List

| | | | |
|---|-----------|--|---|
| A | Left Arm |  | 1 |
| B | Right Arm |  | 1 |
| C | Seat |  | 1 |
| D | Back |  | 1 |

Hardware

| | | | |
|---|--------------------------|--|---|
| E | M6 x 70mm Bolt |  | 2 |
| F | M6 x 50mm Bolt |  | 4 |
| G | M10 x 53mm Bolt |  | 2 |
| H | M10 x 73mm Bolt |  | 2 |
| I | M6 Nut |  | 6 |
| J | M10 Nut |  | 4 |
| K | Nut Cap |  | 6 |
| L | M6 Washer |  | 6 |
| M | M10 Washer |  | 4 |
| Q | Chain (including clips) |  | 2 |


Assembly Instructions

Step 1:

Attach swing back (D) to left arm (A) and right arm (B) at position 1 & 2, using bolt 2X(H), M10 washer 2X(M) and M10 nut 2X(J).

Attach the swing back (D) to left arm (A) and right arm (B) at position 3 & 4, using bolt (E), M6 washer (L) and M6 nut (I).


Hand tighten only.

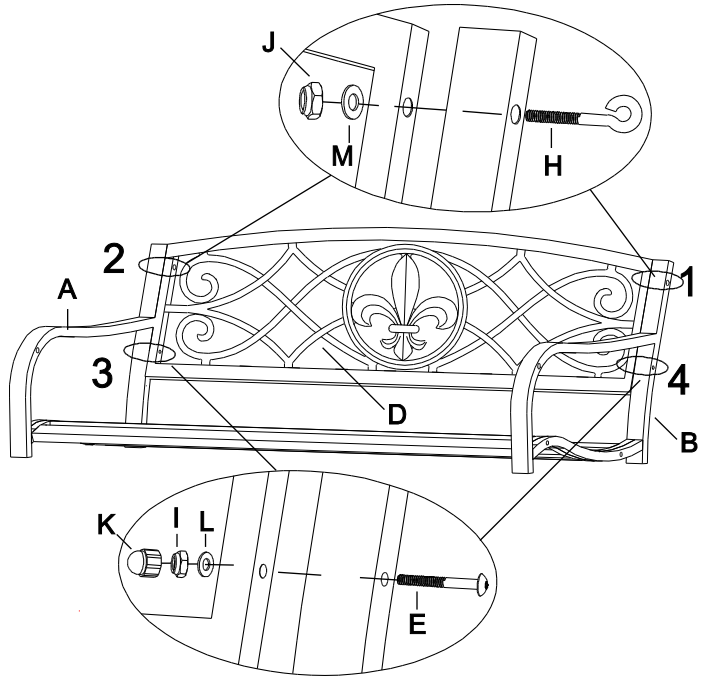

Step 2:

Attach seat (C) to left arm (A) and right arm (B) at position 1 & 2, using bolts 2X(F), M6 washers 4X(L), M6 nuts 4X(I).

Hand tighten only.

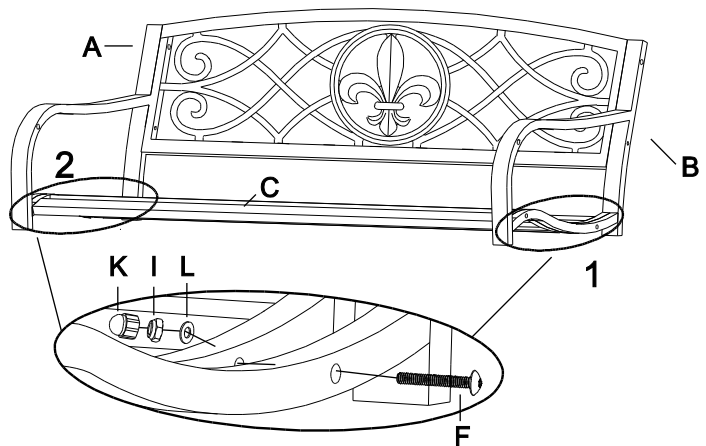


Assembly Instructions

Step 3:

Attach bolts 2X(G), M10 washers 2X(M) and M10 Nuts 2X(J) to the left arm (A) and right arm (B) as shown.

Hand tighten only.

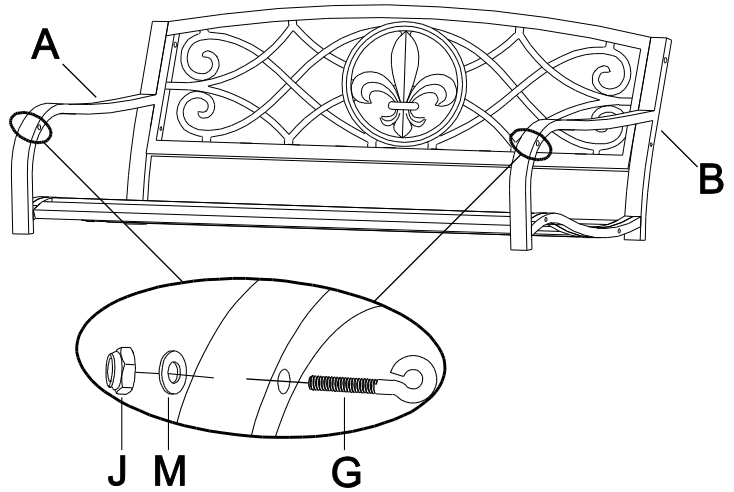

Step 4:


Make sure the swing stands level and straight (90) on the floor.

Tighten all nuts and bolts using wrench(N & O) and Allen wrench (P).

Cover all M6 nuts by nut caps 6X(K).

Attach chain clip 4X(Q) to left arm (A) and right arm (B) as shown.

The swing is now ready to be hung.
Consult your local hardware store for proper hanging hardware.

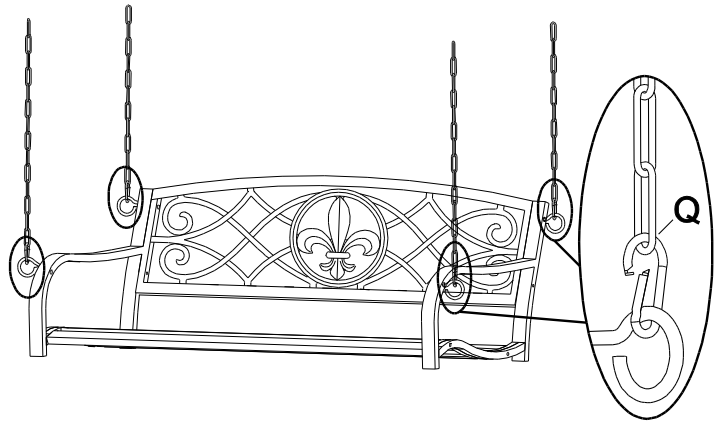

Care and Maintenance

This swing should be cleaned on a regular basis to promote safe use and prolong product life.

To clean, wipe the frame with a smooth damp cloth and air dry.

Do not use abrasive cleaners as they may damage or scratch the surface paint.

Do not leave this product in harsh weather conditions for extended periods.

For extended product life, the swing should be stored indoors or covered during prolonged periods of non-use.

Storing in a dry location will help prevent rust.

Warranty Information

The appliance has been manufactured under the highest standards of quality and workmanship. We warrant to the original consumer purchaser that all aspects of this product will be free of defects in material and workmanship for one year from the date of purchase. A replacement for any defective part will be supplied free of charge for installation by the consumer. Defects or damage caused by the use of other than genuine parts are not covered by this warranty. This warranty shall be effective from the date of purchase as shown in the purchaser receipt.

This warranty is valid for the original consumer purchaser only and excludes industrial, commercial or business use of the product, product damage due to shipment or failure which results from alteration, product abuse, or product misuse, whether performed by a contractor, service company, or consumer. We will not be responsible for labor charges and/or damage incurred in installation, repair or replacement nor for incidental or consequential damage.