

Franklin[®]

AGES 6+

INDOOR PITCH GAME

BASEBALL TARGET

ITEM NUMBER: **6881S11** **6881**

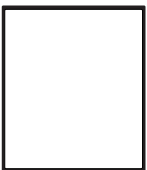
 
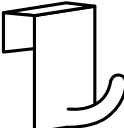

For all your replacement part needs, please visit:
www.franklinsports.com/6881S11



NOTE: Actual product graphics may vary.

Made In China
Franklin Sports Inc.
Stoughton, MA 02072

PARTS LIST


1		2		3		1	
	QTY x1		QTY x3		QTY x1		QTY x1
	Pitch Target		Self Stick Baseballs		Door Hook		Stability Bar
	Rep. Part: N/A		Rep. Part: 6881-R1		Rep. Part: 6881-R2		Rep. Part: 6881-R3

ASSEMBLY INSTRUCTIONS


GENERAL NOTE

1. Find a clean place to begin the assembly of your Indoor Pitch Baseball Target Game.
2. Remove all the parts from the box and verify that you have all of the listed parts as shown on the parts list page.

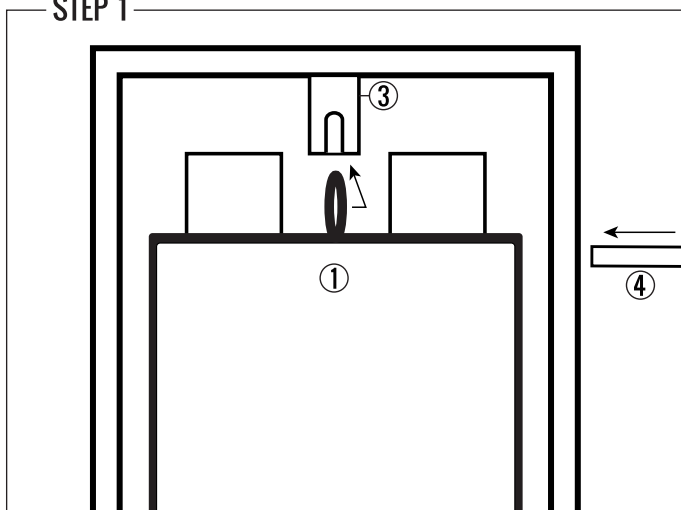STEP 1



PARTS

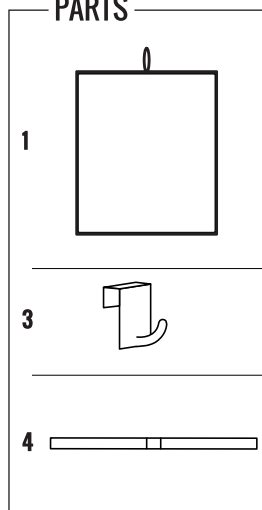

NOTE

Attach the **Door Hook** (#3) on a stable door. Slide the **Stability Bar** (#4) through the sleeve on the top of the **Pitch Target** (#1). Hang the **Target** (#1) on the **Hook** (#3) and have fun!

YOU ARE NOW READY TO PLAY!