


ME AND MY PUPPY PLAYHOUSE

Model# WP-379

OWNER'S MANUAL

ASSEMBLY INSTRUCTION

CARE MAINTENANCE AND USER'S GUIDE

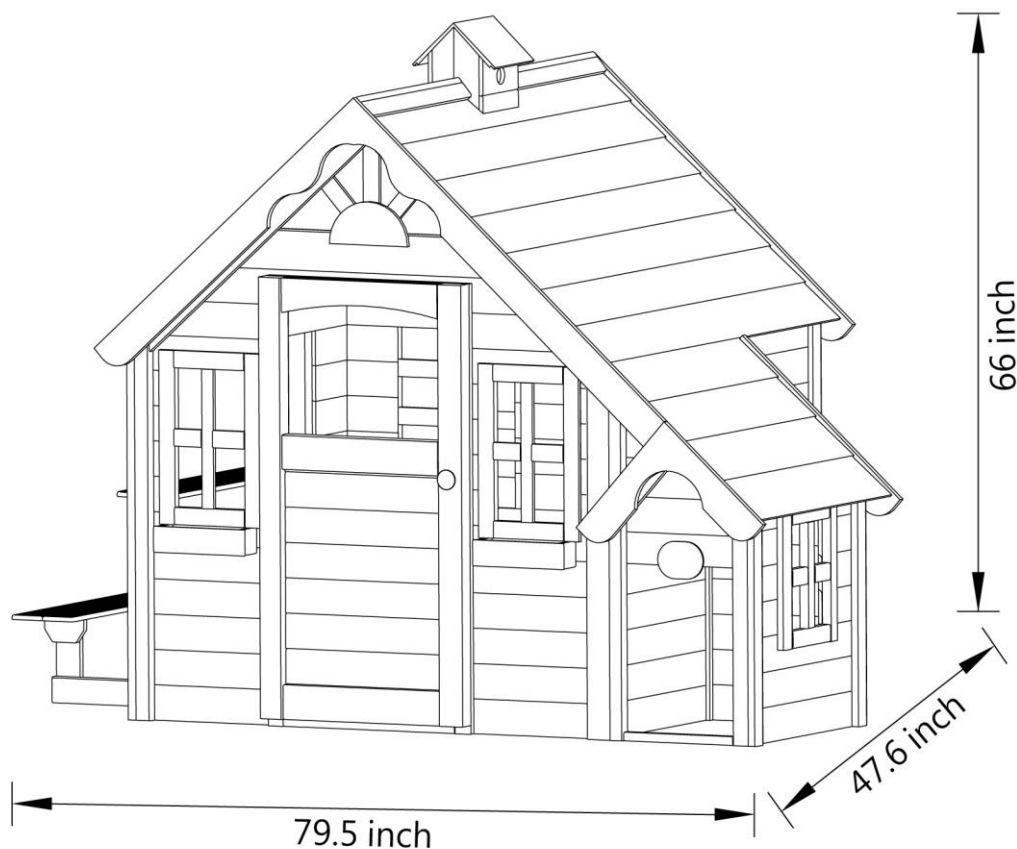

CAUTION

This product is intended for use by children from ages 3 to 8.

This unit is designed for the use of 4 occupants, with a maximum weight of 100 pounds (45.4kgs) for each. Combined weight is not to exceed 400 pounds (181.8kgs). **Assembly requires at least TWO adults.**

PLEASE RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE. KEEP THEM IN A SAFE PLACE WHERE YOU CAN REFER TO THEM AS NEEDED.

Customer Service

Do not return to the store,

For customer service, please visit www.sportspowerltd.net

SPORTSPOWER LTD

FLAT M, 3/FLOOR, KAISER ESTATE PHASE 3,

11 HOK YUEN STREET, HUNGHOM, KOWLOON, HK

Dear Valued Customer,

Congratulations on your Wood Play Set purchase!

To assure the safety of your children while they enjoy many great moments of outdoor fun, please assure you thoroughly read and follow this important manual. It contains specific safety instructions that will assure a safe play experience. All instructions must be followed to assure proper, safe use of your Wood Play Set.

Age Recommendations:

Children ages 3-8

Commercial Use:

Commercial usage is not warranted. This is a residential Wood Play Set only.

IMPORTANT:

- Children must NOT play on this set until it is properly assembled and inspected by an adult.
- The Wood Play Set must be properly installed and anchored BEFORE children can play on the Wood Play Set.
- You MUST read and follow all instructions in this manual before installing or attempting to use the Wood Play Set.

Failure to follow these important requirements may result in the warranty being voided and/or safety violations that may possibly result in an injury. Please watch your children carefully during the installation and assembly of the Wood Play set to avoid injury.

Please also pay close attention to the periodic maintenance that is required to keep you Wood Play Set in a safe condition for maximum enjoyment of backyard fun!



WARNING

BEFORE YOU BEGIN ASSEMBLY!!!

- Take a complete inventory of components using the parts list.
- Sort and lay out the wood pieces. Label each piece of wood for easy reference. For easy identification during the assembly process, write the board's letter on masking tape and adhere to each piece of the wood. Some wooden components may twist or warp in the carton after packaging. Usually, these parts straighten out when assembled. You may also see some cracking of the grain. This is normal.
- Sort all hardware according to size. Do not worry if extra hardware is included.
- Find a safe play location.
 - You MUST install the Wood Play Set on level ground. Uneven ground must be leveled prior to installation. The manufacturer cannot assume responsibility for any failure from incorrect installation. Installing on sloping ground will put stress on all the joints, which will cause the set to become loose and unstable.

- Find a location where the equipment can be placed more than 6 feet from any structure or obstruction (ex: electrical wires, branches, house, fence, garage) The safe play area refers to a zone extending 6' beyond the gym set on all sides, including the space above the gym set.
- The safe play area must be free of all structures, landscaping, tress and branches, rocks, wires and other obstacles to safe play. Children can be seriously injured running or swinging into these obstacles.
- Remove any rocks or any jagged or sharp object that could endanger your children's' safety.
- Remove all tripping hazards from the safe play area. Tripping hazards include but are not limited to: roots, stumps, rocks, landscaping, sprinkler heads, railroad ties, plumbing, and electrical connections.
- Do NOT install your gym set over gravel, asphalt, packed earth or any other hard surface. The following is a list of recommended ground covers from the Consumer Product Safety Commission.

SUGGESTED MATERIAL	UNCOMPRESSED DEPTH
Double Shredded Bark Mulch	9"
Uniform Wood Chips	12"
Fine Gravel	12"
Fine Sand	12"

ASSEMBLY TIPS

Climbing Rungs/Dowels. (If your set has climbing rungs.) Once the dowel is installed in the ladder rail, the end of each dowel must be secured by a screw through the ladder rail into the dowel end. To avoid splitting the wood, you must pre-drill a pilot hole for the screws using a 1/8" drill bit. The procedure required to install the dowels is detailed and illustrated in these instructions and must be followed precisely.

Metal plates: The structural integrity of the play set is dependent on the proper installation of the metal plates. As noted and diagrammed in these instructions, the installation of these metal plates must be followed precisely. If your play set has end ladders or swing beam supports, make sure they are angled away from the top ladder or swing beam. If the Wood Set has one or two climbing towers, the metal plates must be installed so that each climbing tower is perpendicular to the top ladder.

Ground stakes: Unless you have loose or sandy soil, cementing is neither recommended nor required.

CARE AND MAINTENANCE:

After Assembly: Perform a follow-up inspection one week after initial installation.

Bi-Monthly: Perform a thorough inspection twice a month for the life of your wood play set. Provide appropriate maintenance as deemed necessary

Annually: Wood refinishing is typically required at twelve-month intervals from the date of installation. Weather conditions may require more frequent refinishing.

What to Inspect:

Hardware:

Inspect all nuts and bolts and tighten if required. Hardware should be firmly against, but not crushing the wood. Over-tightening hardware crushes wood fibers and can split wooden components resulting in the bolt thread extending beyond the wood. This poses a severe safety hazard. If bolt threads protrude beyond the wood surface, replace the bolt with a shorter one that will not protrude. If splintering has occurred from over-tightening, larger washers can be purchased at your local hardware store and installed under the bolt head. Be sure to reuse or replace your lock washers.

Major Wooden Parts:

Inspect for structural defects and splintering. If necessary, lightly sand and refinish with an exterior water repellent stain. Seasonal checking or cracking of the grain on wooden parts is quite natural water and heat are the most frequent causes of expansion and contraction of wood fibers. Our wood set has been treated with stain to resist weathering. But it needs to be maintained periodically by applying new stain or paint.

Dowels (Rungs)

Inspect for structural defects and splintering. If necessary, lightly sand and refinish with a clear water repellent, exterior sealant or boiled linseed oil. Do NOT paint, varnish or finish rungs with any substance that may reduce your child's ability to firmly grasp or step on the rungs.

Swing hangers

Inspect for correct installation. Assure the bend of the swing hanger is positioned tightly against the stop washer and the ladder or swing beam. The axis of the swing hanger bushing must be perpendicular to the swing motion. Spray the nylon bushings with a household lubricant such as WD-40, if you hear squeaking.

Plastic Swing Seats

Check for evidence of deterioration. Replace any swing seat that has developed cracks in the seat or has exposed metal in the edges of the swing seat. If there are already exposed metal inserts on the edge of the seat, remove the seats and chains to prevent serious injury. Remove plastic swing seats and take indoors or do NOT use when the temperature drops below 32 degrees F.

Ropes, Cables and Chains

Check for evidence of deterioration. Ropes, cables and chains should be removed and replaced if excessive wear is found. Contact our service center for replacement parts.

Metallic Components

Check for rusted areas on components such as monkey bars, hand supports, brackets, etc. Sand and repaint using a non lead-based paint that meets the requirements of Title 16 CRF part 1303.

Play Area

Inspect to assure that the swing set has settled properly and the location of the set is still level.

AT THE BEGINNING OF EACH PLAY SEASON:

TIGHTEN ALL HARDWARE.

LUBRICATE ALL METALLIC MOVING PARTS PER MANUFACTURER'S INSTRUCTIONS.

CHECK ALL PROTECTIVE COVERINGS ON BOLTS, PIPES, EDGES, AND CORNERS. REPLACE IF THEY ARE LOOSE, CRACKED, OR MISSING.

CHECK ALL MOVING PARTS INCLUDING SWING SEATS, ROPES, CABLES, AND CHAINS FOR WEAR, RUST, OR OTHER DETERIORATION. REPLACE AS NEEDED.

CHECK METAL PARTS FOR RUST. IF FOUND, SAND AND REPAINT USING A NONLEAD-BASED PAINT MEETING THE REQUIREMENTS OF 16 CFR 1303.

CHECK ALL WOOD MEMBERS FOR DETERIORATION AND SPLINTERS. SAND DOWN SPLINTERS AND REPLACE DETERIORATING WOOD MEMBERS.

REINSTALL ANY PLASTIC PARTS, SUCH AS SWING SEATS OR ANY OTHER ITEMS THAT WERE REMOVED FOR THE COLD SEASON.

RAKE AND CHECK DEPTH OF LOOSE FILL PROTECTIVE SURFACING MATERIALS TO PREVENT COMPACTION AND TO MAINTAIN APPROPRIATE DEPTH. REPLACE AS NECESSARY.

TWICE A MONTH DURING PLAY SEASON:

TIGHTEN ALL HARDWARE.

CHECK ALL PROTECTIVE COVERINGS ON BOLTS, PIPES, EDGES, AND CORNERS. REPLACE IF THEY ARE LOOSE, CRACKED, OR MISSING.

RAKE AND CHECK DEPTH OF LOOSE FILL PROTECTIVE SURFACING MATERIALS TO PREVENT COMPACTION AND TO MAINTAIN APPROPRIATE DEPTH. REPLACE AS NECESSARY.

ONCE A MONTH DURING PLAY SEASON:

LUBRICATE ALL METALLIC MOVING PARTS PER MANUFACTURER'S INSTRUCTIONS

CHECK ALL MOVING PARTS INCLUDING SWING SEATS, ROPES, CABLES, AND CHAINS FOR WEAR, RUST, OR OTHER DETERIORATION. REPLACE AS NEEDED.

AT THE END OF EACH PLAY SEASON OR WHEN THE TEMPERATURE DROPS BELOW 32 °F .

REMOVE PLASTIC SWING SEATS AND OTHER ITEMS AS SPECIFIED BY THE MANUFACTURER AND TAKE INDOORS OR DO NOT USE.

RAKE AND CHECK DEPTH OF LOOSE FILL PROTECTIVE SURFACING MATERIALS TO PREVENT COMPACTION AND TO MAINTAIN APPROPRIATE DEPTH. REPLACE AS NECESSARY.

In general, maintenance should be performed at any time it is deemed necessary.

USER'S GUIDE



WARNING

CAUTION

READ BEFORE USING THIS EQUIPMENT

GENERAL INSTRUCTION

- Read this manual and follow all instructions before using and assembling this unit.
- Observing the following statements and warnings reduces the likelihood of serious fatal injury.
- Recommending On-site adult supervision for children of all ages at all times.
- This unit is designed to be used safely by up to 4 children between the age of 3 to 8, with a maximum weight of 100 pounds (45.4 kgs) each, simultaneously, not to exceed a combined weight of 400 pounds.



WARNING

- Lawn swings is designed for use by children over two years of age. Use by Children under the age of two can result in entrapment between the seat and back areas. NEVER place children in rearward facing position or with legs between the seat and backrest because the child's body may pass through the opening causing entrapment of the child's head.
- This unit must be assembled and disassembled by a capable adult person. We suggest that you get someone to help.
- Children must not use the equipment until properly assembled and anchored.
- Always locate the swing set on level ground!
- Do not allow swing set near any obstruction or sharp object! Place gym set on level ground, not less than 6ft (1.8m) from any structures or obstacles such as fence, garage, shed house, overhanging branches, laundry line, electrical wires.
- If the seats of swing, glide or slide are wet, do not use this equipment.
- If any bolts & nuts are missing, do not use this equipment!
- A capable adult should supervise the use of this equipment at all times. Do not allow reckless playing, such as jumping off swing, slide, or Glide ride.
 - Provide proper surface material cover for this equipment prior to using this equipment.
- Do not allow more than one child to play on the swing, trapeze bar or slide at any one time. Children shall take turns using the slide.
- Do not allow child to stand on the swing seats or glide ride.
- Instruct children not to walk too close in front of, behind, or between moving items. Instruct children to keep a safe distance away to avoid being struck by items in play.
- Instruct children not to twist swing chains or ropes or loop them over the top support bar since this may reduce the strength of the chain or rope.
- Instruct children to avoid swinging empty seats.
- Teach children to sit in the center of the swing play items, with their full weight in the seats.
- Instruct children not to use the equipment in any manner other than intended.
- Instruct children not to get off equipment while it is in motion. Do not allow children to jump from moving play items.
- Do not allow children to climb or play on equipment when it is wet.
- Do not stand on the lawn swing when using this ride. One child per seat only!
- Check the openings between rollers and sliding surfaces of roller slides for foreign materials that could be potentially hazardous to users.
 - It is recommended that the gym set be placed in concrete. Be certain that all anchoring devices (including concrete) are placed below the level of the playing surface or below ground level to prevent tripping .
- Do not allow children to lean to the side when riding on other rides, structural members on collide with other playmates.
- Do not install home playground equipment over concrete, asphalt, packed earth, grass, carpet, or any other hard surface. A fall onto a hard surface can result in serious injury to the equipment user.
- Do anchor all gyms.

- If the swing set is set up on grounds with sandy soil condition, it must be anchored with concrete footing (Concrete not included). On-site adult supervision for children of all ages is recommended.
- Instruct children not to walk close to, in front of, behind, or between moving items.
- Instruct children not to twist swing chains or ropes or loop them over the top support bar since this may reduce the strength of the chain or rope.
- Instruct children always to hold the swing chain when play on.
- Teach children to sit in the center of the swings with their full weight on the seats,
- Instruct children not to use the equipment in a manner other than intended,
- Instruct children not to get off equipment while it is in motion.
- Adult should dress children appropriately (examples would include the use of well-fitting shoes and the avoidance of ponchos, scarf's, and other loose-fitting shoes and other loose-fitting clothing that is potentially hazardous while using equipment).
- Please verify that suspended climbing ropes, chain, or cable are secured at both ends, and that suspended climbing ropes, chain, or cable cannot be looped back on itself.
- Instruct children not to attach items to the playground equipment that are not specifically designed for use with the equipment, such as, but not limited to, jump ropes, clothesline, pet leashes, cables and chain as they may cause a strangulation hazard.
- Instruct children not to go down slide head first.
- Check slide bed for extreme heat before letting children use slide (When exposed to direct sunlight)
- Do not allow children to climb on swing from structural members (Legs, top bar and chin bar). These are structural components only and NOT play features.
 - Please save this instruction manual for future reference and review each season .
 - Plastic components should be replaced every three years.
- Advising the buyer to instruct children to remove their bike or other sports helmet before playing on the playground equipment.



WARNING

ON-SITE ADULT SUPERVISION IS REQUIRED AT ALL TIMES FOR CHILDREN OF ALL AGES. ENSURE THAT SUSPENDED CLIMBING ROPES, CHAINS OR CABLES ARE KEPT TIGHT ENOUGH SO THE CHILDREN CAN NOT BE LOOPED BACK ON THEMSELVES AND ARE KEPT SECURE AT BOTH ENDS.

Disposal Instructions

* When it is time to dispose of the playground equipment, please use care when disassembling the playground equipment. Dispose in a safe place and manner so as not to present any hazards to any individual. Wear heavy duty working gloves!

* Be sure to completely disassemble the whole swing and slide sets, before disposal.

* Do not leave partially disassembled equipment in area where accessible by children.

* Consumer may wish to recycle the steel tubing, please take the frame to your local recycling centre.

All plastic part could be recycled, take it to your local recycling centre. Do not let children play with any disassembled parts destined for disposal, such as chain, slide, tubings, bolts, nuts, screws!

NOMINAL MATERIAL SIZES			
NAMED SIZE		TURE SIZE	
Imperial(")	Metric(mm)	Imperial(")	Metric(mm)
1*6	2.5*15.3	3/4*5*1/2	1.9*14
5/4*4	3.2*10.2	1*3-1/2	2.5*9
5/4*6	3.2*15.3	1*5-1/2	2.5*14
2*2	5*5	1-1/2*1-1/2	3.8*3.8
2*3	5*7.6	1-1/2*2-1/2	3.8*6.4
2*4	5*10	1-1/2*3-1/2	3.8*9
2*6	5*15.3	1-1/2*5-1/2	3.8*14
4*4	10*10	3-1/2*3-1/2	9*9
Estimated Sizing Due to Molding of Wood			

IMPORTANT CONSUMER INFORMATION SHEET

The Consumer Product Safety Commission estimates that about 100,000 Playground equipments. Related injuries resulting from falls to the ground equipment treated annually In U.S. hospital emergency rooms. Injuries involving this hazard pattern tend to be among the most serious of all playground injuries, and have the potential to be fatal , particularly when the injury is to the head. The surface under and around playground equipment can be a major factor in determining the injury-causing potential of a fall. It is self evident that a fall onto a shock absorbing surface is less likely to cause a serious injury than a fall onto a hard surface. Playground equipment should never be placed on hard surfaces such as concrete or asphalt and while grass may appear to be acceptable it may quickly turn to hard packed earth in areas of high traffic. Shredded bark mulch, wood chips fine sand or fine gravel are considered to be acceptable shock absorbing surface when installed and maintained at a sufficient depth under and around playground equipment.

Table below lists the maximum height from which a child would not be expected to sustain a life-threatening head injury in a fall onto four different loose-fill surfacing materials if they are installed and maintained at depths of 6" (15.25CM), 9" (22.9CM), and 12" (30.5CM).


FALL HEIGHT IN FEET FROM WHICH A LIFE THREAENING HEAD INJURY WOULD NOT BE EXPECTED			
TYPE OF MATERIAL	6"(15.25CM) DEPTH	9"(22.9CM) DEPTH	12"(30.5CM) DEPTH
Double shredded bark mulch	6"(15.25CM)	10"(25.4CM)	11"(27.94CM)
Wood Chips	6"(15.25CM)	7"(17.8CM)	12"(30.5CM)
Fine Sand	5"(12.7CM)	5"(12.7CM)	9"(22.86CM)
Fine Gravel	6"(15.25CM)	7"(17.8CM)	10"(25.4CM)

However, it should be recognized that all injuries due to falls cannot be prevented no matter what surfacing material is used.

We recommend that a shock absorbing material should extend a minimum of 6ft in all directions from the perimeter of stationary equipment such as climbers and slides. However, because children may deliberately jump from a moving swing, the shock absorbing material should extend in the front and rear of a swing a minimum distance of 2 times the height of the pivot point measured from a point directly beneath the pivot on the supporting structure.

This information is intended to assist in comparing the relative shock-absorbing properties of various materials. No particular material is recommended over another. However, each material is only effective when Properly maintained. Materials should be checked periodically and replenished to maintain correct depth as determined necessary for your equipment. The choice of a material depends on the type and height of the playground equipment, the availability of the material in your area and its cost.

Note: The maximum fall height for this product is 6 feet. The minimum ground Clearance between the bottom of the suspended plays and the playing or ground service must be 8 inches.

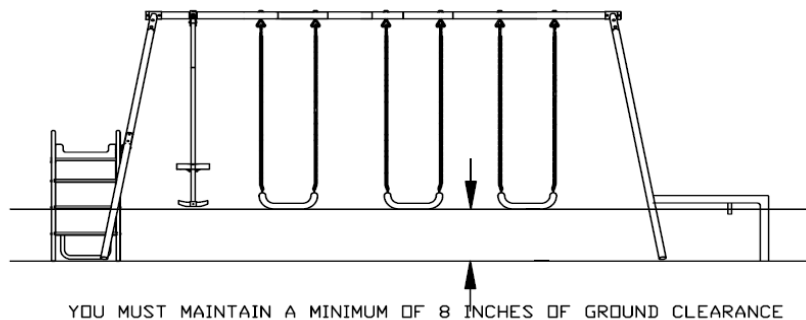

This information has been extracted from the CPSC publication on " Playground Safety". You can obtain more information by sending a postcard to the: Office of public Affairs, U.S. Consumer Product Safety Commission, Washington, D.C.20207

SAFETY AND ASSEMBLY INFORMATION

SELECTING THE CORRECT LOCATION FOR YOUR PLAY PRODUCT IS IMPORTANT FOR YOUR CHILDREN'S SAFETY AND THE PRODUCT'S LONGEVITY

Dimensions:

- The Playhouse has one layout option.

Layout	Ground Dimension	Safe Play Area
	6.625' x 4' x 66" Tall	18.625' x 16'

*Level Ground Surface - See below

General Information:


Your set has been designed and engineered for children only and for residential use only.

A maximum of 100 lbs. per child is recommended for play activities designed for individual use.



A maximum of 100 lbs. per child is recommended for play activities designed for multiple child use.

A maximum of 4 children is recommended for this unit.

SAFE PLAY AREA DIAGRAM

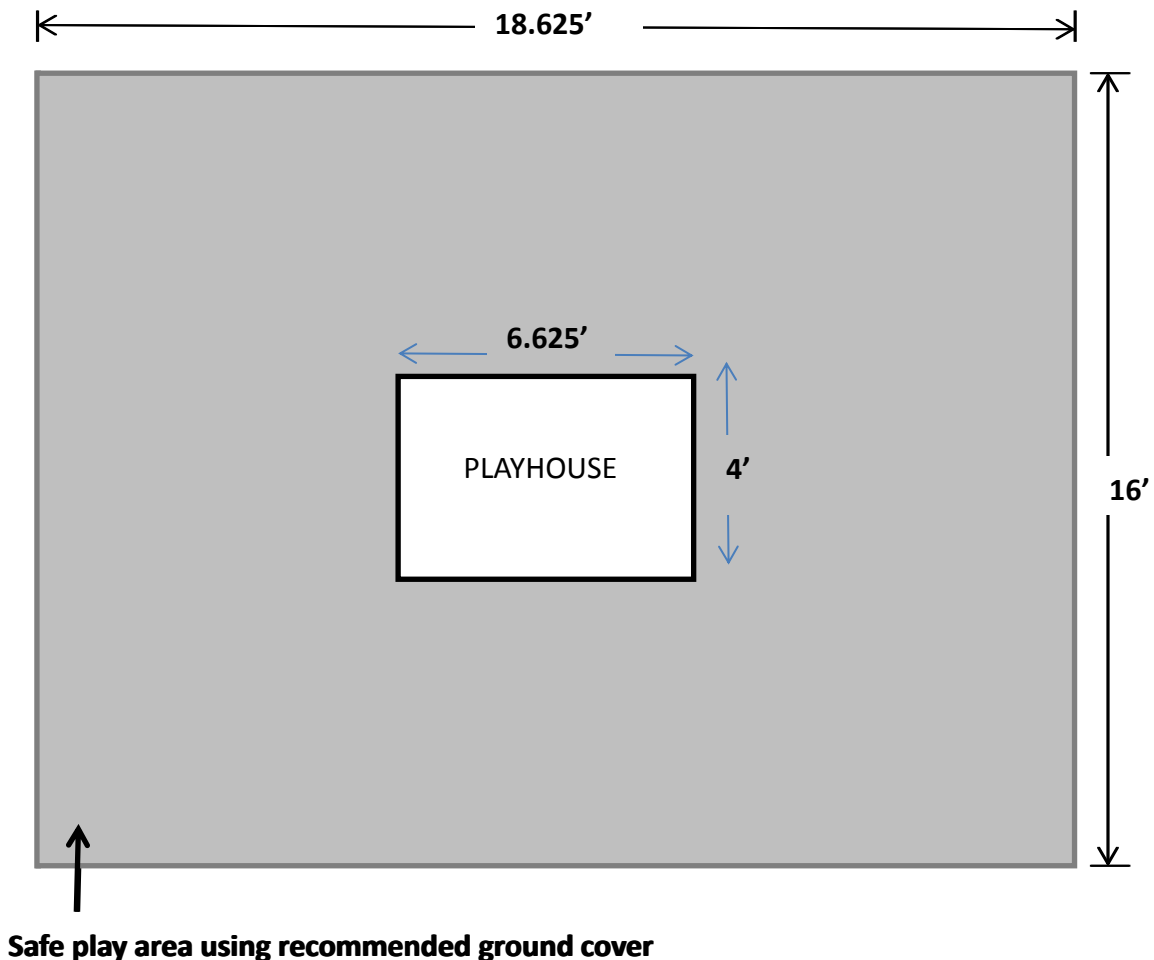


EXPLODED DIAGRAM

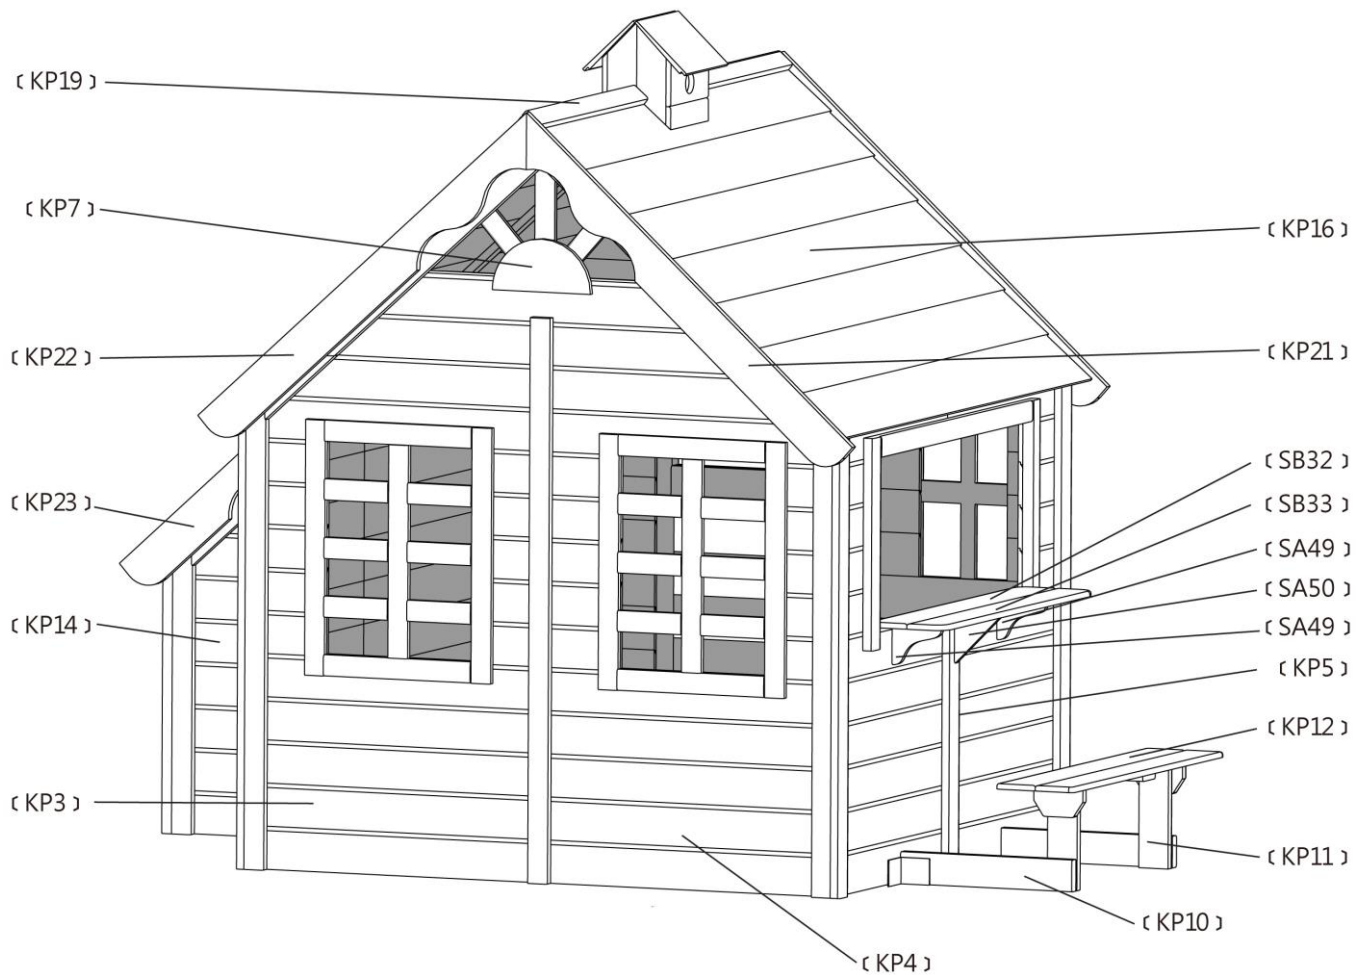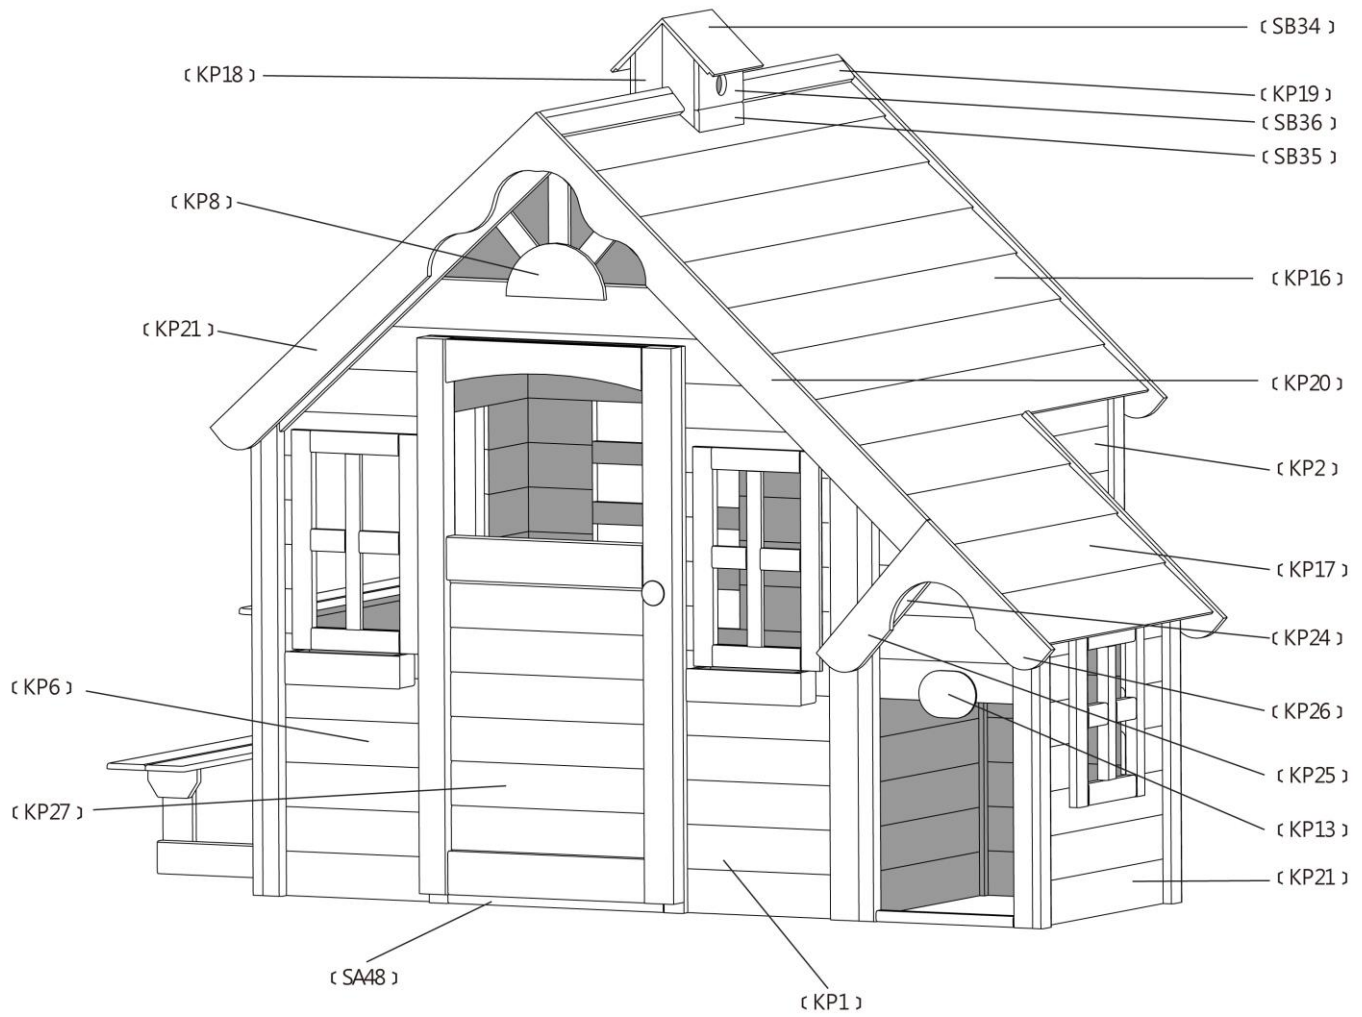

Tools Required for Assembly

These are the tools that are generally required for installation.

These tools are not included in the purchased packaging unless stated below.

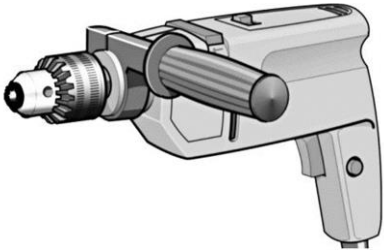

Electric Drill



Phillips Head Screw Drive
 $\frac{3}{16}$ " bit



Ladder or Step Tool



Phillips Head Screwdriver

 


Tape Measure




Working Gloves

HARDWARE/PARTS LIST



S5 M4x28mm Deck Screw x 47 pcs

 


S8 M4x60mm Deck Screw x 17 pcs




S6 M4x35mm Deck Screw x 12 pcs



 S10 M4x25mm Deck Screw x 12 pcs



S7 M4x45mm Deck Screw x 45 pcs

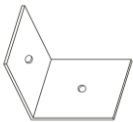

U32 x 2 pcs


NOTE: EXTRA HARDWARE MAY BE INCLUDED

Measuring Hardware

It is very important that you get the right hardware in the correct place when assembling the unit. You can use the ruler to measure your hardware or you can compare the hardware to the hardware identification page.


NOTES:

- 1) Do not include bolt head when measuring length of bolt.
- 2) Include full length of deck screw when measuring

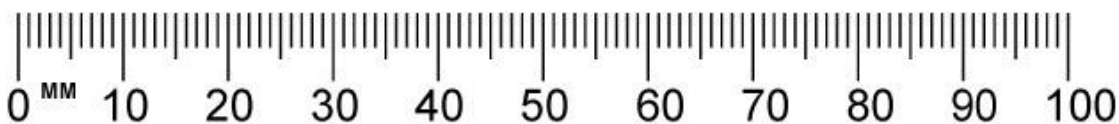


NOT TO SCALE


WOOD PARTS LIST

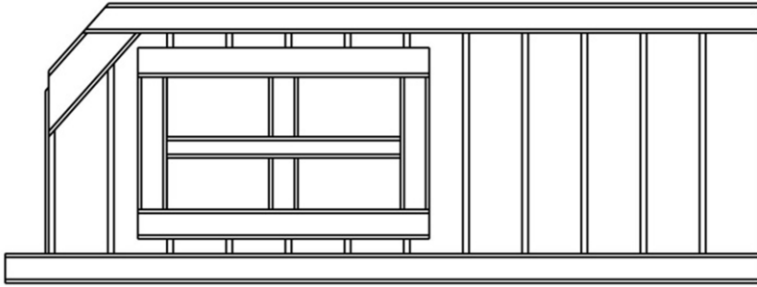


KP1 x 1pc

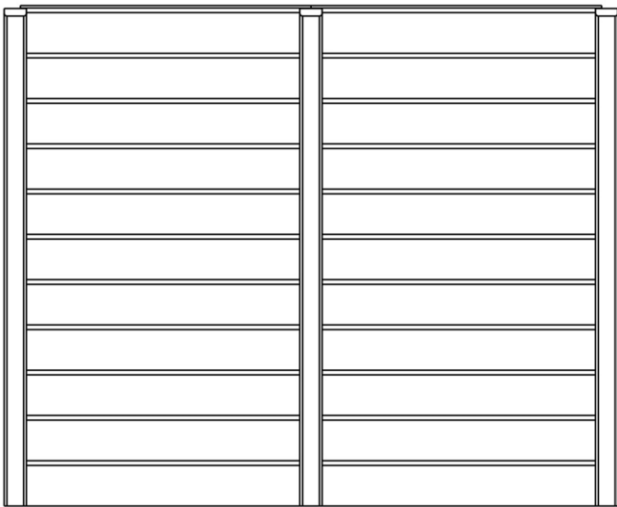


KP2 x 1pc

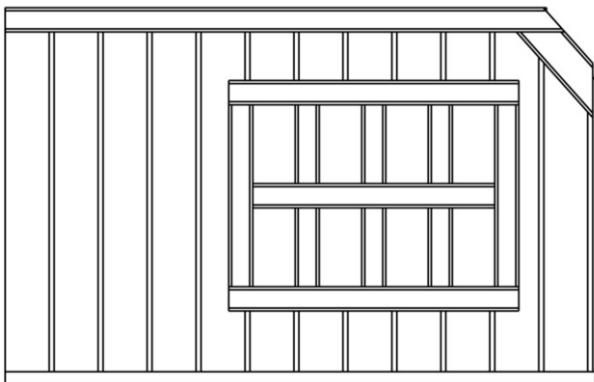


KP3 x 1pc

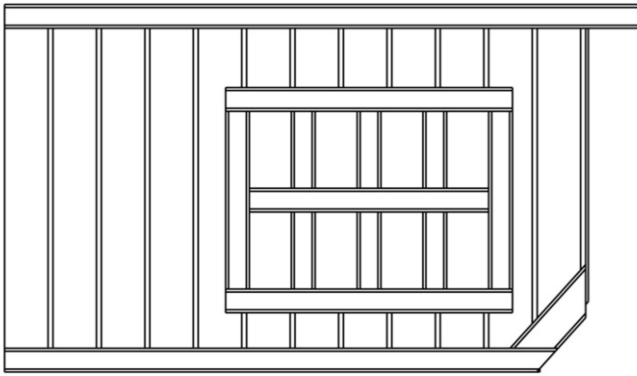


KP4 x 1pc

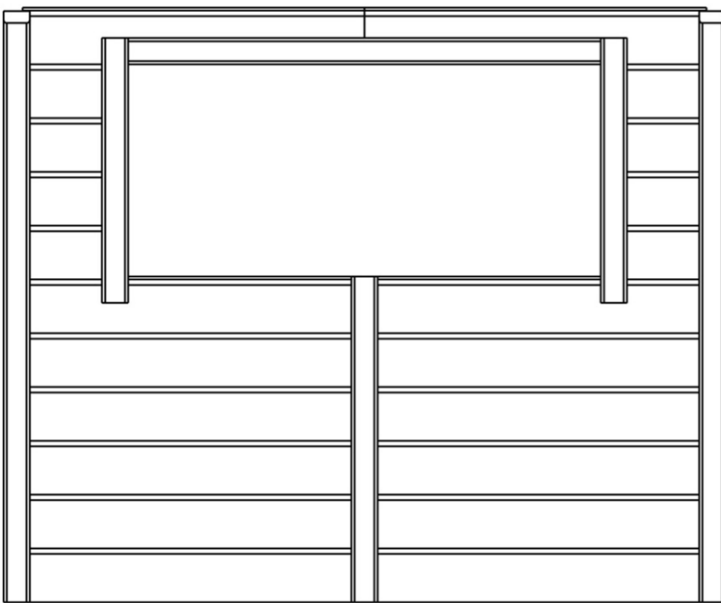


KP5 x 1pc

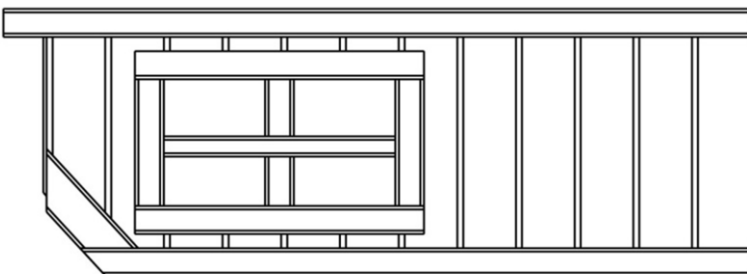

KP6 x 1pc

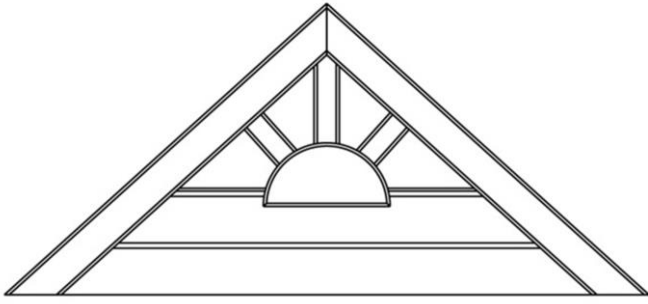


KP7 x 1pc

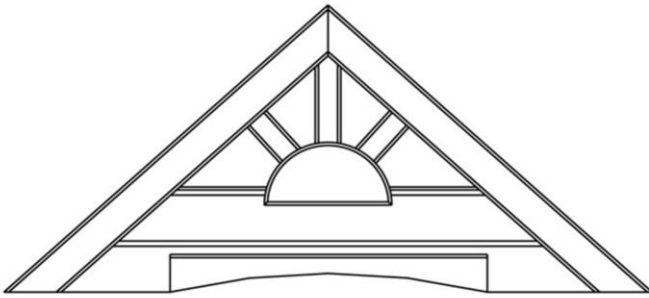


KP8 x 1pc




KP9 x 2pcs

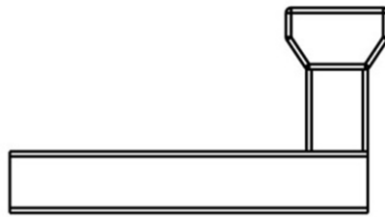


KP10 x 1pc

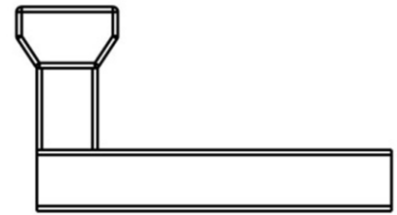


KP11 x 1pc

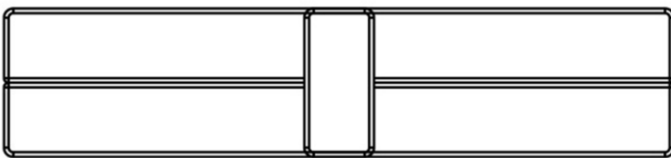


KP12 x 1pc

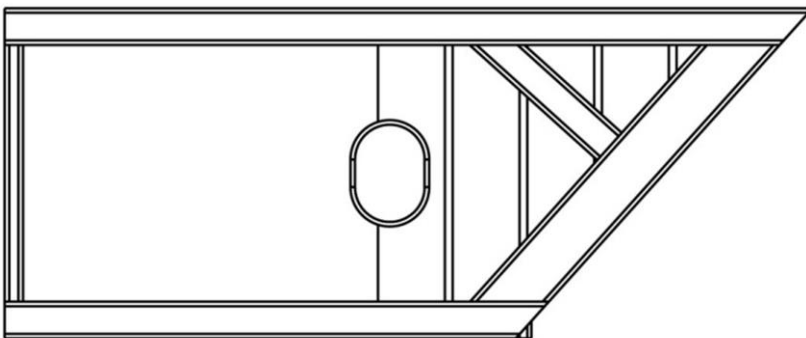


KP13 x 1pc

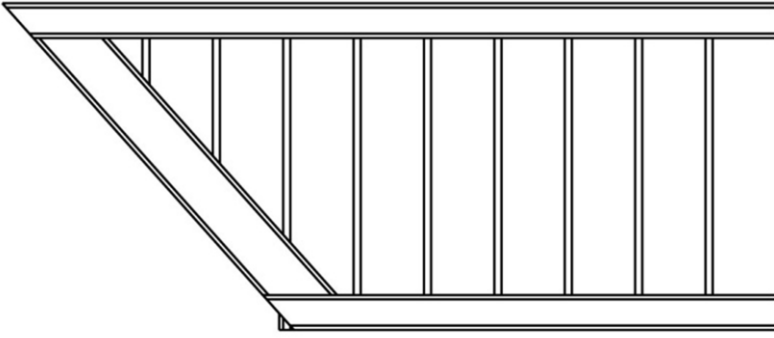


KP14 x 1pc

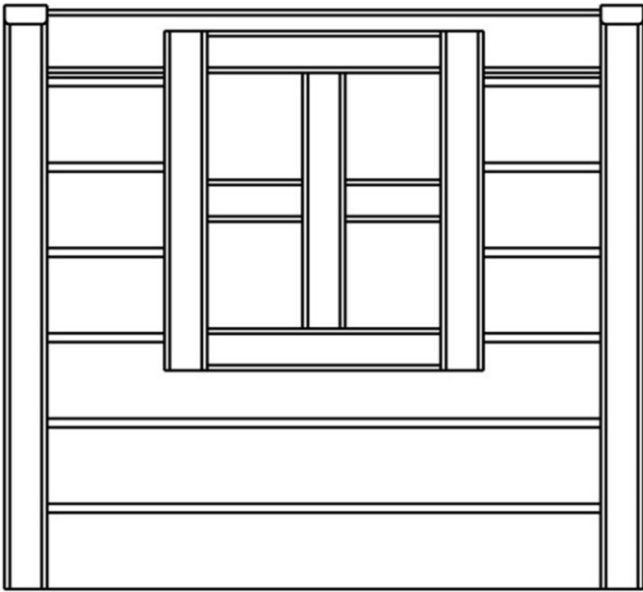


KP15 x 1pc

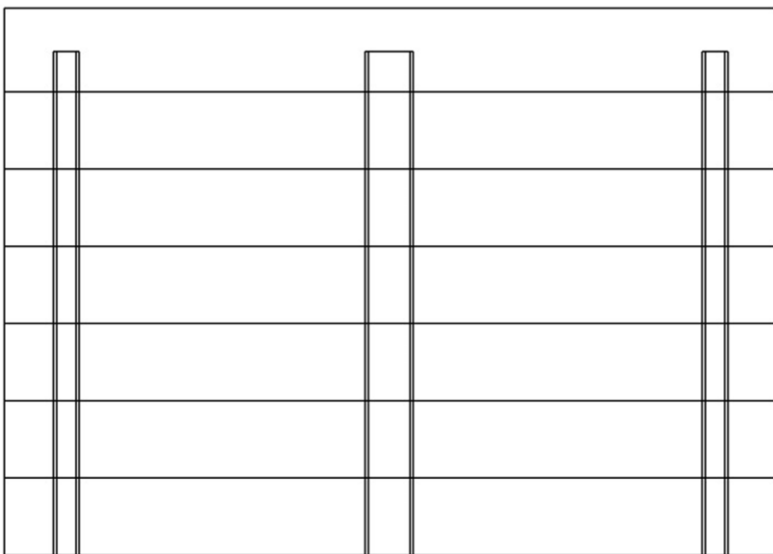

KP16 x 2pcs

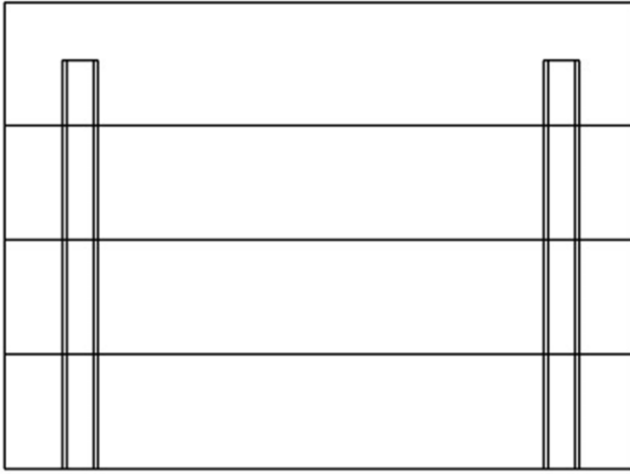

K17 x 1pc

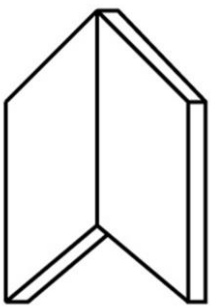

K18 x 2pcs



KP19 x 2pcs



KP20 x 1pc



 
KP21 x 2pcs



KP22 x 1pc



KP23 x 1pc




KP24 x 1pc



KP25 x 1pc



KP26 x 1pc

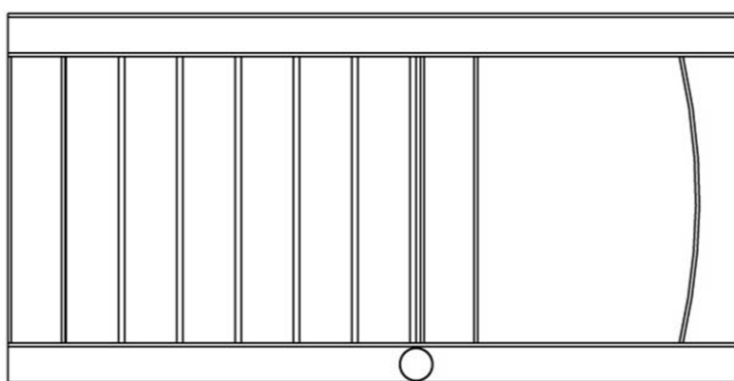

KP27 x 1pc



SA48 x 1pc



 
SA49 x 2pcs




SA50 x 1pc




SB32 x 1pc




SB33 x 1pc

 

SB34 x 2pcs

 

SB35 x 2pcs

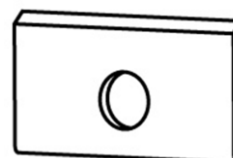

SB36 x 2pcs

STEP 1

Wood boards needed:

- * 1pc KP1
- * 1pc KP2
- * 1pc KP3

Hardware needed:

- * S7 x 8 pcs

Connect KP1 and KP2 together using S7 as shown in FIGURE 1.

IMPORTANT NOTE!

Please make sure the wall pieces are attached together **CORRECTLY** as shown in the Enlarged Diagram. For the following assembly steps, please also follow this method.

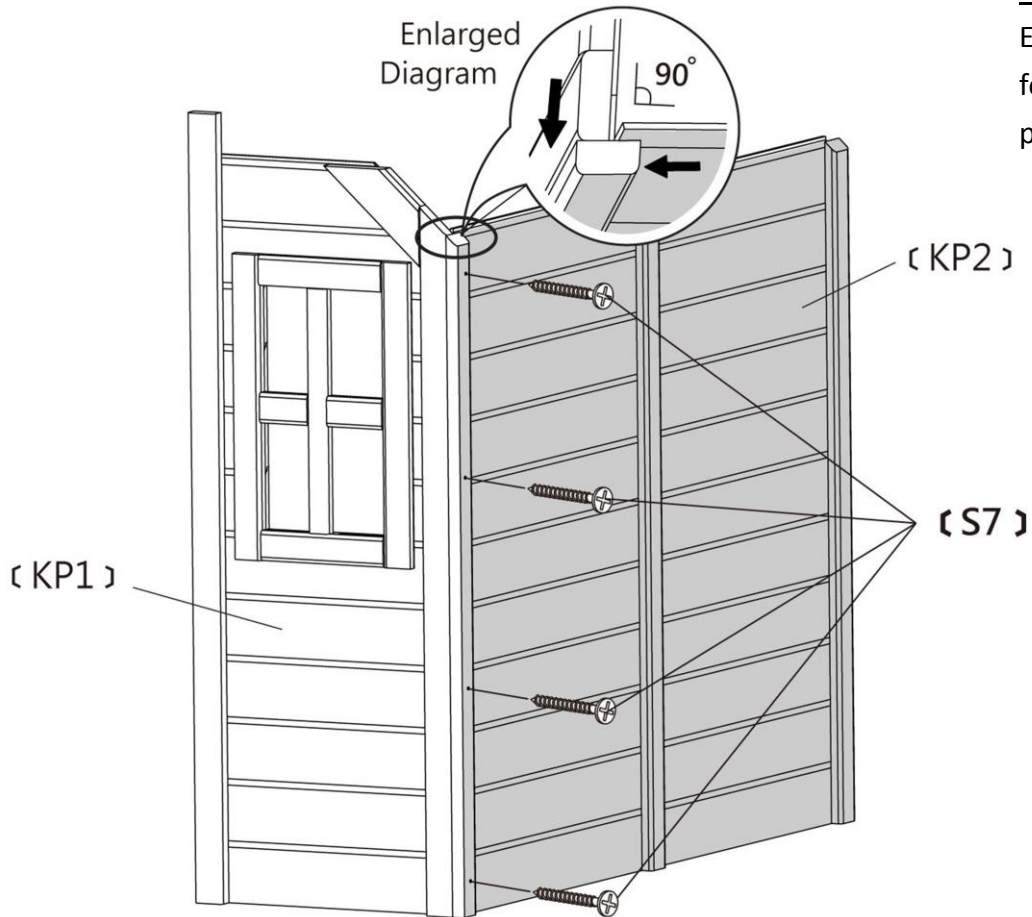


FIGURE 1

Connect KP2 and KP3 together using S7 as shown in FIGURE 2.

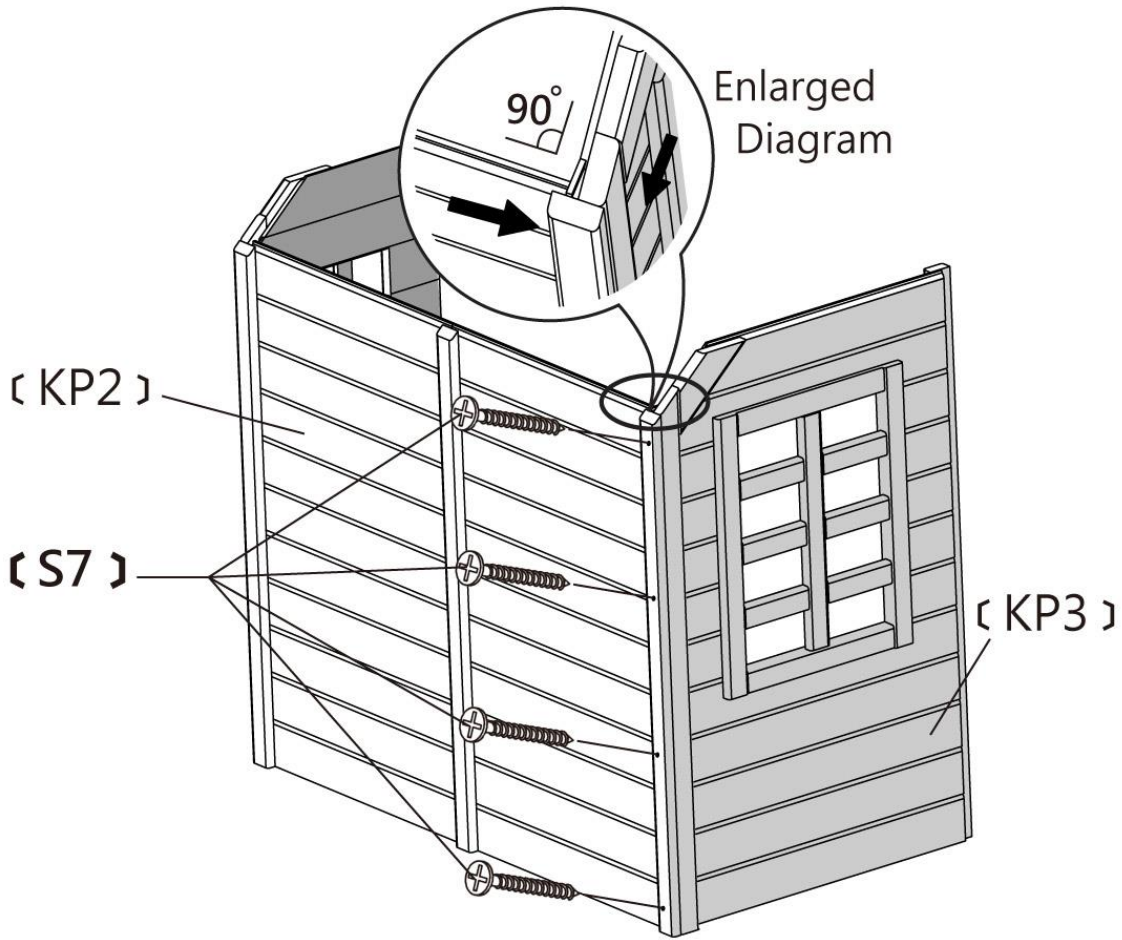


FIGURE 2

STEP 2

Wood boards needed:

* 1pc KP4


* 1pc KP5 * 1pc KP6

Hardware needed:

* S7 x 14 pcs

Connect KP3 and KP4 together from the inside using S7 as shown in FIGURE 3.

Please make sure there is no gap in between KP3 and KP4 as shown in the Enlarged Diagram.

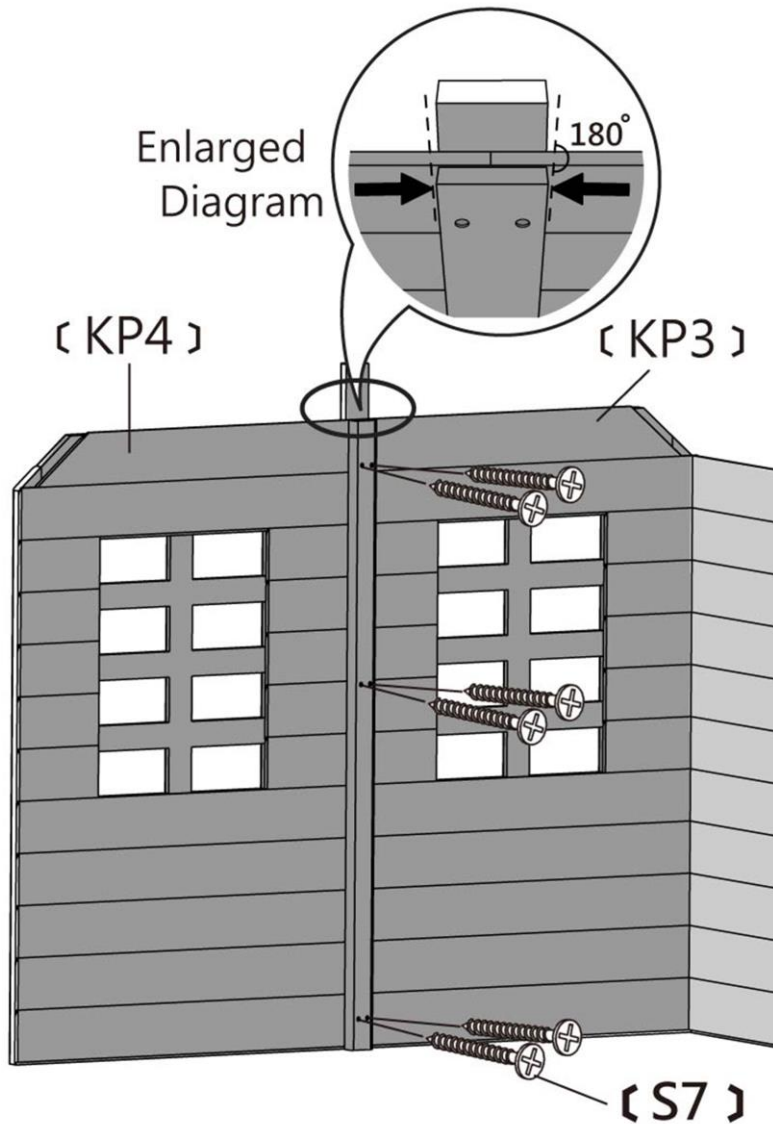

IMPORTANT NOTE!

Please make sure the wall pieces are attached together **CORRECTLY** as shown in the Enlarged Diagram. For the following assembly steps, please also follow this method.

FIGURE 3

Connect KP4 and KP5 together using S7 as shown in FIGURE 4.

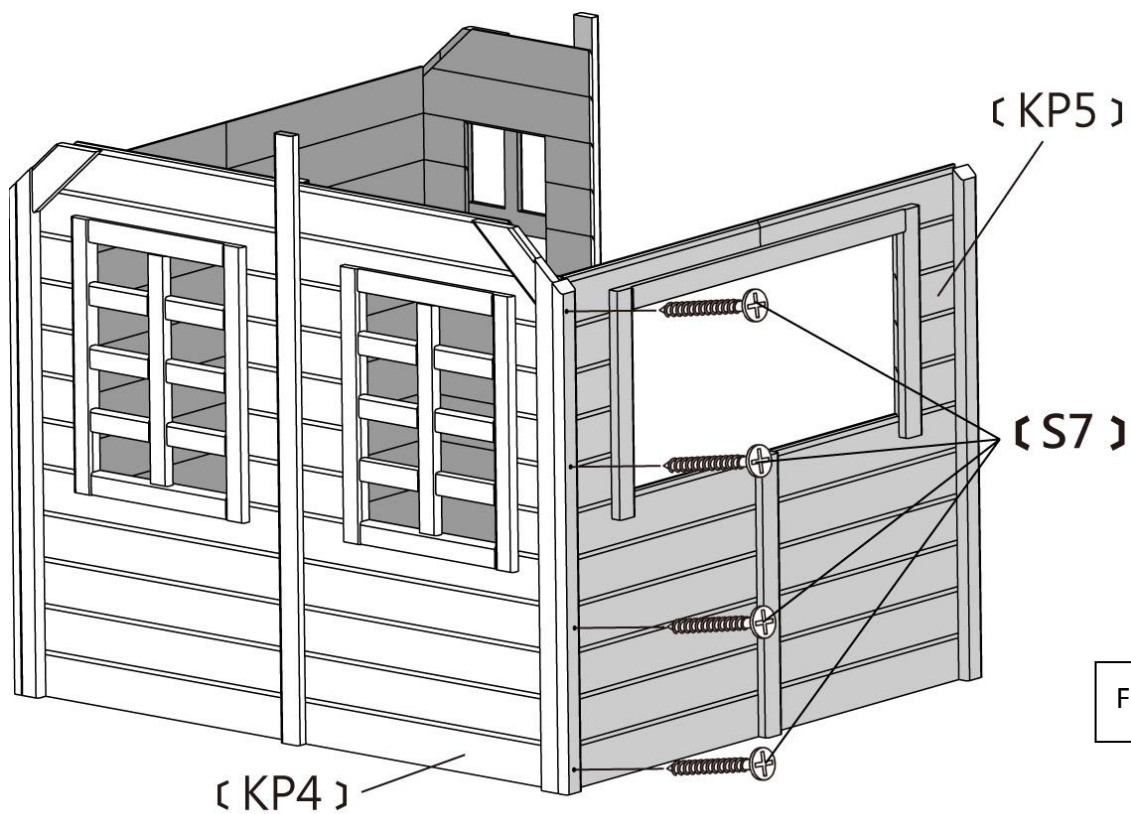


FIGURE 4

Connect KP5 and KP6 together using S7 as shown in FIGURE 5.

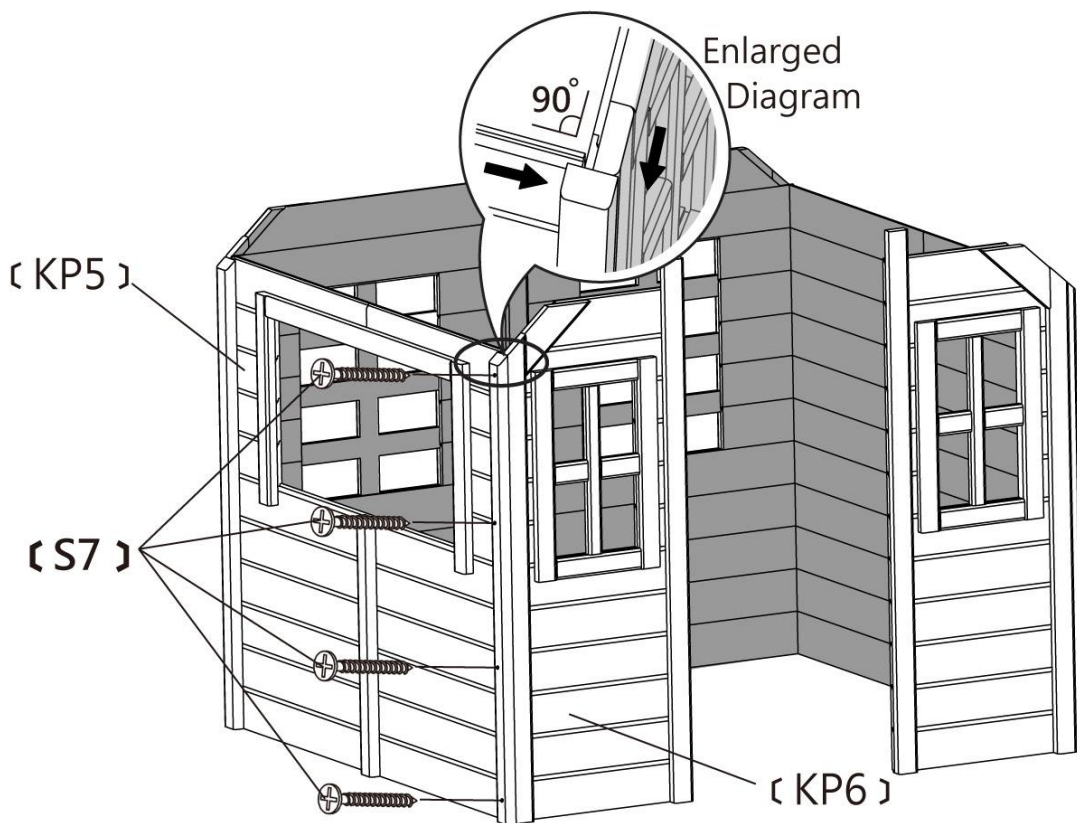


FIGURE 5

STEP 3

Wood boards needed:

* 1pc KP7 * 1pc KP8

Hardware needed:

* S5 x 6 pcs * S8 x 4 pcs

With someone holding, connect KP7 to KP3 and KP4 together using S5 and S8 as shown in FIGURE 6.


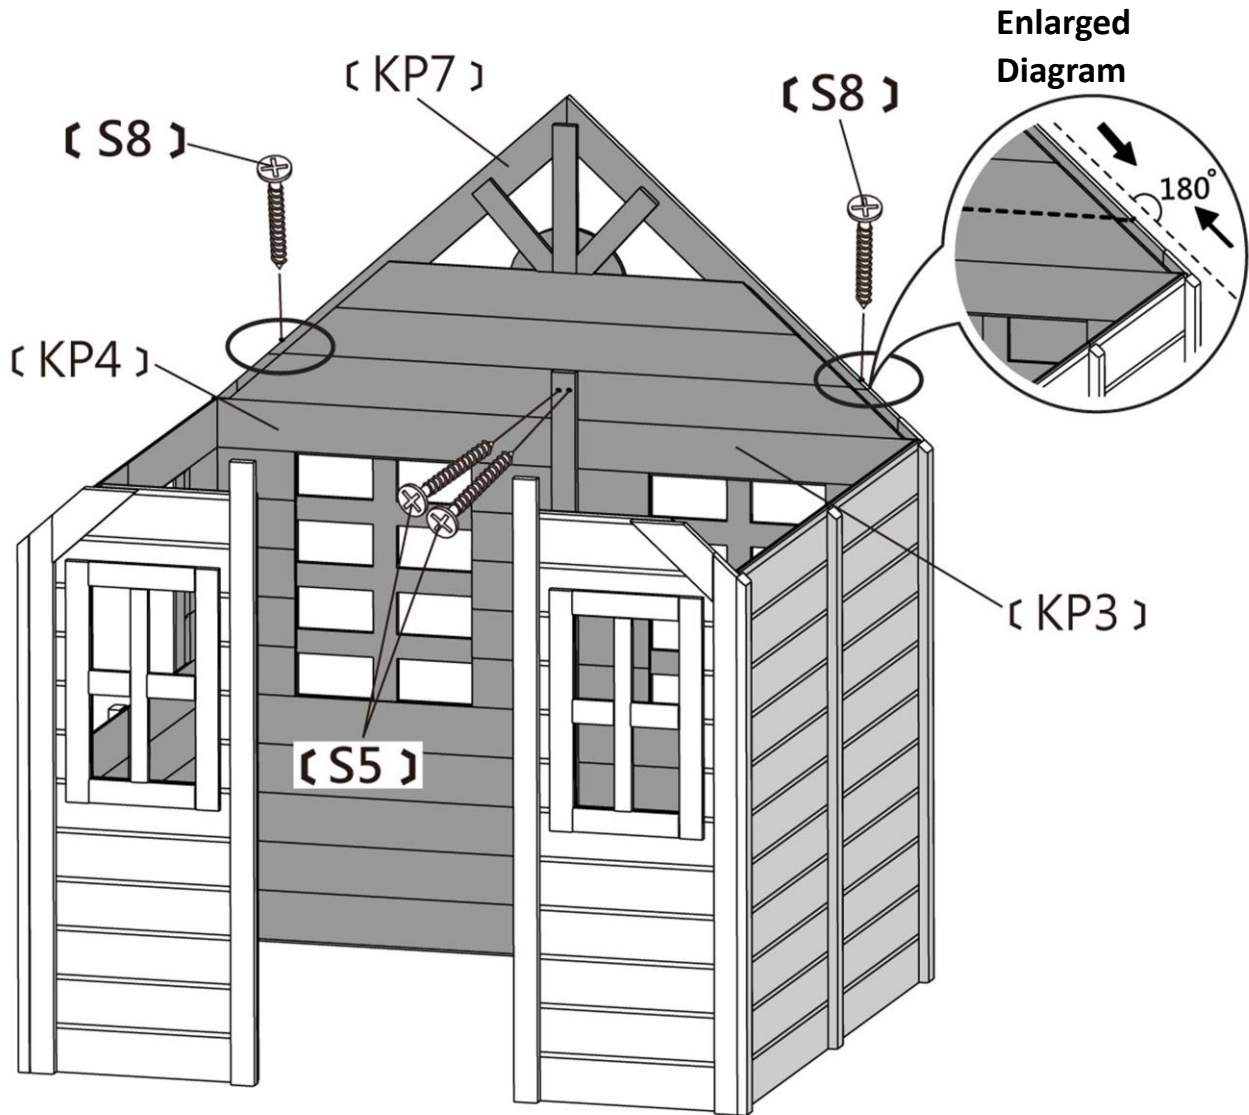


FIGURE 6

IMPORTANT NOTE!

Please make sure the wall pieces are attached together **CORRECTLY** as shown in the Enlarged Diagram. Please make sure there is no gap in between KP7, KP3 and KP4 after assembly.

With someone holding, connect KP8 to KP1 and KP6 together using S5 and S8 as shown in FIGURE 7.

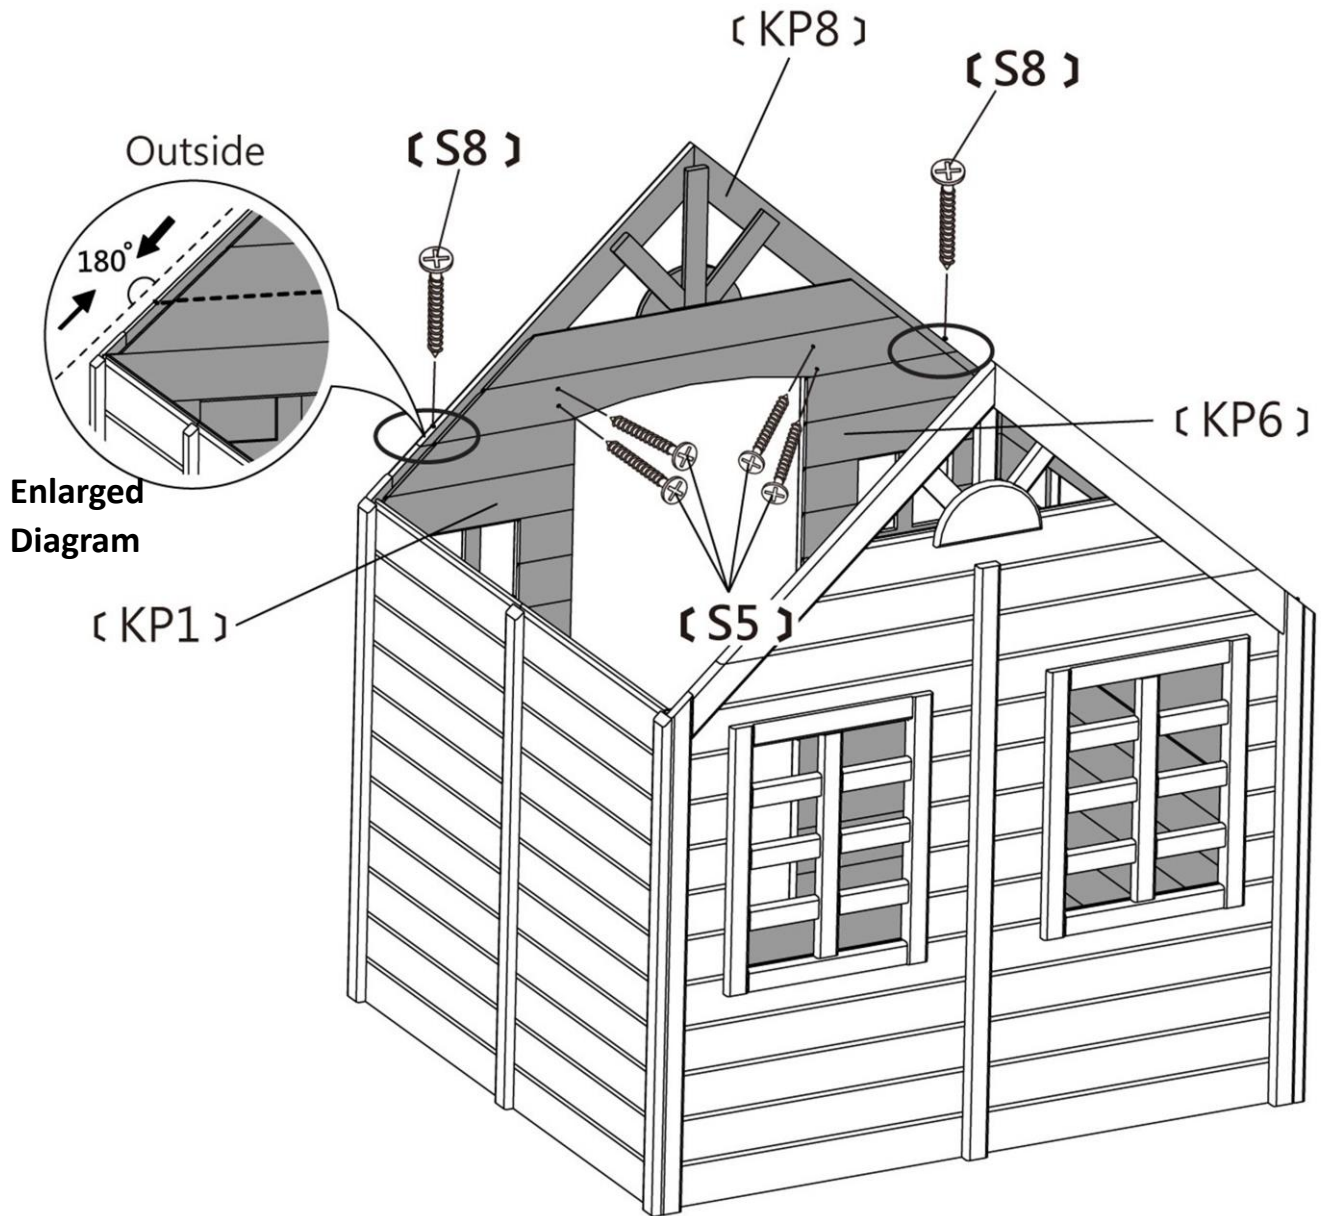

IMPORTANT NOTE!

Please make sure the wall pieces are attached together **CORRECTLY** as shown in the Enlarged Diagram. Please make sure there is no gap in between KP8, KP1 and KP6 after assembly.

FIGURE 7

STEP 4

Wood boards needed:

* 1pc SA48 * 2pcs KP9

Hardware needed:

* S8 x 4 pcs * S6 x 8 pcs

Connect SA48 to the bottom of KP1 and KP6 by using S8 as shown in FIGURE 8.

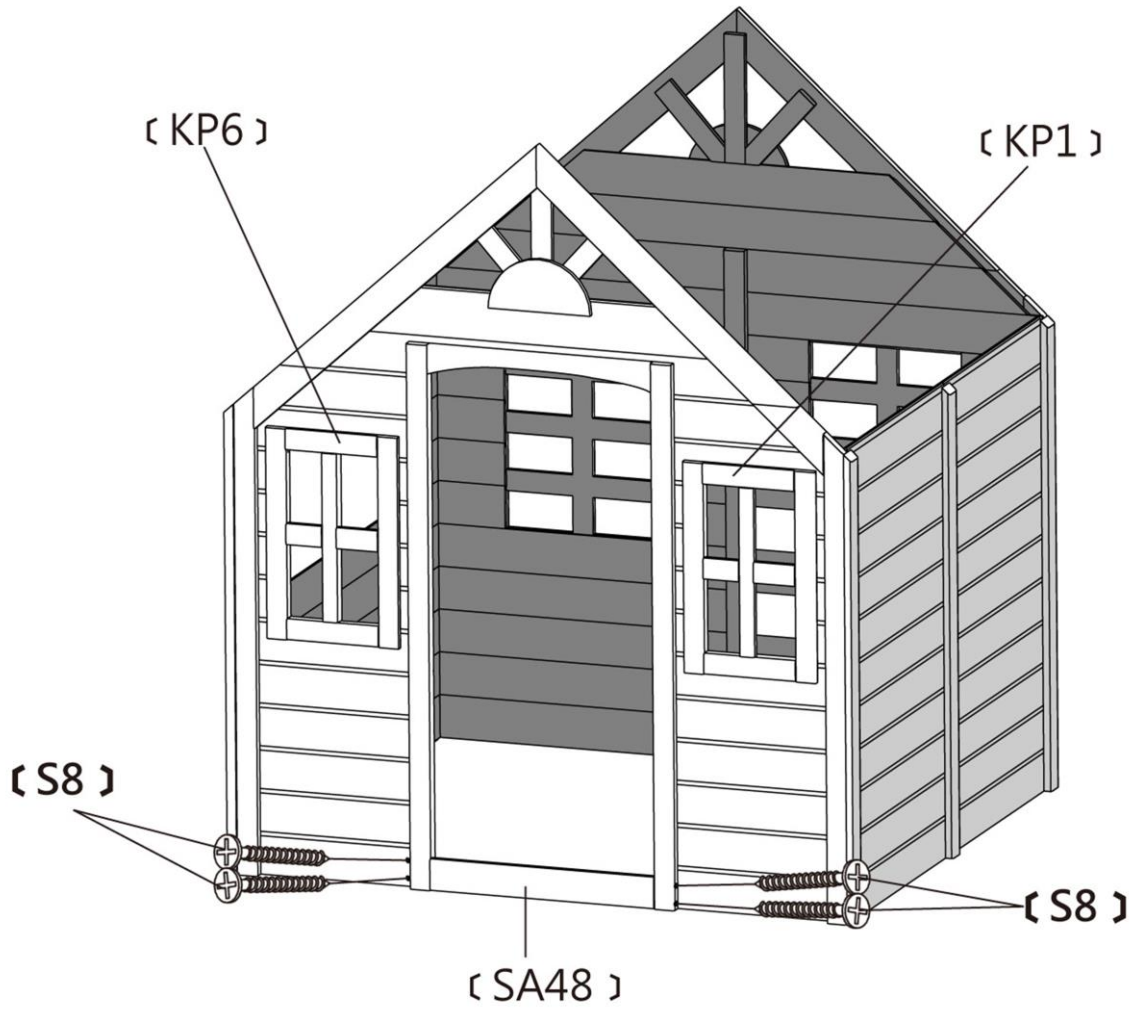


FIGURE 8

Having someone holding KP9 to KP1 and KP6 from the outside, secure KP9 with KP1 and KP6 from the inside using S6 as shown in FIGURE 9.

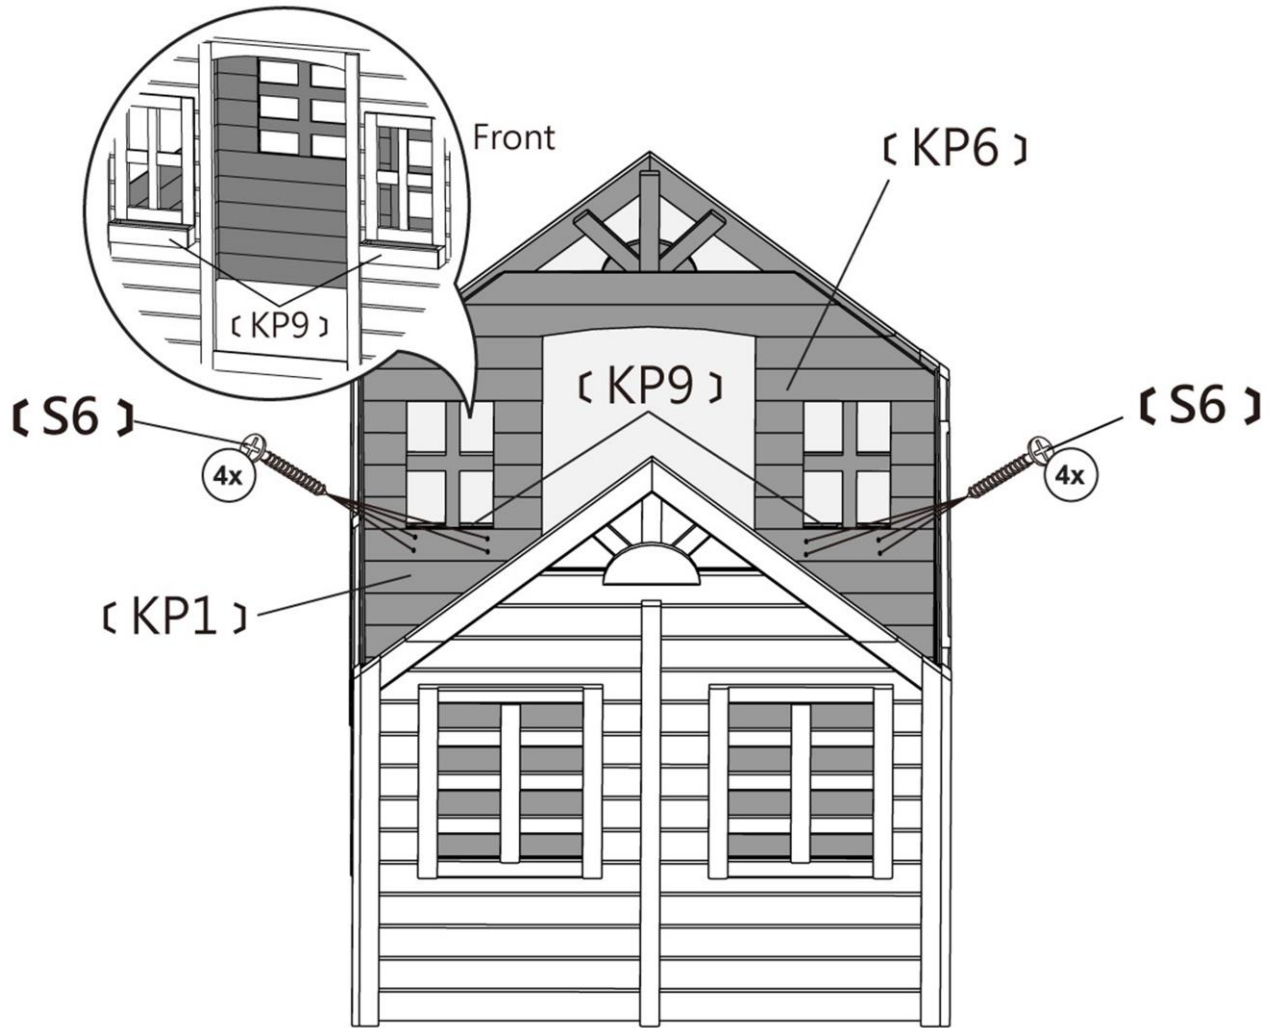


FIGURE 9

STEP 5

Wood boards needed:

- * 2pcs SA49 * 1pc SA50
- * 1pc SB32 * 1pc SB33

Hardware needed:

- * S6 x 4 pcs * S5 x 4 pcs
- * S7 x 1 pc * S8 x 1 pc

Having someone holding SA49 to KP5 from the outside, secure SA49 with KP5 from the inside using S6 as shown in FIGURE 10.

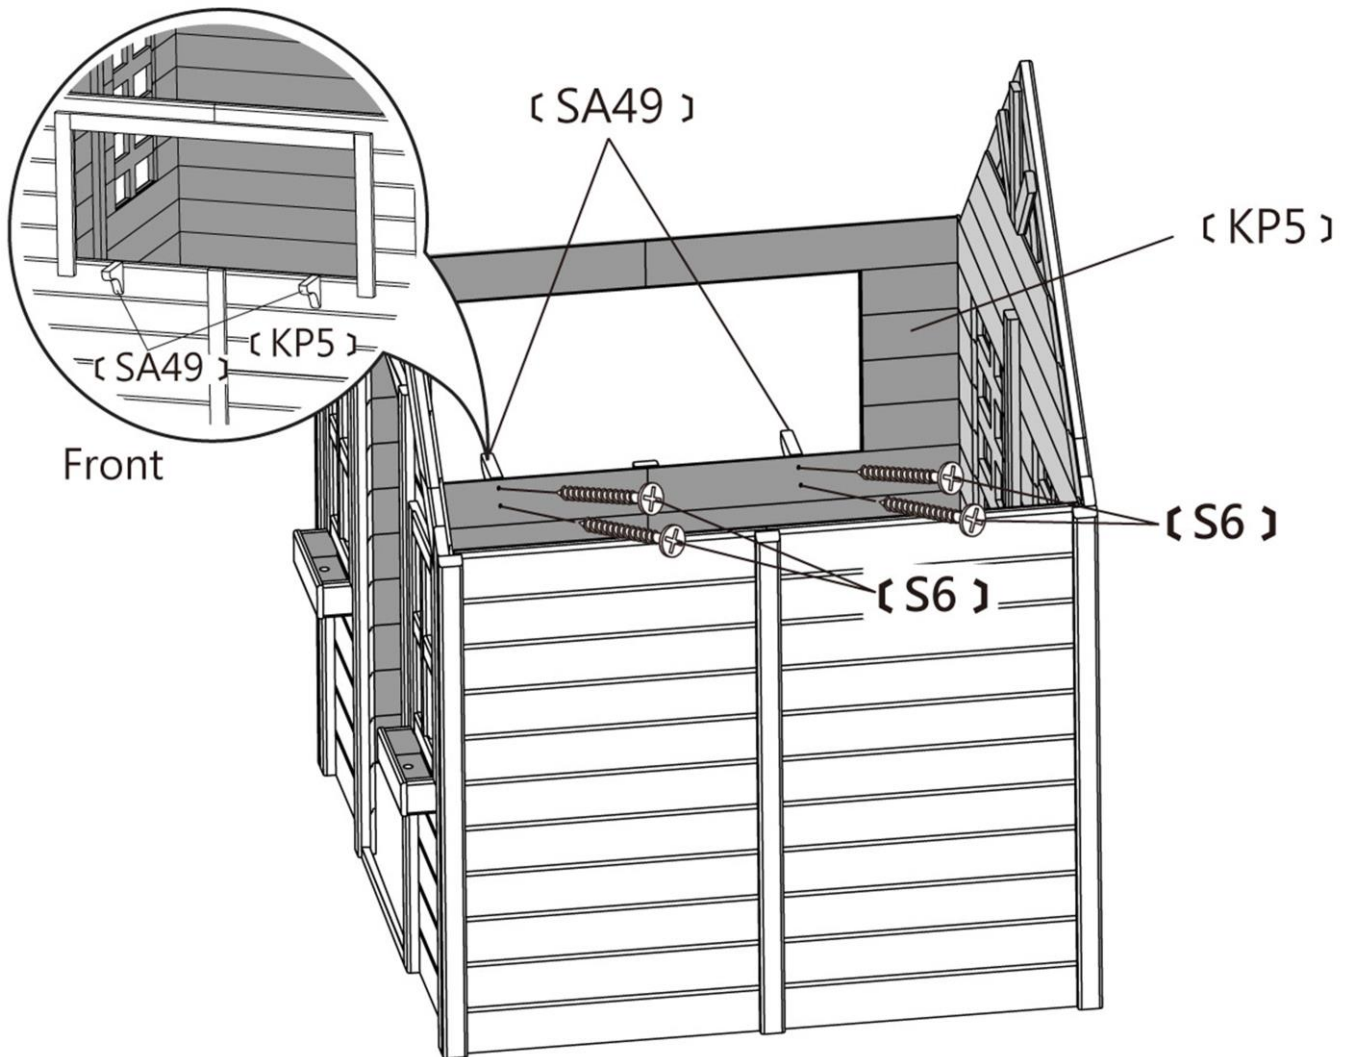


FIGURE 10

Connect SB32 and SB33 to SA49 using S5 as shown in FIGURE 11.

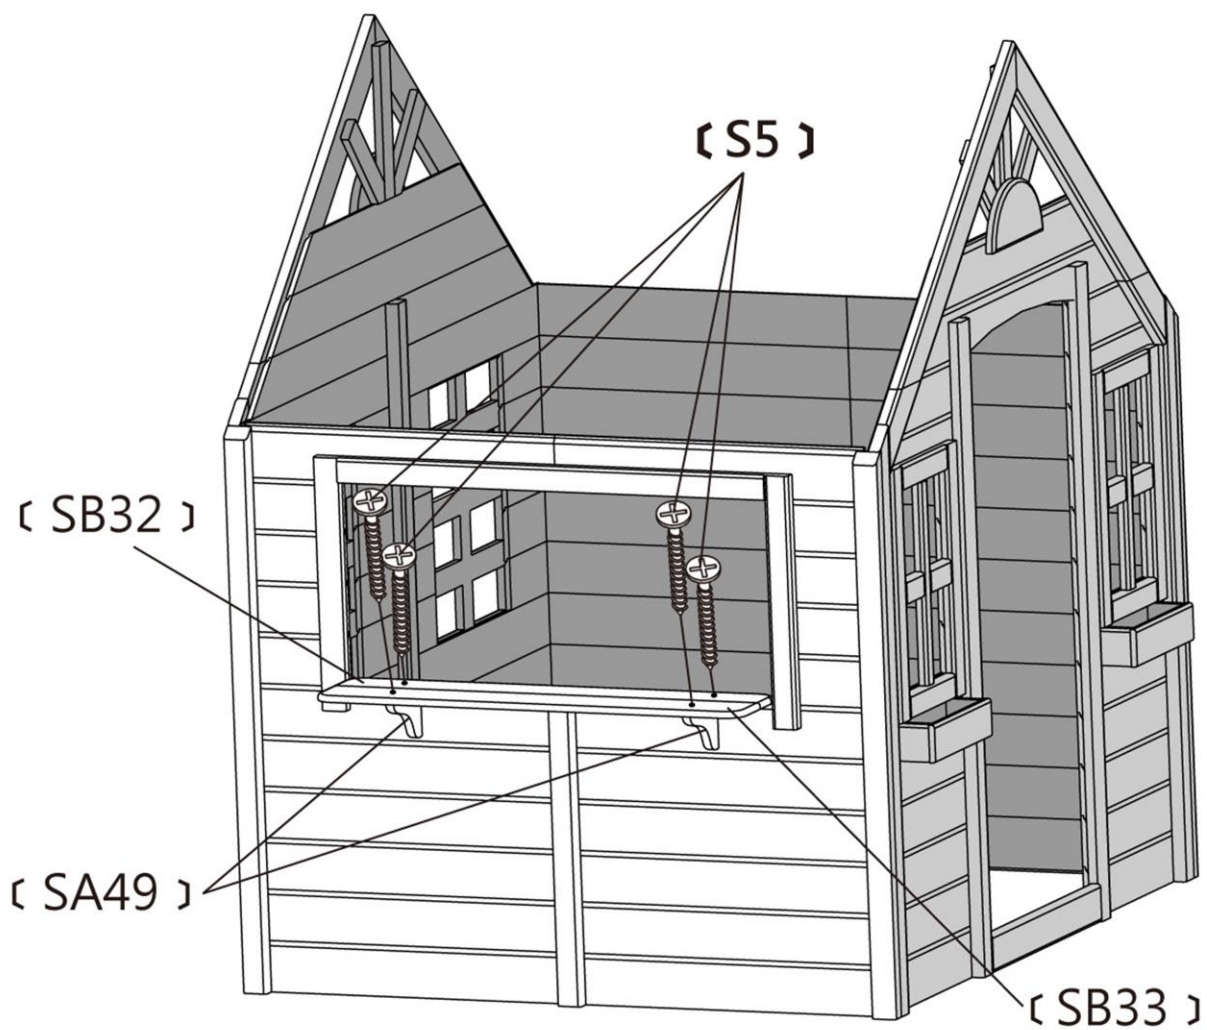


FIGURE 11

Connect SA50 to SB33 using S7 as shown in FIGURE 12.
Then, connect SA50 to KP5 using S8 as shown in FIGURE 12.

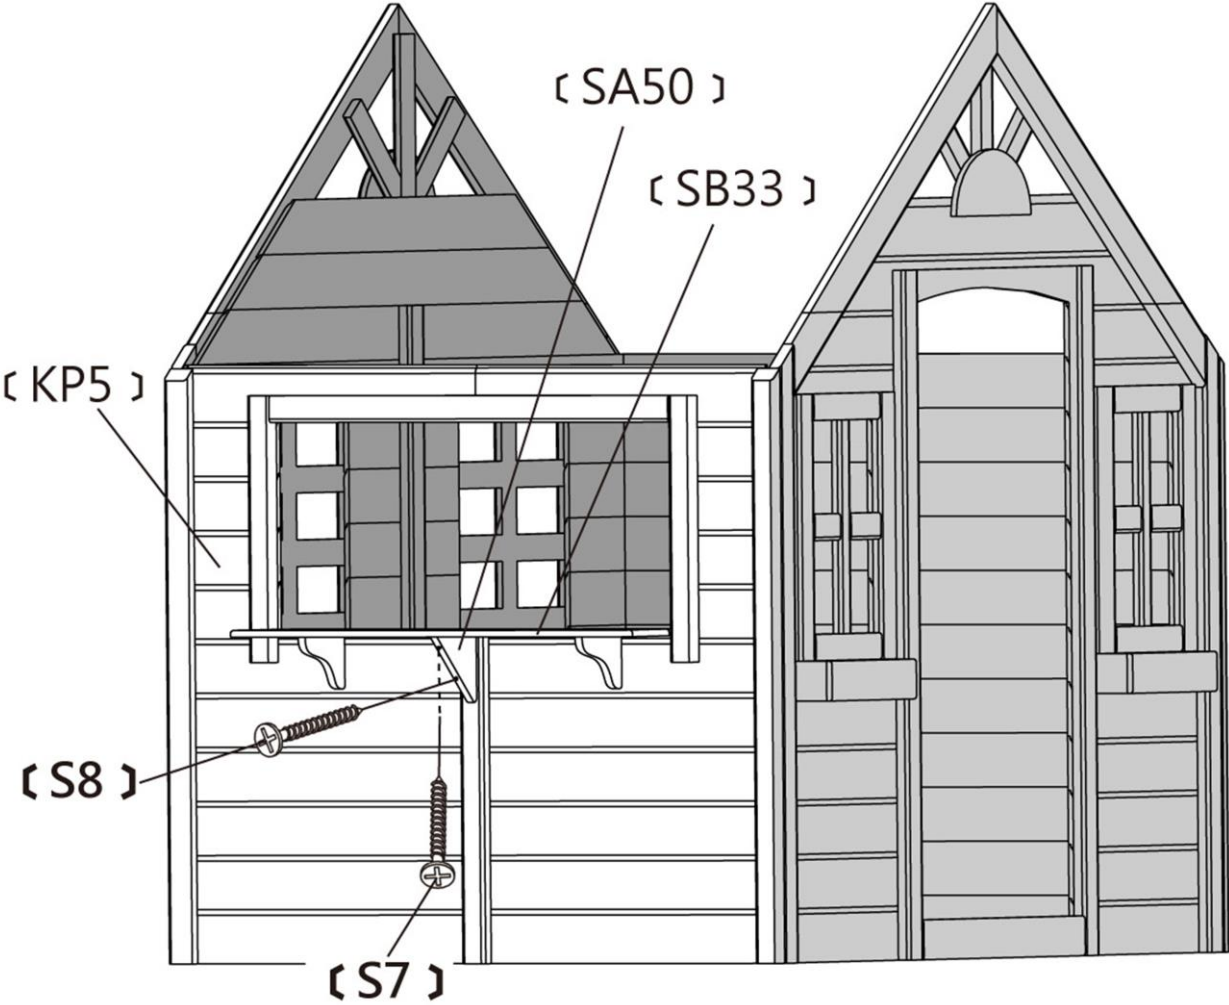


FIGURE 12

STEP 6

Wood boards needed:

- * 1pc KP10
- * 1pc KP11
- * 1pc KP12

Hardware needed:

- * S7x 4 pcs
- * S10 x 4 pcs
- * S8 x 4 pcs
- * U32 x 2 pcs

Having someone holding KP10 and KP11 to KP5 from the outside, secure KP10 and KP11 with KP5 from the inside using S8 as shown in FIGURE 13.

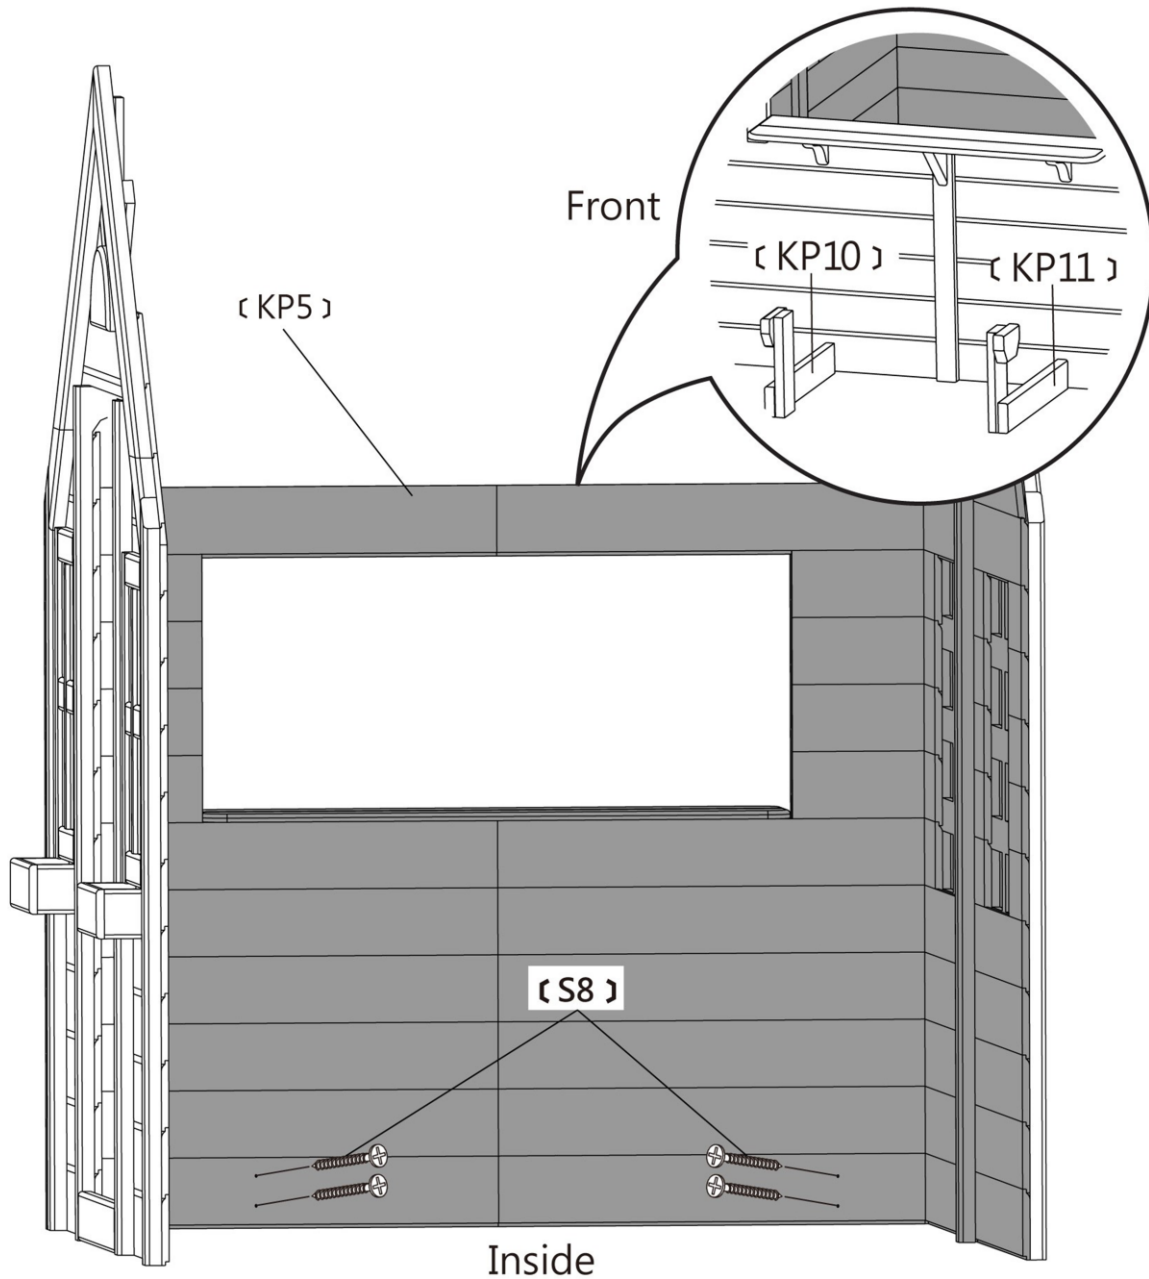


FIGURE 13

Connect KP10 and KP11 to KP5 with U32 by using S10 as shown in FIGURE 14.

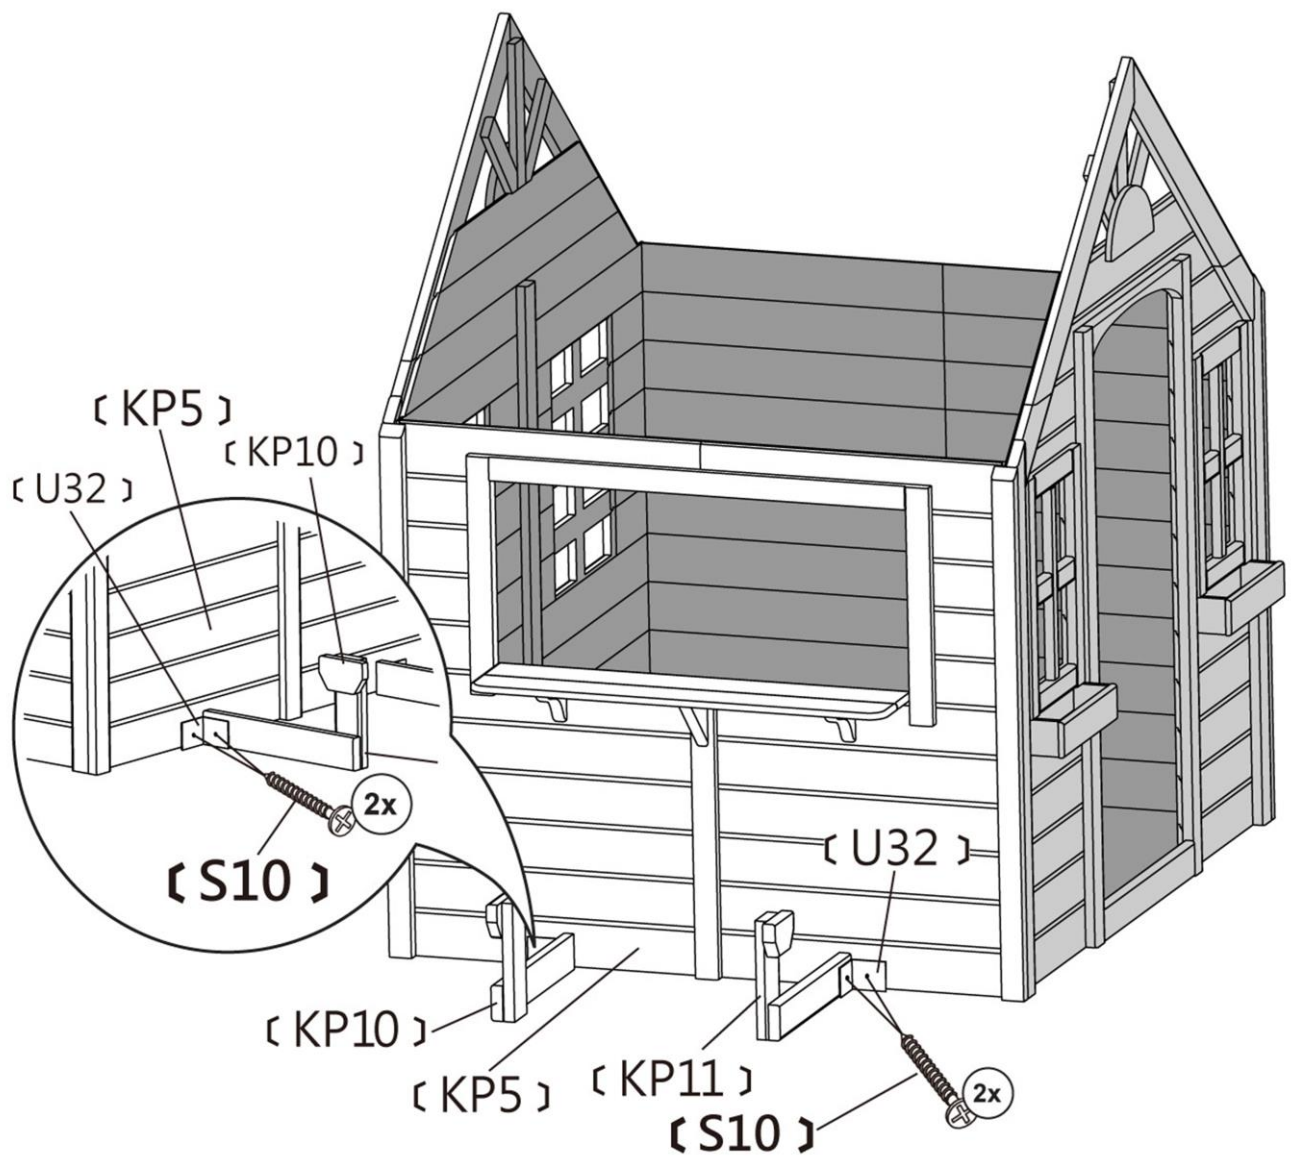


FIGURE 14

Connect KP12 to KP10 and KP11 by using S7 as shown in FIGURE 15.

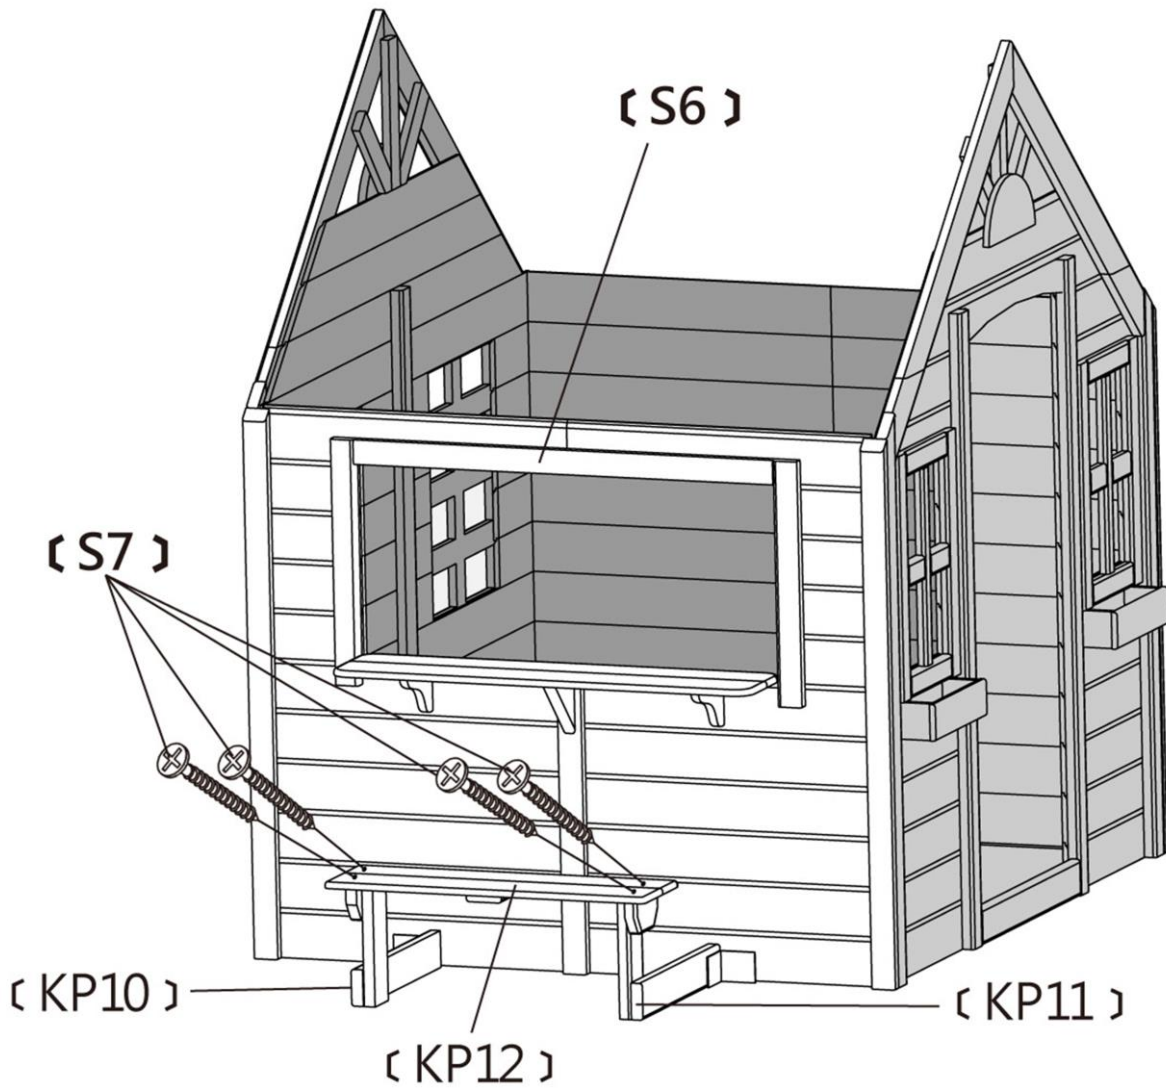


FIGURE 15

STEP 7

Wood boards needed:

- * 1pc KP13
- * 1pc KP14
- * 1pc KP15

Hardware needed:

- * S7 x 4 pcs
- * S8 x 4 pcs

Hold up KP13 and KP14 against to KP2. Secure KP15 to KP13 and KP14 by using S7 as shown in FIGURE 16.

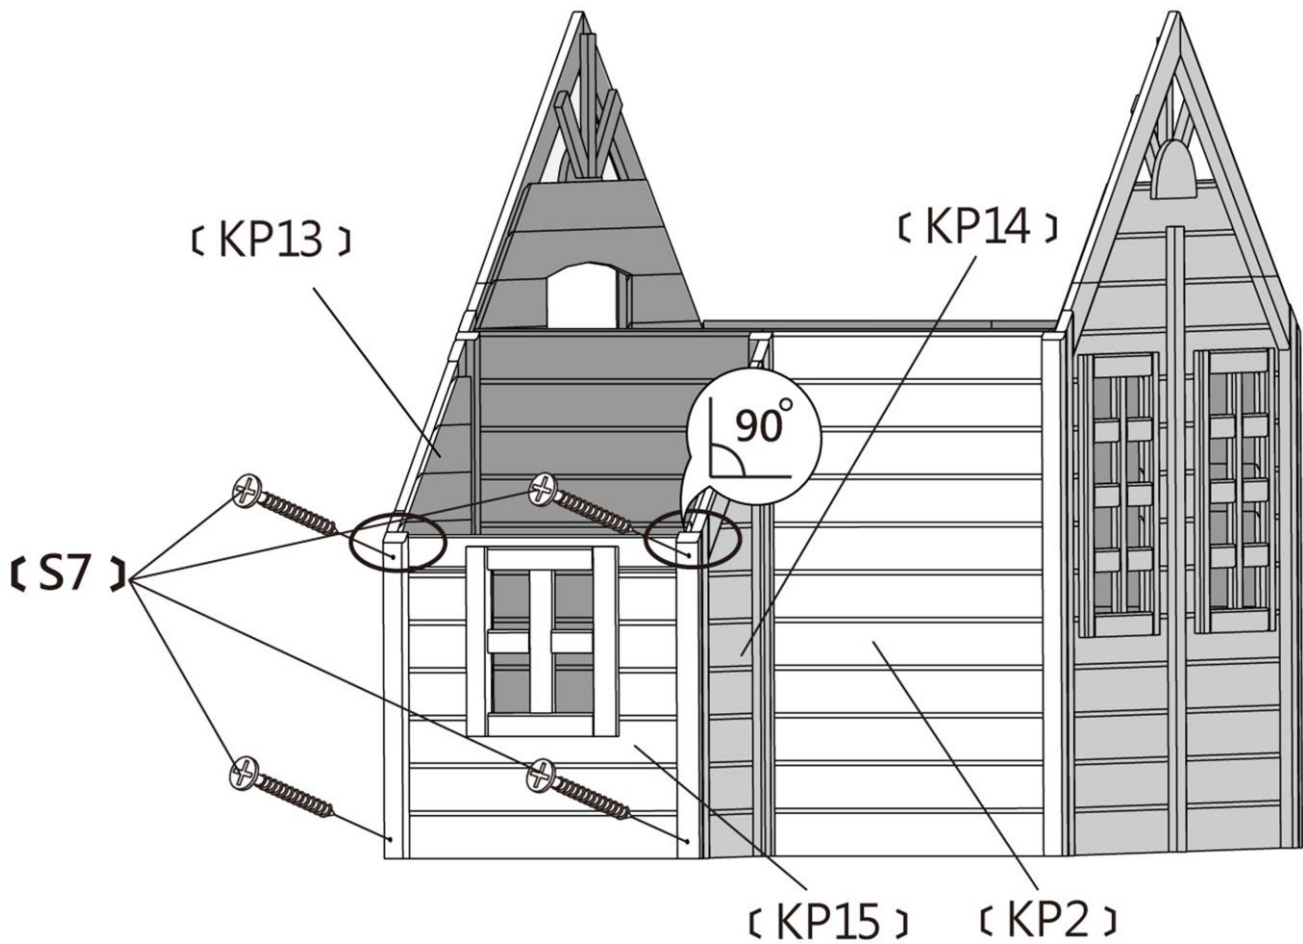


FIGURE 16

Connect KP13 to KP2 by using S8 as shown in FIGURE 17.

Please make sure there is no gap in between KP2 and KP13 as shown in the Enlarged Diagram.

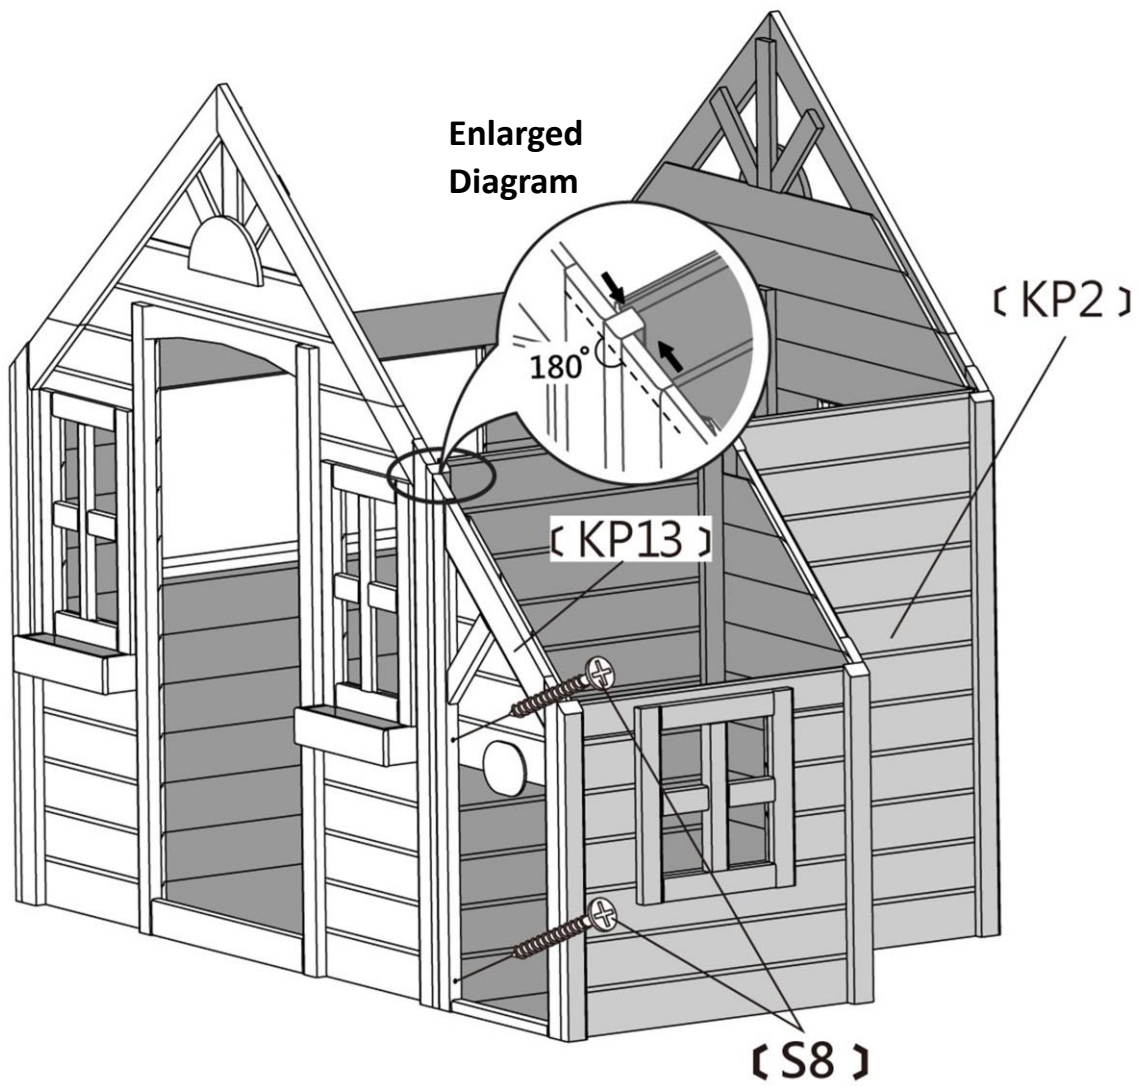


FIGURE 17

Connect KP14 to KP2 by using S8 as shown in FIGURE 18.

Please make sure there is no gap in between KP2 and KP14 as shown in the Enlarged Diagram.

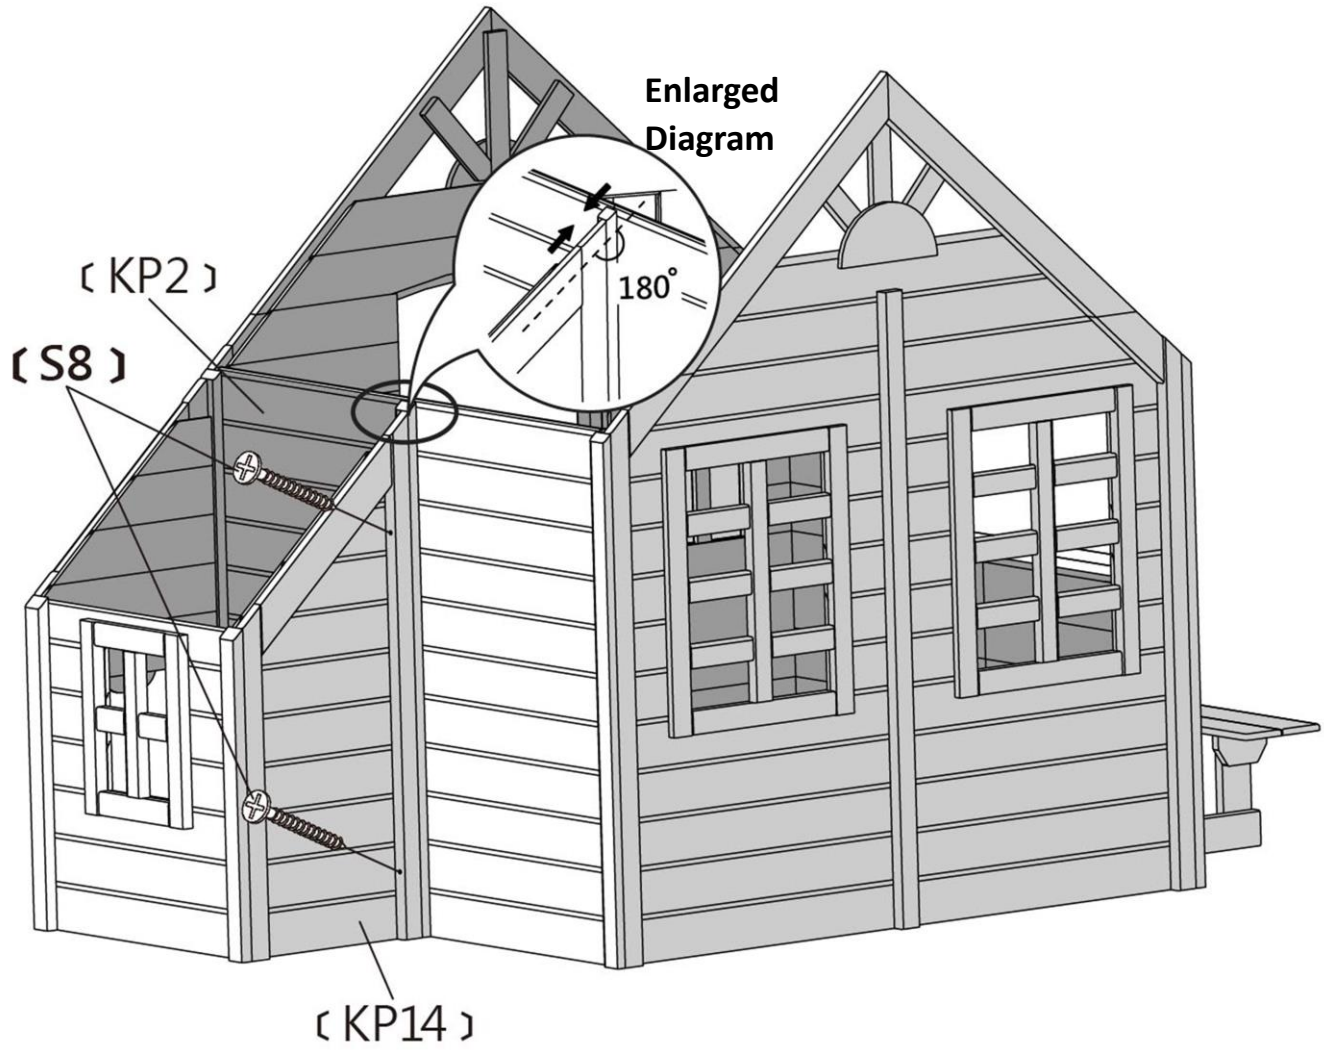


FIGURE 18

STEP 8

Wood boards needed:

- * 2pcs KP16
- * 1pc KP17
- * 1pc KP27

Hardware needed:

- * S7 x 14 pcs
- * S10 x 4 pcs

From the interior of the playhouse, attach KP16 to KP7 and KP8 together by using S7 as shown in FIGURE 19.

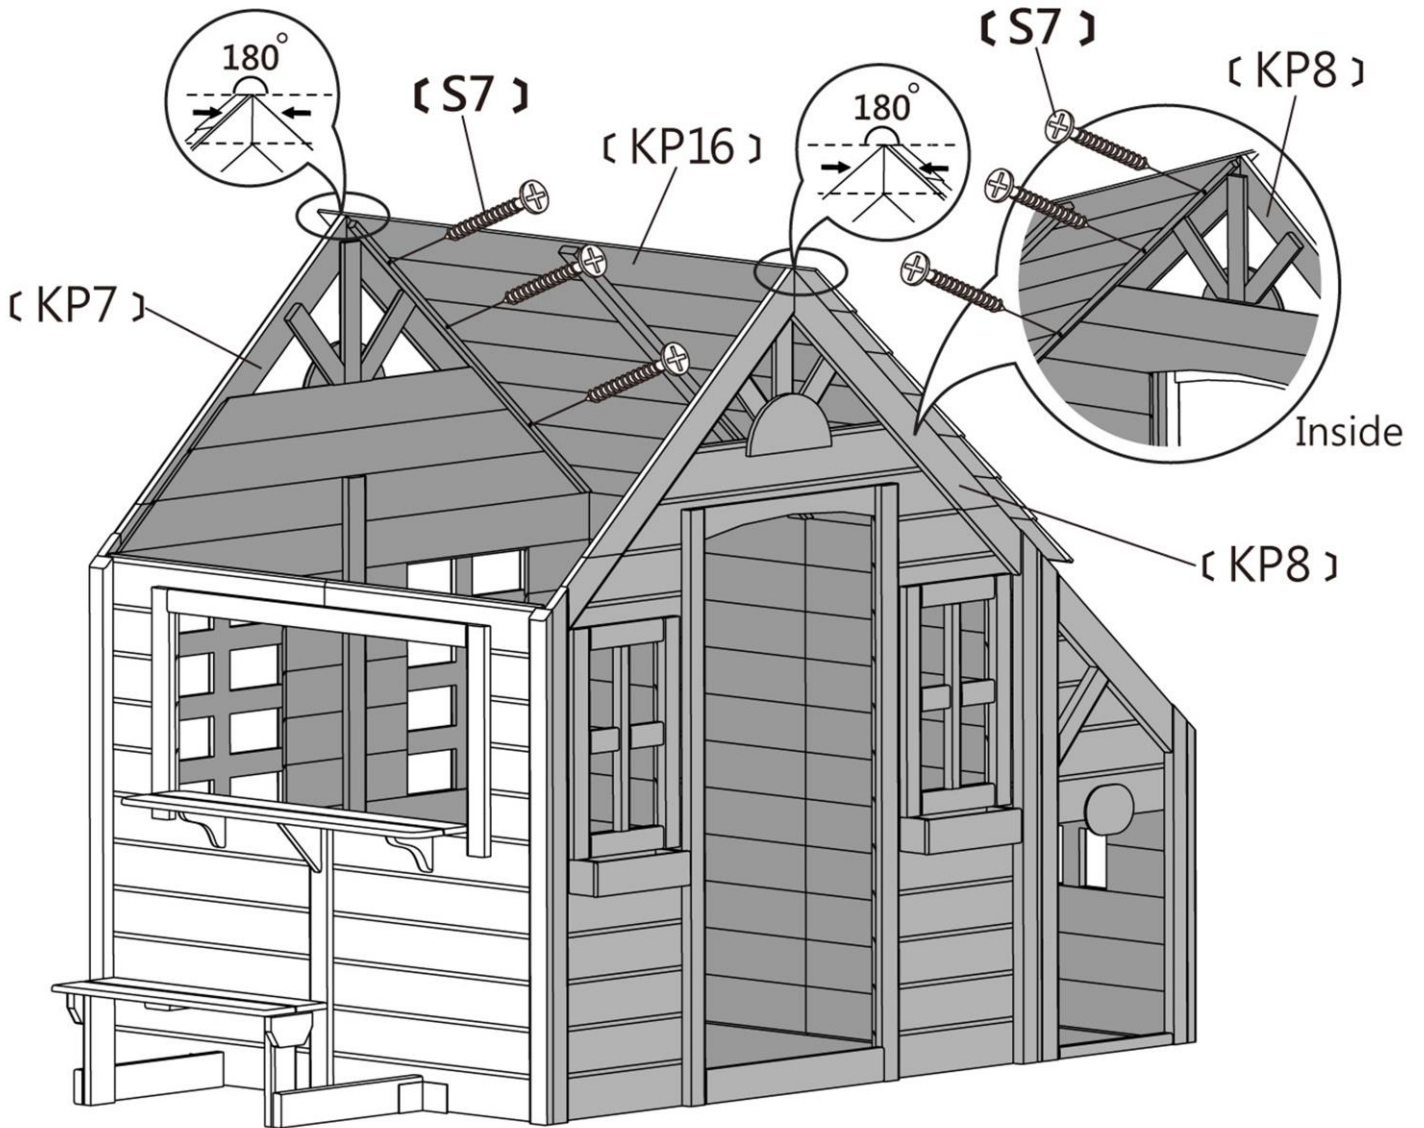


FIGURE 19

Then, attach KP16 to KP7 and KP8 at the other side together by using S7 as shown in FIGURE 20.
Please make sure there is no gap in between KP16 as shown in the Enlarged Diagram.

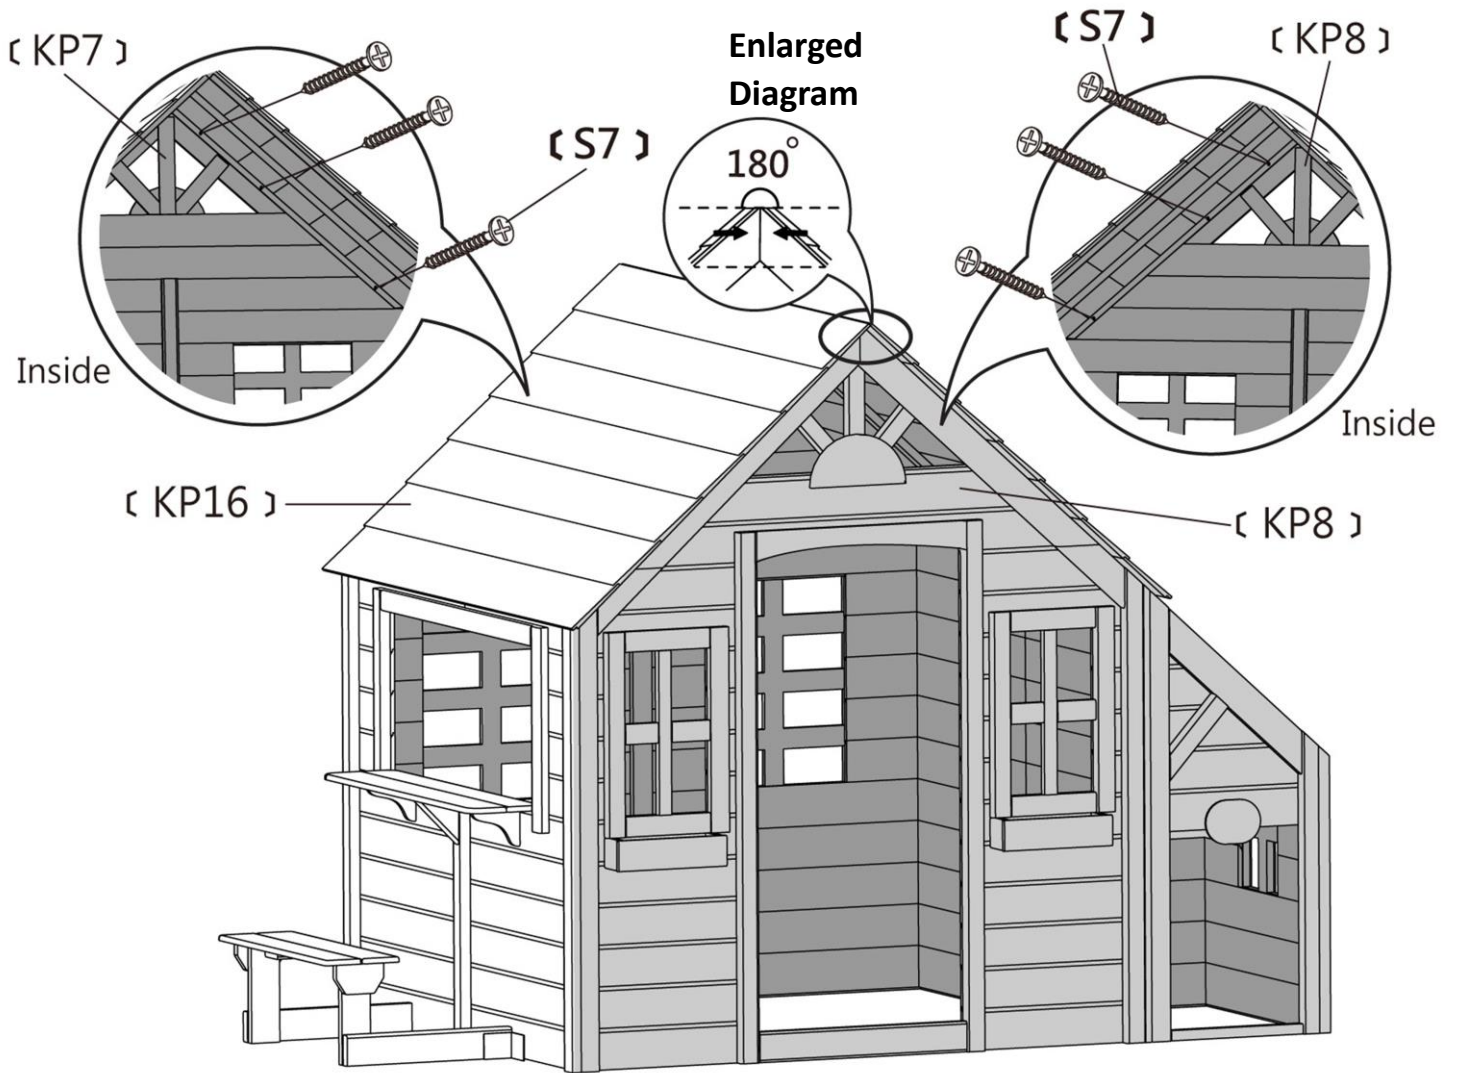


FIGURE 20

Attach KP17 to KP13 and KP14 from the side by using S7 as shown in FIGURE 21.

Please make sure there is no gap in between KP16 and KP17 as shown in the Enlarged Diagram.

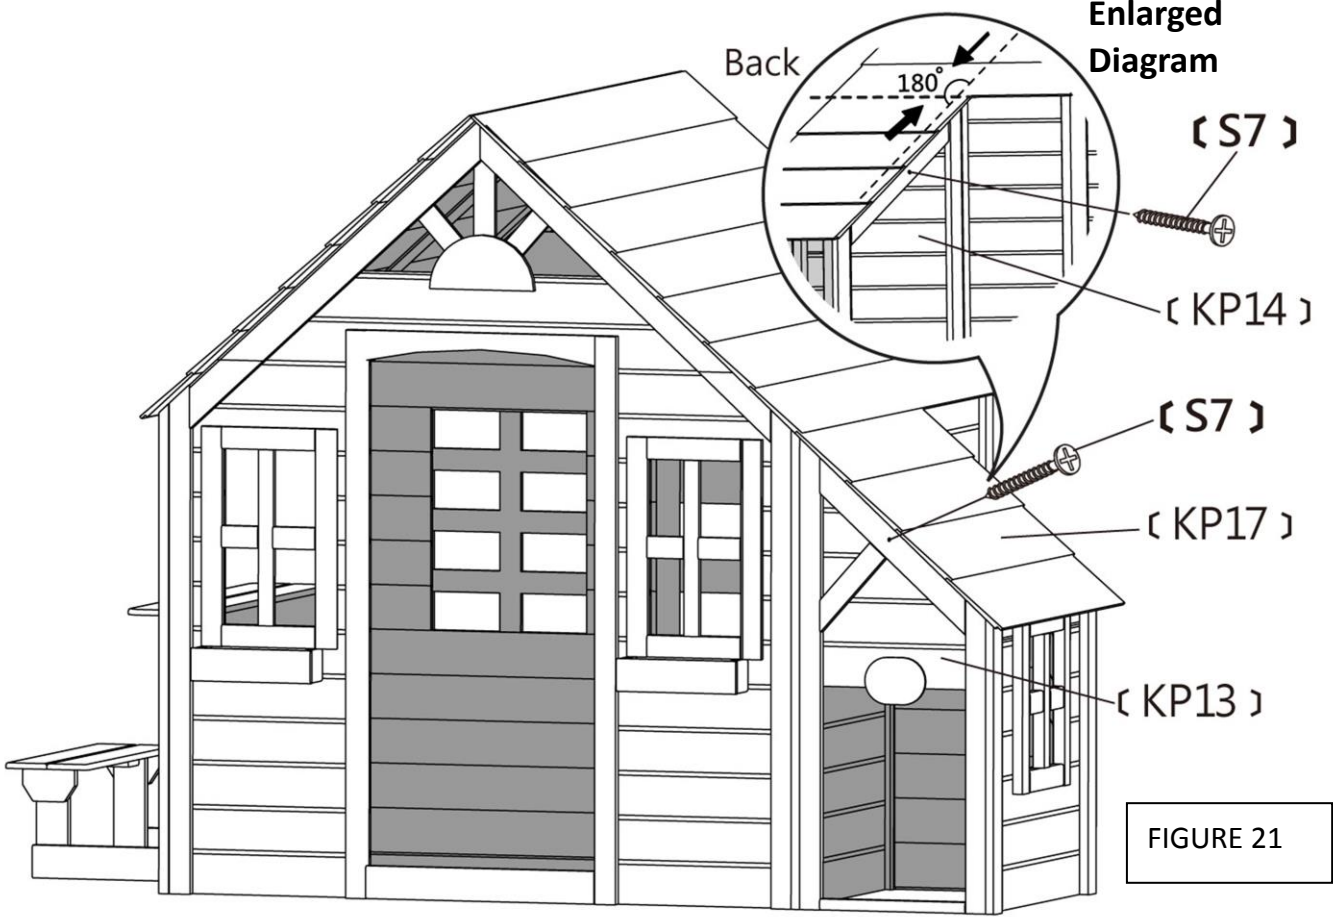


FIGURE 21

Attach the hinge on KP27 to the edge of KP6 by using S10 as shown in FIGURE 21A.

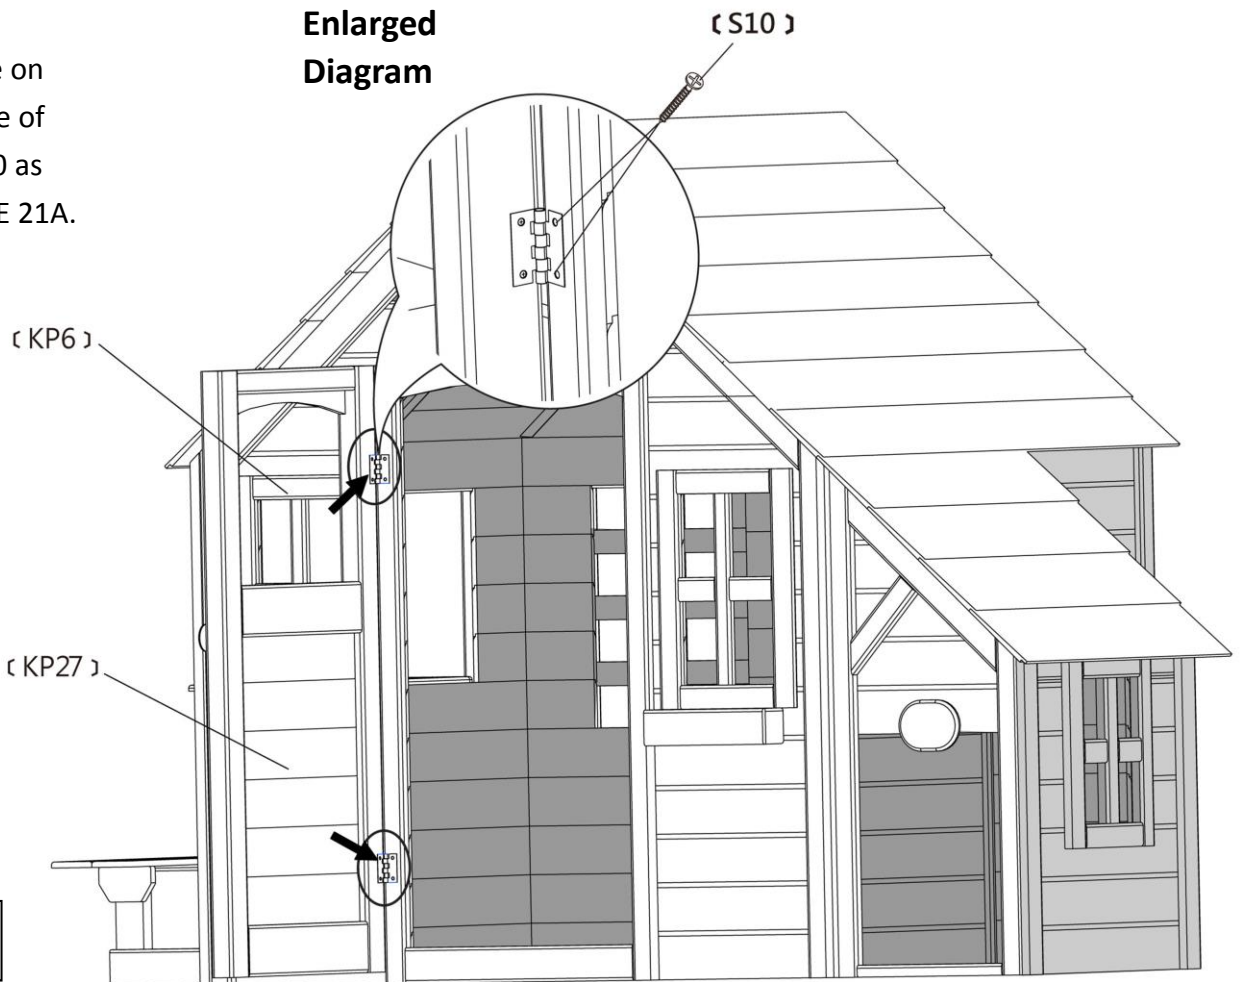


FIGURE 21A

STEP 9

Wood boards needed:

- * KP18 x 2pcs
- * SB34 x 2pcs
- * SB35 x 2pcs
- * SB36 x 2pcs

Hardware needed:

- * S5 x 16pcs

Attach 1pc SB35 and SB36 with 2pcs KP18 by using S5. Then, attach 1pc SB35 and SB36 to the other side of KP18 by using S5 as shown in FIGURE 22.

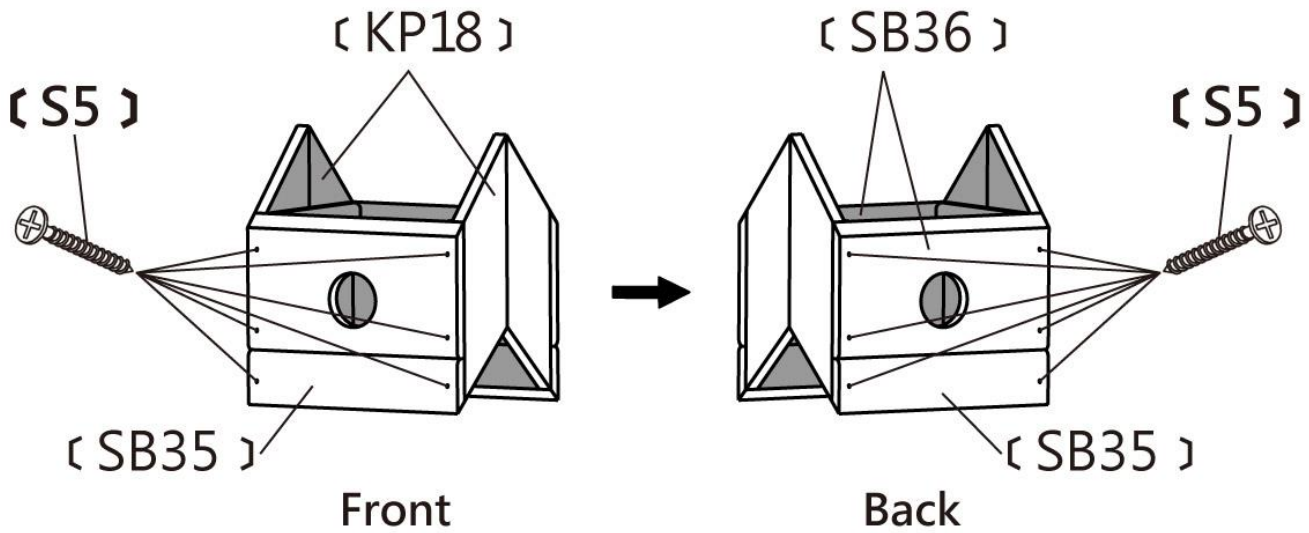


FIGURE 22

Attach 2pcs SB34 to KP18 by using S5 as shown in FIGURE 23 to form a "Bird house".

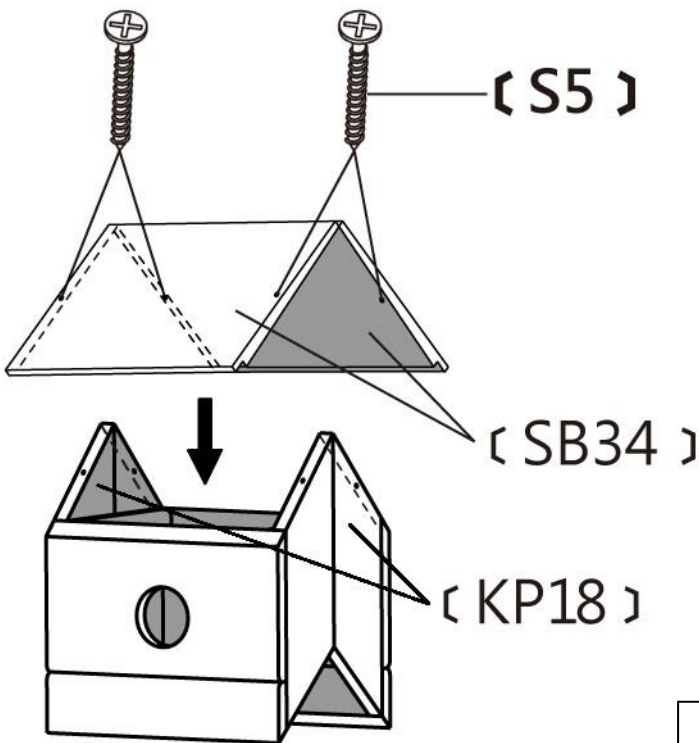


FIGURE 23

STEP 10

Wood boards needed:

* KP19 x 2pcs

Hardware needed:

*S5 x 4pcs

*S10 x 4pcs

Place "Bird house" and KP19 on top of KP16 as shown in FIGURE 24.

Make sure the edge of KP19 and KP16 is aligned as shown in the Enlarged Diagram.

From the inside of the playhouse, secure KP16 with "Bird House" by using S5 as shown in FIGURE 24.

Then, secure KP16 with KP19 by using S10 as shown in FIGURE 24.

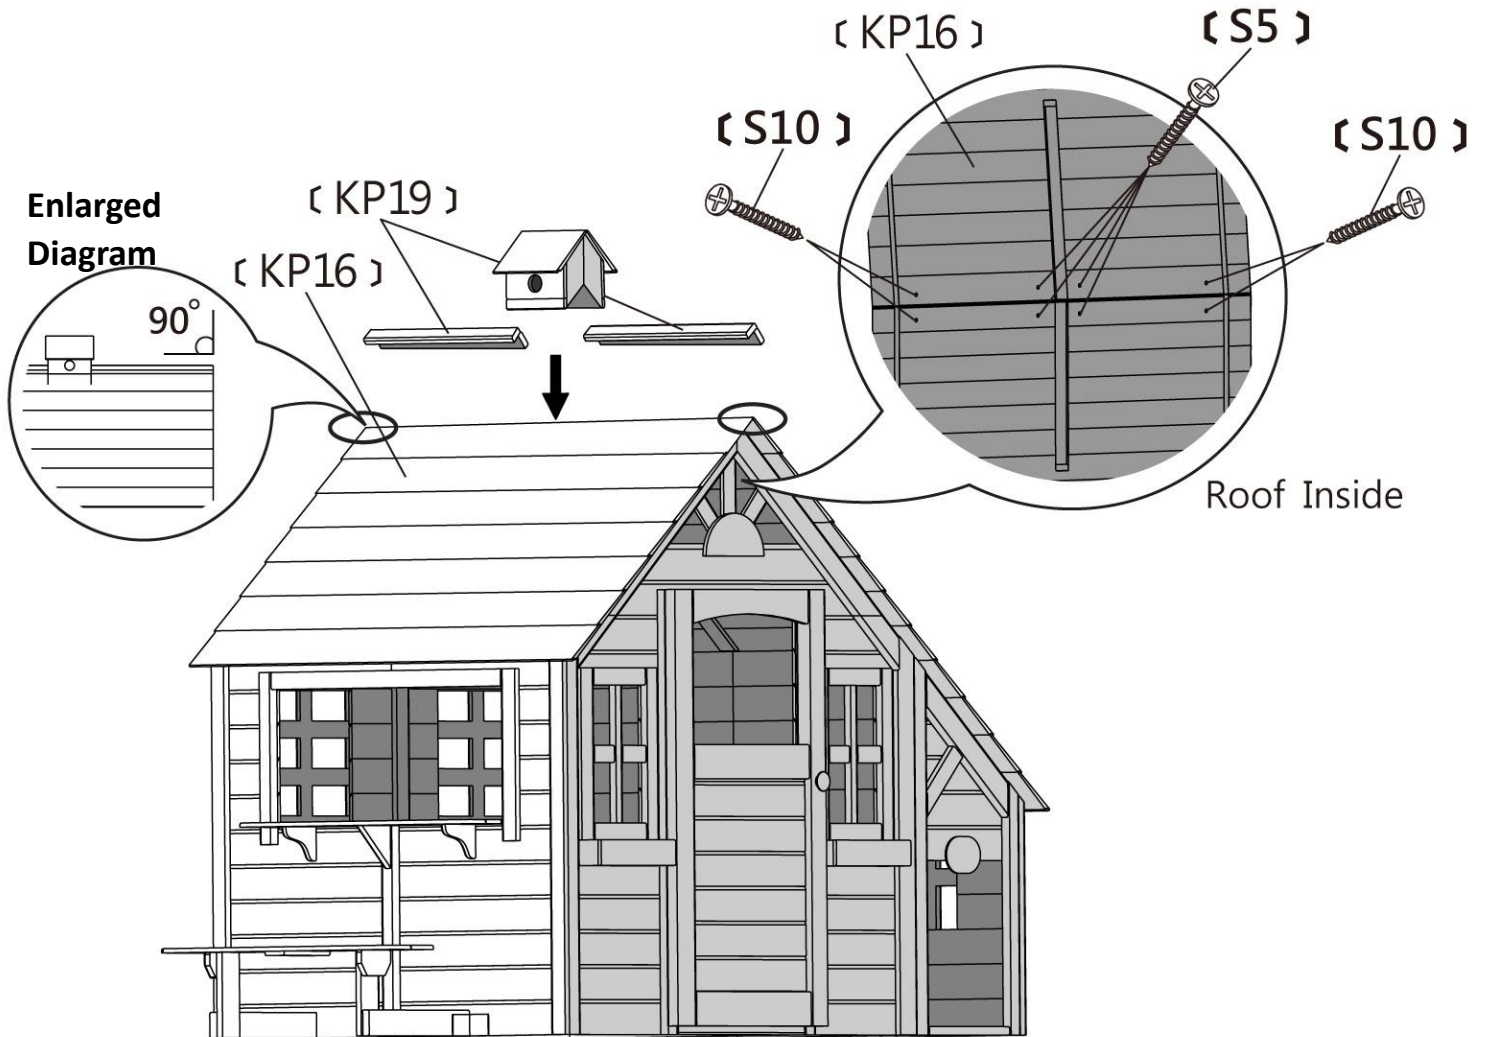


FIGURE 24

STEP 11

Wood boards needed:


- * KP20 x 1pc
- * KP21 x 2pcs
- * KP22 x 1pc

Hardware needed:

- *S5 x 12pcs


Place KP20 and KP21 to KP16 as shown in FIGURE 25. Please make sure the tip point is aligned with no gap in between as shown in Enlarged Diagram.

From beneath, attach KP20 and KP21 with KP16 using S5 as shown in FIGURE 25.

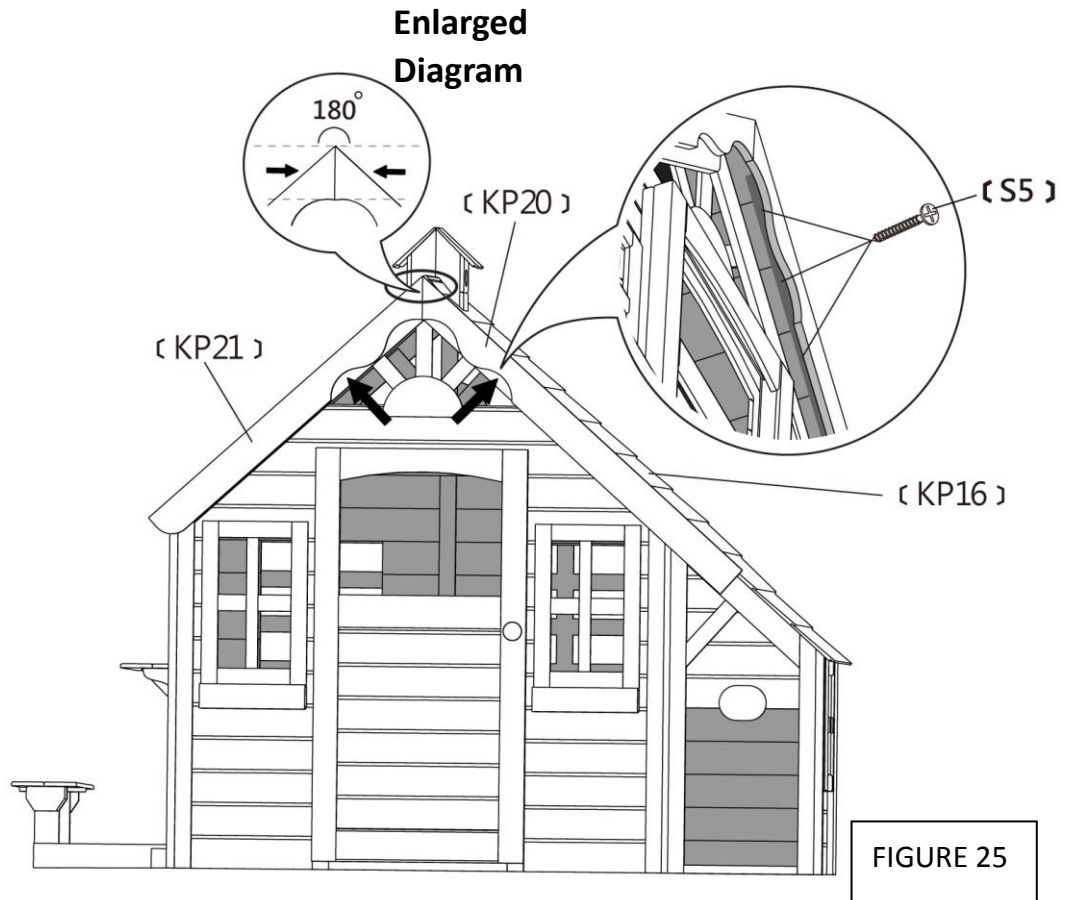

For the other side, place KP22 and KP21 to KP16 as shown in FIGURE 26. Please make sure the tip point is aligned with no gap in between as shown in Enlarged Diagram.

From beneath, attach KP22 and KP21 with KP16 using S5 as shown in FIGURE 26.

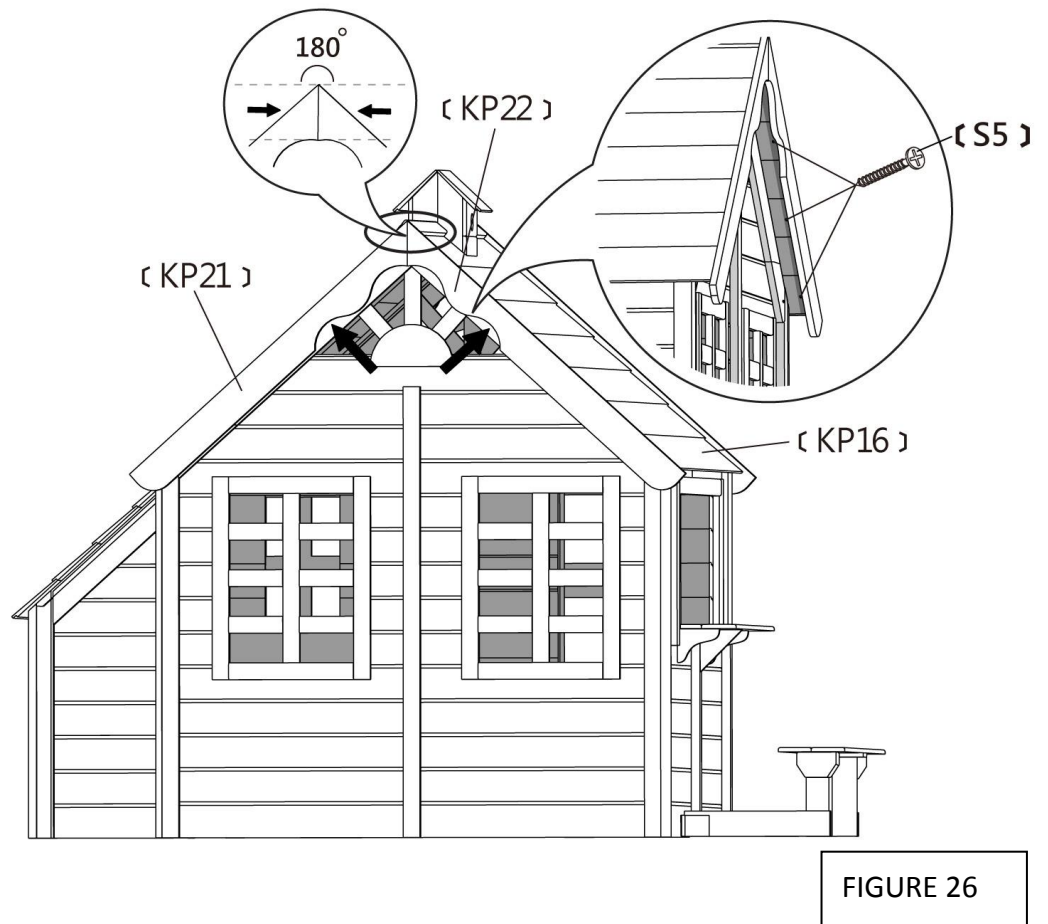

STEP 12

Wood boards needed:

- * KP23 x 1pc
- * KP24 x 1pc
- * KP25 x 1pc
- * KP26 x 1pc

Hardware needed:

- *S5 x 5pcs

Attach KP24 to KP13 using S5 as shown in FIGURE 27.

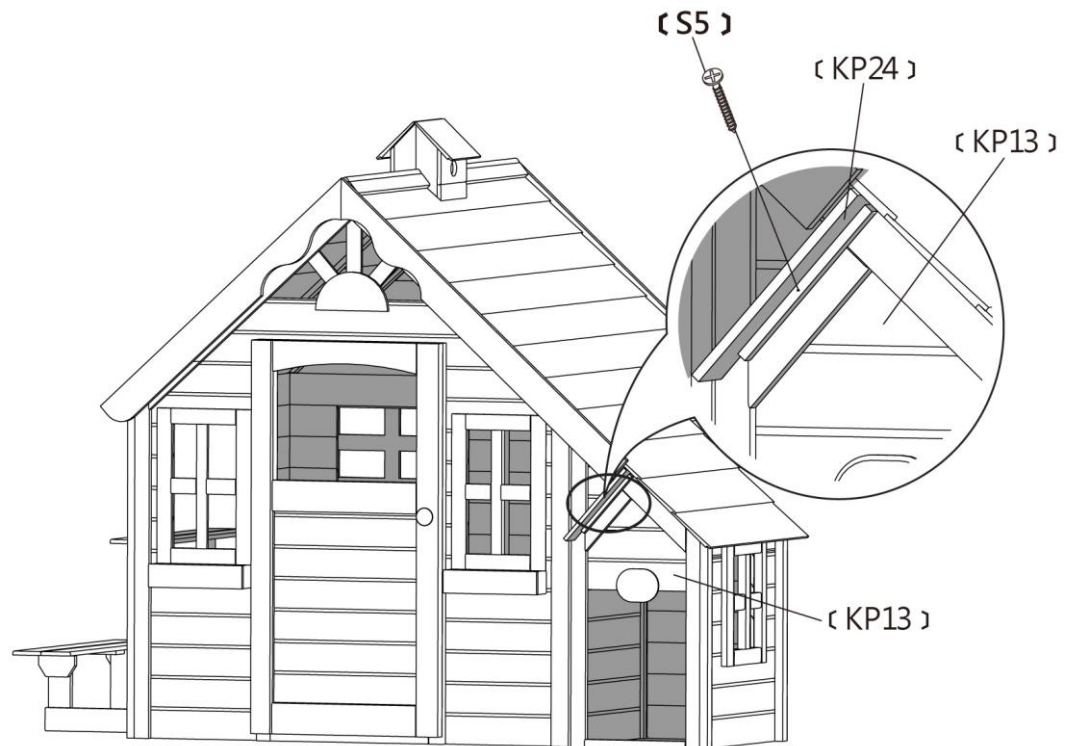


FIGURE 27

Place KP25 and KP26 to KP13 as shown in FIGURE 28. From beneath, attach KP25 and KP26 with KP13 using S5 as shown in FIGURE 28.


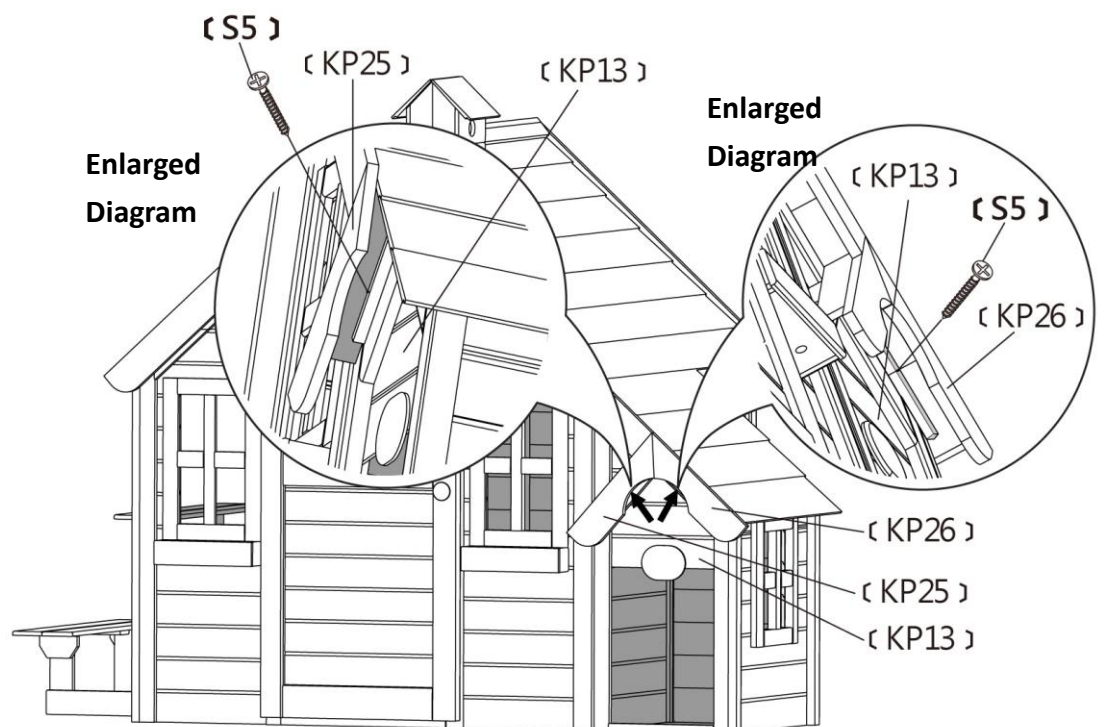


FIGURE 28

Place KP23 to KP14 as shown in FIGURE 29.
From beneath, attach KP23 with KP14 using S5 as shown in FIGURE 29.

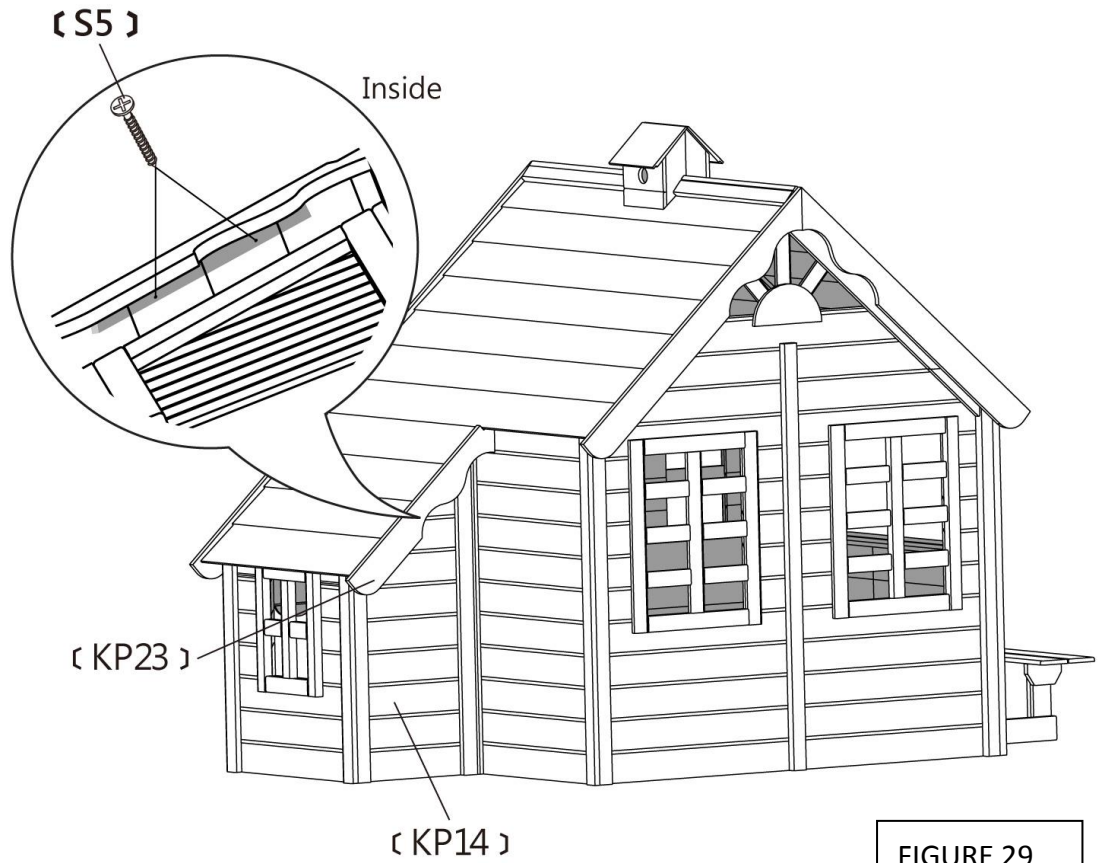

CONSUMER PRODUCT SAFETY COMMISSION'S OUTDOOR HOME PLAYGROUND SAFETY HANDBOOK

- * *Select Protective Surfacing*—One of the most important things you can do to reduce the likelihood of serious head injuries is to install shock-absorbing protective surfacing under and around your play equipment. The protective surfacing should be applied to a depth that is suitable for the equipment height in accordance with ASTM Specification F 1292. There are different types of surfacing to choose from; whichever product you select, follow these guidelines:
- * *Loose-Fill Materials:*
 - * Maintain a minimum depth of 9 inches of loose fill materials such as wood mulch/chips, engineered wood fiber (EWF), or shredded/recycled rubber mulch for equipment up to 8 feet high; and 9 inches of sand or pea gravel for equipment up to 5 feet high. NOTE: An initial fill level of 12 inches will compress to about a 9- inch depth of surfacing over time. The surfacing will also compact, displace, and settle, and should be periodically refilled to maintain at least a 9- inch depth.
 - * Use a minimum of 6 inches of protective surfacing for play equipment less than 4 feet in height. If maintained properly, this should be adequate. (At depths less than 6 inches, the protective material is too easily displaced or compacted.)

NOTE: Do not install home playground equipment over concrete, asphalt, or any other hard surface. A fall onto a hard surface can result in serious injury to the equipment user. Grass and dirt are not considered protective surfacing because wear and environmental factors can reduce their shock absorbing effectiveness. Carpeting and thin mats are generally not adequate protective surfacing. Ground level equipment – such as a sandbox, activity wall, playhouse or other equipment that has no elevated play surface – does not need any protective surfacing.
 - * Use containment, such as digging out around the perimeter and/or lining the perimeter with landscape edging.

Don't forget to account for water drainage.
 - * Check and maintain the depth of the loose-fill surfacing material. To maintain the right amount of loose- fill materials, mark the correct level on play equipment support posts. That way you can easily see when to replenish and/or redistribute the surfacing.
 - * **Do not** install loose fill surfacing over hard surfaces such as concrete or asphalt.
- * *Poured-In-Place Surfaces or Pre-Manufactured Rubber Tiles*—You may be interested in using surfacing other than loose-fill materials – like rubber tiles or poured-in-place surfaces.
 - * Installations of these surfaces generally require a professional and are not “do-it-yourself” projects.
 - * Review surface specifications before purchasing this type of surfacing. Ask the installer/manufacturer for a report showing that the product has been tested to the following safety standard: ASTM F 1292 Standard Specification for Impact Attenuation of Surfacing Materials within the Use Zone of Playground Equipment. This report should show the specific height for which the surface is intended to protect against serious head injury. This height should be equal to or greater than the fall height – vertical distance between a designated play surface (elevated surface for standing, sitting, or climbing) and the protective surfacing below – of your play equipment.
 - * Check the protective surfacing frequently for wear.

- * *Placement*—Proper placement and maintenance of protective surfacing is essential. Be sure to:
- * Extend surfacing at least 6 feet from the equipment in all directions.
- * For to-fro swings, extend protective surfacing in front of and behind the swing to a distance equal to twice the height of the top bar from which the swing is suspended.
- * For tire swings, extend surfacing in a circle whose radius is equal to the height of the suspending chain or rope, plus 6 feet in all directions.

PRODUCT WARRANTY

Sportspower Ltd warrants its products to be free from defects in material and workmanship under normal use and service conditions for 180 days after the date of purchase. Extended warranty for an extra 90 days will be offered to those customers registering their products at www.sportspowerltd.net within 14 days from the date of purchase.

All warranty coverage extends only to the original purchaser of the product and is not assignable or transferable. The original store or online purchase receipt must be kept as proof of purchase in order for the warranty to be valid. These documents must be presented in the event of making a claim under warranty.

During the warranty period, Sportspower will provide repair or replacement of defective equipment or parts thereof covered by the warranty. Any handling, transportation, delivery and other incidental charges in respect of the servicing of the equipment shall be borne by the Purchaser. If the product includes a number of accessories, only the defective part or accessory will be replaced.

The warranty will become void if any defects or damages are associated with the use of unauthorized replacement parts. All replacement parts must be obtained from Sportspower authorized agents.

All decisions made by Sportspower in respect of the servicing of the equipment (including repairs, replacements or issues relating to defects of workmanship or materials) shall be conclusive and the Purchaser agrees to be bound by such decisions. Any defective equipment or part thereof replaced shall become the property of Sportspower.

In the event of a product or accessory being replaced during the guarantee, the guarantee on the replacement will expire at the original date, i.e. 180 days from the original purchase date.

This warranty excludes defects caused by the product not being used in accordance with instructions, accidental damage, misuse or being tampered with by unauthorized persons.

The Sportspower Limited Warranty does not cover:

- (a) Products used for commercial or rental purposes.
- (b) Loss or damage to product due to: (i) abuse, repairs and/or tampering by any person other than the authorized personnel of Sportspower; (ii) negligence and/or misuse (including foreign object, accident, improper storage, exposure to sun/moisture, excessive temperature, sand, dust, dirt, other pollution or other environmental conditions and failure to follow precautions or proper operating instructions stated in the User's Manual such as improper installations); (iii) fire, flood, lightning strike, wind storm or other acts of God; (vi) freight or improper transport damages, and (v) improper usage (including use by under-age, over-weight or excessive number of users permitted as stated in the User's Manual).
- (c) Defects, damages or accidents due to the malfunction, connection to or use of non-Sportspower or unauthorized parts. In such event, Sportspower reserves the right to cancel the Limited Warranty coverage immediately.

To the extent allowed by the applicable local law, the remedies in the Limited Warranty are the Purchaser's sole and exclusive remedies.

SPORTSPOWER IS NOT RESPONSIBLE OR LIABLE FOR INDIRECT, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THE PRODUCT OR OTHER DAMAGES WITH RESPECT TO ANY ECONOMIC LOSS, LOSS OF PROPERTY, LOSS OF REVENUE OR PROFITS, LOSS OF ENJOYMENT OR USE, COST OF REMOVAL, INSTALLATION OR OTHER CONSEQUENTIAL DAMAGES. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. ACCORDINGLY, THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

THE WARRANTY EXTENDED HEREUNDER IS IN LIEU OF ALL OTHER WARRANTIES AND ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE IS LIMITED IN ITS SCOPE AND DURATION TO THE TERMS SET FORTH HEREIN. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS. ACCORDINGLY, THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE. THIS WARRANTY IS VALID ONLY IN THE UNITED STATES.

PLEASE NOTE: ANY REPAIRS OR REPLACEMENTS MUST BE MADE USING AUTHORIZED SPORTSPOWER PARTS IN ORDER FOR THIS WARRANTY TO BE VALID.

For Customer Service or to order Replacement Parts, please visit our website to find our toll-free numbers at: www.sportspowerltd.net

OR

send us an email at: customerservice@sportspowerltd.net

WARRANTY REGISTRATION

Please register on-line at www.sportspowerltd.net to tell us more about yourself. This is not required for validation of the normal product warranty, but when you register on-line, we will offer to you extended warranty of 90 days subject to proof of your purchase. Please refer to your manual for warranty details.

All data will be treated with strict confidentiality.