



Assembly Instructions & User's Manual

Grand Ponderosa 10P Cabin Tent

FSMGCT2010



Please keep this instruction manual for future reference

Customer Service: (888) 922-2336

7:00 am to 12:00 am CST (daily)

Live Chat at: www.academy.com

Email: customerservice@academy.com

Made In Bangladesh

Table of Contents

Warnings.....2

Parts List.....3

Assembly Instructions.....4-6


Care and Maintenance.....7


Note: Before beginning assembly of product, make sure all parts are present. Compare parts with package content list and hardware contents. If any part is missing or damaged do not attempt to assemble the unit. Contact customer service for replacement parts.

Warnings

IMPORTANT SAFETY AND TIP INFORMATION

TO MAXIMIZE THE ENJOYMENT OF YOUR PRODUCT PLEASE ASSEMBLE AND USE YOUR PRODUCT AS SAFELY AS POSSIBLE.

THE PURPOSE OF THE SAFETY ALERT SYMBOL  IS TO CALL YOUR ATTENTION TO POSSIBLE HAZARDS RELATING TO THE USE AND ASSEMBLY OF YOUR PRODUCT.

THE PURPOSE OF THE TIP SYMBOL  IS TO CALL YOUR ATTENTION TO SUGGESTIONS THAT WILL ASSIST YOU IN THE ASSEMBLY/DISASSEMBLY PROCESS AND ENHANCE YOUR CAMPING EXPERIENCE. WHEN YOU SEE THESE SYMBOLS, PLEASE CLOSELY FOLLOW THE INFORMATION PROVIDED.

WARNING

- **KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS FABRIC**

- This product is made with flame-resistant fabric, which meets CPAI-84 specifications.
- **IT IS NOT FIREPROOF!** The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the fabric may render the flame resistant properties ineffective.
 - Do not erect this product near an open flame. Anchor properly at all times and carefully consider campsite choice. Be aware of possible falling rocks or tree limbs, lightning strikes, flash floods, strong winds and other hazards which may cause injury to this product or it's occupants.
 - Setup is possible for one adult, however two adults are recommended. During assembly poles are under tension. If not held firmly in place during assembly, poles could break or flip up possibly causing serious injury.
 - Safety glasses may be worn throughout the assembly process as an additional precaution.
 - Stoves, lanterns, candles, grills, heaters and other fuel burning devices produce carbon monoxide and will consume the available oxygen in a tent. Use of such devices in a tent may cause asphyxiation, carbon monoxide poisoning, death, or serious and permanent injuries.


 




 


 
 
For this reason:

- **DO NOT use fuel burning devices inside or near this product.**
- Your failure to follow this warning may cause death or serious and permanent injury to you or others.

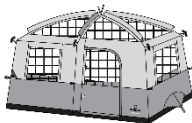ADDITIONAL NOTES:

- Our recreational products are constructed to rigid specifications. They are not made, however, for extreme weather, climates, or environments. Modification, abuse and extreme weather are conditions that may adversely affect the structural integrity of the tent. Additional precautions may be necessary during inclement or unexpected weather conditions.
- Here are some tips that may help during these times:
 - Use guylines to help secure your structure during periods of heavy winds.
 - Storms or steady rains may cause water to collect in pockets on the roof. This will add weight, which can weaken the overall structure, causing the tent to collapse. Maintain a watchful eye and remove any water accumulation that may occur.


Parts List

A	Tent Body		1
B	Tent Rainfly		1
C	Grey Fiberglass Cross Roof Pole		2
D	Yellow Fiberglass Middle Roof Pole		1
E	Steel Corner Leg Pole		4
F	Steel Middle Leg Pole with Ring		2
G	Tent Stakes		14
H	Detachable Mud Mat		1
I	Gear Loft w/ Lighting System		1
J	Tablet Entertainment Center		
K	Room Divider Curtain		

Assembly Instructions


Step 1:

1. Verify package contents listed on Page 3 by emptying contents of bag(s) and confirming all parts are undamaged.

 **Tip: Do this at home prior to your first use of the product.**

2. Select a smooth, level site to spread out your tent body. (A)

3. Extend tent poles (C,D,E, and F) and place in position around the tent ready for installation.

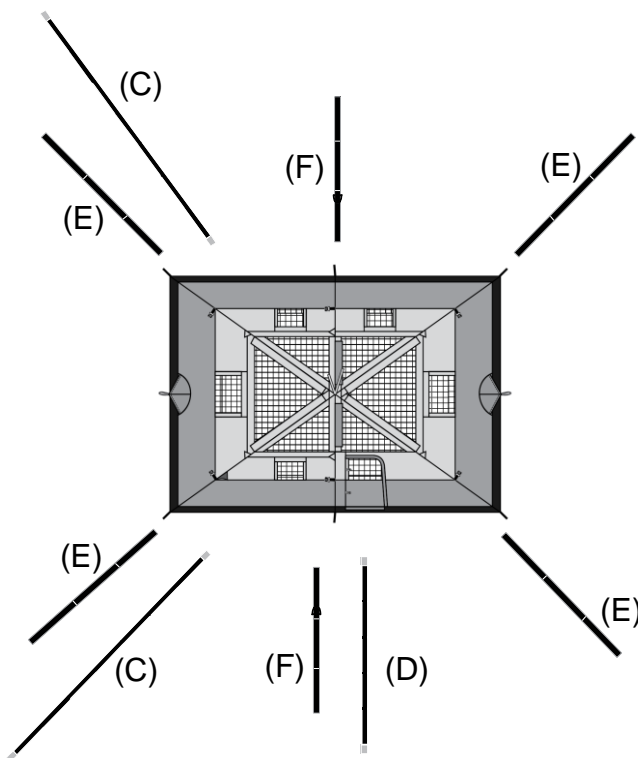


Step 2:

1. Begin with the Middle Roof Pole (D). Slide pole into the middle roof sleeve (yellow color coded). Secure pole by inserting both pole ends into the ribbed side of the plastic center elbow connector hub (yellow color coded).

2. Next, take the Grey Roof Poles (C) and slide them into their sleeves across the roof of the tent (gray color coded). Secure poles by inserting one end of pole into the ribbed side of the plastic corner elbow connector hubs. Then, gently flex poles and insert the other end into the ribbed side of the plastic corner elbow connector hubs on the opposite corners of the tent roof. These poles will cross at the center, above pole D.


 **Tip: Start the assembly with the roof portion of the tent**

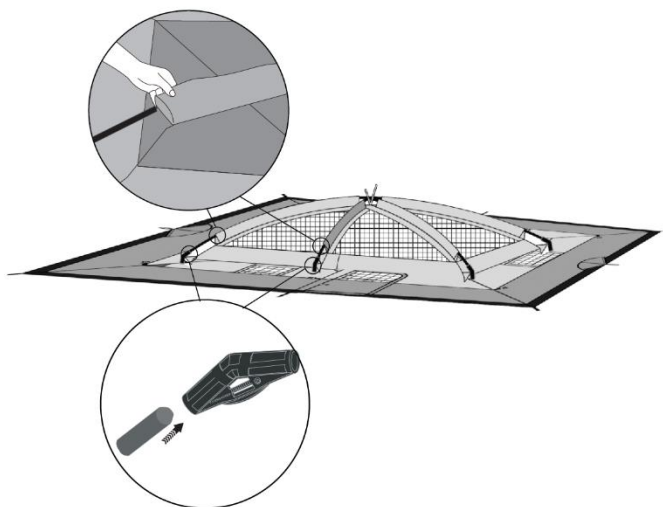

Assembly Instructions


Step 3:

1. Place one end of a Black Steel Corner Leg Pole (E) into the smooth end of a corner elbow connector hub, then secure the other end of the leg pole into the pin-rings at base corner of the tent. Repeat step above for the remaining 3 poles.
2. Place one end of a Black Steel Middle Leg Pole (F) into the smooth end of a middle elbow connector hub, then secure the other end of the leg pole into the pin-rings in the middle at the base of the tent. Repeat step above for the remaining 1 pole.
3. To stake out the tent, drive stakes (G) through the String-loop assemblies on the tent base.

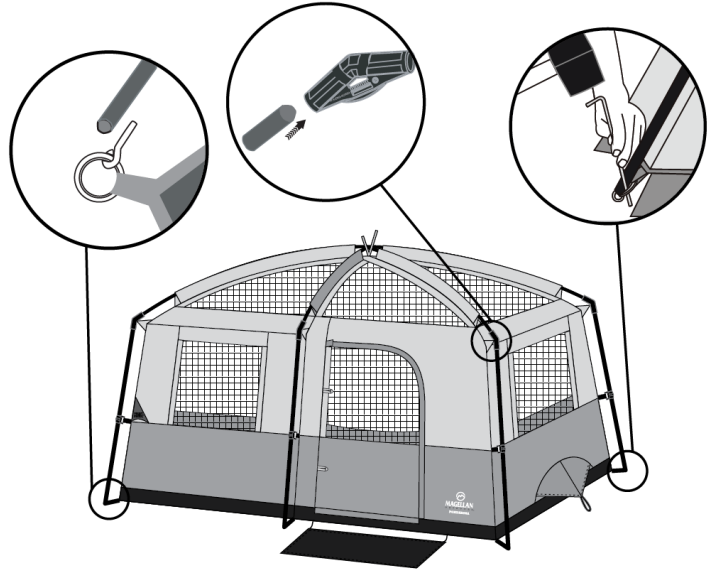

Step 4:

1. Snap quick clips (attached to tent body) on tent poles to shape the tent.
2. Drape rainfly (B) over tent. Connect the S-hooks on the corners of the rainfly onto the pin-rings at the 4 corners of the tent.
3. Connect S-hooks on the middle of the rainfly onto the D-rings on the middle steel leg poles (F)
4. Fasten the nylon hook-and-loop fasteners located on the underside of the rainfly around the corresponding tent poles.

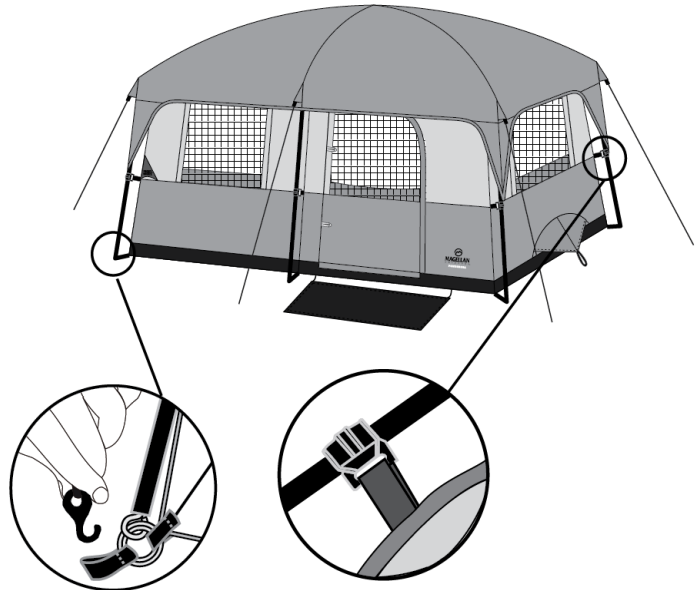


Assembly Instructions

Step 5:

1. Attach the Lighted Gear Loft (I) by attaching its S-hooks to the fabric loops on the tent ceiling.
2. Attach the Divider curtain (K) by attaching the plastic toggles on the divider to the corresponding loops on the wall inside the tent.
3. Attach the Media Pocket (J) by clipping the plastic hooks on the cords of the media pocket onto the plastic rings located at the top and bottom corners on the wall of your tent. Attach so that the small pocket is at the bottom. Adjust and tighten cords on the media pocket by depressing the plastic toggles and moving up or down to desired tension.


Note: Remove gear loft and media pocket before taking down the tent.

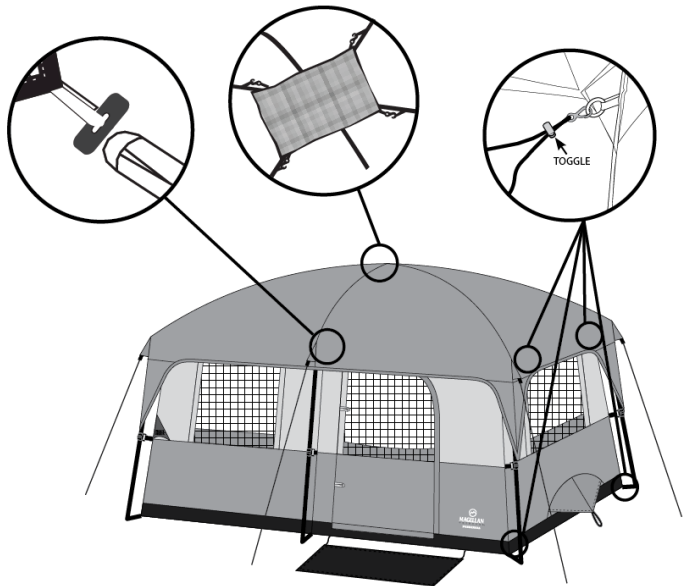

Step 6: Optional

1. Locate guylines attached to the tent and unroll.
2. Slide tent stake (G) through loop at each location, extend guyline out and drive into ground secure.
3. Tighten guylines as needed by adjusting the slider up the cord.

Note: Four corner guylines should extend out at a 45° angle from tent & awning.

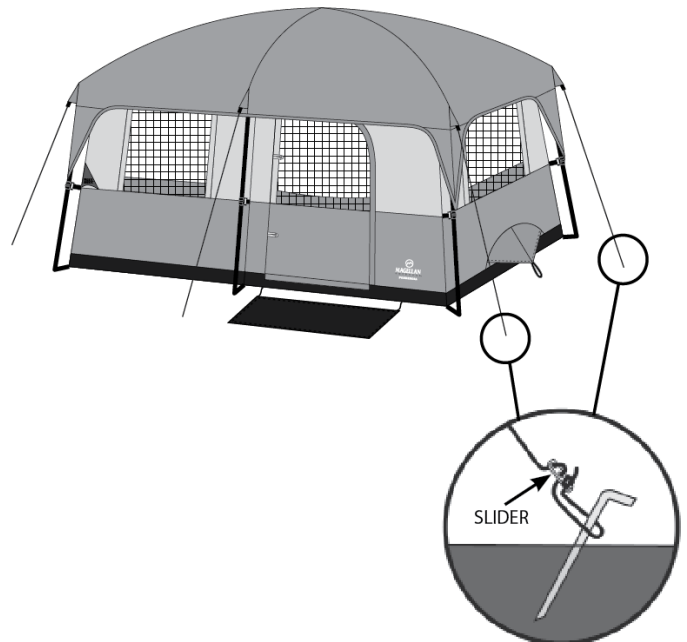

Care and Maintenance

- Your product must be stored dry. One of the easiest ways to damage your product is storing it while it is wet. Storing a wet tent as short a 24 hours in warm weather is likely to cause mildew on the fabric coatings.
- If you must close camp in the rain, open your product and set it up to allow it to dry as soon as possible. Allow dirt to dry on the fabric after a rainfall before lightly sweeping it off with a brush. For tougher stains, spray the area with water and lightly wipe it off with a few strokes. Do not use washer or dryer. **DO NOT SCRUB THE FABRIC. ALWAYS MAKE SURE TENT IS COMPLETELY DRY BEFORE REPACKING.**
- This tent is made from synthetic fabric that has been treated and is highly resistant to the sun's Ultraviolet (UV) light. However, no fabric can withstand prolonged exposure to sunlight. Do not leave your tent set up for weeks at a time. Exposure to ultraviolet rays from the sun can damage and/or discolor the material.
- The tent is water repellent. It is not waterproof. During heavy or continuous rain, some leakage may occur. Avoid contact between objects and the inside wall or roof of the tent, as this may result in leakage at points of contact. In the event of seam leakage, apply a seam sealer compound.
- Do not spray or apply insecticide or pesticide on your product. It may damage UV resistant or water repellent properties of this product.
- Clean the poles with a cloth and lubricate them with a silicone spray to help prevent corrosion and keep from being gritty. This is especially important after using the product around salt water.
- Store the stakes in a separate storage bag. Do not pack the stakes inside the tent.

IMPORTANT NOTES BEFORE YOU BEGIN:

- Assemble your tent before camping to become familiar with the assembly.
- Setup is possible for one person, however two people are recommended.
- Select a clean, level area for the campsite free of debris and sharp objects, away from a natural watercourse.
- Use of a ground cloth is recommended to prolong the life of the tent floor and provide additional insulation and moisture protection.
- To prevent damage to the zippers, unzip the doors and windows of the tent prior to disassembly allowing air to move freely.
- Seam sealing the inside stitched seams of the tent is recommended (seam sealer not included). This will improve weather resistance. Discoloration may occur if applied to outside seams.