# **PRODUCT INFORMATION:**

Read this information before proceeding. It is the user's responsibility to take the following precautions at all times.

- Always stake or weigh down your canopy. Do not use in any potentially windy or rainy weather. Wind and rain can damage your canopy and may also result in injury to you or others. Therefore, do not rely on canopy for protection in heavy or prolonged rain storms.
- This product is designed as a temporary sun canopy. Do not leave up for extended periods.
- Use caution when handling the canopy's frame. Avoid pinching hands or fingers as frame opens or closes.
- Do not use canopy in a lightning storm.
- Do not leave your canopy unattended.
- Do not build fires under canopy.

# **PRODUCT CARE & MAINTENANCE:**

For long lasting durability and the best possible protection for your canopy, follow these care & maintenance instructions:

- Use a mild soap (not detergent) and plenty of water for top cleaning.
- Let the canopy top and frame dry completely before closing or storing to avoid mildew.
- The canopy frame will operate and look better if occasionally wiped with silicone spray, especially before and after use in damp conditions. Remove excess silicone residue before attaching top.
- Slightly tighten bolts if frame becomes loose.

# 2 YEAR LIMITED WARRANTY

Z-Shade Co. Ltd., manufacturer of the product, warrants to the original purchaser who provides a dated sales receipt from an Authorized Dealer, each part of the Z-Shade product to be free from defects in material or workmanship for a period of two (2) years after the date of original purchase. The frame is covered under a limited two (2) year warranty and guarantees the frame to be free from defects in material or workmanship. This warranty applies only for normal and expected uses, as determined by the manufacturer.

Z-Shade Co. Ltd. obligation and liability under this warranty is limited to the replacement of the product or its parts, after a review and examination of a submitted warranty claim. Do not dispose of the shelter or any part of a shelter while claim is under review. <u>Warranty Claim Form</u> can be downloaded from our website: *www.zshadeusa.com* 

Please do not send any product to Z-Shade without prior written authorization.

**REPLACEMENT PARTS:** Parts can be ordered from our website: *www.zshadeusa.com* If you need additional assistance regarding replacement parts, call us toll-free **855-497-4233** 

**CONDITIONS:** This warranty shall be void as to any product which has been altered or modified in any manner. This warranty does not apply to damages caused by wind, rain, or other forces of nature, not to accidental or deliberate damage of the product, nor to use of the product that does not conform with the product instructions.

This warranty is provided in lieu of all other warranties, expressed or implied.

@2017 Z-Shade Co. Ltd. All Rights Reserved.









www.zshadeusa.com




## PACKAGE INCLUDES


• Z-Shade Frame 4-Piece Stake Kit Polvester Top Roll Away Bag w/Air Vents



## **INITIAL SET UP**

Please read each step before you attempt to set up. Save these instructions for future reference.

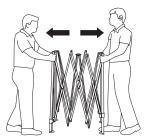

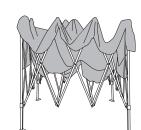

With partner, grasp two outer legs, slightly lift off the ground, and step backwards stopping at full arms' length.


## Unfold the polyester top and place it over the open frame.


# Locking Strips Secure the polyester top to the frame by attaching the

locking strips on the top with the locking strips on the frame. Fully, pull the corners down.

Grasp the top and bottom of the truss on opposite sides. Slightly

To engage slider at each corner. first lift the fabric off of the slider. Then, with one hand hold the top of the leg while PUSHING UP the push button slider with other hand until slider engages. Repeat on opposite legs.

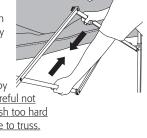

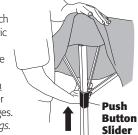


**LOWERED CANOPY** 

# **UNDERSIDE CANOPY**



 walk UNDERSIDE canopy to raise.





Push hub A) up the runner with one hand while holding upper frame with other hand until snap button **B**) locks.

#### Now, with partner, lift outer legs up and slide out the inner legs until the push button locks into outer legs. Repeat on remaining leas.



### **Height Adjustment:**

Press push button lock to release and adjust legs to desired height. Repeat on remaining legs.

**LOWERED CANOPY** 

canopy to begin to close.

**UNDERSIDE CANOPY** 

Grasp top and bottom

area of trusses. Lift the

canopy up slightly and

NOTE: With canopy in lowered position,

TAKE CAUTION and walk UNDERSIDE

– Hold upper frame with one hand and

with other hand push snap button to

release hub carefully down the runner.



## TAKE DOWN

With partner, slightly lift up outer legs and press push button to unlock and telescope inner legs into outer legs. Repeat on remaining legs.

Press push button slider 3 at each corner to release and unlock corners from truss. Repeat on remaining corners.

 
> With partner on opposite side, grasp top and bottom area of trusses. Lift the canopy up slightly and shake it while stepping towards your partner until the unit is 3/4 closed. With each partner grasping two outer legs, push frame

together to fully close it. Store canopy in roll away bag.


Push

**Button** 

Lock





4

 

A WARNING: Keep all flame and heat sources away from all product fabrics. These fabrics meet the flammability requirements of CPAI-84 and NFPA-701 specifications. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the fabric may render the flame-resistant properties ineffective. This product contains TDCPP and/or TCEP, flame retardant chemicals known to the State of California to cause cancer, birth defects or other reproductive harm or both.

## SET UP

 

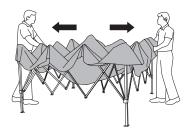

lift canopy up and push hands together while stepping backwards until canopy is fully opened. Be careful not to pinch fingers or push too hard so as to avoid damage to truss.