

Be sure to write your model number and serial number here for future reference. You can find these numbers printed on the bottom of the table.

MODEL NO.: T8485W/F DATE CODE: CPSIA#2-T8485W/F-\_\_\_\_

**PURCHASE DATE:** 

### OWNER'S MANUAL

- 1. Read this manual carefully before starting assembly. Read each step completely before beginning each step.
- 2. Some smaller parts may be shipped inside larger parts. Check inside all parts and cartons before assembling or ordering parts.
- 3. If hardware is tightened too soon, mounting holes may not align and parts may not easily fit together. Leave bolts slightly loose until you are instructed to tighten them.
- 4. To make assembly as easy as possible, place all parts of the table tennis in a cleared area and remove the packaging material. Organize all parts as per parts identifier in the assembly manual. Do not dispose of the packing material until assembly is completed.
- 5. Avoid scratching table tennis top and metal tube parts during the assembly process.
- **6.** Assemble product on clean, level and flat surface.
- 7. Take time to correctly orientate parts exactly as per each assembly diagram.
- 8. Save this instruction in the event that the manufacturer has to be contacted for replacement parts.



READ ASSEMBLY, OPERATING AND SAFETY INSTRUCTIONS CAUTION: CAREFULLY! AT LEAST TWO ADULTS ARE NEEDED TO PUT THIS TABLE TOGETHER!

Thank you for buying our product. We try hard to ensure that our products are of high quality and free of problems, such as Manufacturing defects or missing parts. However, if you have any problems with your new product, please DO NOT RETURN IT TO THE STORE

### Please Do Not Return This Product To The Store!

Contact Escalade® Sports customer service department at:

Phone: 1-866-873-3528 Mailing Address (correspondence only): Toll-Free!

Fax: 1-866-873-3533 Toll-Free! **Escalade Sports PO Box 889** E-mail: tabletennis@escaladesports.com

Evansville, IN 47706

Please provide model number and/or part number of the product and/or part when you call or write. These numbers can be found on the product, packaging, and/or in this Owner's Manual.

Please visit our website at: www.escaladesports.com

ON-LINE TROUBLE SHOOTING **TECHNICAL ASSISTANCE** 

**ON-LINE PARTS REQUESTS** FREQUENTLY ASKED QUESTIONS

ADDITIONAL ESCALADE® SPORTS PRODUCT INFORMANTION



### CARE AND MAINTENANCE

You have purchased a quality product that will give you years of enjoyment. By following these simple maintenance steps, you will add to the life of your new table.

#### THE TABLE TOP

The top (playing surface) of your table is made of Particle Board. Like all products made of wood, it can be affected by atmospheric changes in both temperature and humidity. This may cause a slight sag or distortion as the top expands or contracts. This is normal and should not cause concern as it does not detract from the play or utility value of the table. After assembly of the table, you can minimize the effects of temperature and humidity changes by storing the table in a dry area when table is not in use.

#### STORAGE OF YOUR TABLE

This table must be stored indoors to prevent damage to the playing surface. Dampness and extreme temperature changes can cause the wood to warp, swell, crack or blister. When your table is not in use, it should be stored in a dry area. Due to the nature of particle board, table top may bow. Damp and humid conditions will amplify this. This is normal and will not affect playability of table.

### **CLEANING YOUR TABLE**

To clean your table use a soft, damp (NOT WET) cloth only. To prevent damage to your table's playing surface, DO NOT USE ANY CHEMICALS, ABRASIVE OR CLEANING PRODUCTS on your table's playing surface.

### MAINTENANCE OF YOUR TABLE

Be sure to oil all moving parts of your table including the pivot points. This will insure the safety and ease of use of your table.

This table must be kept indoors to prevent damage to the playing surface. Dampness and extreme temperature changes which occur on patios or similar areas can cause wood to warp, swell, crack or blister.

### **UNLEVEL FLOORS**

If table does not seem level, it is probably due to uneven or unlevel floors. Set the table in its PLAYING POSITION and move table several inches in different directions to find the best location for the table. If the floor is extremely unlevel, table may not play or operate properly. If table is high in the center, shim up under the outer legs.


### TRANSPORTING THE FOLDED TABLE TOPS

It is recommended to keep the carton for folded table storage and or transport.


Also, note when folded, the table has casters on the bottom side to make movement easier.

When transporting the folded half tops, be careful not to damage the lower corners or scratch the playing surfaces.

# HARDWARE IDENTIFIER (To Scale)

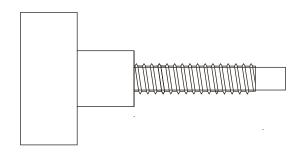




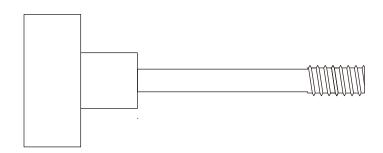

**H2** - 8 mm x 55 mm Knob Bolt - Long (8 pcs)

# PARTS IDENTIFIER (Not to Scale)

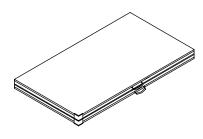

P1 - Table Tennis Table Top and Frame Assembly (2 pcs)



**P2** - Leg With Leg Caps (4 pcs) Pre-installed



P3 - Lower "A"Leg Connector (8 pcs) Pre-installed



P4 - Lower "B"Leg Connector (8 pcs) Pre-installed



**P5** - Upper Leg Connector (4 pcs)



**P6** - Net Post (2 pcs)




**P7** - Net (1 pc)

### **PARTS REQUIRED**

1 pc - P1 Table Tennis Table Top and Frame Assembly

### STEP 1:

Lay one piece **P1** Table Tennis Table Top and Frame Assembly flat with playing surface facing down as shown in **FIGURE 1**.

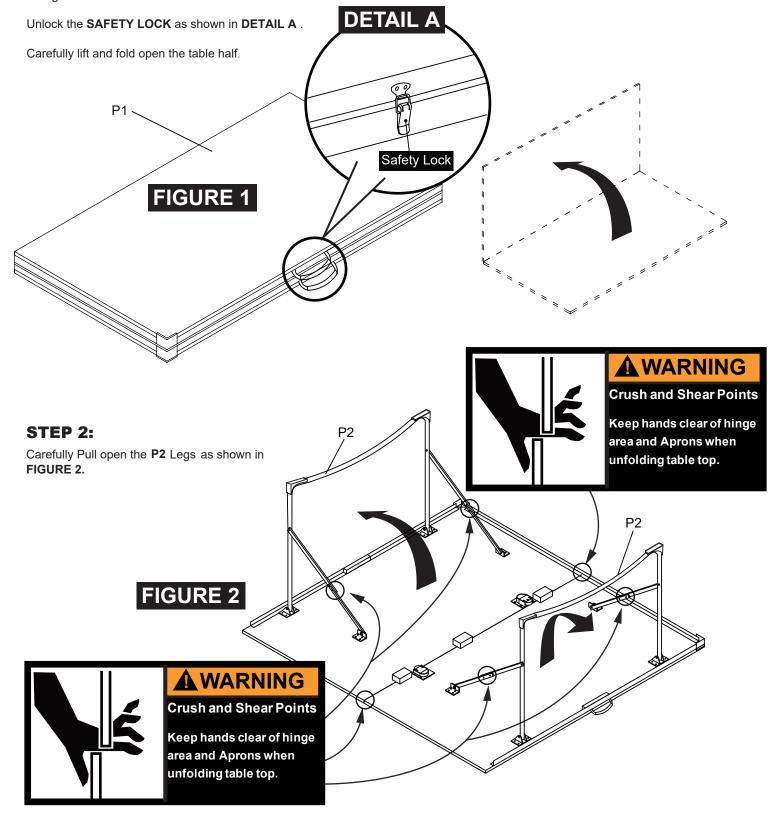


### PARTS REQUIRED

4 pcs - **P5** Upper Leg Connector 8 pcs - **H2** Knob Bolt - Long

### **STEP 3:**

Install **P5** Upper Leg Connector with **P3** Lower "A"Leg Connector and **P4** Lower "B"Leg Connector using **H2** Knob Bolt - Long as shown in **FIGURE 3** & **DETAIL B,C,D,E**. Tighten this hardware. **DO NOT OVERTIGHTEN AND CRUSH TUBES.** 

Repeat procedures for other table top.

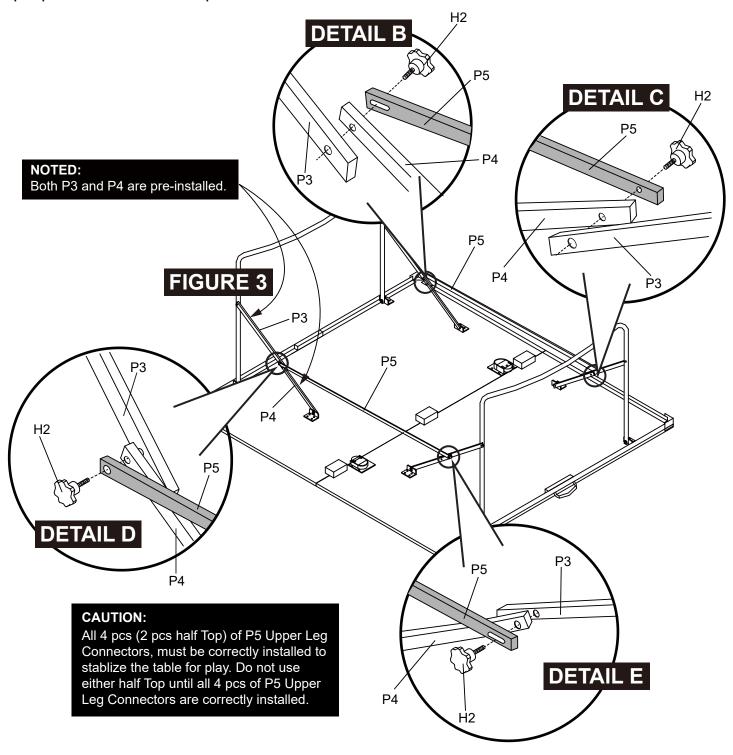



THIS STEP REQUIRES TWO CAPABLE ADULTS.
VERY CAREFULLY TURN THE TABLE OVER AND SET IT
ON ITS LEGS. BE CAREFUL THE TABLE IS HEAVY
DROPPING THE TABLE CAN CAUSE SERIOUS INJURIES
OR PROPERTY DAMAGES.

### PARTS REQUIRED

2 pcs - P6 Net Post

1 pc - P7 Net

4 pcs - H1 Tensioning Knob Bolt - Short


### **STEP 4:**

Attach one **P6** Net Post to the middle edge of where the table halves meet. Repeat this with other **P6** Net Post on opposite side.

Then, slide P7 Net into corresponding P6 Net Post and repeat for the other side as shown in DETAIL F.

Install **H1** Tensioning Knob Bolt - Short, in one end of each **P5** Upper Leg Connector as shown in **DETAIL G.** Snug Tighten these 4 pcs of **H1** Tensioning Knob Bolts.

Do not overtighten.

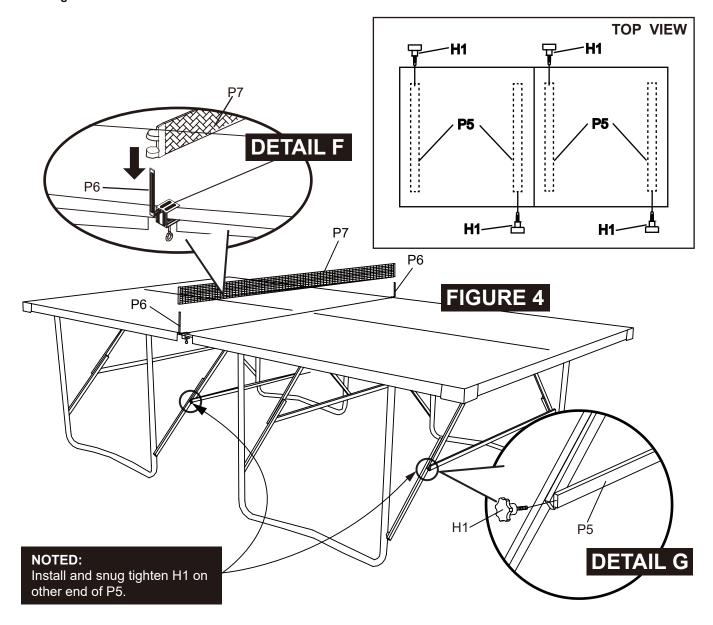





READ OPERATING INSTRUCTIONS CAREFULLY BEFORE OPERATING TABLE! DO NOT ALLOW CHILDREN TO OPEN TABLE! DO NOT CLIMB, STAND OR JUMP ON CAUTION: TABLE! SERIOUS OR FATAL INJURY MAY RESULT! THIS IS NOT A TOY! TABLE IS TO BE OPENED OR CLOSED BY ADULTS ONLY! FAILURE TO COMPLY WITH OPENING AND CLOSING INSTRUCTIONS COULD RESULT IN PERSONAL INJURY OR PROPERTY DAMAGE.

### STORAGE OF THE TABLE:


STEP 1: Remove the P7 Net and P6 Net Posts as shown in FIGURE 5.

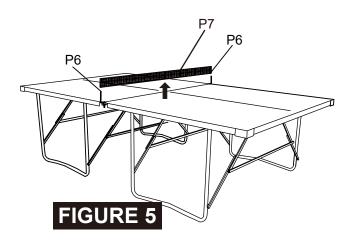

STEP 2: Remove H1 Tensioning Knob Bolt - Short, and H2 Knob Bolts - Long, as shown in FIGURE 6.

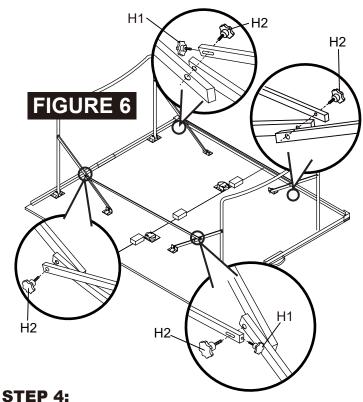



STEP 3: Fold each Leg and half table as shown in FIGURE 7.

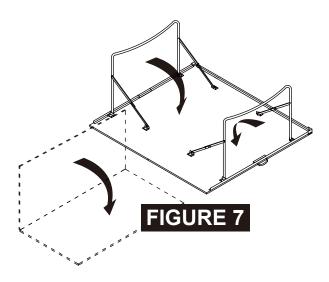

STEP 5: Repeat procedure for other table top.



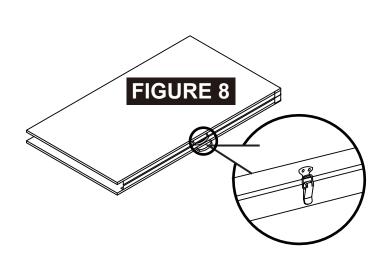

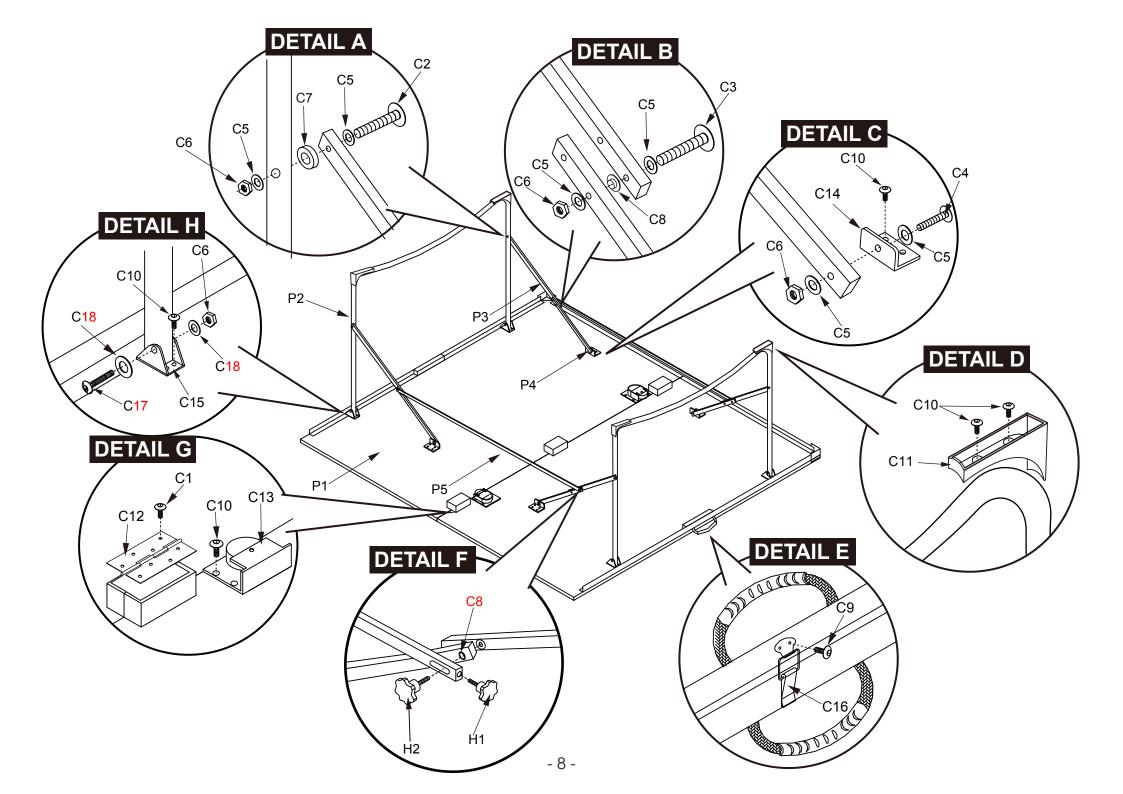

## **T8485 TABLE TENNIS TABLE SPARE PARTS**

Key#	Part No.	Description	Qty
H1	T8485\$Y-H1	8 mm x 40 mm Tensioning Knob Bolt - Short	4
H2	T8485SY-H2	8 mm x 55 mm Knob Bolt - Long	8
P1	T8485SY-P1	Table Tennis Table Top and Frame Assembly	2
P2	T8485SY-P2	Leg With Leg Caps (Pre-installed)	4
P3	T8485SY-P3	Lower "A"Leg Connector (Pre-installed)	8
P4	T8485SY-P4	Lower "B"Leg Connector (Pre-installed)	8
P5 P6	T8485SY-P5 T8485SY-P6	Upper Leg Connector Net Post	4 2
P7	T8485\$Y-P7	Net	1
' '	10 10001 17		
DETA	IL A		
C2	T8485SY-C2	8 mm x 80 mm Allen Head Bolt	8
C5	T8485SY-C5	8 mm x 22 mm Flat Washer	16
C6	T8485SY-C6	8 mm Nylon Lock Nut	8
C7	T8485SY-C7	8 mm x 18 mm Plastic Bushing	8
DETA	IL B		
C3	T8485SY-C3	8 mm x 50 mm Allen Head Bolt	8
C5	T8485SY-C5	8 mm x 22 mm Flat Washer	16
C6	T8485SY-C6	8mm Nylon Lock Nut	8
C8	T8485SY-C8	8 mm x 16 mm Plastic Step Bushing	8
DETA	IL C		
C4	T8485SY-C4	8 mm x 35 mm Allen Head Bolt	8
C5	T8485SY-C5	8 mm x 22 mm Flat Washer	16
C6	T8485SY-C6	8mm Nylon Lock Nut	8
C10	T8485SY-C10	3.5 mm x 14 mm Round Head Screw	32
C14	T8485SY-C14	Plasitc Bracket	8
DETA	IL D		
	T8485SY-C10	3.5 mm x 14 mm Round Head Screw	16
C11	T8485SY-C11	Plasitc Leg Cap	8
DETA	IL E		
C9	T8485SY-C9	3.5 mm x 12 mm Round Head Screw	8
C16	T8485SY-C16	Safety Lock	2
DETA	JL F		
H1	T8485SY-H1	8 mm x 40 mm Tensioning Knob Bolt - Short	4
H2	T8485SY-H2	8 mm x 55 mm Knob Bolt - Long	8
C8	T8485SY-C8	8 mm x 16 mm Plastic Step Bushing	8

## **T8485 TABLE TENNIS TABLE SPARE PARTS**

DETAIL G         C1       T8485SY-C1       3.5 mm x 18 mm Flat Head Screw       48         C10       T8485SY-C10       3.5 mm x 14 mm Round Head Screw       16         C12       T8485SY-C12       Hinge       6         C13       T8485SY-C13       Wheel       4         DETAIL H         C17       T8485SY-C17       6 mm x 55 mm Allen Head Bolt       8
C18