

ASSEMBLY INSTRUCTIONS



MODEL 7301518RBP 12' x 9' Moonshine Shade

SAFETY WARNING - DOs AND DO NOTs

EVERYONE WHO USES THIS CANOPY SHOULD READ THIS MANUAL AND BECOME FAMILIAR WITH ALL SAFETY WARNINGS AND PRECAUTIONS FOR SAFE USE, ASSEMBLY, CARE, MAINTENANCE, AND STORAGE. KEEP THIS MANUAL SO YOU CAN REFER TO IT LATER.

⚠ WARNING FLAMMABILITY WARNING KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS CANOPY FABRIC
This canopy is made with flame resistant fabric which meets CPAI-84 specification. IT IS NOT FIREPROOF. The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the canopy fabric may render the flame-resistant properties ineffective. Your failure to follow this warning could cause death, serious injury, or permanent disability to you or others.

For these reasons :

- DO NOT use matches, lighters, stoves, heaters, grills, lanterns, candles, cooking equipment, or other fuel-burning devices inside or near a canopy.
 - DO NOT build fires inside or near a canopy.
 - DO NOT leave campfires unattended.
- Your failure to follow this warning will cause death, serious injury, or permanent disability to you or others.

PROTECT YOUR CHILDREN

Children will not understand and appreciate safety warnings and will not know how to avoid or respond to these hazards if no adults are present.

For these reasons :

- DO NOT leave children unattended inside a canopy or in camp .
- DO NOT allow children to assemble a canopy.
- DO NOT allow children to enter or exit a canopy except through the door.

Your failure to follow this warning will cause death, serious injury, or permanent disability to your children.

CARE

DO NOT LEAVE YOUR CANOPY SET UP IN DIRECT SUNLIGHT LONGER THAN NECESSARY. THE SUN’S ULTRAVIOLET (UV) LIGHT DEGRADES ALMOST EVERY FABRIC AND MATERIAL. IF LEFT IN SUNLIGHT FOR PROLONGED PERIODS OF TIME, FABRIC WILL FADE AND WEAKEN. DO NOT STORE THE CANOPY ON CONCRETE FLOOR. DO NOT SPRAY THE CANOPY WITH INSECTICIDE.


Although our tents and canopies are constructed to rigid specifications, periods of wind or rain soaking the ground may loosen the stakes and cause the uprights to sink into the ground. This will weaken the rigidity of the overall structure. Water pockets may also form in the roof if the unit is not assembled taut, possibly causing broken frames and torn fabric.

REPLACEMENT PARTS

If you have questions or need to order a part, call 1-800-325-4121 or send an e-mail to contactus@wenzelco.com. Have your model number or part number ready when you call. DO NOT ORDER BY REFERENCE KEY NUMBER.

Send your request for parts to:
Exxel Outdoors, LLC.
6235 Lookout Road
Boulder, CO 80301

KEY NO.	MODEL NO 7301518RBP, 12' x 9'		QTY REQ
	DESCRIPTION	PART NO.	
A	Main Roof Pole	7301518M	2
B	Roof Ridge Pole	7301518R	2
C	Steel Upright Pole	7301518U	4
	Complete Frame	7301518ST	1
	Guy Rope	A1001	4
	Plastic Stakes	7.25 STAKE	4
	Steel Stake	PIN STAKE	4

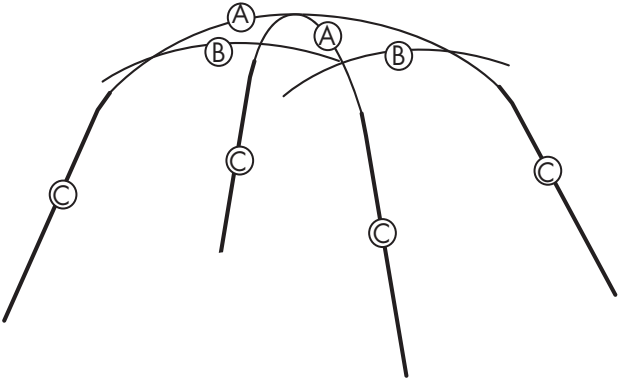

ASSEMBLY INSTRUCTIONS

WENZEL[®]
TENT & GEAR CO.
• SINCE 1887 •

MODEL 7301518RBP 12' x 9' Moonshine Shade


IMPORTANT: WE ADVISE YOU TO ASSEMBLE THE CANOPY ONCE BEFORE USE TO BECOME FAMILIAR WITH THE ASSEMBLY.

Note: Please look at the replacement parts diagram to see how your frame is assembled.

STEP 1: Spread the canopy out flat with the pole sleeves facing up.

STEP 2: Extend the fiberglass poles by pulling out each section and placing the ends into the metal ferrule connectors. You will have four poles. The two longer poles are the main roof poles (A). The two shorter poles (B) are the roof ridge poles.


STEP 3: While making sure the sleeves are in line with each other, slide each main roof pole (A) through the red plaid sleeves on the roof of the canopy. Position poles so that they form an "X" across the canopy.

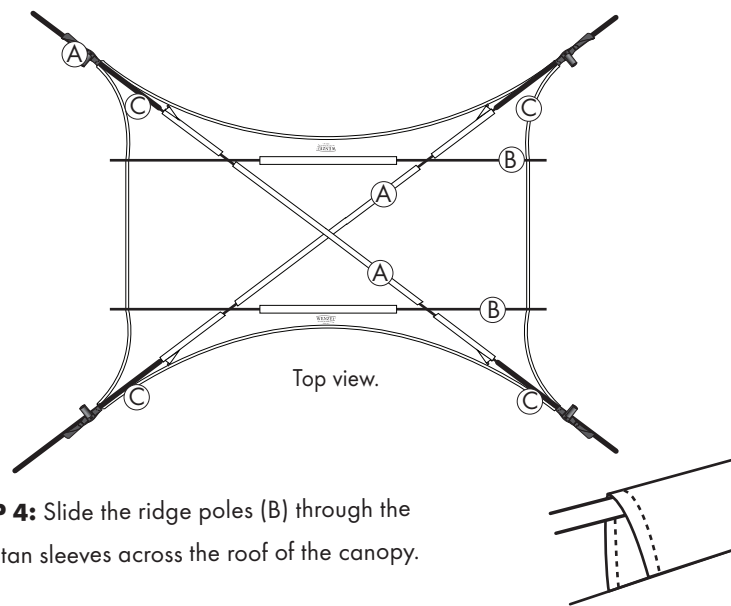


STEP 4: Slide the ridge poles (B) through the light tan sleeves across the roof of the canopy.

STEP 5: Extend the four steel poles (C), by pulling out each wire-corded section and placing the jointed ends into the connected pole sections.

STEP 6: Go to the back corners of the canopy and place the pre-bent ends of the steel poles (C) onto the ends of the main roof poles.

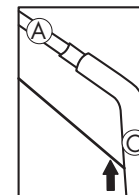


STEP 7: Place the other end of the steel poles onto the fast feet located at each corner.

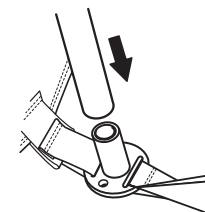


STEP 8: To raise the canopy, one person should go to each of the front corners and place the pre-bent ends of the steel poles (C) onto the ends of the main roof poles (A). Push the poles into an upward position and place the ends of the poles onto the fast feet at the base of the canopy.


STEP 9: Locate the pole pockets at the ends of the ridge poles (B). Place one end of ridge pole into a pocket and go to the other side of the canopy. Flex the pole and place the other end into the corresponding pocket. Repeat this step for the second ridge pole.

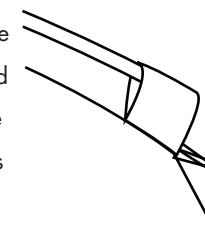


STEP 10: Clip the plastic hooks to the steel frame poles.

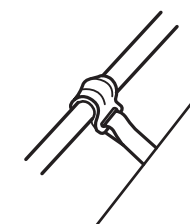

STEP 11: Stake down the canopy by inserting metal stakes through the stake loops at each corner of the canopy. Hammer the stakes into the ground at a 45° angle, making sure the canopy is pulled out even and snug.

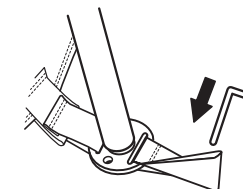

STEP 12: Guy ropes have been provided for the canopy. Extend the guy ropes and make a loop at the opposite end by using the slider (as shown). Place the loop over a plastic stake. Adjust slider to make the guy rope tight and stake to the ground. Show image

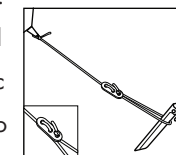

Canopy should appear as shown.



NOTE: There is one shade wall included that can attach to either end of the canopy.

NOTE: To take down the canopy, follow the steps above in the reverse order. Place stakes into stake bag and poles into pole bag, which are provided. The canopy should be folded into equal parts toward the center to distribute the bulk. Start a small tight roll, the width of the carry bag. Once rolled, tie a string or rope around it to hold it in place. Place canopy, frame and stakes into carry bag. **Make sure it is clean and dry before storing.**