



Assembly Instructions & User's Manual

30" Kyrie Fire Pit

FSMVPT6012



Please keep this instruction manual for future reference

Warning:

READ INSTRUCTION MANUAL BEFORE ATTEMPTING TO ASSEMBLE OR
OPERATE THIS PRODUCT.

Adult assembly required.

Keep screws and parts out of reach of children.

Customer Service: (866) 814-0585, 8:00am to 8:00pm,
Monday thru Friday Eastern Standard Time

-----OR-----

Customer Service: (888) 922-2336 7:00 am to 12:00 am CST (daily)

Live Chat at: www.academy.com

Email: customerservice@academy.com

(Made in China)

Table of Contents

• Table of Contents	1
• Warnings.....	2-3
• Parts and Hardware	4-5
• Assembly Instructions	6-7
• Care and Maintenance.....	8
• Warranty Information.....	9

REMINDER

BEFORE ASSEMBLY

- Verify that all parts are included with your fire pit BEFORE you begin assembly by checking the Parts and Hardware List. For your convenience, some parts may be pre-assembled or attached to fire pit components.
- If all parts are not included, do not attempt to assemble fire pit. Call the toll free number on the cover page for replacement parts.
- Leave hardware installed HALF-TIGHTENED on the fire pit during assembly until unit is completely assembled, then finish tightening all hardware installed.

YOUR OWNER'S MANUAL

- Keep and store this Owner's Manual for future reference – it contains important instructions and procedures for safety and maintenance.

Warnings



WARNING

For Outdoor Use Only
(outside any enclosure)










 
 
WARNING

1. Improper installation, adjustment, alteration, service, or maintenance may result in property damage, injury or death.
2. Read the installation, operation, maintenance instructions thoroughly before installing or servicing this equipment.
3. Failure to follow these instructions could result in a fire or explosion, which could cause property damage, personal injury or death.

Save these instructions for future reference. If you are assembling this fire pit for someone else, give this manual to him or her to save for future reference.



WARNING FOR YOUR SAFETY

1.  DO NOT use this fire pit without reading this entire document and all WARNINGS, cautions and instructions.
2.  This item is for outdoor use only, and shall NOT be used in a building, garage or any other enclosed area.
3.  DO NOT use this fire pit for indoor heating. TOXIC carbon monoxide fumes can accumulate and cause asphyxiation or death.
4.  This fire pit is NOT for commercial use.
5.  This fire pit is NOT to be operated by children.
6.  This fire pit is NOT to be used in or on boats or recreational vehicles.
7. Always use in accordance with all applicable local, state and national codes. Contact your local fire department for details on outdoor burning.
8. When using this fire pit, exercise the same precautions you would with any open fire.
9. The use of alcohol, prescription or non-prescription drugs may impair the consumer's ability to properly assemble or safely operate this fire pit.
10. This fire pit is for use with dry, seasoned hardwood. It will burn hotter, more completely and create less smoke.
11.  DO NOT burn charcoal briquette, lump charcoal, manufactured logs, driftwood, trash, leaves, papers, cardboard, plywood, painted or stained or pressure treated wood. Avoid using softwoods such as pine or cedar that can throw sparks.
12.  DO NOT alter this fire pit in any manner.
13.  DO NOT use this fire pit until it is COMPLETELY assembled and all parts are securely fastened and tightened.

Warnings

14. ⚠ DO NOT store or use gasoline or other flammable vapors or liquids in the vicinity of this or any other appliance.
 15. ⚠ DO NOT store or use an LP gas cylinder within 10 feet (3.05 m) of this fire pit while it is in operation.
 16. ⚠ DO NOT use this fire pit near automobiles, trucks, vans or recreational vehicles.
 17. ⚠ DO NOT use in an explosive atmosphere. Keep outdoor area clean and free from combustible materials, gasoline and other flammable liquids.
 18. ⚠ DO NOT use this fire pit under an overhead or near any unprotected combustible constructions. Avoid using near or under overhanging trees and shrubs.
 19. Always use this fire pit on a hard level non-combustible surface such as concrete, rock or stone. An asphalt or blacktop surface may not be acceptable for this purpose. ⚠ DO NOT use on wooden decks.
 20. Always empty this fire pit before each use.
 21. ⚠ DO NOT wear flammable or loose clothing when operating this fire pit.
 22. ⚠ DO NOT use in windy conditions.
 23. ⚠ DO NOT use this fire pit unless spark guards is securely in place.
 24. ⚠ DO NOT use gasoline, kerosene, diesel fuel, lighter fluid to relight fires.
 25. Keep all electrical cords away from a hot fire pit.
 26. All surfaces of this fire pit are hot when in operation. ⚠ To avoid burns, do NOT touch fire pit until it has completely cooled unless you are wearing protective gear (potholders, gloves, BBQ mittens, hot pads etc). Never touch ashes or coals to see if they are hot.
 27. ⚠ DO NOT leave a lit fire pit unattended, especially around children and pets.
 28. ⚠ DO NOT attempt to move or store this fire pit until ashes and coals are completely extinguished.
 29. ⚠ DO NOT remove ashes or coals until they are completely extinguished.
 30. Use heat-resistant gloves or hot pads when contacting handles.
 31. Use long, sturdy fire pit tools when adding or moving logs.
 32. ⚠ DO NOT place wood directly into bottom of the fire pit. Place wood only on the charcoal grate.
 33. ⚠ DO NOT overload the fire pit. ⚠ DO not add additional firewood until the fire burns down.
- NOTICE: If any portion of the bowl lid or spark guard of this fire pit are glowing red, it is overloaded.
34. ⚠ DO NOT lean over this fire pit when lighting or when in use.
 35. ⚠ DO NOT place a hot spark guard or hot fire pit tools onto combustible surface such as grass, wooden deck or furniture.
 36. ⚠ Avoid breathing smoke from the fire and avoid getting it into your eyes.
 37. This fire pit should be thoroughly inspected and cleaned on a regular basis.
 38. After a period of storage and/or non-use, check for signs of damage and creosote build-up. ⚠ DO NOT operate until necessary repairs and/or clean up is executed.
 39. ⚠ Death, serious injury or damage to property may occur if the above is not followed exactly.

 
California Proposition 65 Warning:

This product contains chemicals, including lead, known to the State of California to cause birth defects or other reproductive harm. *Wash hands after handling.*

Advertencia De La Propuesta 65 De California:

Este producto contiene elementos químicos, incluido plomo, que el Estado de California reconoce como una causa de malformaciones congénitas y otros daños reproductivos.
Lávese las manos después de manipular este producto.


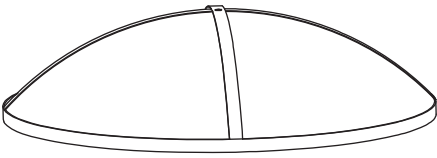 
 
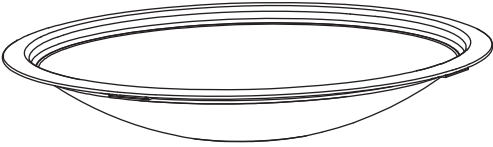 


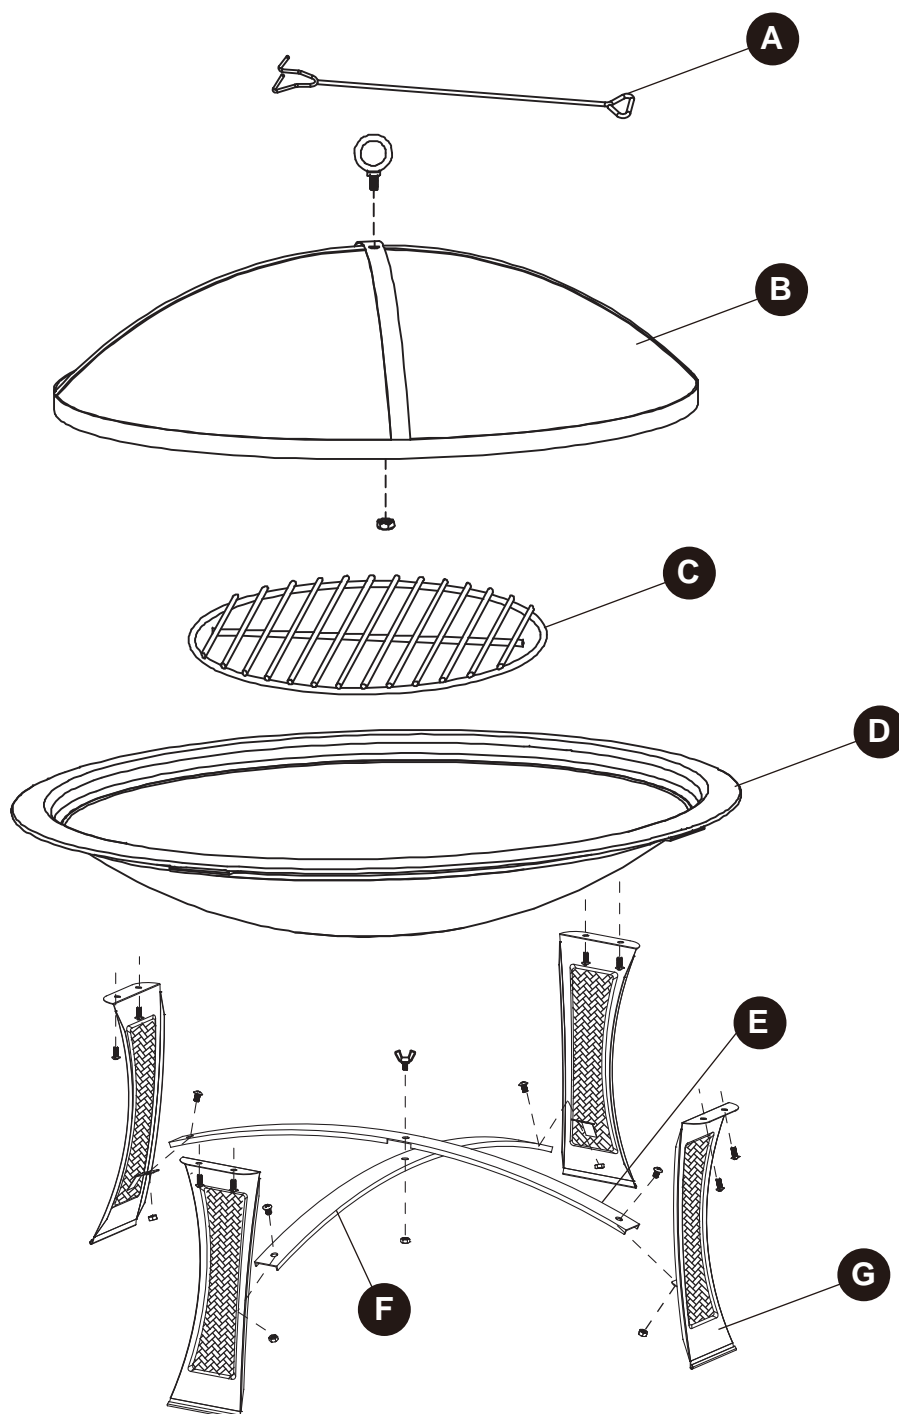
Parts and Hardware








TOOLS REQUIRED (Not included):

1	Phillips screwdriver	
---	----------------------	--

 Parts List

Part #	Description	Picture	Qty
A	Screen Hook		1
B	Screen		1
C	Charcoal Grid		1
D	Fire Bowl		1
E	Leg Support (Upper)		1
F	Leg Support (Lower)		1
G	Leg		4

  Hardware


Hardware #	Description	Picture	Qty
AA	M6 x 10 Bolt		12 (Pre-assembled 8)
BB	M6 Ring Screw		1
CC	M6 Flange Nut		1
DD	M6 Nut		5
EE	M6 x 10 Wing Screw		1

Assembly Instructions

NOTE: Assemble the fire pit on a non-abrasive, level surface. If missing parts please contact customer service.

Step 1

 Place the fire bowl (D) upside down, unscrew (8) M6 x 10 bolts (AA) from the fire bowl (D), then attach the legs (G) to the fire bowl (D) with (8) M6 x 10 bolts (AA) as illustrated.

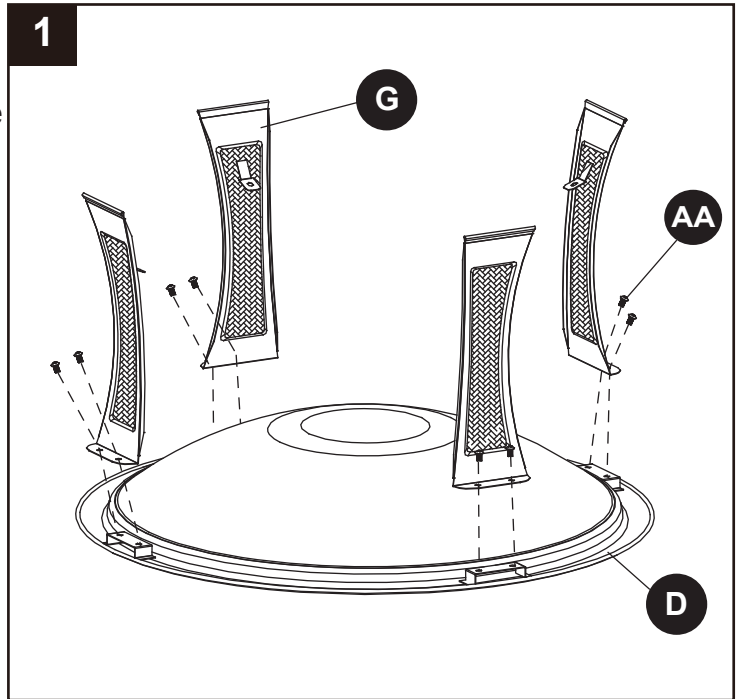





Step 2

Connect leg support (upper) (E) and leg support (lower) (F) with (1) M6 x 10 wing screw and (1) M6 nut.

 Attach leg support (upper) (E) and leg support (lower) (F) to legs (G) with (4) M6 x 10 bolts and (4) M6 nuts as illustrated.

Hardware Used

AA M6 x 10 Bolt		x4
DD M6 Nut		x5
EE M6 x 10 Wing Screw		x1

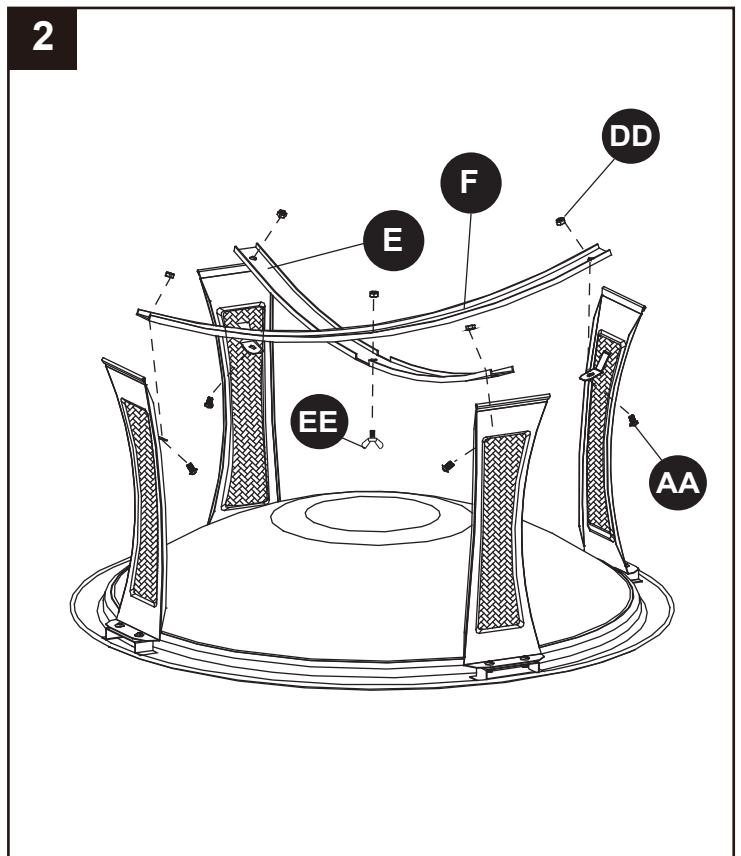 

Assembly Instructions

 
Step 3

Attach the M6 ring screw (BB) to the top of the screen (B) with M6 flange nut (CC) as illustrated.

Hardware Used

BB M6 Ring Screw


x1

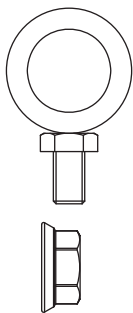

CC M6 Flange Nut

x1

 
3

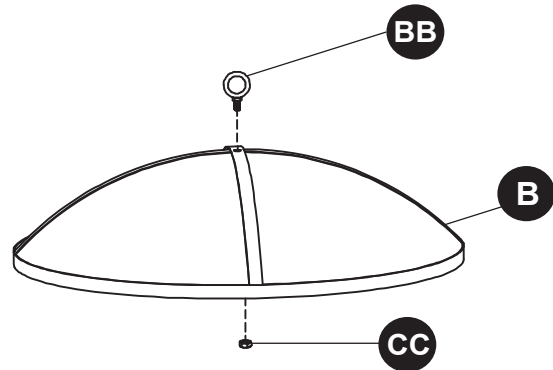

Step 4

Place charcoal grid (C) on top of fire bowl (D) followed by screen (B) and screen hook (A) as illustrated.

 4

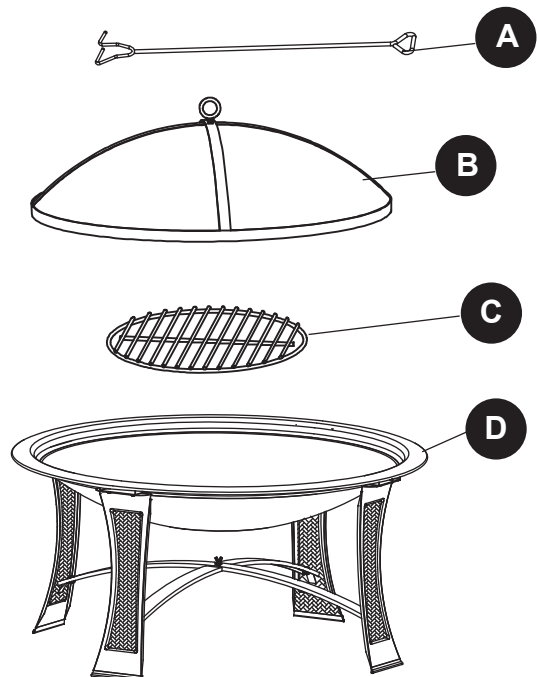

Care and Maintenance

Lighting

1. Make sure there is only a small amount of ash in the bottom of the bowl.
2. Place a layer of dry kindling or a natural fire-starter onto the center of the grid.
3. Place above that a layer of dry seasoned hardwood that is no more than 3/4 the diameter of the bowl.
4. Use a match to light kindling or fire-starter.
5. Using the screen hook that is provided and heat resistant gloves, replace screen once the kindling or fire-starter is lit.

Tending the Fire

You may need to shift and/or add logs for an ideal experience.

DO NOT place a hot screen or hot fire pit tools onto combustible surfaces such as grass, wooden deck or furniture.

1. Using the screen hook that is provided and heat resistant gloves, carefully remove screen.
2. While using a long handled fire pit tool, shift coals and logs to allow additional airflow.
3. DO NOT add gasoline, kerosene, diesel fuel, lighter fluid or alcohol to relight or enhance an existing fire.
4. Wait until glowing coals have developed before adding any additional wood. If additional wood is required, place wood on top coals, be careful not to shift ashes.

Extinguishing

1. Allow fire to burn itself out.
2. DO NOT use water to extinguish as this is dangerous and can cause damage to this outdoor fire pit.

Inspecting

This fire pit should be inspected on a regular basis to ensure product safety and longer product life.

DO NOT attempt to inspect this fire pit until the fire is COMPLETELY out and cool to the touch.

1. Check components for any signs of damage or rust.
2. If damage to any component is detected, do NOT operate until repairs are executed.

Cleaning

This fire pit should be cleaned on a regular basis to promote safer experiences and longer product life.

Note: After repeated use, a slight discoloration of the finish may occur.

DO NOT attempt to clean this fire pit until the fire is COMPLETELY out and cool to the touch.

DO NOT use oven cleaner or abrasive cleaners as they will damage this product.

DO NOT clean any part of this fire pit in a self cleaning oven as it may damage the finish.

1. Wipe exterior surfaces with a mild dishwashing detergent or baking soda.
2. For stubborn surfaces use a citrus based degreaser and a nylon scrubbing brush.
3. Rinse and clean with water.
4. Remove built-up creosote from components with a chimney cleaning product.

Storage

DO NOT move or store this fire pit until the fire is COMPLETELY out and cool to the touch.

1. Once the fire is out, coals are cold and fire pit is cool to the touch, remove ashes and properly dispose.
2. Store the fire pit in a dry location to maximize product life.
3. Store assembled in a location away from children and pets.

Warranty Information

The appliance has been manufactured under the highest standards of quality and workmanship. We warrant to the original consumer purchaser that all aspects of this product will be free of defects in material and workmanship for one year (1) from the date of purchase. A replacement for any defective part will be supplied free of charge for installation by the consumer. Defects or damage caused by the use of other than genuine parts are not covered by this warranty. This warranty shall be effective from the date of purchase as shown in the purchaser's receipt.

This warranty is valid for the original consumer purchaser only and excludes industrial, commercial or business use of the product, product damage due to shipment or failure which results from alteration, product abuse, or product misuse, whether performed by a contractor, service company, or consumer. We will not be responsible for labor charges and / or damage incurred in installation, repair or replacement, nor for incidental or consequential damage.



Need help?

call our toll free number at:

1 (866)-814-0585 or 1 (888)-922-2336

e-mail us at:

Customerservice@academy.com