


AGame™

Denver Wooden Play Set Style # YLSUOG0000 (WP-337NPR)

OWNER'S MANUAL

ASSEMBLY, INSTALLATION, CARE, MAINTENANCE AND USER INSTRUCTIONS

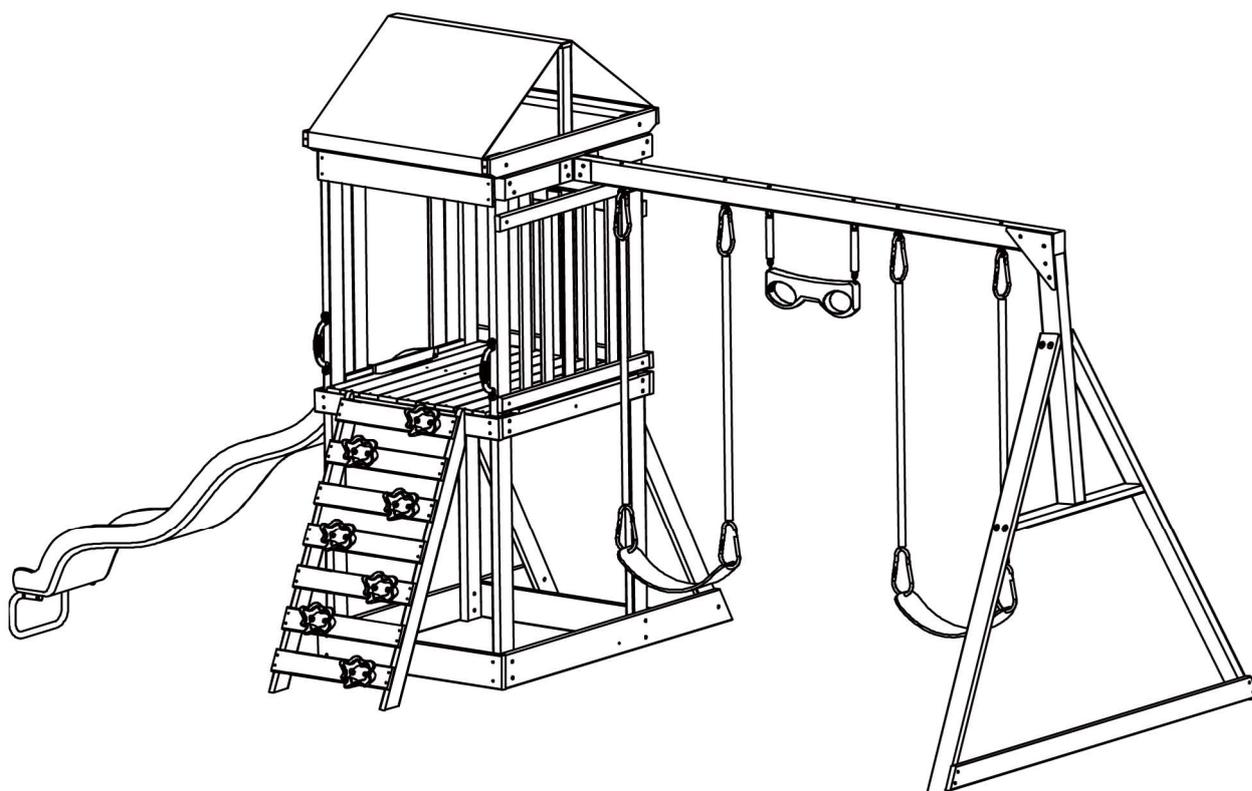

Please keep this instruction manual for future reference

FOR RESIDENTIAL USE ONLY

DO NOT RETURN TO THE STORE

For replacement parts, please call 1-866-370-2131 Monday – Friday 9:00 AM – 5:00 PM Eastern Time

Customer Service: (888) 922-2336 7:00 am to 12:00 am CST (daily)

Live Chat at: www.academy.com

Email: customerservice@academy.com

INTRODUCTION

Dear Valued Customer,

Congratulations on your Denver wooden play set purchase! Please read and completely understand the contents of this owner's manual. This manual contains specific instructions that must be followed to prevent injuries.

This equipment is for residential use only. This swing set is NOT intended for public or commercial use. The warranty will be voided if the swing set is used in a commercial application.

The product was designed to be used by children between the ages of 3-8. Children must NOT play on this set until it is properly assembled and inspected by an adult. Adult supervision is required at all times while children are playing on the equipment. Do not allow children under six (6) years old to be near during the assembly of this product due to choking hazards of small parts.

The equipment must be installed on level ground. Uneven ground must be leveled prior to installation. Installation on sloping or uneven ground will put stress on the joints, causing the unit to become loose and unstable which may result in serious injuries. You must ensure there are no obstructions or structures (e.g. electrical wires, branches, house, fence, garage, etc) within six (6) feet in any direction from the equipment.

The U.S. Consumer Product Safety Commission's Outdoor Home Playground Safety Handbook recommends to install and maintain the playground equipment over at least 9 inches of wood chips, mulch or shredded rubber (for equipment up to 8 feet high) or sand or pea gravel (for equipment no more than 5 feet high) as shock absorbing material. Dirt and grass, which are the most prevalent surfaces under home playground equipment, do not adequately protect children from serious head injuries. Install protective surfacing at least six (6) feet in all directions from play equipment. For swings, the surface should extend, in back and front, twice the height of the suspending bar. Do not install your swing set over hard surface, e.g. asphalt, concrete, packed earth, tile or brick floor. Do not allow children to use the product during windy or wet weather conditions. You should consult a local licensed contractor about ways to anchor the product in your location.

Please thoroughly read and follow the instructions in this Owner's Manual to ensure proper and enjoyable play for your children. The equipment must be checked before each use and maintained regularly. This includes, but is not limited to inspecting the swing set for cracks, excess wear, missing parts, loose connections, and for overall integrity. When the set shows any signs of weakness or damage, you must stop using the swing set immediately, properly store the set or restrict access by users until the condition is resolved.

TABLE OF CONTENTS

IMPORTANT WARNINGS AND INSTRUCTIONS	3
IMPORTANT CONSUMER INFORMATION SHEET	7
CARE AND MAINTENANCE CHECK LIST	12
COMPLETE PRODUCT VIEW.....	13
TOOLS NEEDED	14
WOOD PARTS LIST	15
HARDWARE PARTS LIST	17
COMPONENT PARTS LIST	18
HARDWARE PRE-ASSEMBLE.....	19
ASSEMBLY AND INSTALLATION INSTRUCTIONS	20
HELPFUL TIPS.....	42
PRODUCT WARRANTY.....	43

Note: Before beginning assembly of product, make sure all parts are present. Compare parts with package content list and hardware contents. If any part is missing or damaged do not attempt to assemble the unit. Contact customer service for replacement parts.

IMPORTANT WARNINGS AND INSTRUCTIONS



WARNING

READ ALL INSTRUCTIONS BEFORE ASSEMBLING OR USING THIS EQUIPMENT

AGE LIMIT

- This product is designed to be used by up to six (6) children between the ages of 3 to 8. Maximum individual user weight is 100 pounds (45kg) each with a combined maximum weight of 600 pounds (270kg.)
- The playset is designed for children over three (3) years of age. Use by smaller children can result in entrapment and serious injury.
- On-site adult supervision is required at all times for children of all ages.
- Do not allow use by children with any physical condition that may affect his/her ability to use this equipment safely.

BEFORE YOU BEGIN:

- Carefully read all instructions in this manual before assembling and using this product.
- The unit must be assembled by adults. Heavy duty working gloves must be worn to avoid injuries during assembly.
- Children must not use the equipment until it is properly assembled and anchored.
- Adult supervision is required during the use of this equipment at all times.
- Unpack all parts. Take a completed inventory of all parts and hardware using the parts and hardware lists in the following pages. If any parts are missing, do not return to the store. Please call customer service toll-free number listed on the cover page for assistance. Store the product back in the original box and do not begin to install until all parts are obtained.
- Never add extra length to chain or rope. The chains or ropes provided are the maximum length designed for the swinging element(s).

IMPORTANT:

- Children must NOT play on this set until it is properly assembled and inspected by an adult.
- The Wood Swing set must be properly installed and anchored BEFORE children can play on it.
- You MUST read and follow all instructions in this manual before installing or attempting to use the Wooden Swing Set.

Failure to follow these important requirements may result in the warranty being voided and/or serious injury. Please supervise your children carefully during the installation and assembly of the Wood Swing Set.

Please also pay close attention to the periodic maintenance that is required to keep your Wood Swing Set in a safe condition for maximum enjoyment of backyard fun!

IMPORTANT WARNINGS AND INSTRUCTIONS



WARNING

BEFORE YOU BEGIN ASSEMBLY:

- Take a complete inventory of components using the parts list.
- Sort and lay out the wood pieces. Label each piece of wood for easy reference. For easy identification during the assembly process, write the board's letter on masking tape and adhere to each piece of the wood. Some wooden components may twist or warp in the carton after packaging. Usually, these parts straighten out when assembled. You may also see some cracking of the grain. This is normal.
- Sort all hardware according to size. Do not worry if extra hardware is included.

FIND A SAFE PLAY LOCATION:

- You **MUST** install the Wooden Swing Set on level ground. Uneven ground must be leveled prior to installation. The manufacturer cannot assume responsibility for any failure from incorrect installation. Installing on sloping ground will put stress on all the joints, which will cause the set to become loose and unstable.
- Find a location where the equipment can be placed more than six (6) feet from any structure or obstruction (ex: electrical wires, branches, house, fence, garage). The safe play area refers to a zone extending six (6) feet beyond the swing set on all sides, including the space above the swing set.
- The safe play area must be free of all structures, landscaping, trees and branches, rocks, wires and other obstacles to safe play. Children can be seriously injured running or swinging into these obstacles.
- Remove any rocks or any jagged or sharp object that could endanger your children's' safety. Remove all tripping hazards from the safe play area. Tripping hazards include but are not limited to: roots, stumps, rocks, landscaping, sprinkler heads, railroad ties, plumbing, and electrical connections.
- Do **NOT** install your swing set over gravel, asphalt, packed earth or any other hard surface. The following is a list of recommended ground covers from the Consumer Product Safety Commission.

SUGGESTED MATERIAL	UNCOMPRESSED DEPTH
Double Shredded Bark Mulch	9"
Uniform Wood Chips	12"
Fine Gravel	12"
Fine Sand	12"

IMPORTANT WARNINGS AND INSTRUCTIONS



WARNING

READ ALL INSTRUCTIONS BEFORE ASSEMBLING OR USING THIS EQUIPMENT

Observing the following statements and warnings reduces the likelihood of serious or fatal injury.

PLAY SUPERVISION

- DO NOT allow more than one child to play on the individual swing or slide at the same time. DO NOT allow children to stand on the swing seat.
- DO NOT allow children to walk too close to moving parts. ALWAYS keep a safe distance to avoid being struck by other children while playing.
- DO NOT allow children to twist the swing chains or ropes, or loop them over the top support bar as this may reduce the strength of the chain or rope.
- Owners shall be responsible for maintaining the legibility of the warning labels.
- Instruct children not to use the equipment in a manner other than intended.
- DO NOT swing empty seats as this may cause injuries.
- ALWAYS guide children to sit in the center of swinging parts, with their full weight placed in the seat center and holding on to the swing chains.
- DO NOT allow children to jump off the equipment while it is in motion. ALWAYS come to a full stop before dismounting.
- ALWAYS dress children appropriately for playing, e.g. wear well-fitted rubber sole shoes, and remove loose or sharp items such as jewelry, hair accessories, scarves, ponchos that may become entangled in the equipment or cause injuries.
- ALWAYS make sure children remove their bike or other sports helmets before playing on the playground. Helmets can become entrapped in the playground, posing a strangulation hazard.
- DO NOT allow children to climb onto swing or jump to and from different play areas of the equipment. ALWAYS return safely to the ground before approaching another play area.
- DO NOT allow children to climb on structural parts (e.g. legs, top bar). These are structural components and are not designed for play.
- ALWAYS check the slide or other parts exposed to the body for extreme heat from the sun before allowing children to use the equipment.
- ALWAYS prevent access and secure from any unauthorized use when there is no adult supervision.
- DO NOT allow pets or other animals near the equipment to prevent damage or injuries.

IMPORTANT WARNINGS AND INSTRUCTIONS

INSPECTION PRIOR TO EACH USE OR DAILY INSPECTION

- DO NOT use the equipment if any bolts or nuts are missing or loose. ALWAYS check to ensure the equipment and all parts are well secured and stable before each use.
- ALWAYS clear the play area of any rocks, sharp objects, or any materials that could be potentially hazardous to users.
- DO NOT attach items to the equipment that are not specifically designed for use with the equipment, including, but not limited to, jump ropes, clothesline, pet leashes, cables and chains as they may cause choke hazards.
- The wood, steel and plastic parts used in your product are subject to normal wear. Gradual deterioration of the material will occur, the speed of which will depend on the level of exposure to UV rays, airborne pollution, outdoor weather conditions such as rain and wind and the amount of use. You must inspect the equipment prior to every use. This includes, but is not limited to inspecting the set for cracks, excess wear, missing parts, loose connections, and for overall integrity. When the set shows any signs of weakness, you must stop using the play set immediately, properly store the set or restrict access by users until the condition is resolved.
- Verify that the suspended climbing ropes, chain or cable are secured at both ends and tightened, so that there is no loose ropes, chain or cable hanging that can result in choking hazard.

WEATHER CONDITIONS

- DO NOT use this equipment if the swing seat, slide or other parts are wet. Use the swing set only when the parts are clean and dry. If the equipment is wet, the user could slip and suffer injuries.
- Please be aware of weather conditions when using the equipment. If it is too windy, users could lose control and suffer injuries. The playground equipment must be properly anchored, stored away or restricted from use during inclement weather such as heavy winds or severe weather storms. You should consult a local contractor about ways to anchor the product in your location.

DISPOSAL INSTRUCTIONS

- Please use care when disassembling the equipment. Wear heavy duty working gloves to avoid injuries.
- Fully disassemble the entire swing and climber before disposal. Do not leave partially disassembled equipment parts in areas accessible by children.

All plastic and steel parts could be recycled. Take it to your local recycling center. Do not let children play with any disassembled parts destined for disposal, such as chains, slide, tubing, bolts, nuts, screws, etc.

IMPORTANT CONSUMER INFORMATION SHEET

The Consumer Product Safety Commission estimates there are about 200,000 playground related injuries involving children each year. Injuries involving this hazard pattern tend to be among the most serious of all playground injuries and have the potential to be fatal, particularly when the injury is to the head. The surface under and around playground equipment can be a major factor in determining the injury-causing potential of a fall. It is self-evident that a fall onto a shock absorbing surface is less likely to cause a serious injury than a fall onto a hard surface. Playground equipment should never be placed on hard surfaces such as concrete or asphalt and while grass may appear to be acceptable it may quickly turn to hard packed earth in areas of high traffic. Shredded bark, mulch, wood chips, fine sand or fine gravel are considered to be acceptable shock absorbing surface when installed and maintained at a sufficient depth under and around playground equipment.


Table below lists the maximum height from which a child would not be expected to sustain a life-threatening head injury in a fall onto four different loose-fill surfacing materials if they are installed and maintained at depths of 6" (15.25CM), 9" (22.9CM), and 12" (30.5CM).

FALL HEIGHT IN FEET FROM WHICH			
TYPE OF MATERIAL	6"(15.25CM)DEPTH	9"(22.9CM)DEPTH	12"(30.5CM)DEPTH
Double shredded bark mulch	6"(15.25CM)	10"(25.4CM)	11"(27.94CM)
Wood Chips	6"(15.25CM)	7"(17.8CM)	12"(30.5CM)
Fine Sand	5"(12.7CM)	5"(12.7CM)	9"(22.86CM)
Fine Gravel	6"(15.25CM)	7"(17.8CM)	10"(25.4CM)

However, it should be recognized that all injuries due to falls cannot be prevented no matter what surfacing material is used. We recommend that a shock absorbing material should extend a minimum of 6ft in all directions from the perimeter of stationary equipment such as climbers and slides. However, because children may deliberately jump from a moving swing, the shock absorbing material should extend in the front and rear of a swing a minimum distance of 2 times the height of the pivot point measured from a point directly beneath the pivot on the supporting structure.

This information is intended to assist in comparing the relative shock-absorbing properties of various materials. No particular material is recommended over another. However, each material is only effective when properly maintained. Materials should be checked periodically and replenished to maintain correct depth as determined necessary for your equipment. The choice of a material depends on the type and height of the playground equipment, the availability of the material in your area and its cost.

Note: The maximum fall height for this product is 6 feet. The minimum ground Clearance between the bottom of the suspended plays and the playing or ground service must be 8 inches.

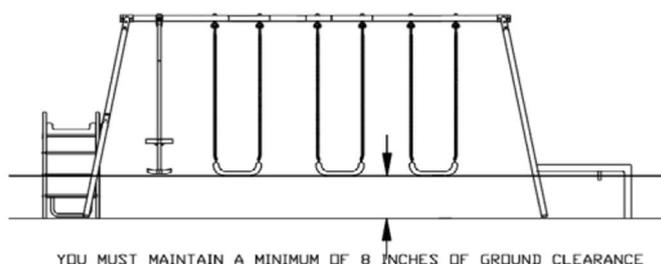

This information has been extracted from the CPSC publication on "Playground Safety". You can obtain more information by sending a postcard to the: Office of public Affairs, U.S. Consumer Product Safety Commission, Washington, D.C.20207

IMPORTANT CONSUMER INFORMATION SHEET

The following guidelines are extracts from the Consumer Product Safety Commission Outdoor Home Playground Safety Handbook. It is recommended that you read the entire handbook and take necessary precautions to prevent serious injuries to your children, including:

CHOOSING A SITE

- When you choose a home playground, a location away from roads and driveways and readily visible from inside the home and patios or porches, is important.
- Create a site free of obstacles that could cause injuries such as low overhanging tree branches, overhead wires, tree stumps and/or roots, large rocks, bricks and concrete.
- Choose a level location for the equipment. This can reduce the likelihood of the play set tipping over and loose-fill surfacing materials washing away during heavy rains. Some sites may need regrading to improve drainage or to reduce the slope.
- Locate play equipment at least 6 feet from any structure or obstacles, such as a house, fence, sheds, trees or poles. Swings should be further away from structures to the front and rear of the swings a distance equal to twice the height of the top bar from which the swing is suspended.
- Locate bare metal platforms and slides out of direct sunlight to reduce the likelihood of serious burns. A slide that faces north will receive the least direct sunlight.

SELECT PROTECTIVE SURFACING

One of the most important things you can do to reduce the likelihood of serious head injuries is to install shock-absorbing protective surfacing under and around your play equipment. The protective surfacing should be applied to a depth that is suitable for the equipment height in accordance with ASTM F1292. There are different types of surfacing to choose from; whichever product you select, follow these guidelines:

Do not install home playground equipment over concrete, asphalt, or any other hard surface. A fall onto a hard surface can result in serious injury to the equipment user. Grass and dirt are not considered protective surfacing because wear and environmental factors can reduce their shock absorbing effectiveness. Carpeting and thin mats are generally not adequate protective surfacing.

Loose-Fill Materials

- Maintain a minimum depth of 9 inches of loose-fill materials such as wood mulch/chips, engineered wood fiber (EWF), or shredded/recycled rubber mulch for equipment up to 8 feet high; and 9 inches of sand or pea gravel for equipment up to 5 feet high. NOTE: An initial fill level of 12 inches will compress to about a 9-inch depth of surfacing over time. The surfacing will also compact, displace, and settle, and should be periodically refilled to maintain at least a 9-inch depth.
- Use containment, such as digging out around the perimeter and/or lining the perimeter with landscape edging. Don't forget to account for water drainage.

IMPORTANT CONSUMER INFORMATION SHEET

- Check and maintain the depth of the loose-fill surfacing material. To maintain the right amount of loose-fill materials, mark the correct level on play equipment support posts. That way you can easily see when to replenish and/or redistribute the surfacing.
- **Do not** install loose fill surfacing over hard surfaces such as concrete or asphalt.

Poured-In-Place Surfaces or Pre-Manufactured Rubber Tiles

You may be interested in using surfacing other than loose-fill materials-like rubber tiles or poured-in-place surfaces.

- Installations of these surfaces generally require a professional and are not “do-it-yourself” projects.
- Review surface specifications before purchasing this type of surfacing. Ask the installer / manufacturer for a report showing that the product has been tested to the following safety standard: *ASTM F1292 Standard Specification for Impact Attenuation of Surfacing Materials within the Use Zone of Playground Equipment*. This report should show the specific height for which the surface is intended to protect against serious head injury. This height should be equal to or greater than the *fall height*-vertical distance between a designated play surface (*elevated surface for standing, sitting, or climbing*) and the protective surfacing below-of your play equipment.
- Check the protective surfacing frequently for wear.

PLACEMENT

Proper placement and maintenance of protective surfacing is essential. Be sure to:

- Extend surfacing at least 6 feet from the equipment in all directions.
- For to-fro swings, extend protective surfacing in front of and behind the swing to a distance equal to twice the height of the top bar from which the swing is suspended.

When conducting inspections, it is recommended that you use the Suggested General Maintenance Checklist and Routine Inspection and Maintenance Issues checklists provided by the US Consumer Product Safety Commission, a copy of which is contained in this user manual.

IMPORTANT CONSUMER INFORMATION SHEET

Outdoor Home Playground Safety Checklist

Use this to help make your home playground a safe place to play!

Supervision	Be sure to always supervise children on play equipment.
Surfacing	<p>Install a protective surface under and around play equipment to reduce the likelihood of serious head injuries.</p> <p>For most play equipment, install protective surfacing 6 feet in all directions beyond the equipment.</p> <p>For swings, extend protective surfacing in front and back of the swing to a distance that is twice the height of the bar from which the swing is suspended.</p> <p>For tire swings, install protective surfacing outward from the swing equal to the suspension chain plus 6 feet.</p>
Types of Surfacing	<p>Carpeting and thin mats are not adequate as protective surfacing.</p> <p>Maintain at least 9 inches of loose-fill material (see page 6) or use an ASTM F1292 rated material at the depth required for the equipment height.</p> <p>Use wood mulch/chips, shredded rubber mulch, or engineered wood fiber for equipment up to 8 feet high.</p> <p>Use sand, pea gravel, or mulch products listed above for play equipment up to 5 feet high; or</p> <p>Use surface mats tested to provide impact protection equal to or greater than the height of the play equipment.</p>
Equipment Maintenance	Periodically check nuts, bolts, caps, swing seats, suspension ropes, chains, and cables and replace as necessary. Maintain loose-fill surfacing and surface mats.
Opening	<p>Eliminate openings that can trap a child's head or neck, such as openings in guardrails or ladders.</p> <p>Openings should be smaller than 3 1/2 inches to prevent entry of a small child's body, or larger than 9 inches to allow a child's head and body to slide completely through.</p>
Ropes	Never attach jump ropes, clotheslines, pet leashes, or cords of any kind to play equipment. Anchor any climbing ropes at both ends. Remove drawstrings from children's clothes. Children can strangle on these.
Anchors	<p>Bury or cover anchors with adequate surfacing material to prevent tripping.</p> <p>Play equipment should not tip over.</p>
Guardrails or Barriers	Make sure that platforms and ramps over 30 inches high have guardrails and barriers to prevent falls.
Repair	Repair sharp points and edges on equipment that can cause injuries.
Upkeep of Hardware	Replace missing hardware, eliminate protruding bolts, and close "S" hooks that can cause injuries.

IMPORTANT CONSUMER INFORMATION SHEET

What to Inspect:

Hardware:

Inspect all nuts and bolts and tighten if required. Hardware should be firmly against, but not crushing the wood. Over-tightening hardware crushes wood fibers and can split wooden components resulting in the bolt thread extending beyond the wood. This poses a severe safety hazard. If bolt threads protrude beyond the wood surface, replace the bolt with a shorter one that will not protrude. If splintering has occurred from over-tightening, larger washers can be purchased at your local hardware store and installed under the bolt head. Be sure to reuse or replace your lock washers.

Major Wooden Parts:

Inspect for structural defects and splintering. If necessary, lightly sand and refinish with an exterior water repellent stain. Seasonal checking or cracking of the grain on wooden parts is quite natural, water and heat are the most frequent causes of expansion and contraction of wood fibers. Our wood set has been treated with stain to resist weathering. But it needs to be maintained periodically by applying new stain or paint.

Dowels (Rungs)

Inspect for structural defects and splintering. If necessary, lightly sand and refinish with a clear water repellent, exterior sealant or boiled linseed oil. Do NOT paint, varnish or finish rungs with any substance that may reduce your child's ability to firmly grasp or step on the rungs.

Swing hangers

Inspect for correct installation. Assure the bend of the swing hanger is positioned tightly against the stop washer and the ladder or swing beam. The axis of the swing hanger bushing must be perpendicular to the swing motion. Spray the nylon bushings with a household lubricant such as WD-40, if you hear squeaking.

Plastic Swing Seats

Check for evidence of deterioration. Replace any swing seat that has developed cracks in the seat or has exposed metal in the edges of the swing seat. If there are already exposed metal inserts on the edge of the seat, remove the seats and chains to prevent serious injury. Remove plastic swing seats and take indoors or do NOT use when the temperature drops below 32 degrees F.

Ropes, Cables and Chains

Check for evidence of deterioration. Ropes, cables and chains should be removed and replaced if excessive wear is found. Contact our service center for replacement parts.

Metallic Components

Check for rusted areas on components such as monkey bars, hand supports, brackets, etc. Sand and repaint using a non-lead-based paint that meets the requirements of Title 16 CRF part 1303.

Play Area

Inspect to assure that the swing set has settled properly and the location of the set is still level.

CARE AND MAINTENANCE CHECK LIST

AT THE BEGINNING OF EACH PLAY SEASON:

- Tighten all hardware.
- Lubricate all metallic moving parts per manufacturer's instructions.
- Check all protective coverings on bolts, pipes, edges, and corners. Replace if they are loose, cracked, or missing.
- Check all moving parts including swing seats, ropes, cables, and chains for wear, rust, or other deterioration. Replace as needed.
- Check metal parts for rust. If found, sand and repaint using a nonlead-based paint meeting the requirements of 16 CFR 1303.
- Check all wood members for deterioration and splinters. Sand down splinters and replace deteriorating wood members.
- Reinstall any plastic parts, such as swing seats or any other items that were removed for the cold season.
- Rake and check depth of loose fill protective surfacing materials to prevent compaction and to maintain appropriate depth. Replace as necessary.

TWICE A MONTH DURING PLAY SEASON:

- Tighten all hardware.
- Check all protective coverings on bolts, pipes, edges, and corners. Replace if they are loose, cracked, or missing.
- Rake and check depth of loose fill protective surfacing materials to prevent compaction and to maintain appropriate depth. Replace as necessary.

ONCE A MONTH DURING PLAY SEASON:


- Lubricate all metallic moving parts per manufacturer's instructions.
- Check all moving parts including swing seats, ropes, cables, and chains for wear, rust, or other deterioration. Replace as needed.
- At the end of each play season or when the temperature drops below 32°F.
- Remove plastic swing seats and other items as specified by the manufacturer and take indoors or do not use.
- Rake and check depth of loose fill protective surfacing materials to prevent compaction and to maintain appropriate depth. Replace as necessary.

AT THE END OF EACH PLAY SEASON:


- At the end of each play season or when the temperature drops below 32 degrees F (0 degrees C).
- Remove plastic swing seats and other items as specified by the manufacturer and take indoors or do not use.
- Rake and check depth of loose fill protective surfacing materials to prevent compaction and to maintain appropriate depth. Replace as needed.
- As a general rule, maintenance should be performed at any time it is deemed necessary.

COMPLETE PRODUCT VIEW

FRONT VIEW OF COMPLETE PRODUCT

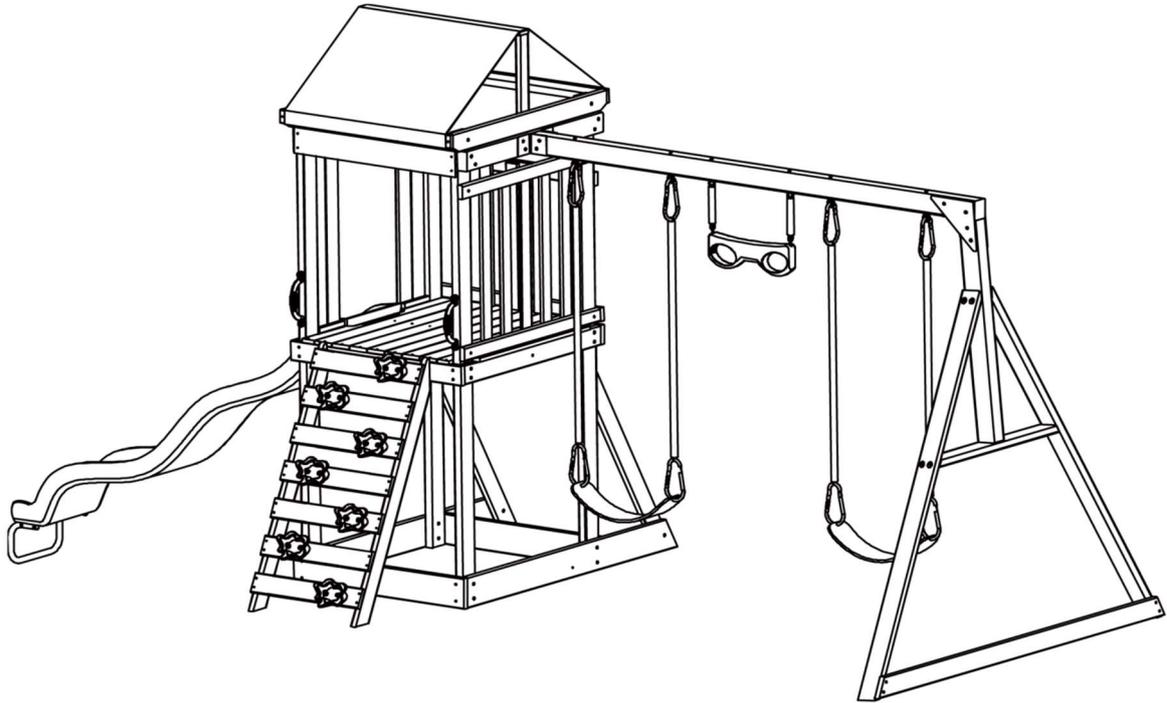


BACK VIEW OF COMPLETE PRODUCT

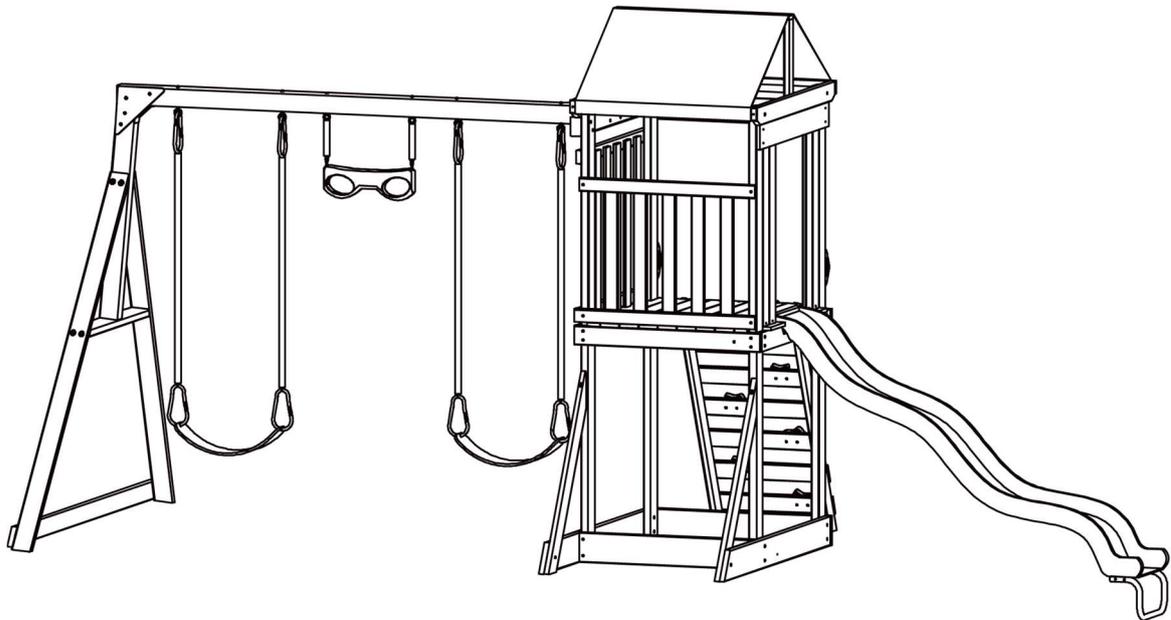

TOOLS NEEDED

These are the tools that are generally required for installation.

These tools are not included in the purchased packaging unless stated below.

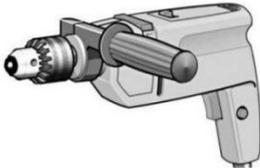


Electric Drill



Phillips Head Screw Driver



Ladder or Step Tool

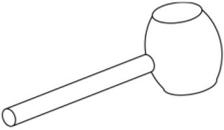

Rubber Mallet



Phillips Head Screwdriver



Tape Measure



Working Gloves

INCLUDED



Special Socket Wrench



Special Socket Wrench

 


Big Sharp Head Allen Wrench
(M4)

WOOD PARTS LIST



P1 x 1pc




P2 x 1pc




P3 x 1pc



 
P4 x 1pc



P5 x 1pc

 


P6 x 1pc

 

P7 x 1pc



 
P8 x 1pc




P9 x 1pc



 
P10 x 1pc



P11 x 1pc

 

P12 x 1pc

 

P13 x 1pc



P14 x 1pc



P15 x 2pcs



 
P16 x 7pcs



P17 x 1pc



P18 x 7pcs



P19 x 1pc



 
P21 x 1pc



P20 x 2pcs




P23 x 5pcs




P22 x 1pc



 P24 x 5pcs



P25 x 1pc

 

P26 x 2pcs

WOOD PARTS LIST



 
P27 x 1pc



P28 x 1pc



P29 x 2pcs



P30 x 4pcs



 
P31 x 2pcs



P32 x 2pcs




P33 x 2pcs




P35 x 1pc



 P34 x 1pc



P36 x 1pc

 

P37 x 1pc



P38 x 1pc



P39 x 1pc

 


P40 x 1pc




P41 x 2pcs


HARDWARE PARTS LIST




Z11 - 2pcs
5/16"x 135mm

 


Z8 - 10pcs
5/16"x 86mm

 


Z1 - 20pcs
5/16"x 58mm

 

Z10 - 4pcs
5/16"x 55mm

 


Z7 - 2pcs
5/16"x 48mm

 


Z13 - 2pcs
5/16"x 40mm



 Z3 - 4pcs
1/4"x 70mm



Z2 - 32pcs
1/4"x 50mm

 


S4 - 6pcs
1/4"x 60mm




S3 - 4pcs
1/4"x 50mm



 S1 - 4pcs
1/4"x 30mm



Z4 - 52pcs
M4 x 35mm

 

Z6 - 67pcs
M4 x 28mm



Z5 - 14pcs
1/4"x 30mm



Z9 - 12pcs
M4x 13mm



V6 - 16pcs
5/16"



V7 - 4pcs



V1 - 48pcs
M22



V2 - 52pcs
M17



V3 - 90pcs
M8.5



V4 - 38pcs
5/16"



V5 - 14pcs
1/4"

 
 
NOTE: EXTRA HARDWARE MAY BE INCLUDED

Measuring Hardware

It is very important that you get the right hardware in the correct place when assembling the unit. You can use a ruler to measure your hardware or you can compare the hardware to the hardware identification page.


NOTES:

- 1) Do not include bolt head when measuring length of bolt.
- 2) Include full length of deck screw when measuring




NOT TO SCALE


COMPONENT PARTS LIST

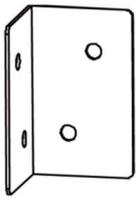


U2 x 2pcs

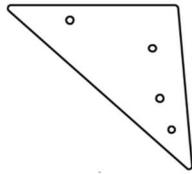


U3 x 2pcs

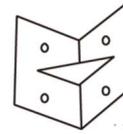


U12 x 1pc

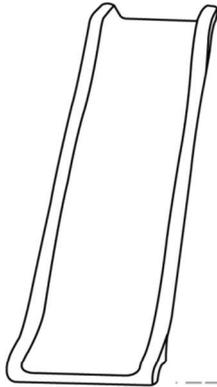


U9 x 1pc

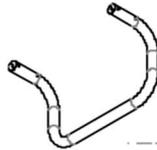


U10 x 1pc

 


U11 x 2pcs

 


U1 x 1pc

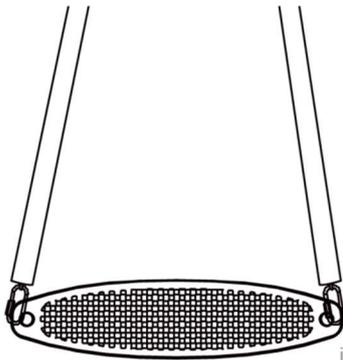

U5 x 2pcs

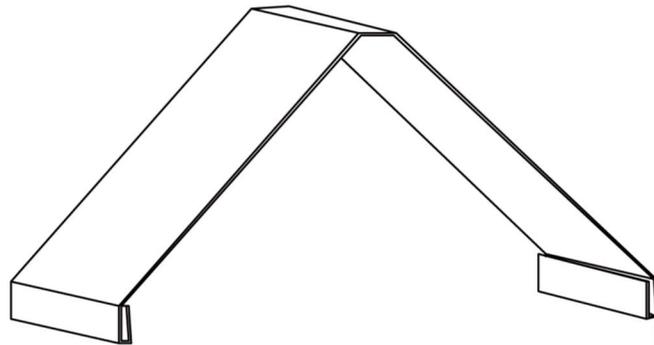


U7 x 1pc

 

U42 x 2pcs



 U4 x 7pcs



U8 x 1pc




U13 x 2pcs

HARDWARE PRE-ASSEMBLE

Please pre-assemble the wood boards listed above before you begin to assemble the product.


Hammer the square head rivets into the pre-drilled holes as shown below.

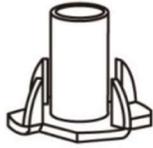






V4
Large Square



V5
Small Square

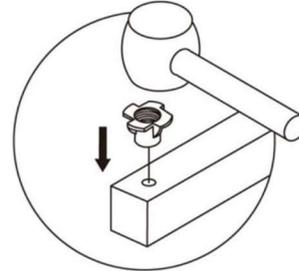


Head Rivet for the following:

     

STEP 1

Part#	Qty	Hardware#	Qty
P1	1 pc	Z1,V3,V1	8 sets
P4	1 pc		
P5	1 pc		
P11	1 pc		


1. Connect P11 to P1 and P4 using Z1, V3 and V1 (4 sets).
2. Connect P5 to P1 and P4 using Z1, V3 and V1 (4 sets).

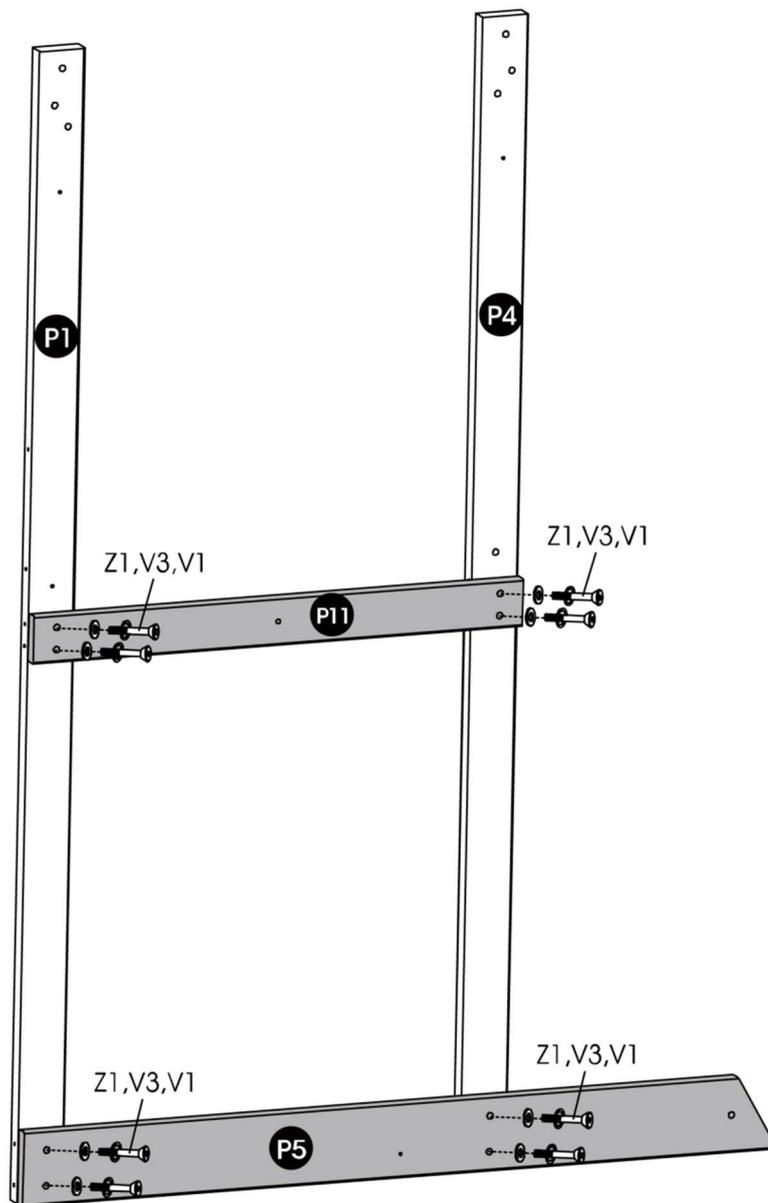

STEP 2

Part#	Qty	Hardware#	Qty
P2	1 pc	Z1,V3,V1	8 sets
P3	1 pc		
P6	1pc		
P12	1pc		
U1	1pc		


1. Connect P6 to P2 and P3 using Z1, V3 and V1 (4 sets).
2. Attach U1 to P2 and P3 as shown below.
3. Connect P12 to P2 and P3, using Z1, V3 and V1 (4 sets).

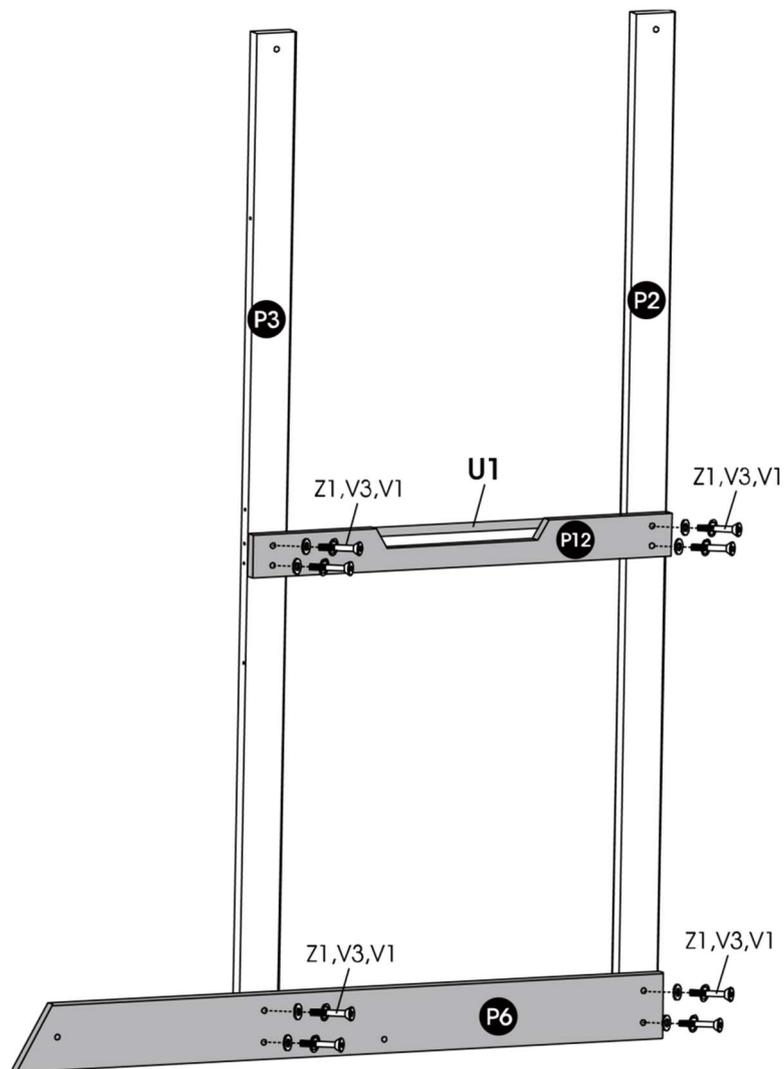

STEP 3

Part#	Qty	Hardware#	Qty
P8	1 pc	Z2,V3,V2	8 sets
P10	1 pc		


1. Connect P10 to P3 and P4 using Z2, V3 and V2 (4 sets).
2. Connect P8 to P3 and P4 using Z2, V3 and V2 (4 sets).

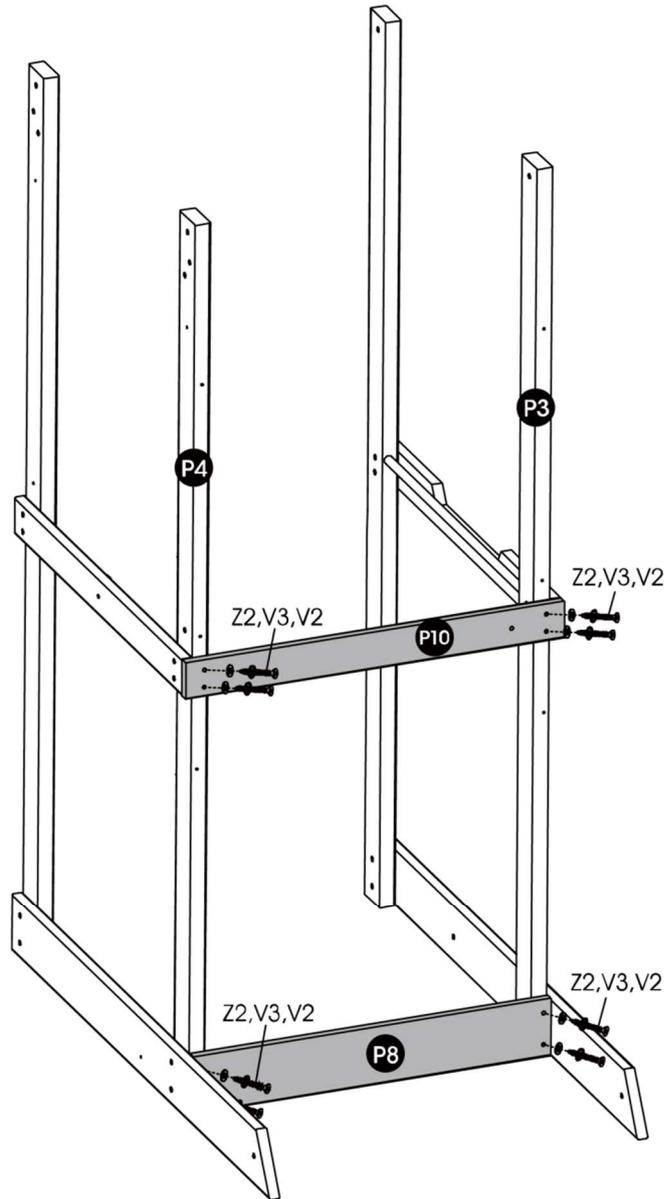

STEP 4

Part#	Qty	Hardware#	Qty
P7	1 pc	Z2,V3,V2	8 sets
P9	1 pc		


1. Connect P9 to P1 and P2, using Z2, V3 and V2 (4 sets).
2. Connect P7 to P1 and P2, using Z2, V3 and V2 (4 sets).

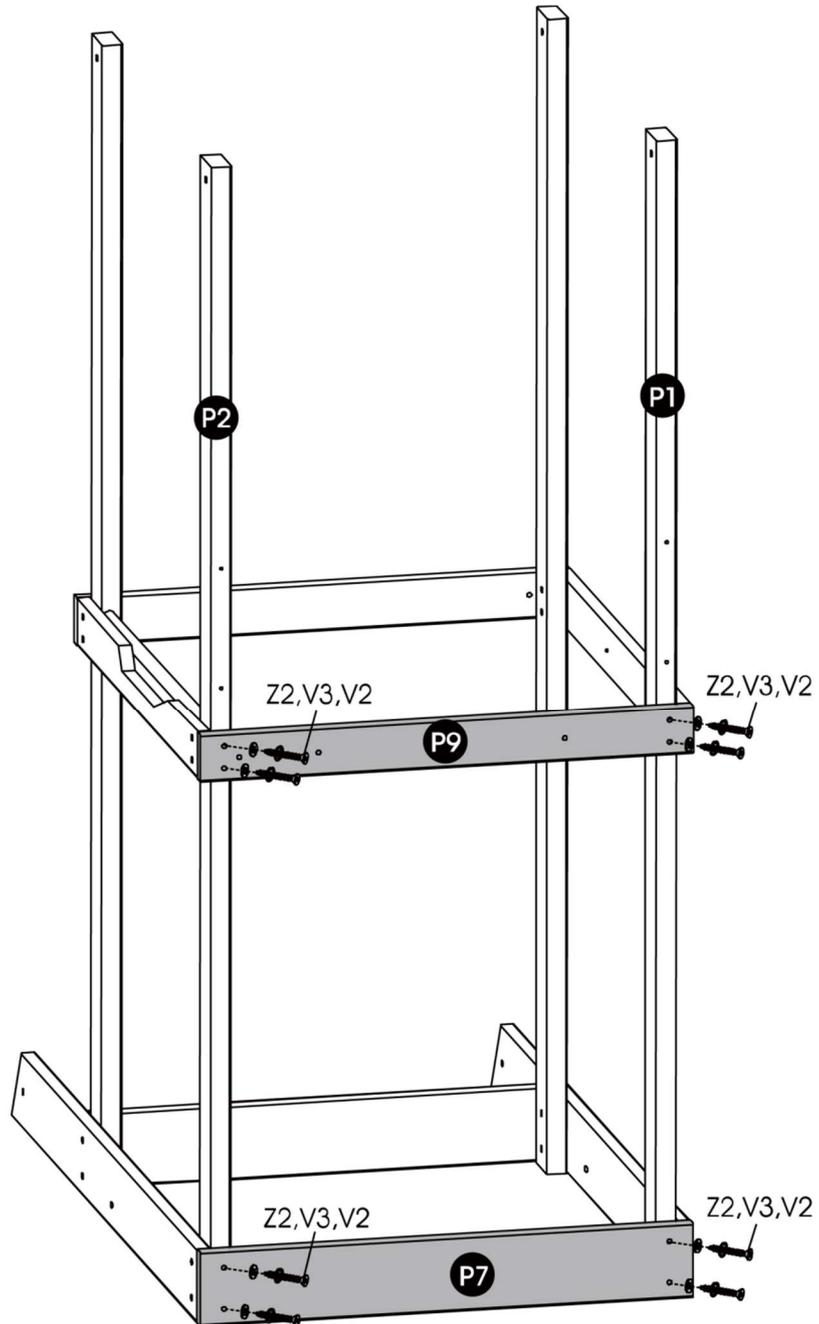

STEP 5

Part#	Qty	Hardware#	Qty
P13	1 pc	Z2,V3,V2	2 sets
P14	1 pc	Z3,V3,V2	4 sets
P26	2 pcs	Z7,V3,V1	2 sets

1. Connect P14 to P13 using Z3, V3 and V2 (1 set), this will make a T if done correctly.
2. Attach P13 and P14 to P9, P10, and P11, using Z3, V3 and V2 (3 sets).
3. Connect P26 to P3 and P4, P5 and P6, using Z2, V3 and V2 (2 sets), Z7, V3 and V1 (2 sets).

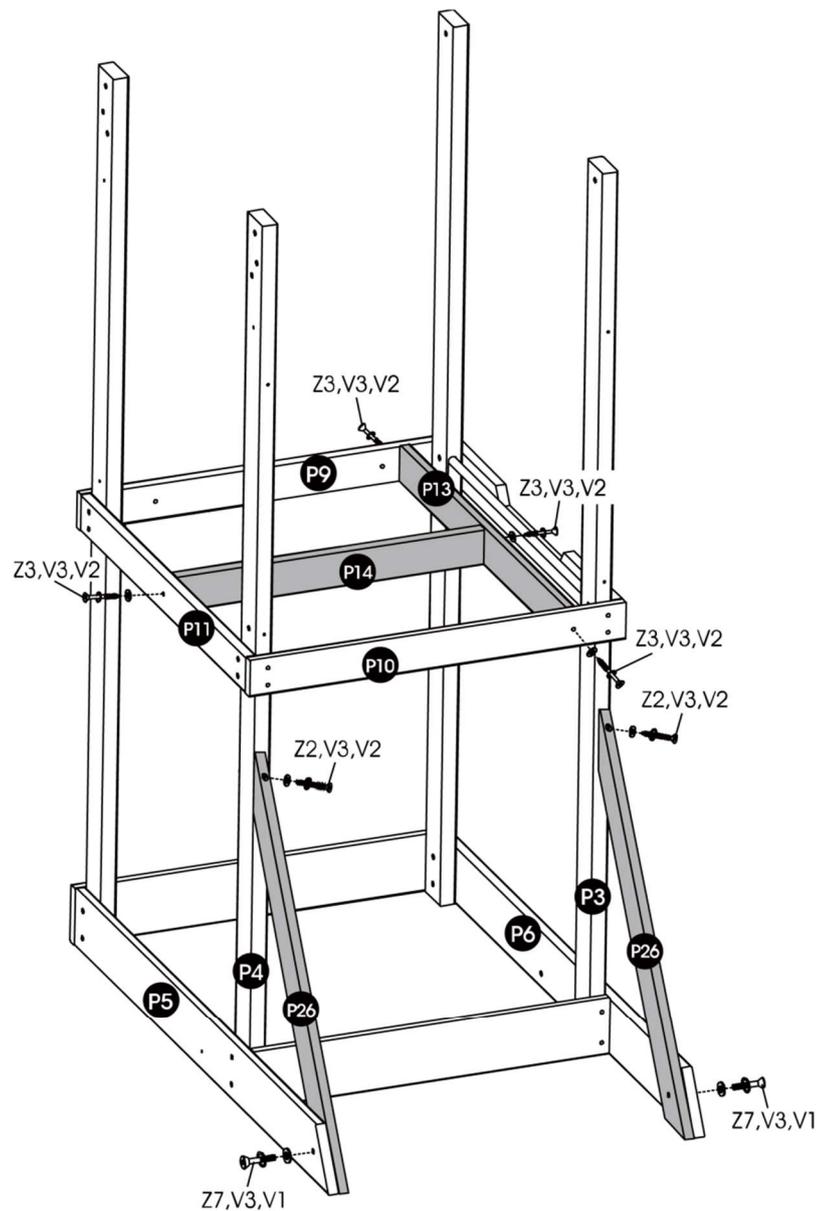


STEP 6

Part#	Qty	Hardware#	Qty
P15	2 pcs	Z4	28 pcs
P16	7 pcs	Z5,V2,V3	14 sets
U4	7 pcs		

1. Connect P16 to P15 using Z4 (28 pcs).
2. Connect U4 to P16 using Z5, V3 and V2 (14 sets).


☺ Helpful Hint: Please make sure you have prepared P16 parts as required on Page 18 before proceeding. Please evenly distribute the gap in between each P16 wood piece (2.91"). The metal rivets will face downwards. There are 4 blue and 3 Green U4 pieces. You can mix and match as you please.

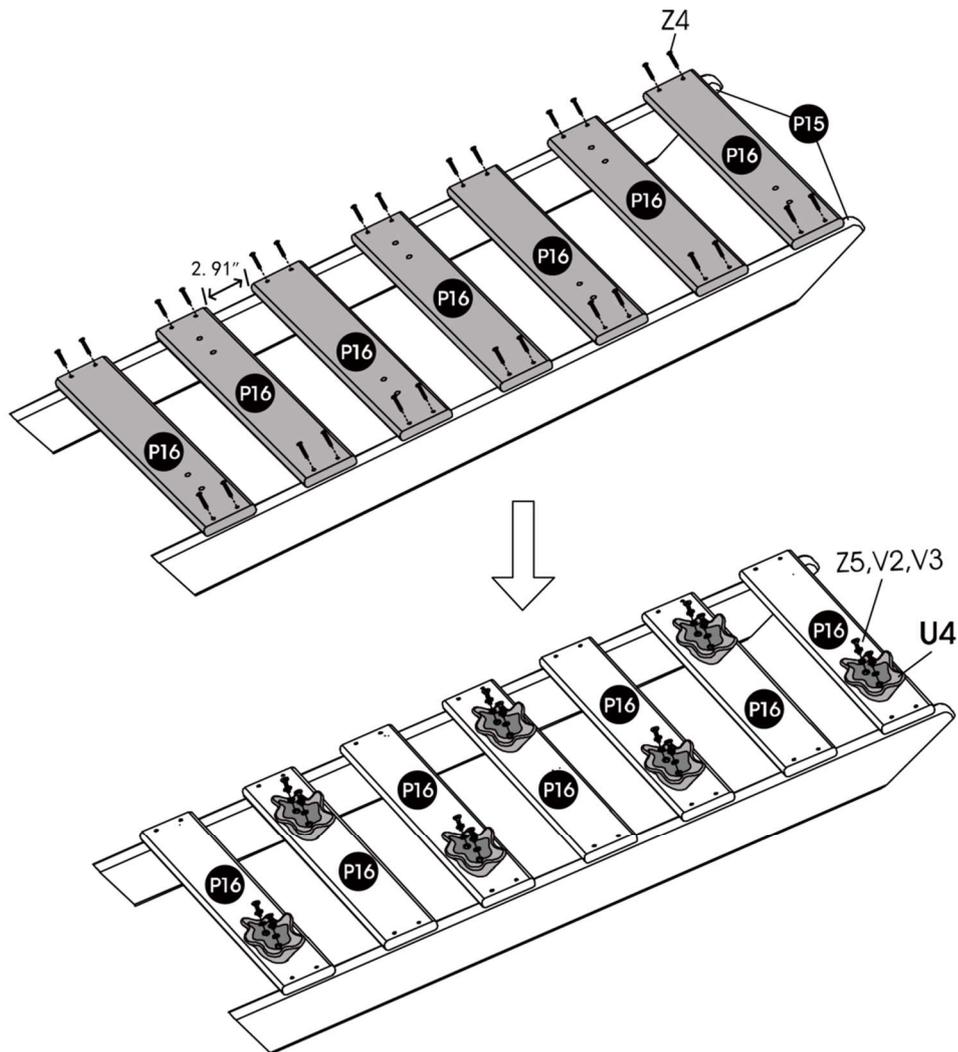

STEP 7

Part#	Qty	Hardware#	Qty
NA		Z2,V3,V2	2 sets

1. Connect P15 to P9 from inside, using Z2, V3 and V2 (2 sets).

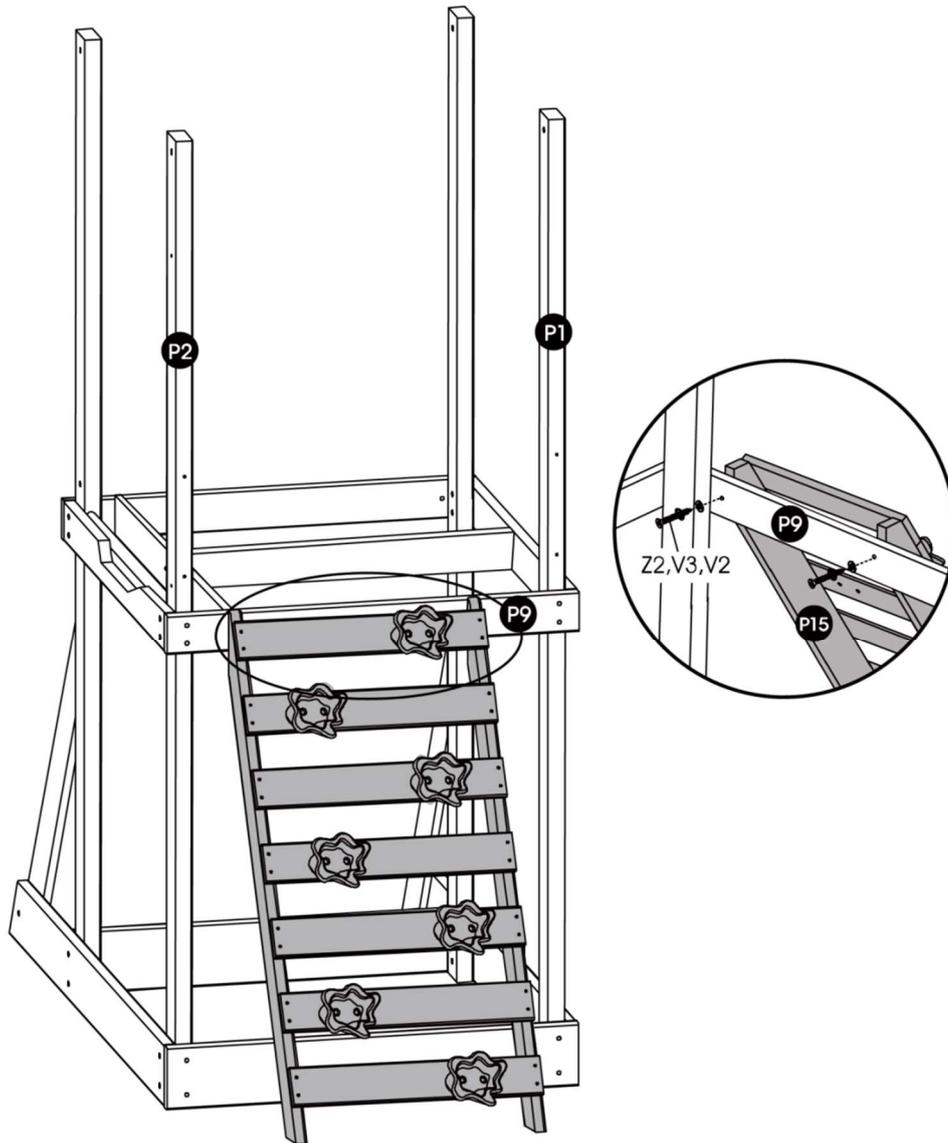


STEP 8

Part#	Qty	Hardware#	Qty
P17	1 pc	Z6	27 pcs
P18	7 pcs		
P19	1 pc		

1. Connect P17 and P19 on the 2 ends of the playhouse using Z6 (6 pcs).
2. Connect all 7 pieces of P18 in between using Z6 (21 pcs).


☺ Helpful Hint: It may be easier to screw in the middle Z6 screws first to hold P18 in place.

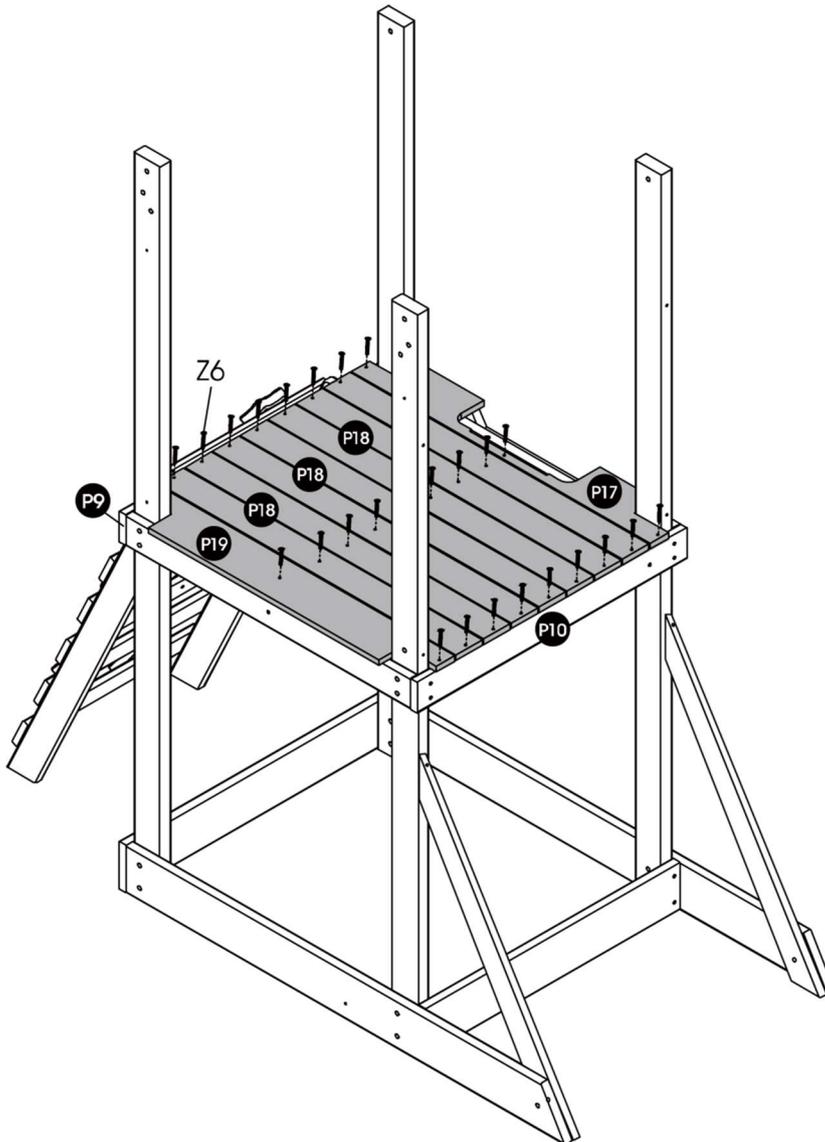

STEP 9

Part#	Qty	Hardware#	Qty
P20	2 pcs	Z2,V3,V2	8 sets
P21	1 pc		
P22	1 pc		

1. Connect P20 to P1 and P4, using Z2, V3 and V2 (4 sets).
2. Connect P21 and P22 to P3 and P4, using Z2, V3 and V2 (4 sets).

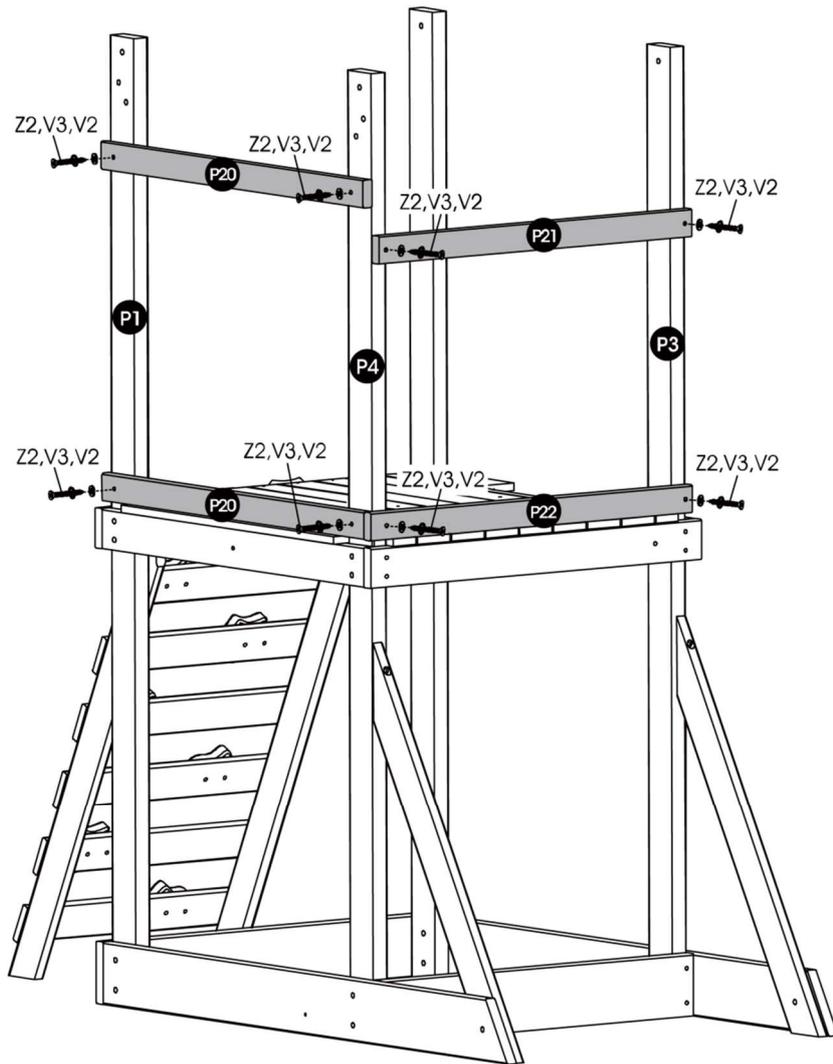


STEP 10

Part#	Qty	Hardware#	Qty
P23	5 pcs	Z6	20 sets
P24	5 pcs		

1. Connect P23 to P20 from inside, using Z6 (10 pcs).
2. Connect P24 to P21 and P22 from inside, using Z6 (10 pcs).


© Helpful Hint: Please evenly distribute the gap in between each P23 wood piece (2.93"), P24 wood piece (2.97").

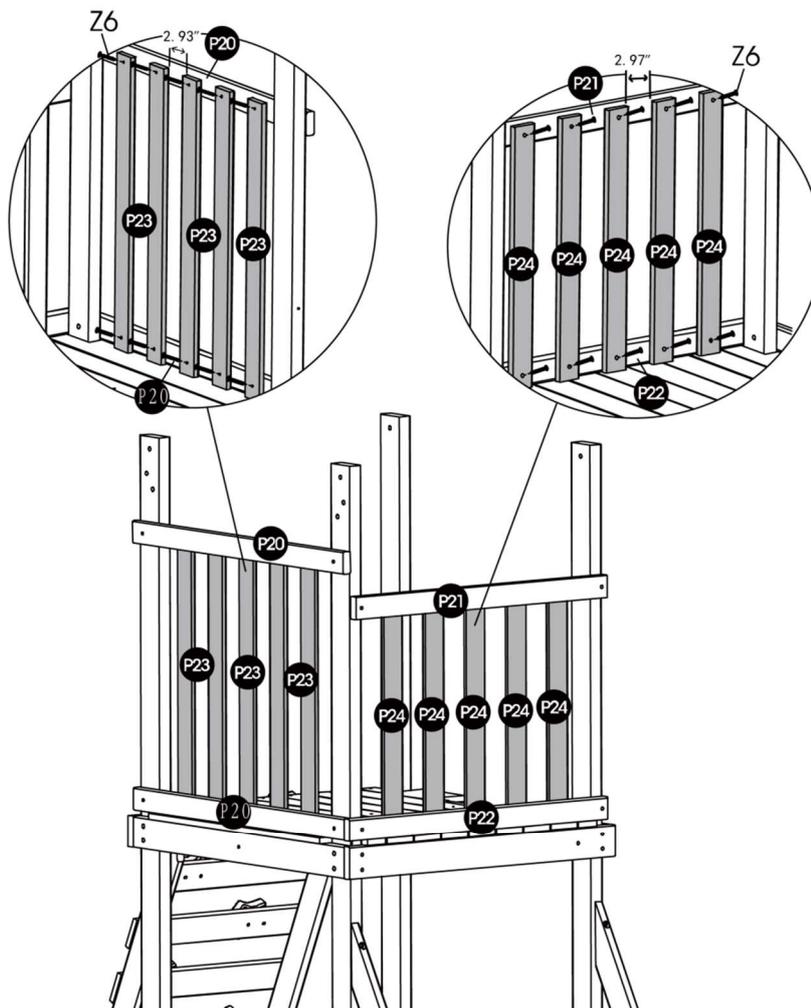

STEP 11

Part#	Qty	Hardware#	Qty
P25	1 pcs	Z1,V3,V1	4 sets
P31	2 pcs	Z8,V3,V1	4 sets


1. Connect P25 to P1 and P4 using Z8, V3 and V1 (4 sets).
2. Connect P31 to P1 and P4, P2 and P3, using Z1, V3 and V1 (4 sets).

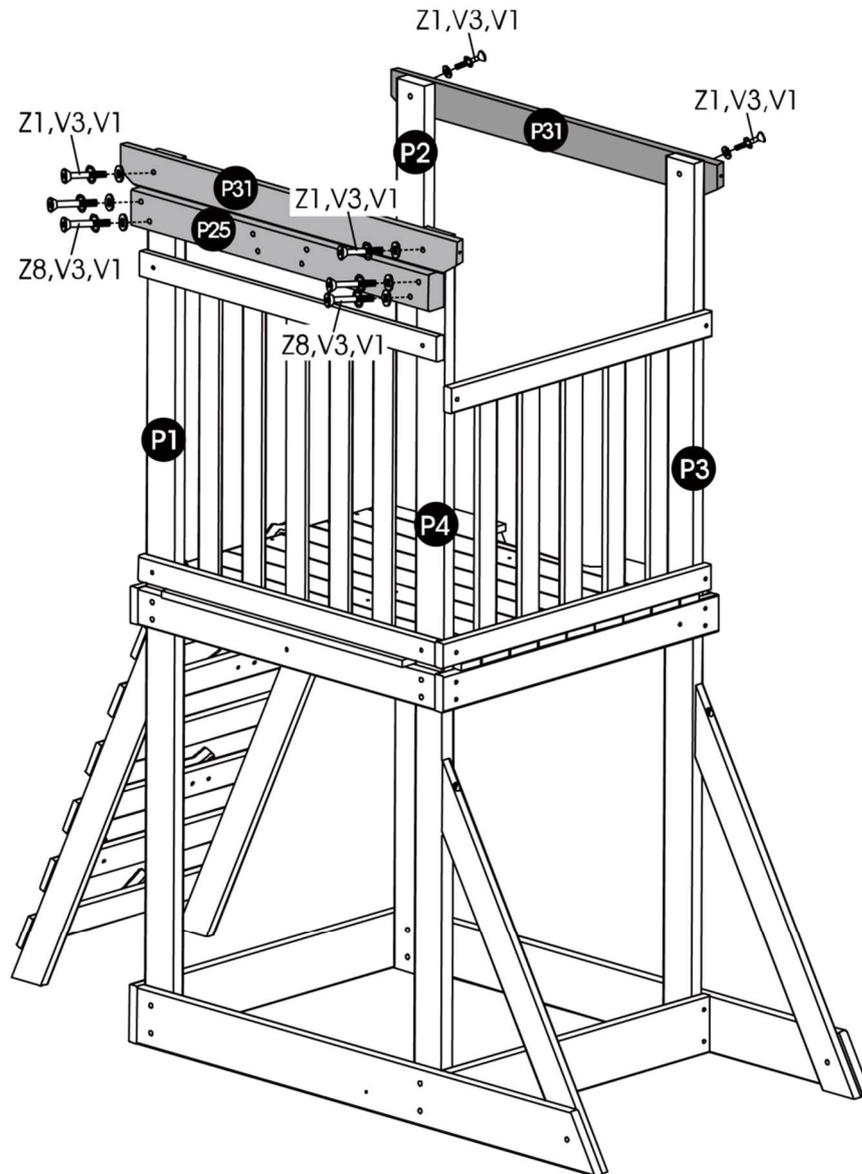

STEP 12

Part#	Qty	Hardware#	Qty
P27	1 pc	Z4	12 pcs
P28	1 pc		
P33	2 pcs		



1. Connect P27 and P28 to P1, P2 and P3, using Z4 (8 pcs).
2. Connect P33 to P31, using Z4 (4 pcs).

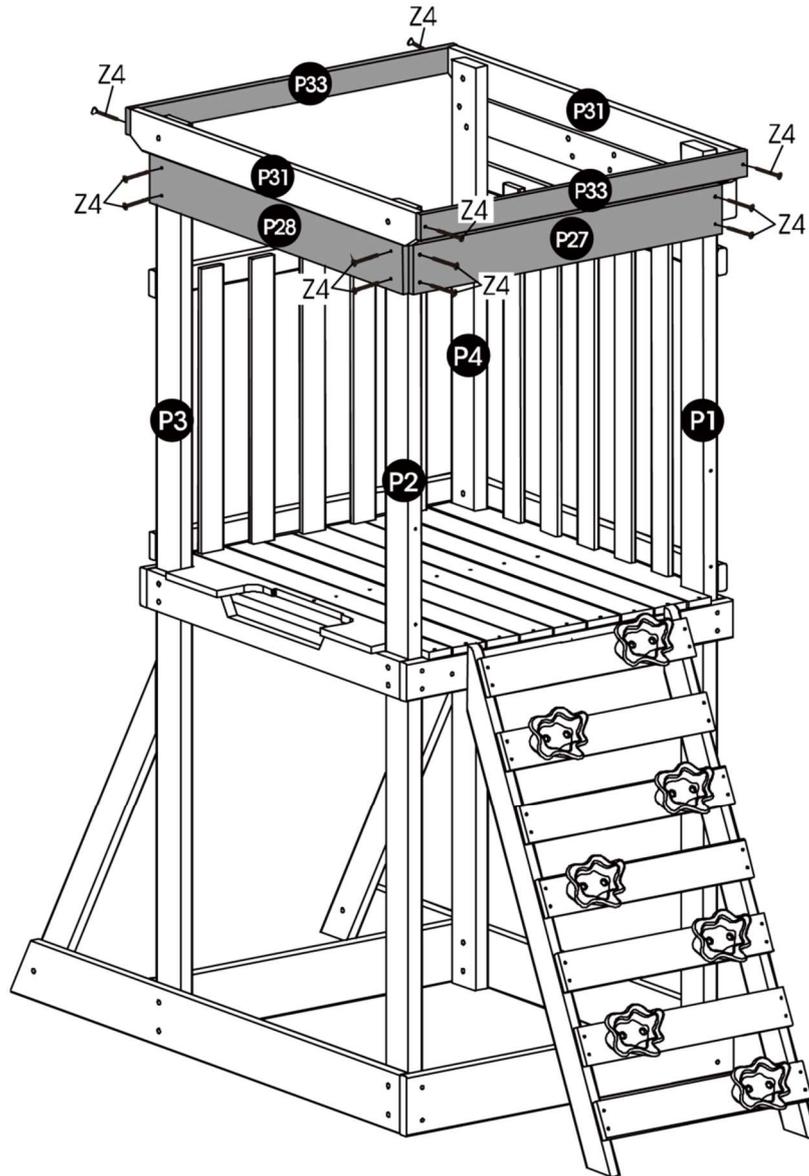

STEP 13

Part#	Qty	Hardware#	Qty
P29	2 pcs	Z6	8 pcs
P30	4 pcs	Z4	4 pcs


1. Connect P30 to P28 from inside, using Z6 (4 pcs).
2. Connect P29 to P17 from inside using Z4 (4 pcs), Connect P30 to P29 using Z6 (4 pcs).

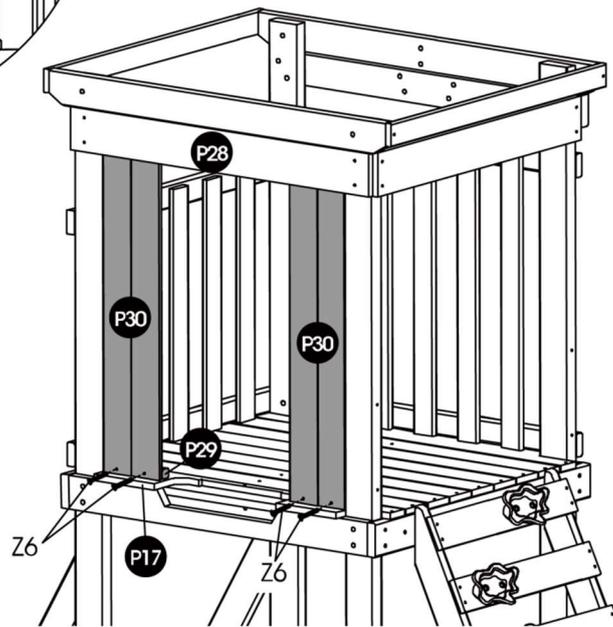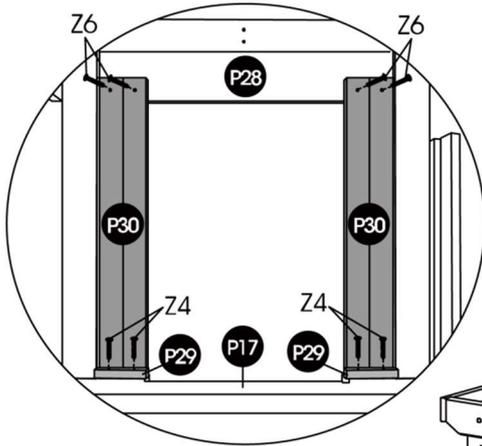

STEP 14

Part#	Qty	Hardware#	Qty
P32	2 pcs	Z4	8 pcs
P34	1 pc		


1. Connect P32 to P31 from inside, using Z4 (6 pcs).
2. Connect P34 to P32 using Z4 (2 pcs).

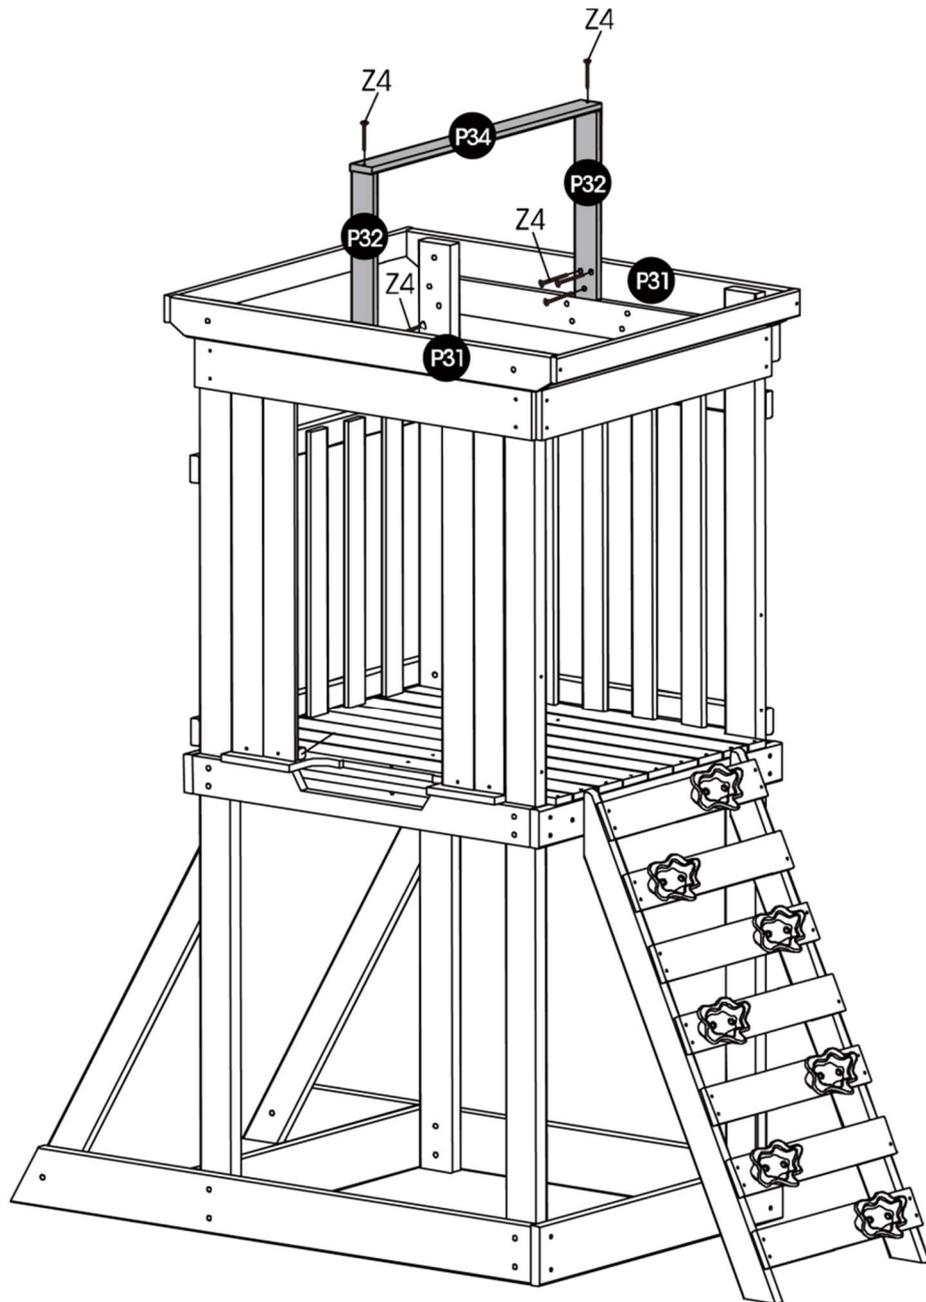

STEP 15

Part#	Qty	Hardware#	Qty
U7	1 pc	Z9	12 pcs


1. Lay U7 over the top of the playhouse.
2. Secure both sides of U7 to P33 using Z9 (12 pcs).

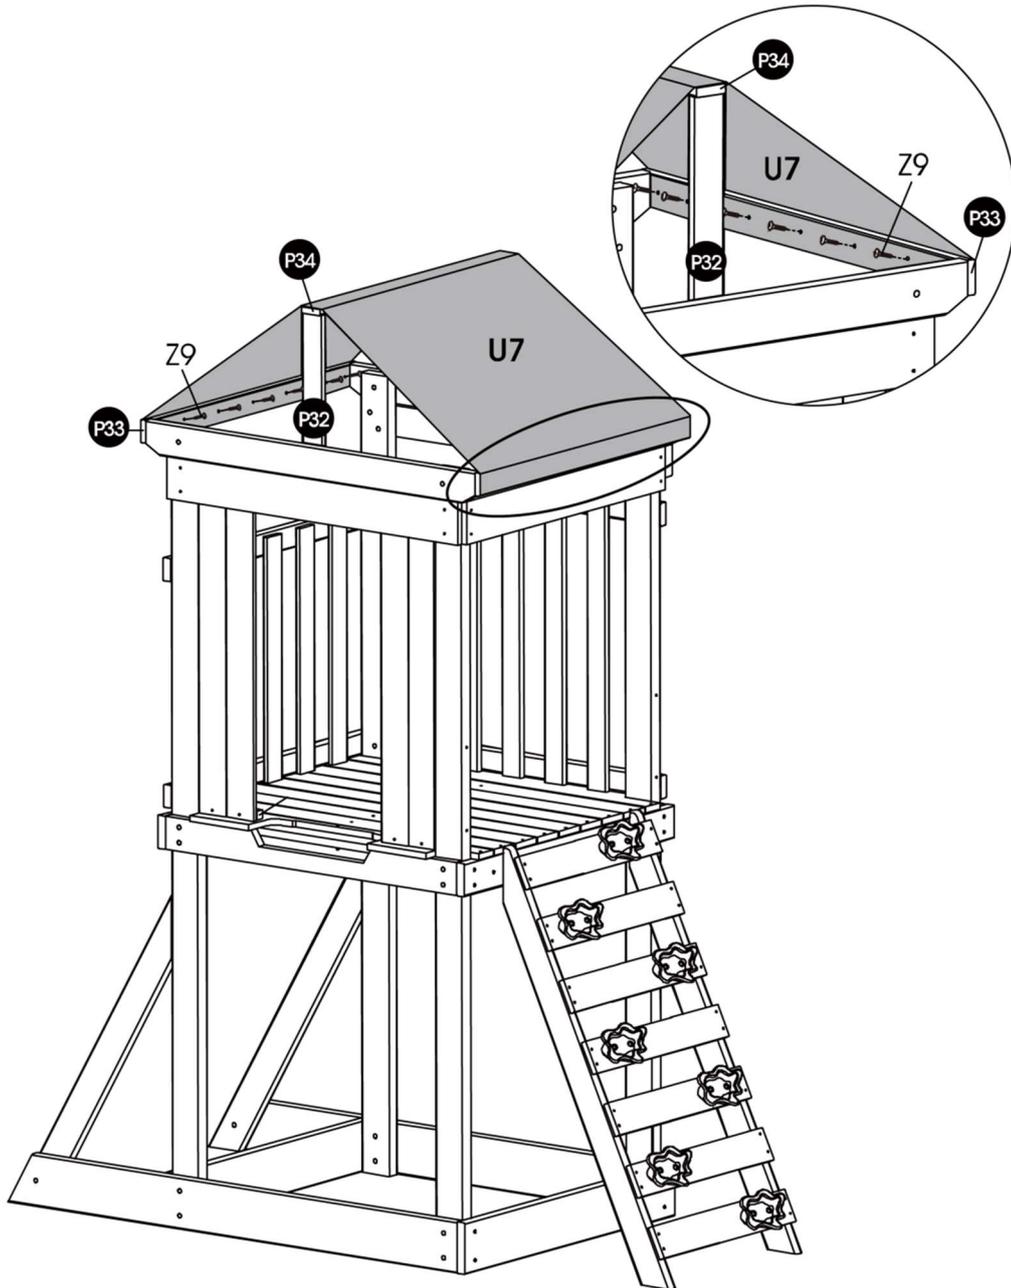

STEP 16

Part#	Qty	Hardware#	Qty
P35	1 pc	Z11,V3,V1	2 sets
P36	1 pc	S3	4 pcs
P37	1 pc	S4	6 pcs
P38	1 pc		
P39	1 pc		


1. Insert Z11, V3 and V1 through P37, P35 and P36 and fasten with V1, V6 on the other end of screw.
2. Connect P38 to P37, P35 and P36, using S4 (6 pcs).
3. Connect P39 to P36 and P37, using S3 (4 pcs).

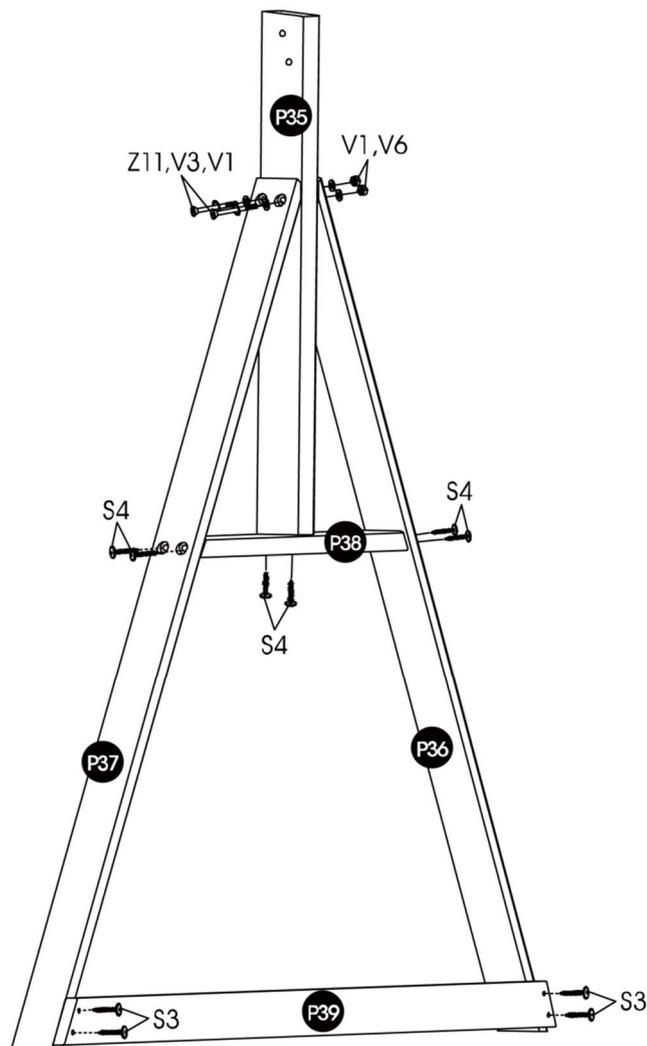

STEP 17

Part#	Qty	Hardware#	Qty
P40	1 pc	Z8,V3,V1,V6	2 sets
U2	2 pcs	V7,V1,V6	4 sets


1. Attach U2 to P40, using Z8, V3, V1 and V6 (2 sets).
2. Attach V7, V1 and V6 to P40 (4 sets).

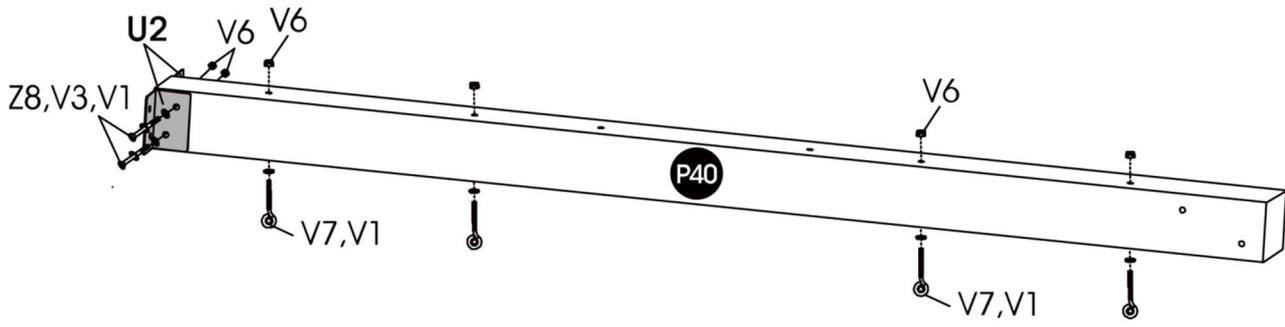

STEP 18

Part#	Qty	Hardware#	Qty
U3	2 pcs	Z10,V3,V1	4 sets
U12	1 pc	Z8,V3,V1,V6	4 sets
		Z6	4 pcs


1. Connect P35 to P40 with U3, using Z8, V3, V1 and V6 (4 sets).
2. Attach U12 from inside to P35 and P40, using Z6 (4 pcs).
3. Attach U2 to P25, using Z10, V3 and V1 (4 sets).

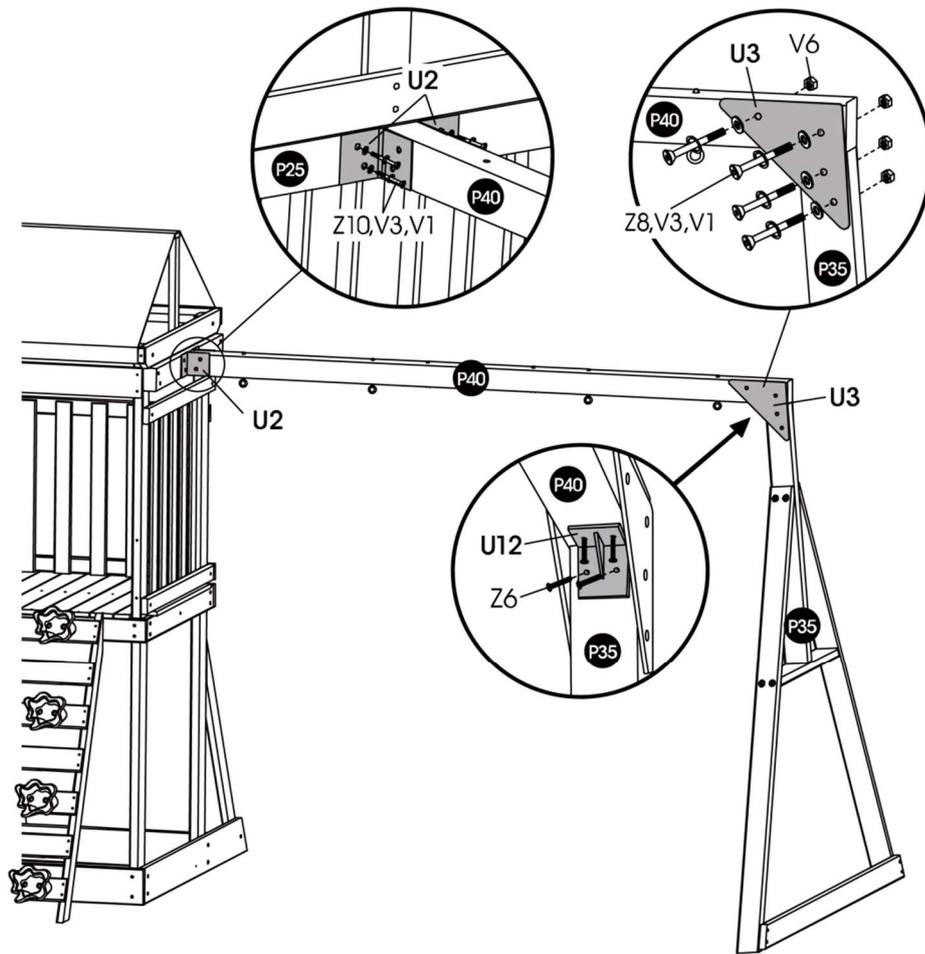

STEP 19

Part#	Qty	Hardware#	Qty
U5	2 pcs		


1. Attach the swing seat (U5) to the frame.

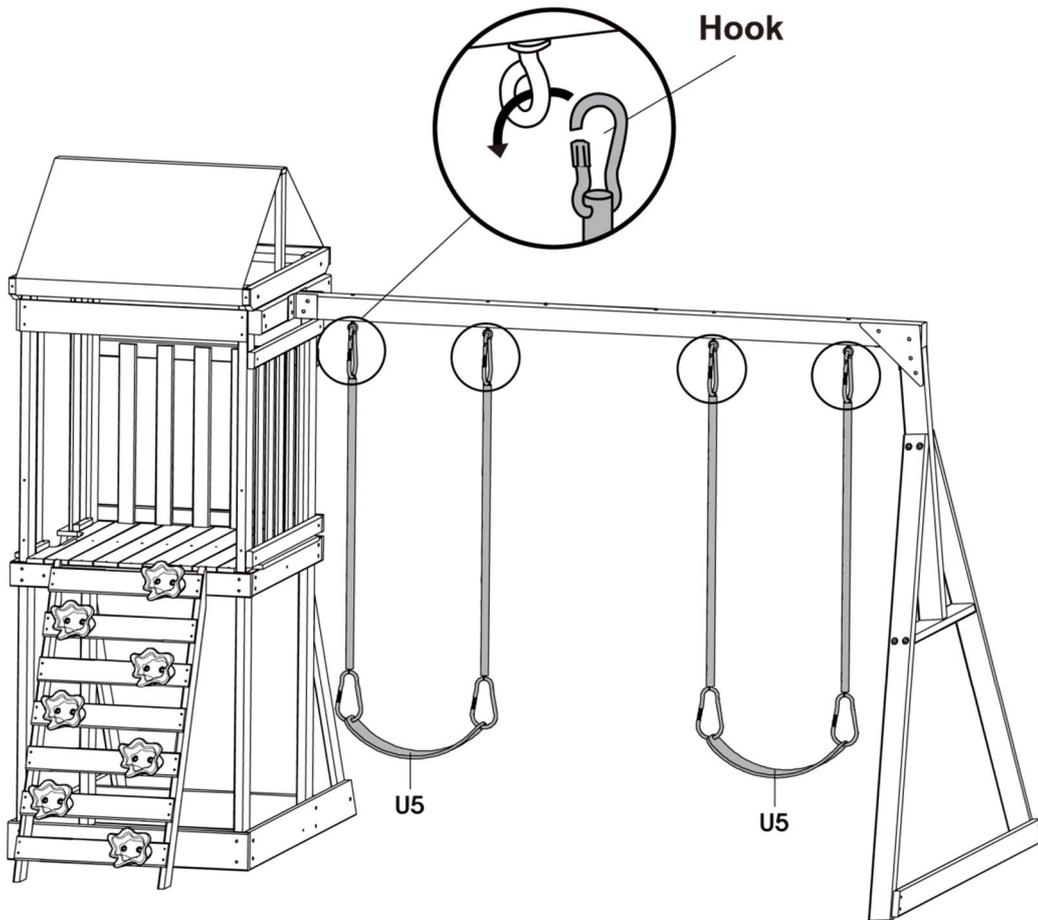

STEP 21

Part#	Qty	Hardware#	Qty
U9	1 pc	Z2,V3,V2	4 sets
U10	1 pc	Z6	8 pcs
U11	2 pcs		

1. Connect U9 to P17 and U1 and Z6 (8 pcs).
2. Connect U10 to U9, using Z2, V3 and V2 (4 sets).

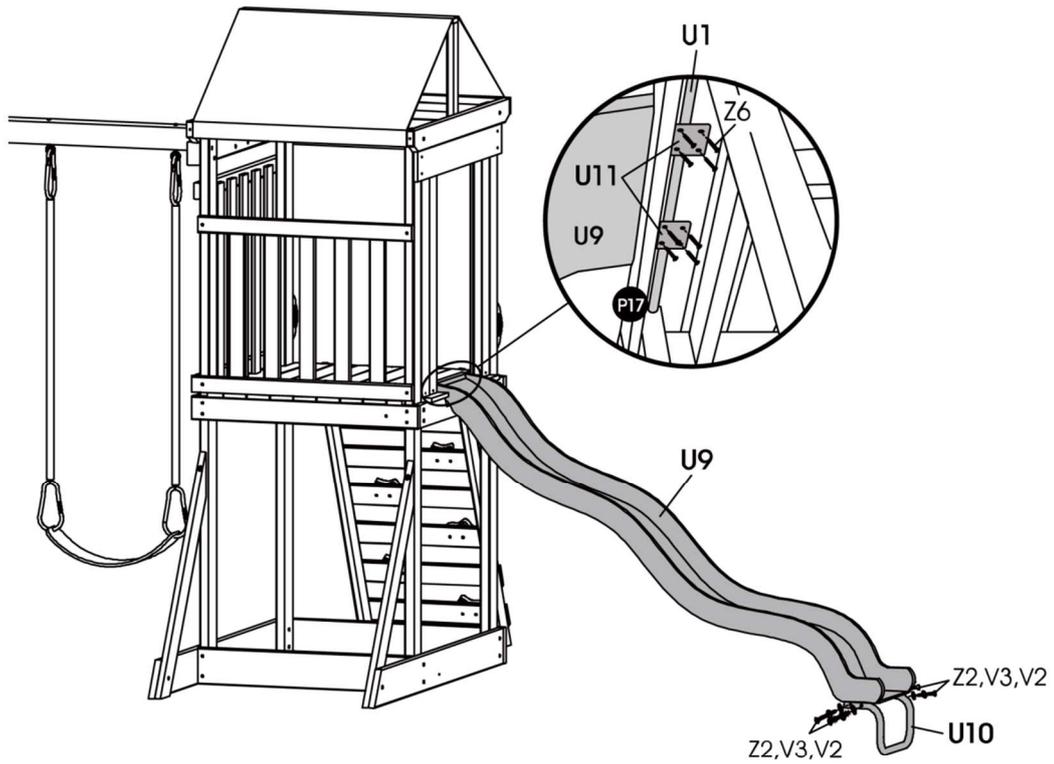


STEP 22

Part#	Qty	Hardware#	Qty
P41	2 pcs	Z13,V3,V1	2 sets

Use P41 as the anchoring stakes for this set.

1. Hammer P41 into the ground and secure it, using Z13, V3 and V1 (2 sets).

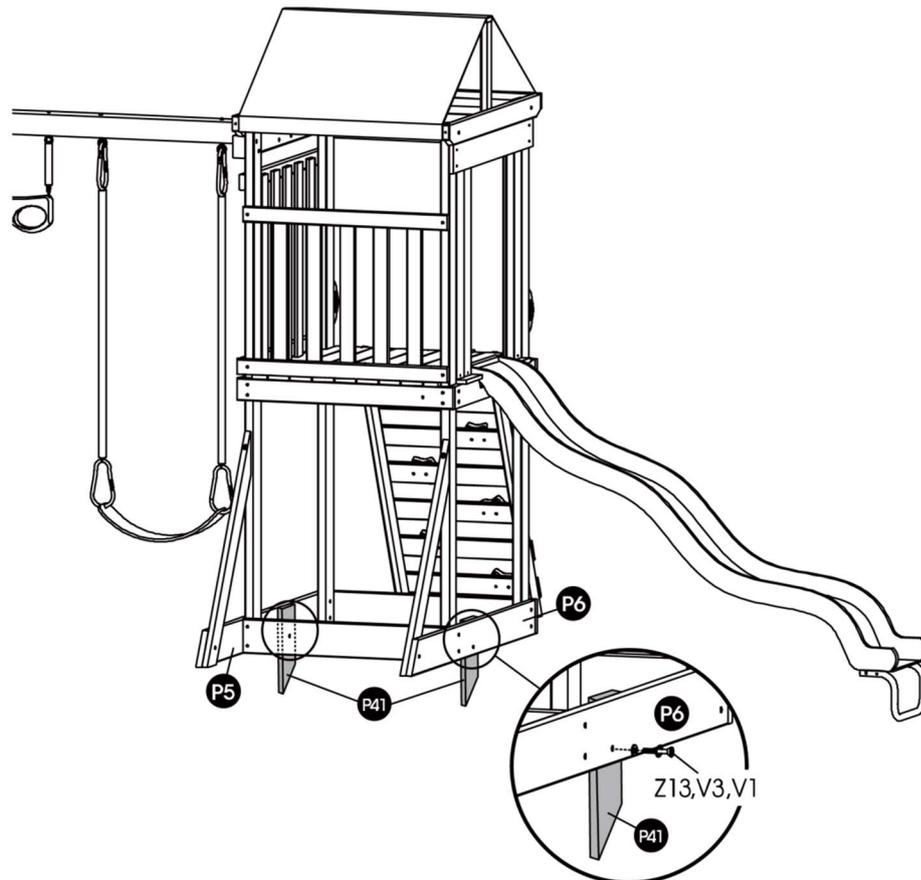

IMPORTANT:

BEFORE ALLOWING CHILDREN TO PLAY ON THE EQUIPMENT, THE ANCHORS PROVIDED MUST BE INSTALLED. ALSO, PLEASE GO OVER THE ENTIRE UNIT AND MAKE SURE ALL SCREWS ARE TIGHTENED ALL THE WAY AND INSPECT THE ENTIRE UNIT TO ENSURE THE EQUIPMENT IS STABLE AND PROPERLY INSTALLED BEFORE ALLOWING CHILDREN TO PLAY.

Helpful Tips

Regularly check play set for wasp's nests before allowing children to use.

It is best practice to coat your play set with a water sealant to extend the longevity of the product.

PRODUCT WARRANTY

This product has been manufactured under the highest standards of quality and workmanship. We warrant to the original consumer purchaser that all aspects of this product will be free of defects in material and workmanship for one year from the date of purchase. A replacement for any defective part will be supplied free of charge for installation by the consumer. Defects or damage caused by the use of other than genuine parts are not covered by this warranty. This warranty shall be effective from the date of purchase as shown in the purchaser receipt.

This warranty is valid for the original consumer purchaser only and excludes industrial, commercial or business use of the product, product damage due to shipment or failure which results from alteration, product abuse, or product misuse, whether performed by a contractor, service company, or consumer. We will not be responsible for labor charges and/or damage incurred in installation, repair or replacement nor for incidental or consequential damage.

SP-26-WP-337NPR-AC-19001