

FOR AGES:

**3-7**

WEIGHT LIMIT:

**150** Lbs  
68 Kgs

TO BUILD:

 x 1

TOOLS NEEDED:




**HOW-TO**  
VIDEOS ONLINE




## WARNING/ADVERTENCIA


- Please read all the instructions before using this product.
- Do not allow more than one person on this product at any time.
- Consult a physician before beginning any exercise program or strenuous activity.
- Adult supervision is required.
- The contents of this package are not suitable for children under 3 years of age. Contains small parts which may cause choking.
- ADULT ASSEMBLY REQUIRED.
- 75 LBS per seat maximum weight rating.

## CUSTOMER SERVICE

 GQBrands.com

 CustomerService@GQBrands.com

 1-866-498-5269

 4401 Samuell Blvd, Ste 150  
Mesquite, TX 75149

# CUSTOMER SERVICE INFORMATION

---

## Thank you for purchasing: **KIDS ROCKER SEESAW**

MODEL# 9306RS

At Global Quality Brands®, we want all of our customers to be completely satisfied with their purchase. Please take time to review the contents of the product you have just received to make sure that all of the parts are included. If you find that any parts are missing or damaged, we will happily provide replacement parts at no charge within 30 days of purchase.

Please keep in mind that for select damaged part replacement requests, we will require a photo for submission.

If you request replacement parts, please be sure to include the following information in your correspondence:

To order these parts, or if you have any other questions or concerns about this GQ Brands product, please contact us at

PureFun.net  
Global Quality Brands®  
Phone: 1-866-498-5269  
Email: customerservice@gqbrands.com  
4401 Samuell Blvd, Ste 150  
Mesquite, TX 75149

**Sincerely,**  
Customer Service

**YOUR NAME:**

**YOUR MAILING ADDRESS:**

**YOUR EMAIL ADDRESS:**

**PRODUCT NAME:**

**PRODUCT MODEL #:**

**PART #** (Located In Manual)

**RETAILER WHERE YOU PURCHASED PRODUCT:**

**DATE OF PURCHASE:**

**ORDER #** (If Available)

**SERIAL#:**

**QUANTITY NEEDED:**

**PICTURE OF DAMAGED PART(s)** SUBMIT VIA Email, Fax, or Mail

# LIMITED WARRANTY

---

Global Quality Brands® warrants this product to be free from defects in workmanship and materials under normal use and conditions for a period of 90 DAYS FROM THE DATE OF ORIGINAL PURCHASE. This Limited Warranty is not transferable and is available only for the original purchaser of the Product. The Company's obligation under this warranty is limited to replacing or repairing the Product, at the discretion of the company.

All warranty coverage extends only to the original retail purchaser from the date of purchase, GQ Brands obligation under this warranty is limited to replacing or repairing, at Global Quality Brands® option. All products for which a warranty claim is made must be received by Global Quality Brands® and accompanied by sufficient proof of purchase (photocopy of the original store receipt, indicating the date of purchase). All freight and handling fees are the responsibility of the consumer to pay, both to and from Global Quality Brands®. All warranty claims must be preauthorized by Global Quality Brands® pre-authorization can be obtained by calling 866-498-5269.

This warranty does not cover ordinary wear and tear, weathering, failure to follow directions, improper installation, improper maintenance, or acts of nature, (such as damage caused by wind, lightning, snow, water, or ice) weather damage, damage caused by unauthorized repair work or damage caused by improper use of the products are not covered by the product warranty. No other warranty beyond that specifically set forth above is authorized by GQBrands®.

GLOBAL QUALITY BRANDS® IS NOT RESPONSIBLE OR LIABLE FOR INDIRECT, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THE PRODUCT OR OTHER DAMAGES WITH RESPECT TO ANY ECONOMIC LOSS, LOSS OF PROPERTY, LOSS OF REVENUE OR PROFITS, LOSS OF ENJOYMENT OR USE, COST OF REMOVAL, INSTALLATION OR OTHER CONSEQUENTIAL DAMAGES. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. ACCORDINGLY, THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THE WARRANTY EXTENDED HEREUNDER IS IN LIEU OF ALL OTHER WARRANTIES AND GLOBAL QUALITY BRANDS®, SPECIFICALLY DISCLAIMS ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE IS LIMITED IN ITS SCOPE AND DURATION TO THE TERMS SET FORTH HEREIN. SOME STATES DO NOT ALLOW LIMITATION ON HOW LONG AN IMPLIED WARRANTY LASTS. ACCORDINGLY, THE ABOVE LIMITATION MAY NO APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.

WHILE EVERY ATTEMPT IS MADE TO ENSURE THE HIGHEST DEGREE OF PROTECTION IN ALL EQUIPMENT, WE CANNOT GUARANTEE FREEDOM OF INJURY. THE USER ASSUMES ALL RISK OF INJURY DUE TO USE. ALL MERCHANDISE IS SOLD ON THIS CONDITION, WHICH NO REPRESENTATIVE OF GQ BRANDS® CAN WAIVE OR CHANGE.



# **IMPORTANT MESSAGE**

**WARNING - PLEASE READ**

**ADULT ASSEMBLY REQUIRED**

**CHOKING HAZARD - Small Parts**

**NOT** for children under 3 years of age.

## **WARNING:**

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risks of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

# WARNINGS


## Please read these warnings and the information in this manual in its entirety.

Failure to comply with the following instructions may increase the risk of serious injury and/or death:


- 
- Please read these warnings and the information in this manual in its entirety. Failure to comply with the following instructions may increase the risk of serious injury and/or death:
  - This unit must be assembled and disassembled by ADULTS ONLY.
  - This Rocker Seesaw is suitable for use by most children 3 to 7 YEARS OF AGE.
  - DO NOT exceed the MAXIMUM WEIGHT limit per seat of 75lbs (34kgs), regardless of age.
  - DO NOT install this equipment over concrete, asphalt, or any other hard or rough surface. The Rocker Seesaw should always be installed over an appropriate, stable surface (rubber mat, grass, etc).
  - ALWAYS locate this equipment on a stable, level surface AT LEAST 7 feet away from any structure, obstruction, or possible hazard(s) such as walls, pools, power lines, overhangs, other playground equipment, driveways, hard surfaces and/or roadways.
  - Children must be supervised at all times when using this equipment. DO NOT leave children unattended at any time.
  - DO NOT attach items to the Rocker Seesaw not specifically designed for this purpose. Especially in the case of jump ropes, chains, clotheslines, pet leashes and cables.
  - These may cause a strangulation or physical hazard.
  - This Rocker Seesaw is NOT for adult or adolescent use.
  - This Rocker Seesaw is only designed for family residential use. It is NOT intended for commercial applications and/or use in public areas such as schools, parks, nurseries, day schools, day cares, etc.
  - DO NOT allow more than one child per seat on the Rocker Seesaw and/or Rocker at a time.
  - Instruct children to always be sure that the ground underneath the seesaw is clear of any persons, pets or obstructions before using.
  - DO NOT allow children to wear glasses or helmets when using the Rocker Seesaw.
  - Small children must be assisted by an adult in mounting and dismounting the seesaw seats.
  - DO NOT allow children to wear loose fitting clothing, clothing with straps/ loops, backpacks or wear and/or hold accessories with straps or loops, or any article of clothing or accessory with sharp edges which may present a hazard or become snagged or caught on the Rocker Seesaw during use. Serious injury and/or accidental strangulation may occur.
  - DO NOT allow people and pets to stand or sit in or near the Rocker Seesaw play area when the item is in motion.
  - DO NOT allow children to climb or hang from the steel tubing – this can cause serious injury.
  - This product is not to be used in conjunction with pools, spas, or other bodies of water.
  - Children must ALWAYS remain securely seated, firmly grasping the handrails, and in the forward facing position when rocking. Do not lay down, rock while standing, or sit backwards on the seats.
  - DO NOT use in adverse weather conditions, while the seats are wet, or in poorly lit conditions.
  - ALWAYS secure the Rocker Seesaw against unauthorized and unsupervised use.
  - ALWAYS wear the appropriate footwear (i.e. closed toe shoes) when using the Rocker Seesaw.
  - Before each use of this product, inspect and replace any worn, defective or missing parts. Although the Rocker Seesaw is made to take a lot of wear, over time parts may need to be replaced. It is important to check the Rocker Seesaw to ensure the Frame, Seats and Handrails are steady and all parts are in good condition. If any loose, cracked, missing, or otherwise damaged components are found, cease use of this item immediately and secure it from unauthorized use until the issue has been corrected and/or replacement parts obtained.
  - Please read and refer to other warnings and use information in the Rocker Seesaw instructions before use.
  - Dispose of all packaging materials safely and per local ordinance.
- 
- Please visit: [www.PureFun.net](http://www.PureFun.net) for any important product information updates and/or additional safety warnings before assembling or using this product.
  - When you are ready to start, make sure that you have the correct tools at hand, and adequate space for assembly. Please refer to the table for part descriptions and numbers.
  - Use gloves to protect against pinch points during assembly.
  - Enclosed are the current specifications and product features available at time of printing, however, changes may be made in equipment, availability, specifications and features without notice.
  - The assembly instruction uses these descriptions and numbers as reference. Make sure you have all parts listed. If you are missing any parts
-

# PARTS LIST


1- Base Rails

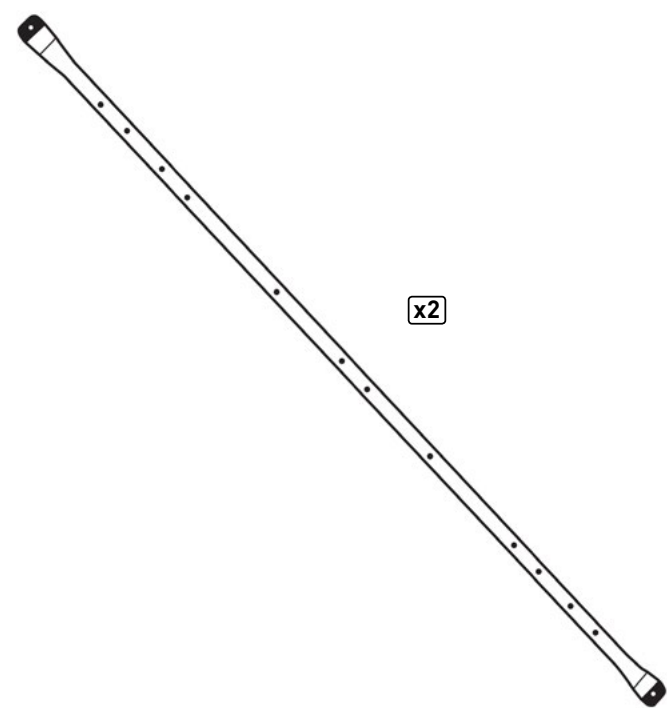


2- Foam Rocker Bar

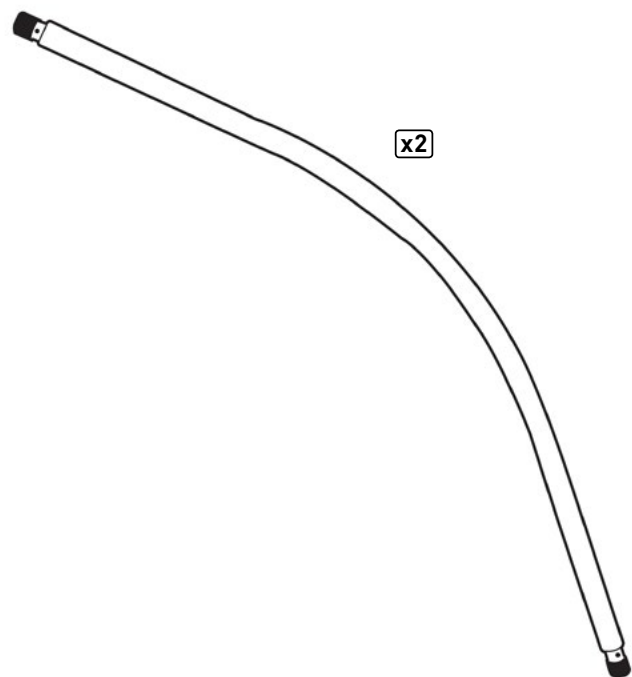

3 - Handle Tube

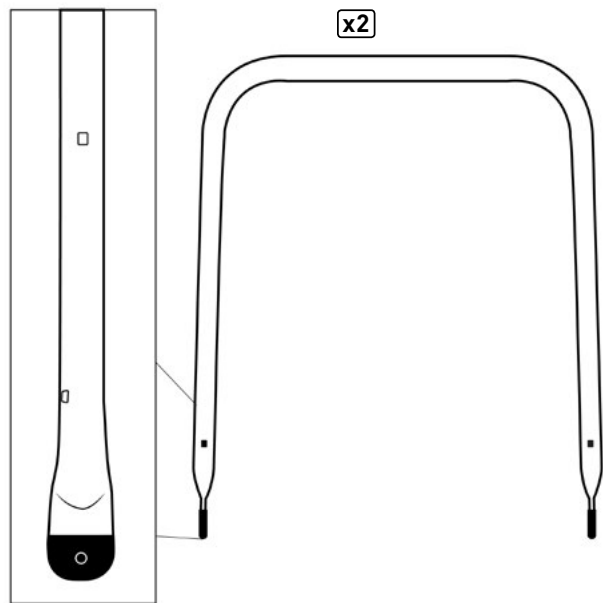


4 - Backrest

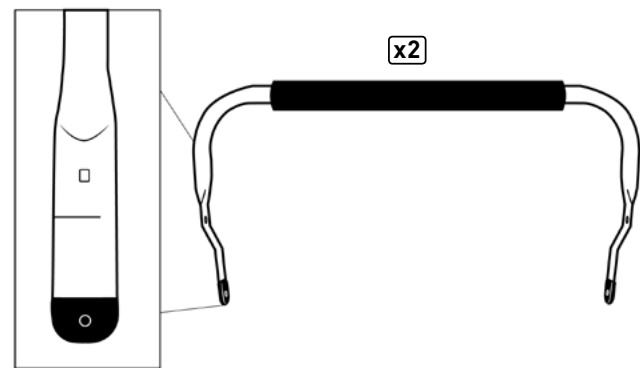


# PARTS LIST


5 - Footrest Tube

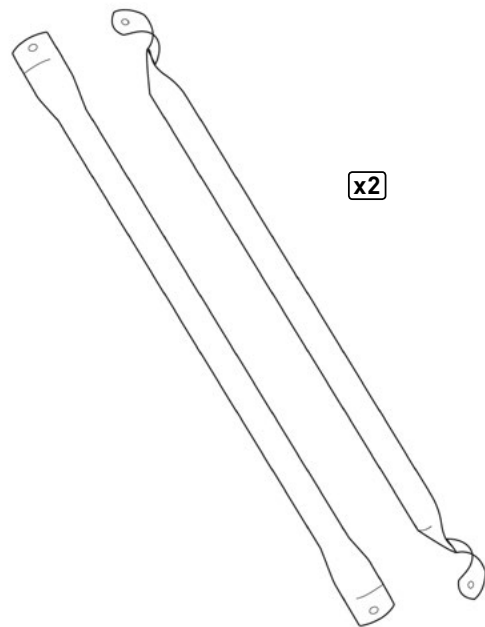

6 - Seats

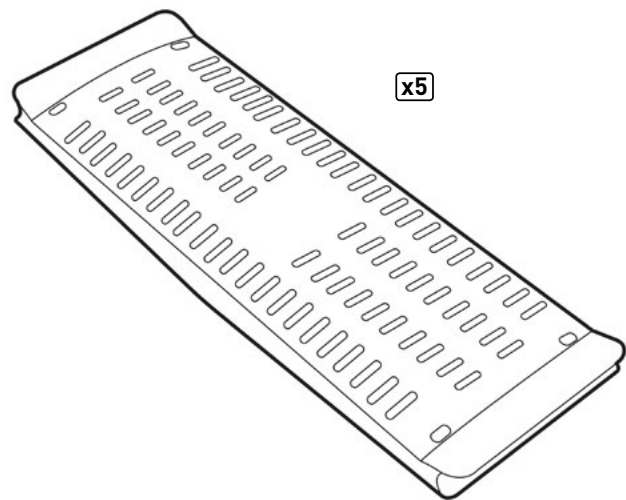


7 - M6 45mm Bolt

 

8 - M6 40mm Bolt



 9 - M6 50mm Bolt



10 - Square Nuts



11 - Hex Nut



12 - Washer



13 - Safety Caps



14 - Flat Cap (Large)




15 - Flat Cap (Small)



16 - Round Cap



# ASSEMBLY INSTRUCTIONS

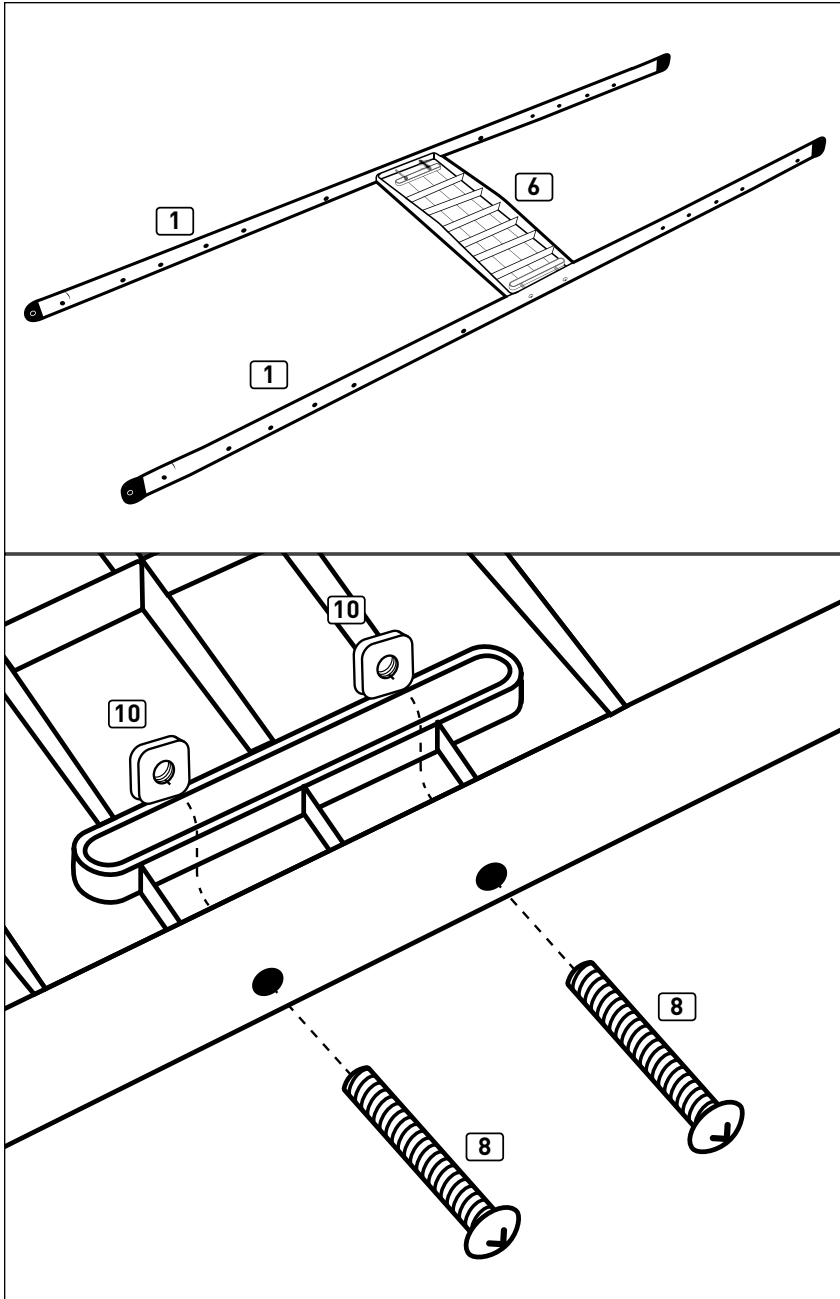

## STEP 1:

### Parts:

Part 1 (x2) - Base Rails

Part 6 (x1) - Seat

Place both Base Rails (Part 1) in a flat surface free of obstructions. Place 1x Seat (Part 6) with the flat surface facing the floor and align the side openings to the middle openings of the Base Rails.

## STEP 2:

### Parts:

Part 10 (x4) - Square Nuts


Part 8 (x4) - M6 40mm Bolt

Place the Square Nuts (Part 10) at the end gaps of the Seat openings, and secure with a M6 40mm Bolt (Part 8) aligned by the Base Rail and Seat openings.

### NOTE:

Push the Bolt all the way until it aligns with the opening of the Square Nut. Tightening clockwise will help the Square Nut reach the end of the Seat gap.



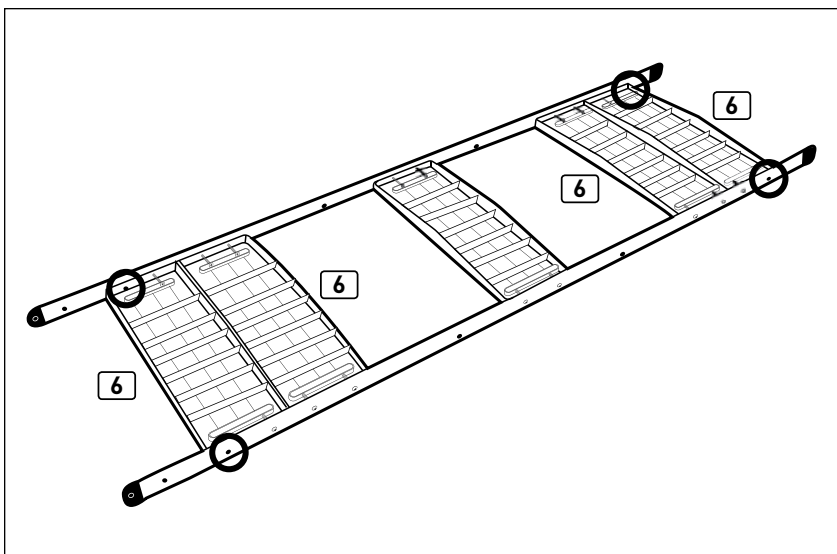

### STEP 3:

#### Parts:


- Part 6 (x4) - Seats
- Part 10 (x12) - Square Nuts
- Part 8 (x12) - M6 40mm Bolt

Place the remainder of the Seats at the end of the Base Rails with the flat surface of the Seats facing the floor. Place 2x on each side as shown. Align the side openings to the corresponding Base Rails opening.


Place the Square Nuts (Part 10) at the end gaps of the Seat openings, and secure with a M6 40mm Bolt (Part 8) aligned by the Base Rail and Seat openings.

#### NOTE:

When Installing the Seats to the Base Rails, do not install to the 4 locations circled as shown. These are reserved to install the Handle Bars in **Step 12**.

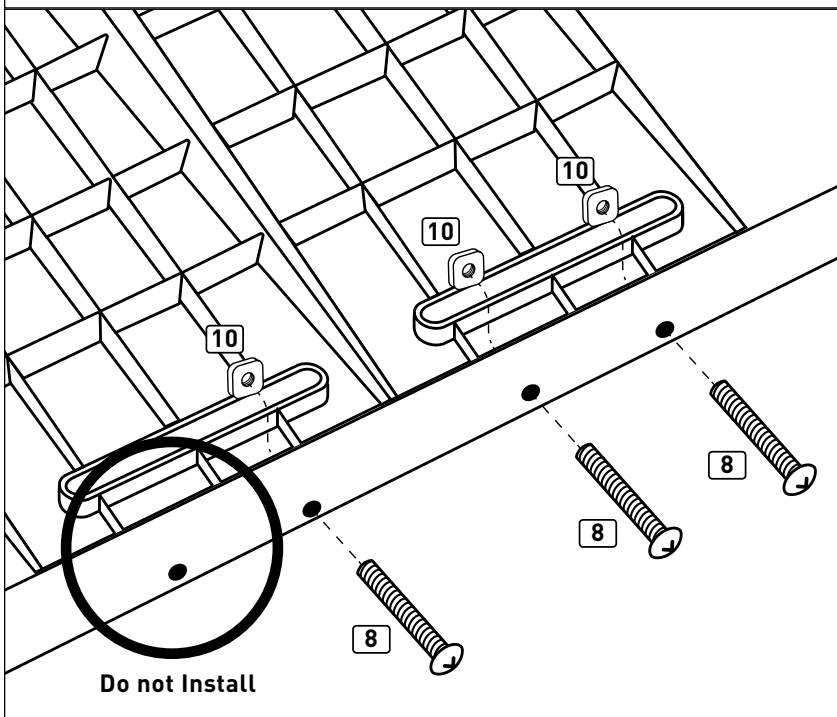

# ASSEMBLY INSTRUCTIONS

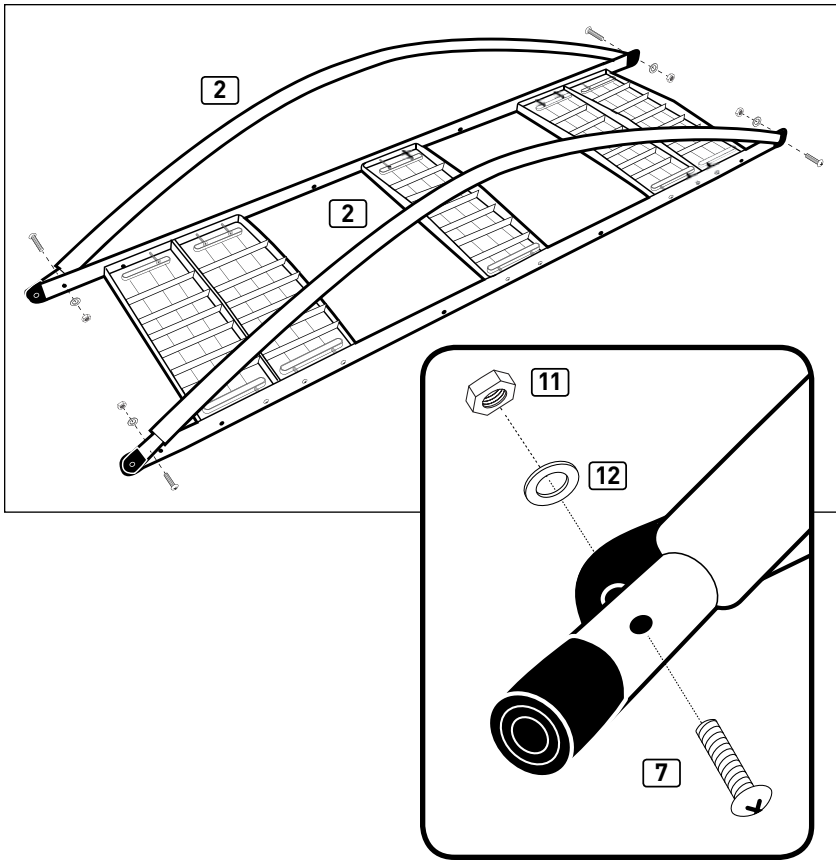

## STEP 4:


### Parts:

- Part 2 (x2) - Foam Rocker Bar
- Part 7 (x4) - M6 45mm Bolt
- Part 11 (x4) - Hex nut
- Part 12 (x4) - Washer

Place the Foam Rocker Bars (Part 2) on the outside of the Base Rails facing away from the Seats.

Align the opening of the tip of the Base Rails to the opening under the Round Cap of the Foam Rocker Bars.

Tighten with a M6 45mm Bolt (Part 7), Hex Nut (Part 11), and Washer (Part 12).

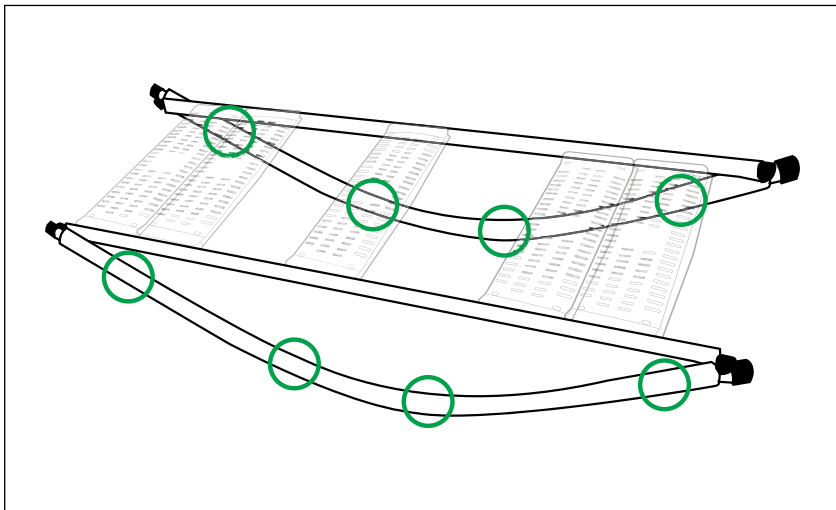

## STEP 5:

Inside the Foam Rocker Bars, there are 8 indent locations as shown. You can find them when pressed.

Once you have found the indent, using a sharp Knife, cut a slit in that location to reveal the opening on the Bar itself.

### ⚠ WARNING!

Cutting the slits on the Foam Rocker Bar must be done by an adult **(+18 Years)**. For more information, review The Warning and Safety instructions on **Page 5**.

# ASSEMBLY INSTRUCTIONS

## STEP 6:


### Parts:

- Part 3 (x2) - Handle Tube
- Part 5 (x2) - Footrest Tube
- Part 8 (x4) - M6 40mm Bolt
- Part 11 (x4) - Hex Nut
- Part 12 (x4) - Washer


Locate the middle openings in the Handle Tube (Part 3), and align to the openings at the tips of the Footrest Tube (Part 5).

Tighten with a M6 40mm Bolt (Part 8), Hex Nut (Part 11), and Washer (Part 12).

Repeat until you have 2x completed Handle Tubes with the Footrest Tubes installed.

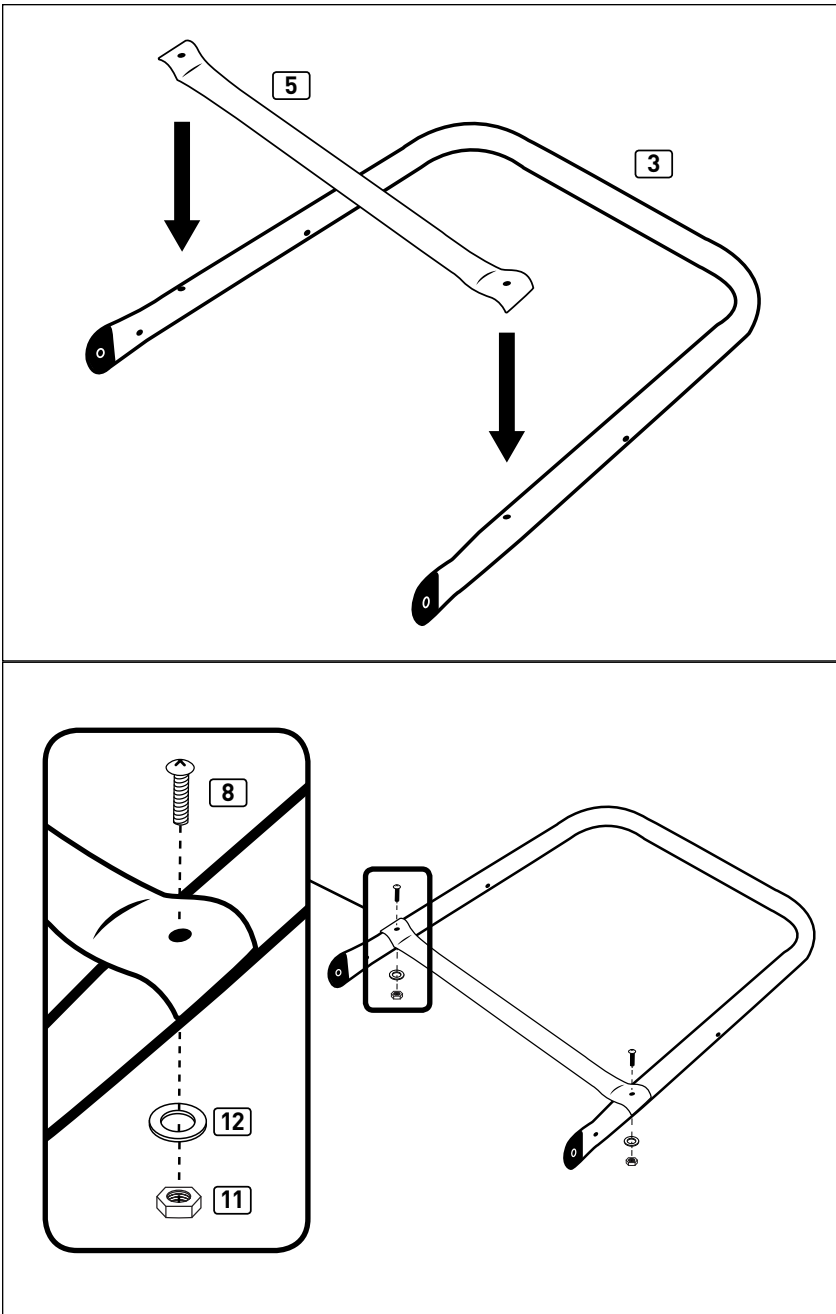


# ASSEMBLY INSTRUCTIONS

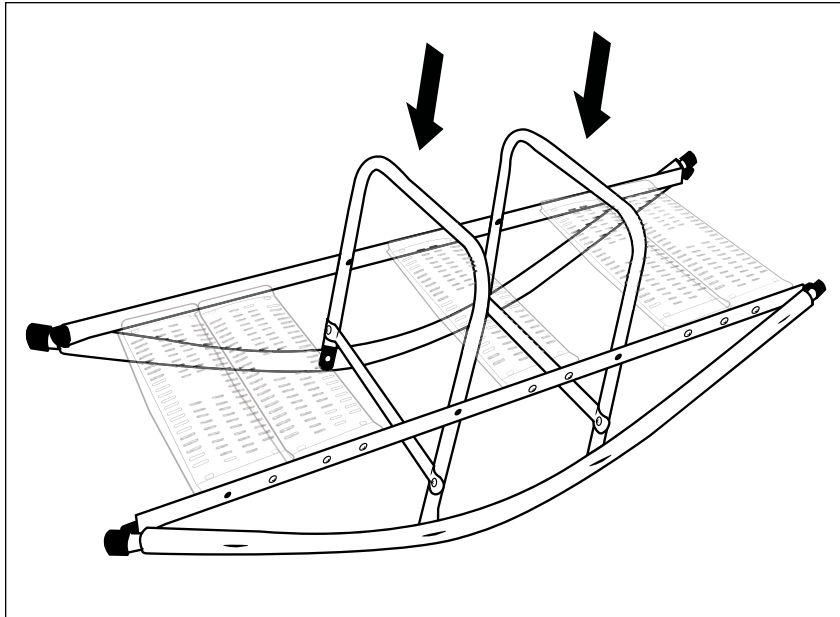

## STEP 7:

Insert the Assembled Handles on the inside of the Seesaw.

Align the upper openings of the Handle Tubes to the Base Rails, and bottom openings to the Foam Rocker Bars

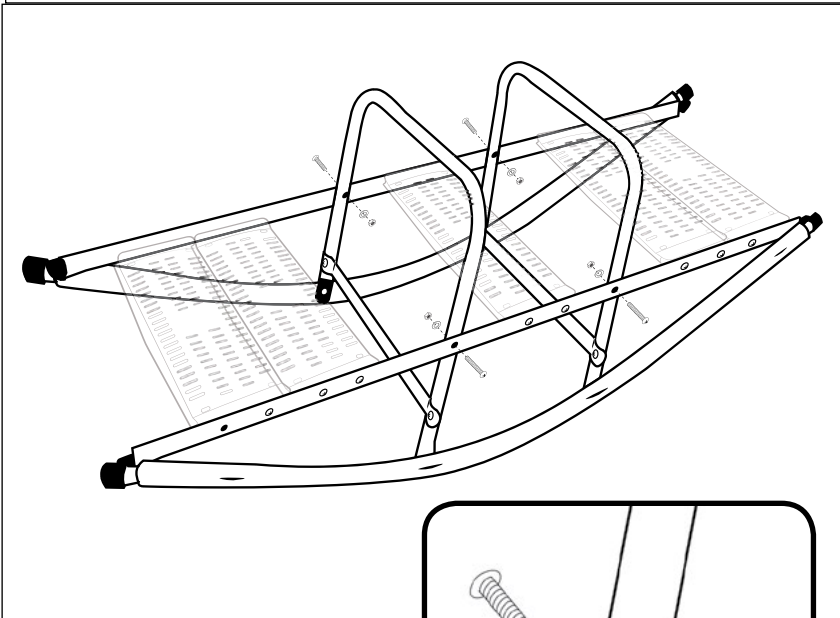

## STEP 8:

### Parts:


- Part 9 (x4) - M6 50mm Bolt
- Part 11 (x4) - Hex nut
- Part 12 (x4) - Washer


Locate the aligned middle openings in the Handle Bar.

Tighten with a M6 50mm Bolt (Part 9), Hex Nut (Part 11), and Washer (Part 12).

### NOTE:

Make sure the head of the Bolts are facing the outside of the Seesaw to avoid scratches or scrapes when in use.

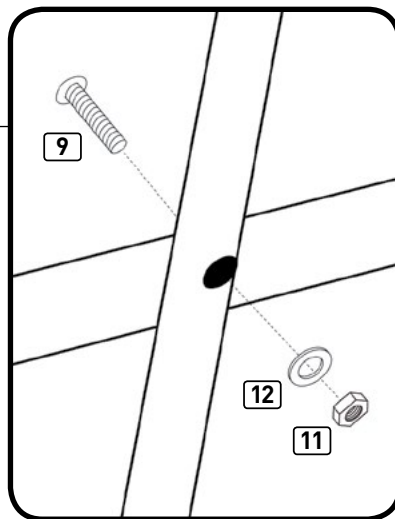

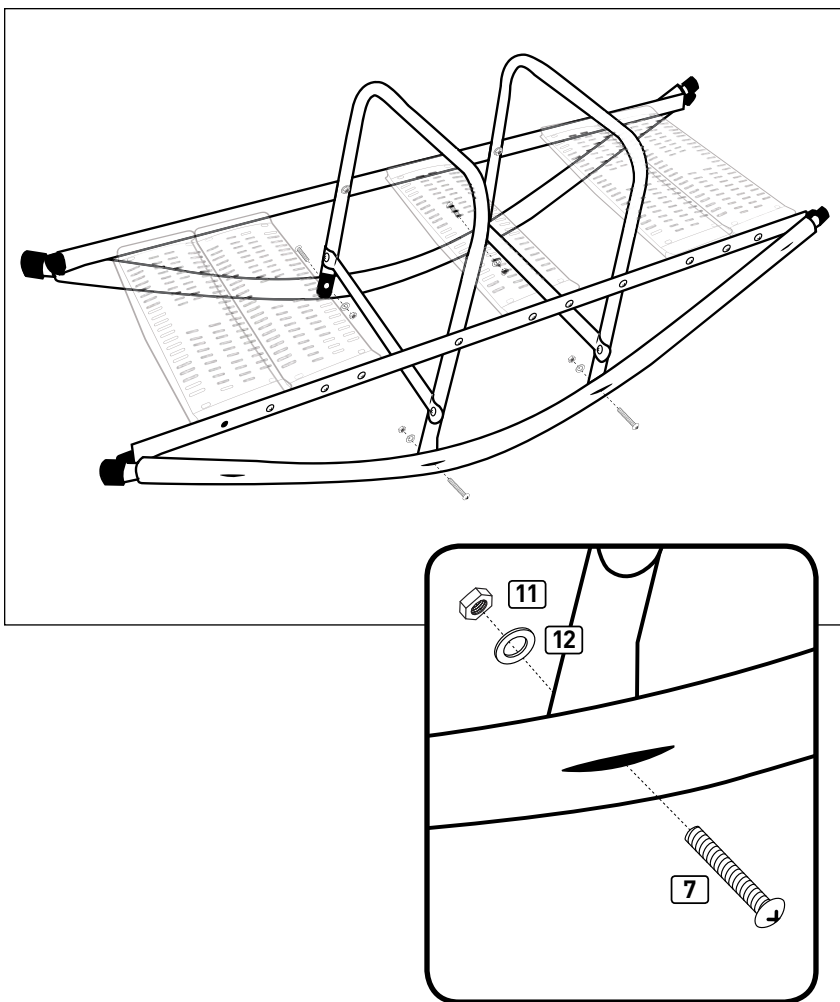

#### STEP 9:

##### Parts:

- Part 7 (x4) - M6 45mm Bolt
- Part 11 (x4) - Hex nut
- Part 12 (x4) - Washer


Locate the aligned bottom openings in the Handle Bar.

Tighten with a M6 45mm Bolt (Part 7), Hex Nut (Part 11), and Washer (Part 12).

Hide the head of the Bolt under the foam of the Foam Rock Bars.

##### NOTE:

Make sure the head of the Bolts are facing the outside of the Seesaw to avoid scratches or scrapes when in use.

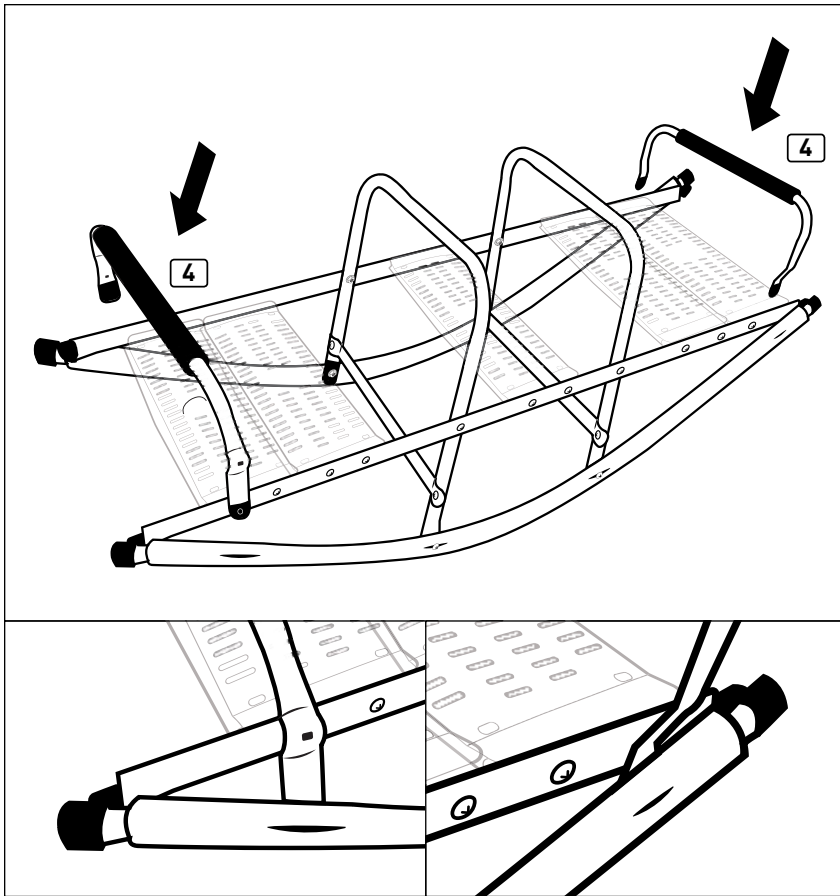


#### STEP 10:

##### Parts:

Part 4 (x2) - Backrest

Insert the Backrest (Part 4) from the outside of the Base Rails and slide the tips on the inside of the Rocker Seesaw.

Align the openings of the tips to the Foam Rocker Bars, and the middle openings to the Base Rails.

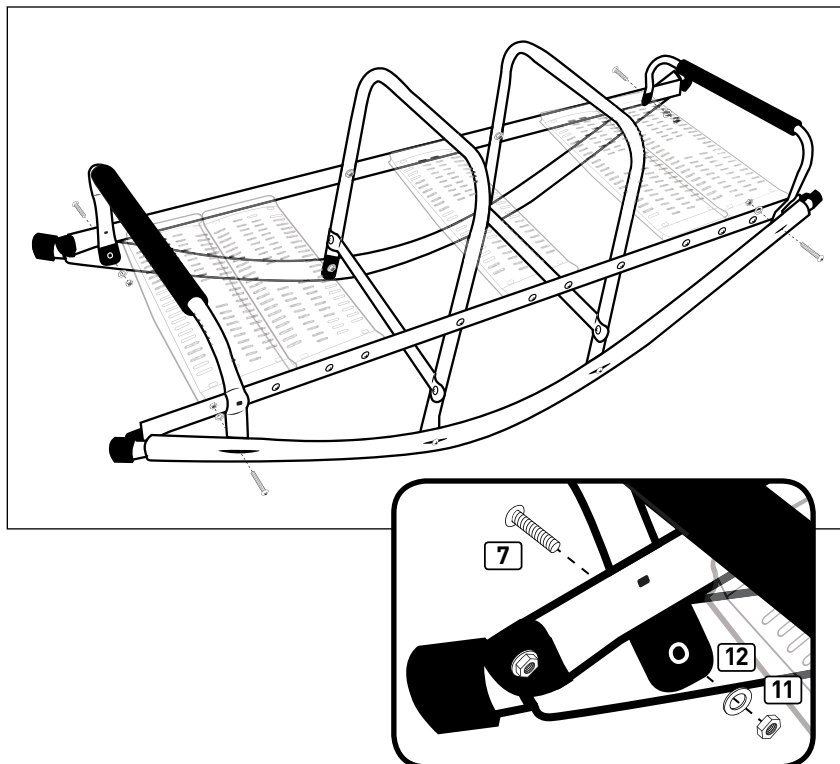

#### STEP 11:

##### Parts:

Part 7 (x4) - M6 45mm Bolt

Part 11 (x4) - Hex nut


Part 12 (x4) - Washer

Tighten with a M6 45mm Bolt (Part 7), Hex Nut (Part 11), and Washer (Part 12).

Hide the head of the Bolt under the foam of the Foam Rock Bars.

##### NOTE:

Make sure the head of the Bolts are facing the outside of the Seesaw to avoid scratches or scrapes when in use.

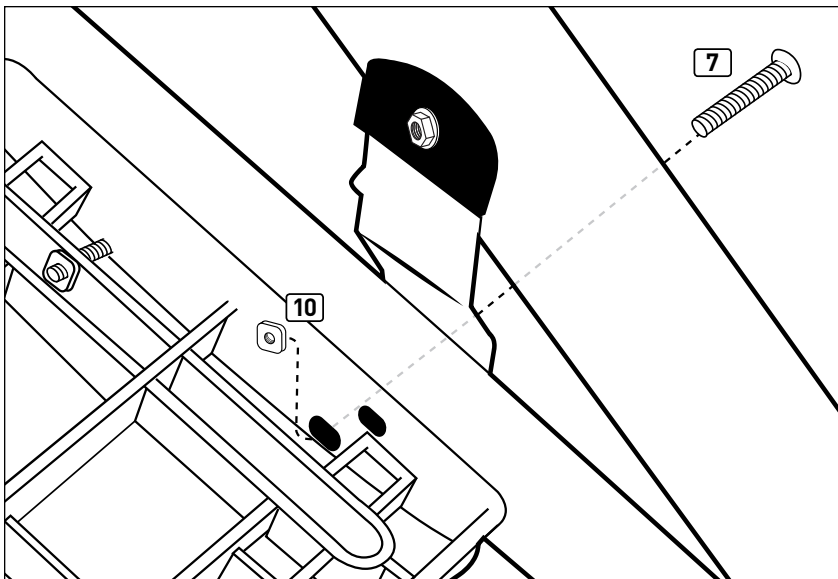

#### STEP 12:


##### Parts:

Part 7 (x4) - M6 45mm Bolt

Part 10 (x4) - Square Nuts

Flip the Rocker Seesaw over to install the Seats into the Base Rail and Backrests.

Place the Square Nuts (Part 10) at the end gaps of the Seat openings, and secure with a M6 38mm Bolt (Part 8A) aligned by the Base Rail, Backrest, and Seat openings.

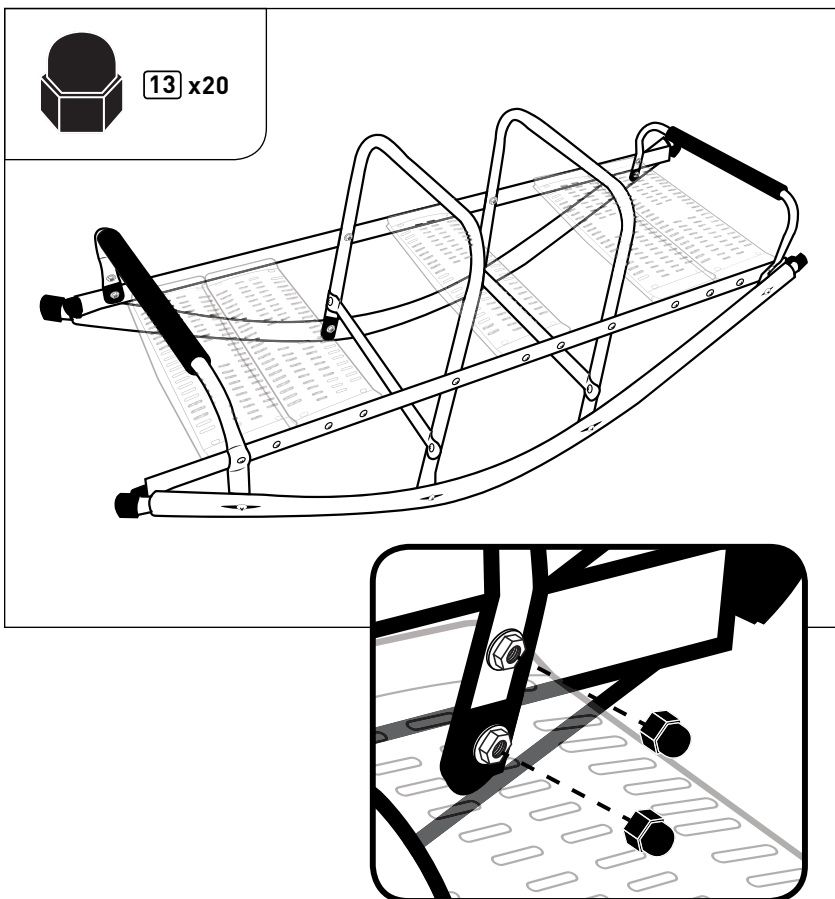

#### STEP 13:

##### Parts:

Part 13 (x20) - Safety Caps

Use the Safety Caps (Part 13) to hide any excess from the Bolts.

##### NOTE:

Failure to use the Safety may cause scratches, scrapes, or injury while when product is in use.

# FREQUENTLY ASKED QUESTIONS

---

- Question: "How should I clean my seesaw?"

Answer: you should clean the Seesaw with a solution of warm water and Non-Corrosive/Abrasive soap. Dampen a rag with this solution and wipe completely dry before using.

- Question: "Is there any maintenance I need to do for my seesaw?"

Answer: you should always double check to make sure all your bolts are tight and secure, and that seats are securely in place before use.

- Question: "A seat seems loose, what should I do?"

Answer: Make sure the Bolts/Nuts under the plastic seat are secure.

- Question: "Something was missing from the packaging," "I need to purchase a replacement part" or "I discovered a damaged piece. What should I do?"

Answer: Contact customer service. You must have proof of purchase and/or order confirmation available to be considered for warranty replacement. You must report missing pieces within 30 days of purchase.

## CARE & MAINTENANCE

---

- Your Rocker Seesaw is designed to be very low maintenance.
- If any part of the seesaw requires cleaning, simply wipe with a damp cloth.
- Regularly check to see if the steel tubes, seats, backrests and other parts are tightened and completely secure. Replace worn & damaged parts if found and if necessary, secure from use until replacement parts can be obtained.
- If the paint is chipped, we recommend you lightly rub the damaged area and cover using a non-toxic enamel paint.
- **IMPORTANT:** While no regular maintenance is required, you must inspect the seesaw before each use and replace any worn, defective, or missing parts. The following conditions could represent potential hazards: Missing, improperly positioned, or insecurely attached frame parts, Missing, improperly secured or damaged seats, and/or a bent or broken rocker, Cease using seesaw immediately and secure it against unauthorized use if any of these conditions are present.