

SAFE QUICK STRONG SMART_®





EXV1000



Please visit GunVault.com for Replacement Promise details*

Safe To Armed In Seconds

Leaders in Responsible Firearm Storage

Since 1990, GunVault has been an industry leader and innovator of quick access personal safes. We pride ourselves on our commitment to manufacture a responsible firearm storage solution with the highest in quality and patented design. At GunVault we stand behind our products. We understand that in a time of crisis you rely on the security and protection GunVault provides.

Thank you for your trust and welcome to the GunVault family.



A SAFER WAY OF LIVING®

Index

>>>	Quick Start Guide	02
>>>	Product Features	03
	Battery Installation	
	Programming Digital Units	
	Resetting Digital Passcode	
>>>	Safety Features	04
	Audio Control	
	 Security Sleep Mode 	
	Audio Low Battery Warning	
>>>	Warnings	05
	GunVault's Exclusive 5 Year Warranty	
	Warranty Information	

Quick Start Guide

Need a quick start solution so you can begin using your brand new GunVault? We've got you covered. Our easy quick start guide will help you setup your safe in no time.

Description of the Contract o

The lock manufacturer highly recommends the use of either a Duracell or Energizer 9V alkaline battery with an expiration date of 5 years into the future.

- **Step 1:** Use the backup keys to unlock the unit.
- **Step 2:** Locate the battery compartment on the front interior panel, open and insert the recommended 9V alkaline battery.
- **Step 3:** When the battery is connected you will hear a single beep signaling that the unit is powered.



SCAN QR CODE TO VISIT OUR WEBSITE FOR FAQ'S, VIDEO TUTORIALS, AND MORE.


>>> Quick Programming

This is not a numeric keypad. An access code is a series of entries on the keypad. An entry is a single press of one or more buttons at the same time.

- Step 1: Open the unit with the backup key provided or by using the factory default code. The default code is a single sequential press of each button from left to right.
- **Step 2:** Press and hold the *Learn* button located on the front interior panel. A beep will sound and the light will turn green and remain illuminated. This will indicate the enrollment procedure has been initiated.
- **Step 3:** The indicator light will remain activated as you enter the new access code. The code can be a minimum of three entries or maximum of six entries.
- **Step 4.** Press and hold the *Learn* button a second time until the indicator light beeps, turns red, and remains illuminated. Re-enter the new access code.
- **Step 5:** Press and hold the *Learn* button one last time until indicator light flashes green and beeps five times. If the indicator light flashes red and beeps five times an error has occurred and you will need to repeat steps 2-5.
- **Step 6:** Now your unit is programmed and ready to use.



Product Features

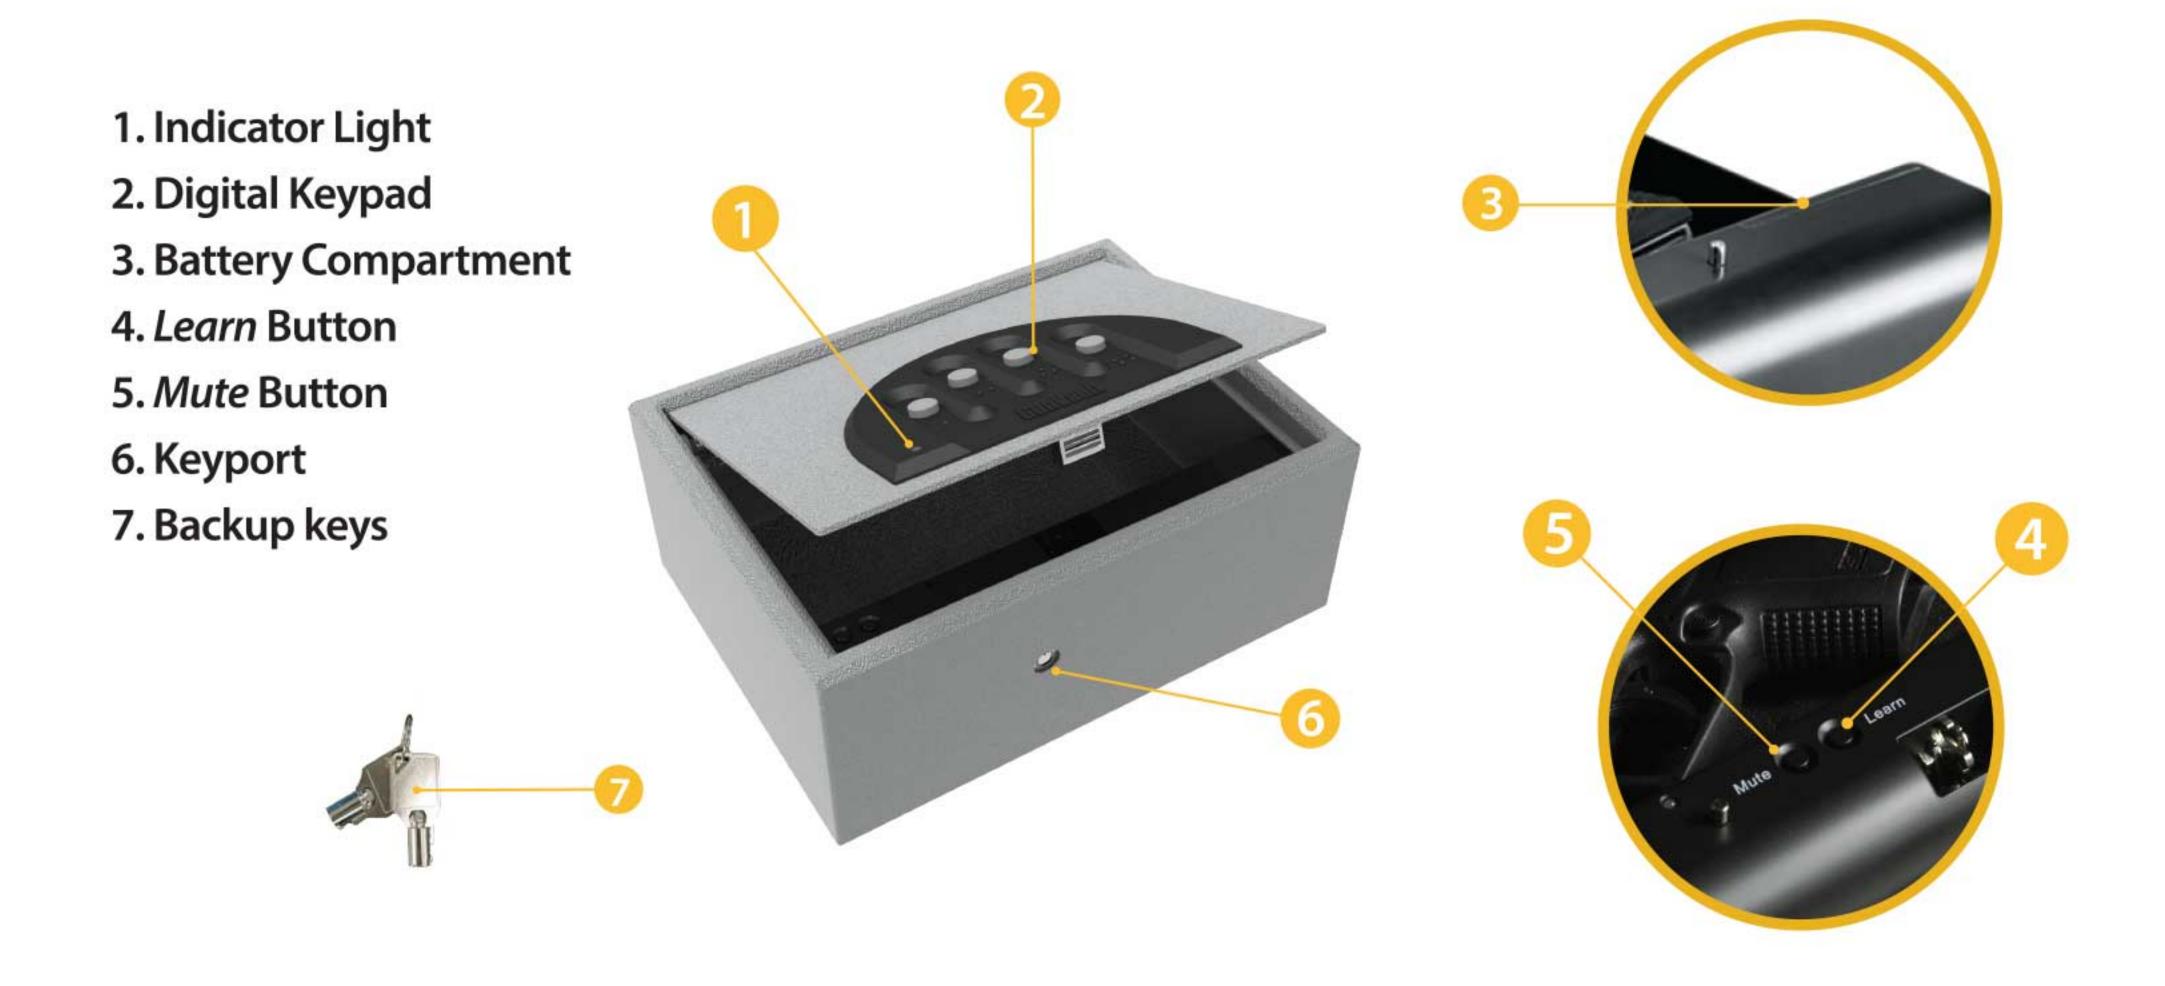

Battery Installation

Always hold the battery connection cap while disconnecting or attaching a new battery. Do not pull on the power cables as this could cause the power supply to become disconnected from the lock.

Step 1: Open the unit using the backup keys provided.

Step 2: Open the battery compartment cover and pull ribbon to remove the battery plug-in cable.

Step 3: Insert the recommended 9V alkaline battery following the Positive (+) and Negative (-) guides on the connecting cap.

Step 4: When the battery is connected you will hear a single beep signaling that the unit is powered.

Step 5: Place the battery into the compartment and reinsert the compartment cover.

*The lock manufacturer highly recommends the use of either a Duracell or Energizer 9V alkaline battery with an expiration date of 5 years into the future. When replacing your battery your access code will not be erased.

>>> Programming Digital Keypad

This is not a numeric keypad, you cannot program digits. An access code is a series of entries on the keypad. An entry is a single press of one or more buttons at the same time. Leave the unit door open while you program your safe.

Step 1: Open the unit with the backup key provided or by using the factory default code. The default code is

a single sequential press of each button starting from left to right.

Step 2: Locate the *Learn* button on front interior panel of the unit.

Step 3: Press and hold the *Learn* button located on the front interior panel. A beep will sound and the light will turn green and remain illuminated. This will indicate that the enrollment procedure has been initiated.

Step 4: The indicator light will remain activated as you enter the new access code. The code can be a minimum of three entries or maximum of six entries.

Step 5: Press and hold the *Learn* button a second time until the indicator light beeps, turns red and remains illuminated.

Step 6: Re-enter the new access code.

Step 7: Press and hold the *Learn* button a third time. The indicator light will flash green and beep five times confirming that the new code has been accepted. If the indicator light flashes red and beeps five times an error has occurred and you will need to repeat steps 3-7.

Step 8: Test your combination to confirm your new access code.

Step 9: Now you are ready to use your safe.

*No audible beep will be heard if the safe is programmed in mute.

Nesetting Passcode

Step 1: Open the unit by using either your backup keys or current access code and locate the *Learn* button which can be found on the front interior panel of the unit.

Step 2: Use steps 3-7 in the **Programming Digital Keypad** section to change your current combination. **Step 3:** Now you have successfully reprogrammed your safe.

Safety Feature Section

Management of Control

This feature turns audio for unit off and on.

Step 1: Open the unit and locate the Mute button on the front interior panel of the unit. Use page three as a reference to locate mute button on item list #5.

Step 2 Press and hold the *Mute* button for three seconds. The indicator light will remain solid red and produce one audible beep while the Mute button is held in. When the indicator light flashes green three times, with no beep, you have successfully activated the audio control feature. When the same steps are followed and the indicator light flashes green and beeps three times, you have successfully deactivated the audio control feature.

>>> Security Sleep Mode

 After six incorrect entries the Security Sleep Mode feature will be triggered and will lockout any new keypad entries for two minutes. When Security Sleep Mode is active and a button is pressed the indicator will flash red and beep three times. • To verify that the **Security Sleep Mode** is deactivated wait two minutes and then test your unit by slowly typing in your combination. If the indicator flashes green your combination has been accepted and the unit will open. If the indicator flashes red your combination is incorrect and you will need to try again. If you have forgotten or lost your combination please follow the instructions on **Programming Digital Keypad**. Your backup key will be required if reprogramming is needed.

Name of State of Sta

Step 1: When you enter the correct combination and the battery is low the indicator light will flash red and beep seven times. Depending on how low the battery is the unit may sound when releasing the lock.

Step 2: Replace battery by using steps in section labeled **Battery Installation**.

*The low battery indicator only goes off when you are in the process of opening your unit.

Safes, Accessories and More

Loving your new GunVault safe and want to purchase more? Check out our website www.GunVault.com for special promotions, product information and more.

Safe Categories

- Digital Safes
- Biometric Safes
- AR Safes

Accessories

- Security cable
- MagVault

Vital Information

- Downloadable manuals
- How to video tutorials
- Warranty registration
- Frequently asked questions
- And MORE



SCAN QR CODE TO VISIT OUR WEBSITE FOR FAQ'S, VIDEO TUTORIALS, AND MORE.

Warnings

- 1 The backup key is for emergency use only in the event of fingerprint failure or forgotten passcode.
- For Key Replacement visit the *GunVault.com/product/key-replacement* to complete the online key replacement form. In order to receive a replacement key you will need to know the key number associated with your unit. You can find this information on the unit engraved on the keyport.
- A Replace the batteries once a year regardless of whether or not the low battery indication is triggered.
- The manufacturer recommends that you lightly coat the door hinge spring and door latch-loop with quality oil at least once a year.
- A Never spray anything into the latch mechanism as it can cause damage to the safe.
- ▲ GunVault products delivered without a pre-arranged Return Authorization number may be returned to sender unopened, at owner expense. Fees may accrue.
- △ Do not try to remove the key while in the turned position. This may cause damage to the unit or key.
- ⚠ The lock manufacturer highly recommends the use of either a Duracell or Energizer 9V alkaline battery with an expiration date of 5 years in the future.
- Do not mount any GunVault product with the door facing down. The contents may fall out when the door is opened.
- ⚠ Never attempt to operate the safe with external power alone. Batteries MUST be installed before and during operation with the external power supply in order to avoid interruption of power and loss of access codes.
- ⚠ Never attempt to plug in a battery charger of any kind. Fire or explosion of batteries could result.
- Never use rechargeable batteries of any kind in a GunVault safe. Their power characteristics are not compatible with the safe.
- The AC/DC power supply specified is NOT a battery charger. It is an external power supply to be used only when batteries are installed.
- Keep backup keys and access code combinations in a secure place away from children.
- Do not store backup keys inside of safe.
- Keep your safe closed and locked at all times when not in use.
- Keep a record of your key number and serial number in a secure place separate from your safe.
- Keep high-strength steel security cable in a secure place away from children.
- Children should not play with or around safe at any time.
- ⚠ This safe or any other firearm storage device cannot take the place of other safety procedures, including advising children of the dangers of firearms.
- ⚠ The manufacturer of this product does not recommend, suggest, advise, promote or otherwise condone the ownership or use of firearms. We at GunVault believe the decision to own or use a firearm is a serious decision that should only be made by an adult who has carefully considered the risks and benefits of such a decision.
- Never drink alcohol or use drugs while operating this safe or any firearm.
- Mever grab your firearm by the trigger when removing or placing into safe.
- Always keep your firearm safety mechanism on while stored inside the safe.
- Always follow the firearm safety rules set out by the firearm's manufacturer.
- <u>A</u> GunVault recommends that you obtain as much information as possible on firearm safety.
- Always handle firearms as if they are loaded and ready to fire.
- 1 In order to enjoy the maximum security benefits of this safe it must be mounted in place.
- △ Use of this product as a storage receptacle without mounting may compromise security of the safe.
- Always hold the battery connection cap while disconnecting or attaching a new battery. Do not pull on the power cables as this could cause the power supply to become disconnected from the lock.
- ⚠ This product contains DEHP, a Phthalate chemical known to the State of California to cause birth defects and other reproductive harm.www.P65Warnings.ca.gov

GunVault's Exclusive 5 Year Warranty

- 1. GunVault (the "Company") warrants to the original consumer (the "Purchaser") of any GunVault safe (the "GunVault safe") purchased after January 1, 2014 against any damage caused by fire, burglary or attempted burglary for a period of five (5) years from the date of purchase.
- 2. The Company warrants to the purchaser that the GunVault safe will be free from defects in workmanship and materials for a period of one (1) year from the date of purchase.
- 3. These warranties are not assignable or transferable to any other person.
- 4. Any damage to the GunVault safe as a result of misuse, tampering, abuse, neglect, accident, improper installation, modification, unauthorized service, destruction, or the alteration of the serial number, or use in violation of the instructions furnished by the Company will void this warranty.
- 5. The sole responsibility of the Company shall be limited to the repair or replacement (in its sole discretion) of any component of the GunVault safe which fails to conform to this warranty at no cost to the purchaser for the period of the warranty.
- 6. Contact the Company directly to obtain service under this warranty. If it becomes applicable to send a defective product to the Company, a Return Authorization Number must first be obtained from the company. In order to obtain service under this warranty, purchaser must provide the Company with the following items (a) proof of purchase, (b) police or fire department report, (c) photographs of damaged safe, and (d) written testimonial.
- 7. Products shipped without prior Return Authorization and Return Authorization Number may not be accepted, and the Company will not be responsible for their disposition and/or cost of return to the owner.
- 8. The Company will not assume any responsibility for any loss or damage incurred in shipping. All return authorized products should include a copy of the original invoice in order for this warranty to be honored.
- 9. This warranty is not an insurance policy. The Company is not responsible for any manner of damage to or theft of the Purchaser's GunVault safe or its contents.
- 10. We recommend that the warranty registration be completed online in order to validate this warranty.
- 11. Any implied warranties that the purchaser may have are limited to the duration of the warranties described above. There are no further warranties that extend or apply beyond the face hereof, and the company expressly disclaims and excludes any and all warranties of merchant ability or fitness for a particular purpose. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.
- 12. Repair or replacement shall be the sole remedy for the purchaser under this warranty. The company shall not be liable for any direct, indirect, incidental or consequential damages, losses or expense arising from the use or misuse of the GunVault safe. Some states do not allow the exclusion or limitations of incidental or consequential damages, so the limitation may not apply to you.
- 13. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.
- 14. This warranty is only valid in the United States. If outside of the U.S. we encourage you to contact your point of purchase for further warranty help.



WARRANTY REGISTRATION INFORMATION

This is not a Registration Form

To submit your warranty registration go to GunVault.com/warranty/ or call our Customer Service Department at (800) 222 - 1055.

For key replacement visit the GunVault.com/product/key-replacement to complete the online key replacement form. In order to receive a replacement key you will need to know the key number associated with your unit. You can find this information on the unit engraved on the keyport.

PLEASE FILL OUT THE SECTION BELOW AND STORE IN A SAFE LOCATION OUTSIDE OF YOUR UNIT.

PURCHASED FROM:	
DATE OF PURCHASE	
SERIAL NUMBER: (This number can be f	ound inside unit)
KEY NUMBER: (This number can be f	found on the backup keys)



Customer Support Hours:

Monday - Friday 5:00AM - 6:00PM (PST)

Saturday - Sunday 8:00AM - 12:00PM (PST)

Excluding Holidays

*Hours subject to change





or call our Customer Support (800) 222 - 1055

SAFE QUICK STRONG SMART®



© 2018 ALPHA GUARDIAN

Las Vegas, NV 89119 USA

AlphaGuardian.com I GunVault.com