



**BOLT**  
ELECTRIC FOLDING SCOOTER

## TABLE OF CONTENTS

What's in the Box	1
Features & Specs	2
Attaching the Seat	3
Attaching the Foot Rests	4
Attaching the Fenders	5
Charging the Battery	6
Unfolding the Bolt	7
Operating the Bolt	8
Riding the Bolt	9
Using the Thumb Throttle	10
Using the Brake	11
Using the Kickstand	12
Connecting the Bluetooth®	13
Folding the Bolt	14
Care and Maintenance	15
Safety Warnings	16

## 1. WHAT'S IN THE BOX

1. FRONT TIRE	9. REAR FENDER
2. HEADLIGHT	10. REAR TIRE
3. STEM QUICK RELEASE	11. KICKSTAND
4. HANDLEBAR	12. FOOT REST
5. CARRYING HANDLE	13. FRONT FENDER
6. SEAT	14. FRONT TIRE
7. SEAT CLAMP	15. CHARGER
8. TAILLIGHT	16. CHARGING CABLE



## 2. FEATURES & SPECS

### BOLT

- Product Dimensions: 40" x 20" x 37"
- Weight Limit: 250 lbs.
- Product Weight: 34 lbs.
- Recommended Age: 13+
- Tire Size: 12"
- Max Speed: Up To 16 mph/ 26 km/h
- Max Range: Up To 17 Miles/ 27 km
- Battery: 36V, 6.0Ah Lithium-Ion
- Motor: 250W Hub Motor
- Charger: 110-240V
- Charge Time: Up To 5 Hours
- Climbing Angle: Up To 15°

### 3. ATTACHING THE SEAT




#### 4. ATTACHING THE FOOT RESTS



Place each Foot Rest onto the tubes and turn it towards the rear tire until it is secure.

## 5. ATTACHING THE FENDERS

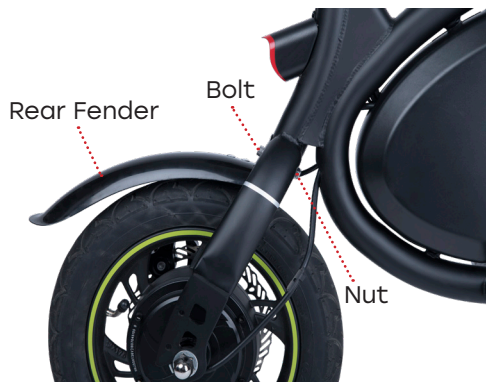

Remove Bolt and Nut from the frame. Run the Bolt through the Fender and frame, and secure using the Nut.

## 6. CHARGING THE BATTERY

A few must-do's:

- Only use the included charger
- Plug the charger into the wall before the Charging Port
- Don't turn on the Bolt while it's charging (it needs its rest)
- Charge the battery until it is fully charged - up to 5 hours
- Replace the cover over the Charging Port when done
- Remember to have fun!

CHARGING INDICATOR ON THE CHARGER:

Red Light: Battery is charging

Green Light: Charging is complete





## 7. UNFOLDING THE BOLT

### 7.1



### 7.2



## 8. OPERATING THE BOLT



- Powering On/Off - To turn the Bolt on, flip the power switch to ON. To turn it off, flip the power switch to OFF.
- Light Function - Once the Bolt is on, hold the Horn for 3 seconds to turn on the Headlight and Taillight. Hold the Horn for 3 seconds again to turn off the lights.
- Cruise Control - Press the Cruise Control Button when you have reached the speed you would like to maintain. Apply the brake to turn off Cruise Control.

## 9. BATTERY INDICATOR



### BATTERY LEVELS:

- 4 Lights - 76-100% Power
- 3 Lights - 51-75% Power
- 2 Lights - 26-50% Power
- 1 Light - 1-25% Power (please charge the Bolt immediately!)

## 10. RIDING THE BOLT



- Before each ride, check that the Handlebar and Seat are secure, the tire pressure is sufficient, and the brake system works correctly.
- While riding the Bolt, keep your feet on the Foot Rests.
- Do not ride with your feet dangling over the sides and always stay seated while riding.

## 11. USING THE TWIST THROTTLE



Quick Note: Try to take it easy on the throttle until you get used to it.

## 12. USING THE BRAKE

Handbrake



Quick Note: Squeeze the Brake slowly to avoid stopping abruptly or losing control.

**13. USING THE KICKSTAND**



## 14. CONNECTING TO BLUETOOTH®

Your Jetson Bolt is Bluetooth® 4.0 enabled, so you can pair it with the Ride Jetson app on your personal Bluetooth® enabled device. The Ride Jetson app is available for download from the App Store and the Google Play Store, and it's free!

1. Turn on the Bolt.
2. Open the Ride Jetson app on your handheld device.
3. Tap the Bluetooth® symbol in the top left corner of the app. (If you have not activated your Bluetooth® on your handheld device, the app will remind you).
4. Select your Bolt.
5. The default Bluetooth password is 000000. The default Lock password is 123456. If you would like to customize your passwords, go to the Settings in the app.

If you are having issues connecting to Bluetooth®, follow these steps...

1. Try restarting the Bolt by turning it off and then on.
2. Click the Scan button to refresh.
3. Restart the Ride Jetson app.
4. Contact Jetson Customer Support for assistance.

Extra features available with the Ride Jetson app:

- Turn your Headlight on or off.
- Lock and unlock the Bolt remotely.
- Keep track of your travel time and distance.



## 15. FOLDING THE BOLT

### 15.1



### 15.2



## **16. CARE AND MAINTENANCE**

### **RIDING RANGE**

The maximum range is 17 miles. However, a lot of factors will affect how far you can go per charge:

- Driving Surface: A smooth, flat surface will increase driving distance.
- Weight: More weight means less distance.
- Temperature: Ride and store the Bolt above 50°F.
- Maintenance: Timely battery charging and maintenance will increase driving distance.
- Speed and Driving Style: Frequent starting and stopping will reduce driving distance.

### **CLEANING THE BOLT**

To clean the Bolt, carefully wipe with a damp cloth, then dry with a dry cloth. Do not use water to clean the Bolt, as the electrical and electronic systems may get wet, resulting in personal injury or malfunction of the Bolt.

### **BATTERY**

- Keep the Bolt away from fire and excessive heat.
- Do not subject the Bolt to intense physical shock, severe vibration, or impact.
- Protect from water or moisture.
- Do not disassemble the Bolt or its battery.
- If there are any issues with the battery, please contact Jetson Customer Support. We'd love to help!

### **STORAGE**

- Fully charge the battery before storing. The battery should be fully charged once a month after this.
- To protect against dust, cover the Bolt.
- Store the Bolt indoors, in a dry place and at a suitable temperature.
- You should bring the Bolt into a warm environment for charging.

## 17. SAFETY WARNINGS

- For your safety, please read the user manual and safety warnings carefully, and make sure you understand and accept all the safety instructions. The user will be responsible for any loss or damage caused by improper use.
- Children, the elderly, pregnant women, and those with heart conditions should not use this product.
- The rider should not exceed 250 lbs.
- Do not ride at night.
- Do not use near motor vehicles.
- Do not ride after drinking or taking prescription medication.
- Do not ride this product if you have had any head, back, or neck ailments, or prior surgeries to those areas.
- Persons with any mental or physical conditions that may make them susceptible to injury or impair their dexterity or mental capabilities should recognize, understand, and perform all of the safety instructions and be able to assume the hazards inherent in using this product.
- Do not carry items when riding.
- Always wear shoes, a helmet, and appropriate safety gear.
- Prior to each ride, inspect each part of the product to ensure it has been maintained correctly and is functioning properly.
- Always give way to pedestrians.
- Always comply with local traffic laws and regulations.
- Be alert to things in front and far away from you.
- Make sure your feet are always placed securely on the deck.
- The product cannot be ridden by more than one person.
- When you ride this product along with other riders, always keep a safe distance to avoid a collision.
- When turning, be sure to maintain your balance.
- Do not allow distractions when riding, such as answering the phone or engaging in any other activities.
- Avoid riding in the rain or on smooth surfaces such as snow or ice.
- Do not ride on roads with obstacles (such as litter, small stones, etc.).
- Avoid riding in narrow spaces or on steep slopes.
- Avoid riding around flammable gas, steam, liquid, or dust that could cause fire.
- Never operate this product barefooted and keep shoelaces tied.
- Riding with improperly adjusted brakes is dangerous and can result in serious injury or death.

- Applying brakes too hard or too suddenly can lock up a wheel, which could cause you to lose control and fall. Sudden or excessive application of the brake may result in injury or death.
- Do not ride without proper training. Do not ride at high speeds, on uneven terrain, or on slopes. Do not perform stunts or turn abruptly.
- The area that this product is to be operated should be safe and suitable for safe operation.
- Check whether all safety labels are in place and understood before riding.
- The owner shall allow the use and operation of the unit after a demonstration that such operators can understand and operate all components of the unit before use.
- Operators shall adhere to all of the manufacturer's recommendations and instructions, as well as comply with all laws and ordinances.
- Only ride the product with adequate daylight conditions for visibility.
- We encourage you to highlight the product, for visibility, by using lighting, reflectors, and signal flags on flexible poles.

### **CALIFORNIA PROPOSITION 65**

 **WARNING:** This product contains chemicals, including lead, which are known to the state of California to cause cancer, birth defects, and other medical conditions.

### **MODIFICATIONS**

Do not attempt to disassemble, modify, repair, or replace the unit or any components of the unit without instruction from Jetson Customer Support. This will void any warranty, and can lead to malfunctions which may cause injury.

### **ADDITIONAL OPERATION CAUTIONS**

Do not lift the product off the ground while it is on and the wheels are in motion. This can result in freely spinning wheels, which may cause injury to yourself or others nearby. Do not jump on or off the product, and do not jump while using it. Always keep your feet firmly planted on the deck while in operation. Always check the battery charge before using.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



1 Rewe Street, Brooklyn, NY 11211

1-(888) 976-9904 • [help@ridejetson.com](mailto:help@ridejetson.com) • [www.ridejetson.com](http://www.ridejetson.com)

