



## Pop Up Tent Set Up Guide

### Set Up The Tent

- 1-Clear sharp sticks and rocks from the ground.
- 2-Open the carry bag and remove the tent.
- 3-Unclip the buckle strap that holds the tent closed (Fig 1).



4-The tent will unfold by itself into the ready-for-use position (Fig 2).

5-Stake the (6) loops around the base of the tent (Fig 3).



6-Stake the (3) guy lines of the tent (Fig 4).

7-Adjust the guy lines so that the tent will keep its shape in the wind.

8-Open the condensation vent (Fig 5).



**NOTE:** A ground tarp and rain fly are not required.

### Take Down The Tent

**CAUTION: DO NOT USE EXCESSIVE FORCE WHEN TAKING DOWN THE TENT.**  
The tent should fold and bend easily. If one of the steps becomes difficult, back up a step and review the instructions.

- 1-Pull out the (9) stakes and place them in the stake bag.
- 2-Wipe the bottom of the tent clean. Make sure the tent is vented to allow air to escape when folding it.
- 3-Bring all (4) frame pieces together and hold them with one hand (Fig 6 and 7).



4-Turn the tent to the vertical position with the buckle strap on the bottom half (Fig 8 and Fig 9).



5-Twist the top half of the tent with your other hand until it is flat (Fig 10).



6-Fold the top half of the tent over the bottom half of the tent to create an oval shape (Fig 11, 12 and 13).



Fig 11



Fig 12



Fig 13

7-Stand the oval shape on its side (Fig 14). Bend the oval shape into a figure 8 by moving one hand towards you and one hand away from you while pushing down (Fig 15, 16 and 17).



Fig 14



Fig 15



Fig 16



Fig 17

8-Bend one half of the figure 8 over the other half to create a small circle (Fig 18, 19 and 20).



Fig 18



Fig 19



Fig 20

9-Connect the buckle strap around the folded tent (Fig 21).



Fig 21

10-Place the folded tent into the round carry bag (Fig 22).



Fig 22

**WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC**  
This tent meets the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame resistant properties ineffective.

[www.rightlinegear.com](http://www.rightlinegear.com)

#### LIMITED WARRANTY

Rightline Gear warrants that for one (1) year, from the date of purchase that all products will be free of material defect and Rightline Gear will repair or replace any defective or damaged product free of charge if it is returned in original condition by the consumer to Rightline Gear or the place of purchase. Claims of defective material and/or workmanship must be made in a timely manner. Safe and maintenance-free use of this product depends upon the consumer's or user's proper installation of the product and good judgment in its use. Rightline Gear is not responsible for the consumer's or user's use or misuse of this product. Damage to Purchaser's vehicle or any other vehicle caused by Purchaser's improper use of this product may cause serious injury or death. The Purchaser acknowledges that Rightline Gear has no control over the attachment of its products to vehicles or the attachment of items to the Rightline Gear products. Accordingly, Rightline Gear cannot assume responsibility for any damage to any property arising out of the improper attachment or use of its products.

RIGHTLINE GEAR SPECIFICALLY DISCLAIMS ANY AND ALL OTHER WARRANTIES WHETHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO WARRANTY OF MERCHANTABILITY AND WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE. RIGHTLINE GEAR FURTHER DISCLAIMS ANY WARRANTY OR OTHER PROMISE THAT GIVES RISE TO ANY SORT OF CONSEQUENTIAL, EXTRAORDINARY, PUNITIVE, EXEMPLARY, SUBSEQUENT, OR NONECONOMIC DAMAGES OR ATTORNEY FEES. THE CONSUMER OR USER'S SOLE REMEDY AGAINST RIGHTLINE GEAR FOR ANY DEFECT IN THIS PRODUCT IS LIMITED TO FULL RETURN OF THE PURCHASE PRICE.

**RIGHTLINE GEAR SPECIFICALLY ENCOURAGES COMPLIANCE WITH ALL MOTOR VEHICLE LAWS, AND EXPRESSLY DISCLAIMS ANY AND ALL LIABILITY FOR FAILURE TO COMPLY WITH SAME.**