

 


AQUA BLAST BUMPER BOATS™


1. Controller Units with Water Blaster x 2



2. Inflatable Bumper Boats x 2

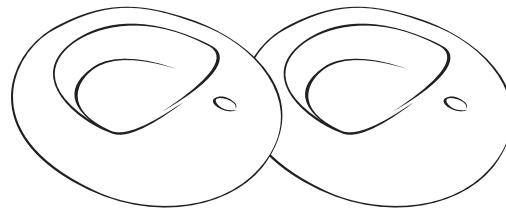


 
3. Propeller Units x 2

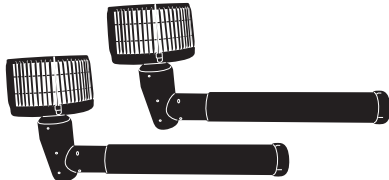


4. Pipe Covers x 2



  
5. Repair Patch x 1

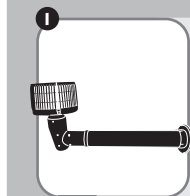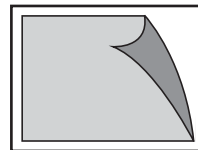

 Parts 3 and 4 are shipped together and must be separated before assembling this item.

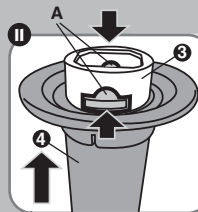

 Press the release latches (A) and push 3 downward while pulling up part 4.

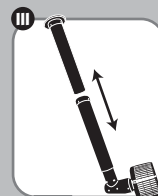

IMPORTANT SAFETY INSTRUCTIONS.

PLEASE READ THESE INSTRUCTIONS THOROUGHLY BEFORE SETUP AND USE.

KEEP THESE INSTRUCTIONS IN A SAFE PLACE FOR FUTURE REFERENCE.

FOR AGES 5-10

ADULT SET UP IS REQUIRED.



Safety Information

WARNING!

To avoid the risk of serious injury or death:

- Intended for only children aged 5-10.
- Adult supervision required.
- Adult assembly required.
- Do not hang on, stand on or tackle this product.
- Do not use a high-pressure air pump to inflate.
- Do not use electric air pump if water or moisture is present. This may result in electric shock.
- Use product in swimming pool only.
- Never drive this product over other swimmers.
- This product is intended to be used as a toy and not as a personal flotation device.
- Do not allow anyone over 100 lb (45 kg) to use this product.
- Read all instructions before using this product.
- All safety warnings and instructions should be followed when the product is in use.
- Correctly follow all instructions and safety requirements shown in this manual; otherwise injury or death, especially for children, could result.
- All inflatables are temperature sensitive, therefore never unfold or inflate in temperatures below 50°F (10°C).
- Once inflated, make sure that the product does not come in contact with stones, gravel or other sharp objects, which could puncture the inflatable.
- There should be a minimum of 6 ft (183 cm) between the product and the swimming pool wall to prevent the possibility of the child falling off and hitting their head on the edge of the pool's wall.
- To prevent premature material fatigue, refrain from exposing the product to unnecessary sunlight. Over exposure to sunlight may cause leakage.
- Stop using Aqua Blast Bumper Boats™ if there is any damage to the propeller safety cage.
- Once assembled according to the instructions provided, confirm that this battery-operated toy is fully functional before placing in the water.

- This is not a lifesaving device. Do not leave a child unattended while the device is in use.
- Do not shoot water blaster cannon directly at person's eyes or face.
- Fill with clean, cold tap water only. (Other liquids may be harmful to people and the water blaster.)
- Do not insert anything inside nozzle.
- Do not attempt to alter the nozzle. (This may damage the product and will not function properly.)
- Do not allow sand or dirt to get inside the tank or nozzle. (Salt water and sand are harmful to the water blaster.)
- Only to be used in water in which the child is within its depth and under supervision.
- Not suitable for children under 36 months due to small part. Choking hazard.
- Keep away from fire.

While every attempt is made to embody the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury resulting from use. All merchandise is sold on this condition, which no representative of the company can waive or change.

REPAIR PATCH INSTRUCTIONS

For your convenience, a repair patch has been included to repair holes in the inflatable section.

Do not use the patch for holes or rips on the seam.

In the event of an accidental puncture, cut out a suitably sized patch, making sure you round the corners of your repair patch to avoid peeling. Make sure the area to be patched is clean and dry. Press patch firmly over the puncture. Do not inflate for 20 minutes.

The repair patch should be applied by an adult.

Safety Information

Battery Care Instruction:

Important! Only adults should replace batteries.

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the toy before being charged.
- Different types of batteries or new and used batteries are not to be mixed.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Alkaline batteries are recommended.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Please keep this information for future reference.
- Remove batteries from the product before extended storage.
- This toy is to be operated in water only when fully assembled in accordance with the instructions.



BEFORE RETURNING TO STORE

PLEASE VISIT THE CUSTOMER SERVICE WEBSITE BELOW FOR IMMEDIATE ASSISTANCE REGARDING QUESTIONS OR PROBLEMS WITH THIS PRODUCT.

www.toysinquiry.com

OR

 
1-800-434-6178

BANZAI IS USED UNDER LICENSE BY FOCUS BRAND LTD.
CONTENTS AND SPECIFICATIONS MAY VARY FROM
THOSE ILLUSTRATED.

BANZAI[®]

29301
TANG RONG ROAD,
CHANGPING, DONGGUAN, CHINA
ALL RIGHTS RESERVED
MADE IN CHINA
www.toysinquiry.com

Installing / Replacing Batteries

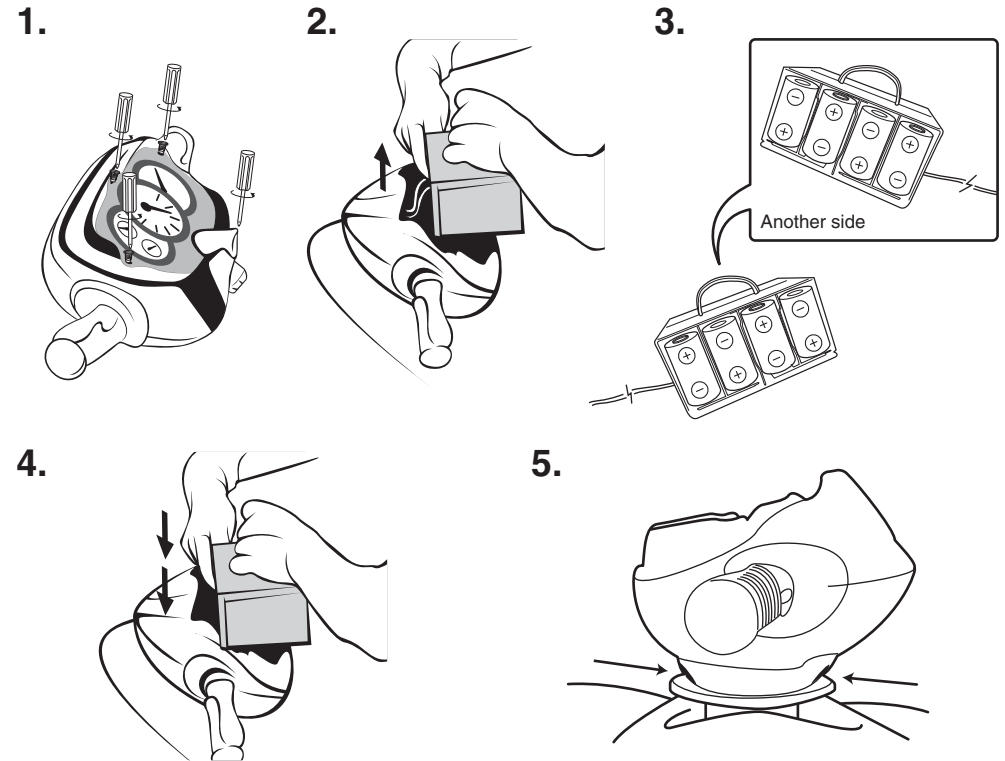


(Batteries not included)

1. Unscrew the top cover on the controller unit with a screwdriver as shown.
2. Take out the battery box.
3. Install 8 x 1.5V "D" (LR20) size batteries accordingly for each boat.
4. Place the battery box back inside the controller unit and screw on the top cover with a screwdriver.
5. To replace batteries, make sure to remove the Aqua Blast Bumper Boats™ from the swimming pool, unlock the controller unit from the Aqua Blast Bumper Boats™ and repeat procedures 1 to 4.


NOTE: Never install or replace the batteries while the toy is still wet or in the pool.

 Setup Instructions

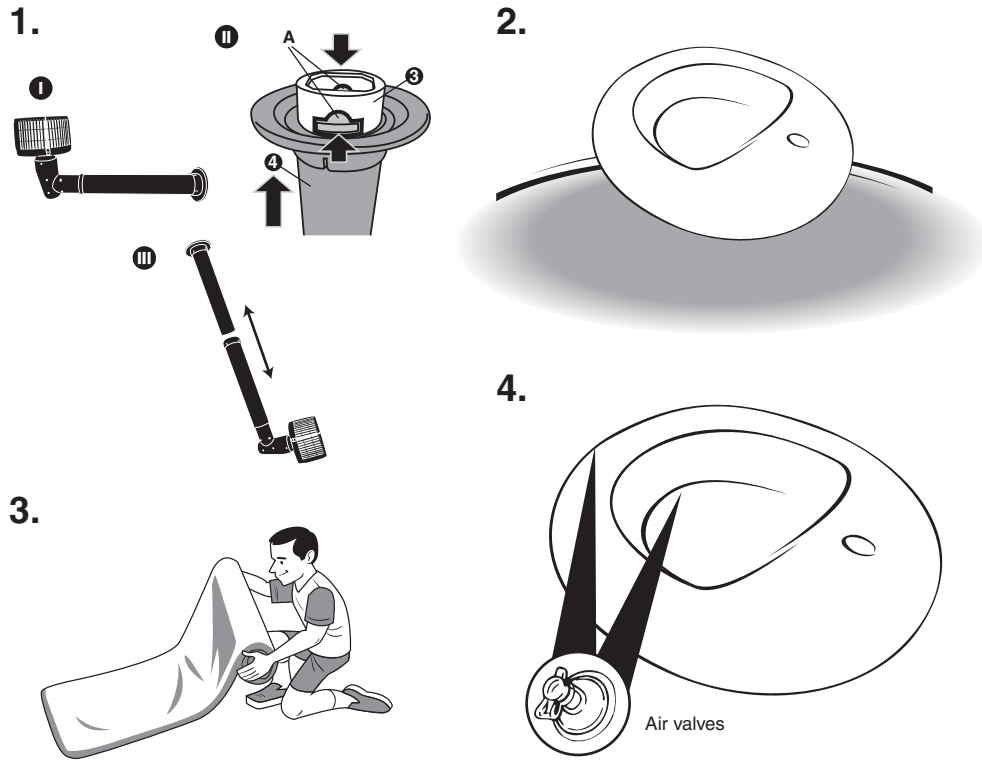


1. **I** Parts **3** and **4** are shipped together and must be separated before assembling this item.
II Press the release latches (A) and push **3** downward while pulling up part **4**.
III Separate pipe cover from propeller pipe.
 2. Fully assemble before using this toy in a pool. Do not use on pavement or other hard surfaces.
 3. Roll out this product. Inspect for holes, tears or other damage.
 4. Inflate the Aqua Blast Bumper Boats™ with air until it is halfway full. See diagram for air chamber locations.
- NOTE:** For easy air inflation, use a manual air pump designed specifically for plastic inflatable items.

 Setup Instructions

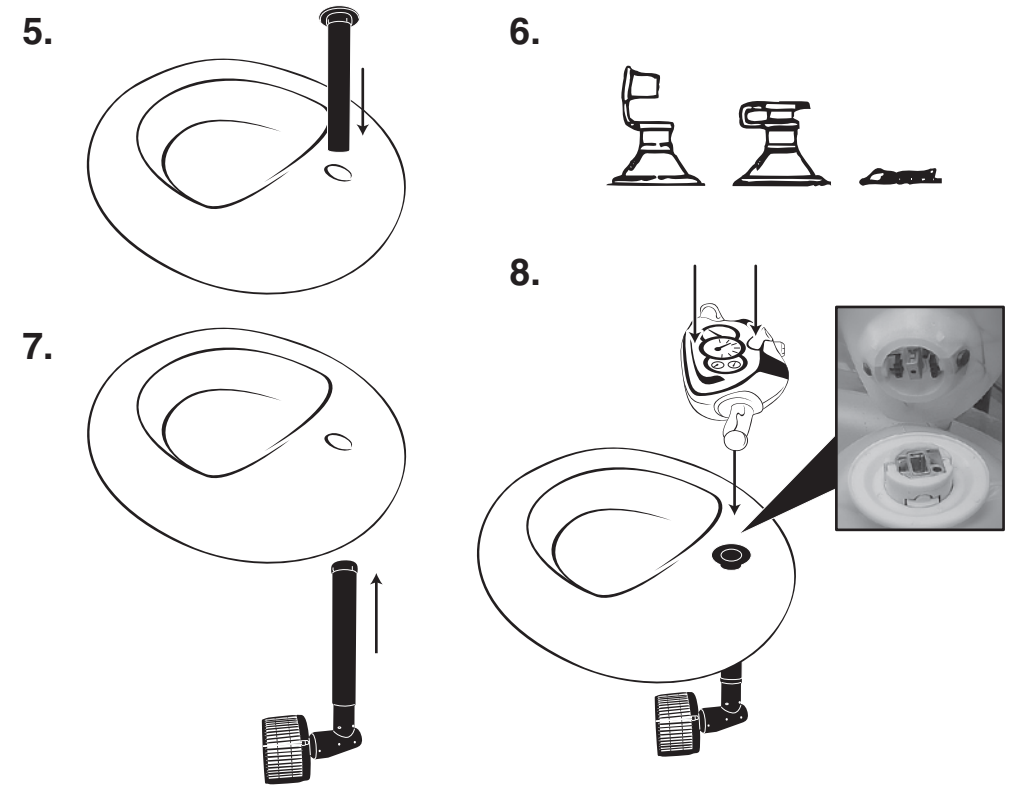

5. When the Aqua Blast Bumper Boats™ is partially inflated, fully insert the pipe cover from the top. Finish inflating the air chambers.
 6. **NOTE:** Fill inflatable with air until the inflatable is firm and solid. If any seam begins to strain, immediately stop inflation and release air to reduce the pressure until all signs of stress on the inflatable are gone. **DO NOT** use the item if there is straining at the seams. Use of an over inflated item can result in serious injury, paralysis or death.
 7. Insert the propeller unit into the pipe cover from underneath the Aqua Blast Bumper Boats™. You will hear the unit click into place when it is properly inserted.
 8. Attach the controller unit to the top of the propeller pipe by aligning the connectors and pressing the unit down until it clicks twice.
- NOTE:** If you do not hear 2 clicks, the controller unit is not properly attached to the propeller pipe.
- For easier assembly, push at the positions shown.

 Use Instructions

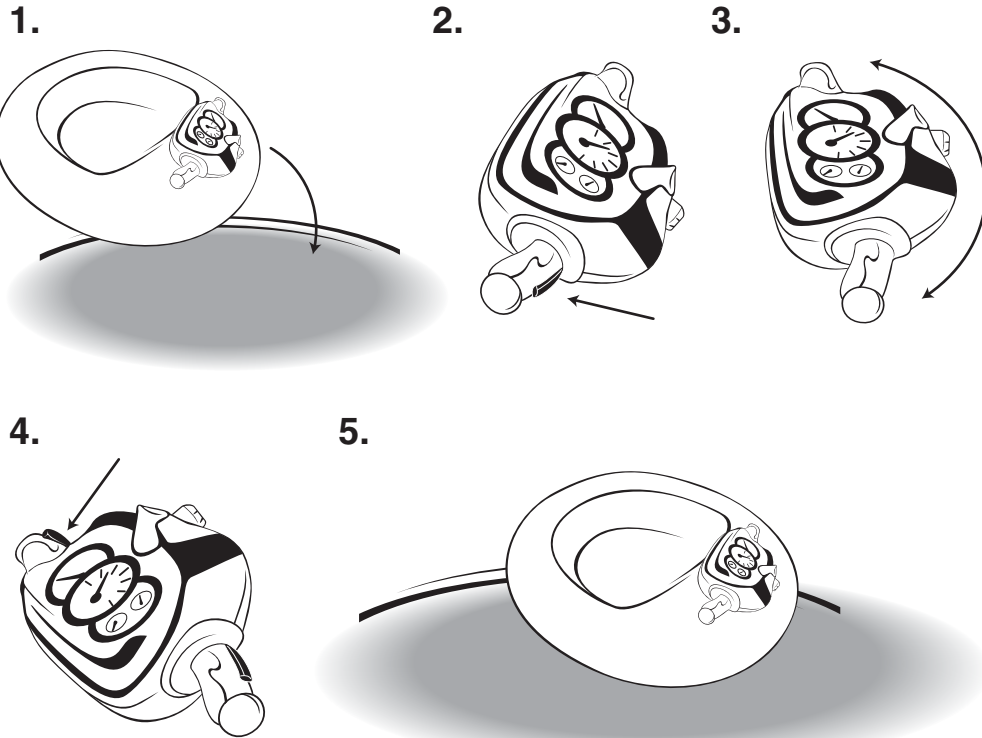


HOW TO PLAY

1. Place the assembled Aqua Blast Bumper Boats™ into the swimming pool.
2. Press and hold the right handle's trigger to start the propeller; release it to stop.
3. Turn the controller unit for steering control.
4. To shoot the water blaster, hold down the trigger on the left handle.
5. **IMPORTANT:** To prevent overheating, the Aqua Blast Bumper Boats™ may automatically shut down for cooling after long continuous play. The cooling process may take up to 1.5 hours.

WARNING!

1. This is a toy and not a life saving flotation device. It should not be used as such.
2. Attention! Aqua Blast Bumper Boats™ should be used in water level no higher than the neck of a standing child and under adult supervision.
3. There should be a minimum of 6 ft (183 cm) between the product and the swimming pool wall to prevent the possibility of the child falling off and hitting his head on the edge of the pool's wall.

 After Use & Storage

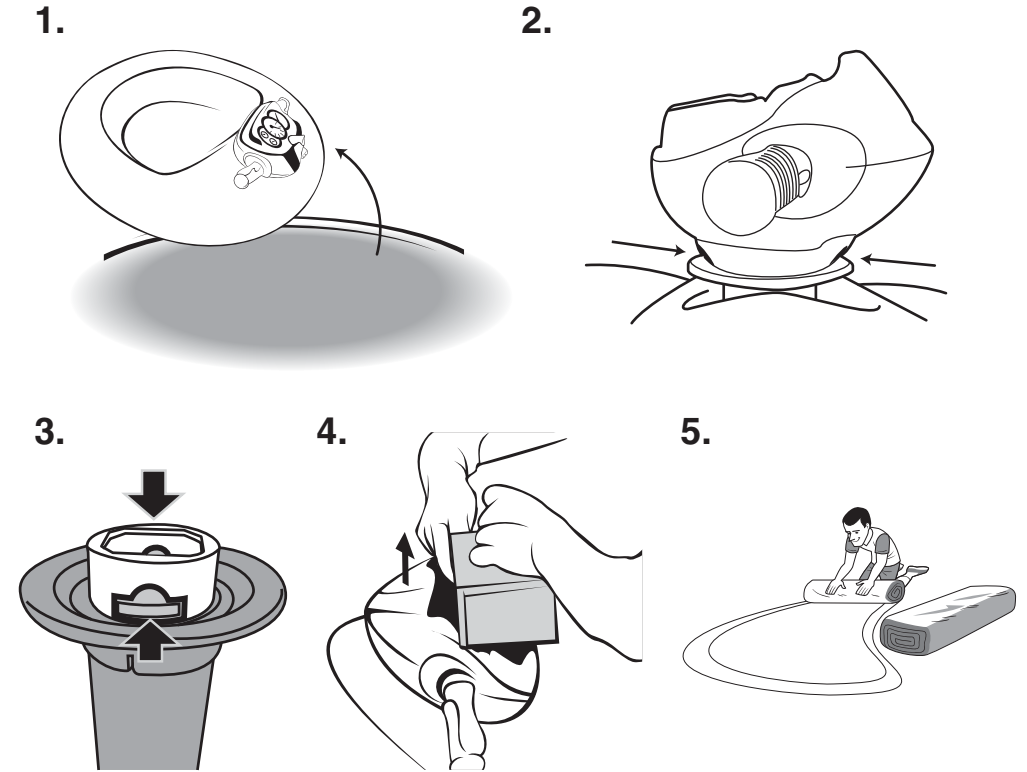

1. Remove the Aqua Blast Bumper Boats™ from the pool.
2. Remove the controller unit by pressing the 2 release buttons at the bottom.
3. Unlock the latches at the pipe cover and remove the propeller unit. Deflate the Aqua Blast Bumper Boats™ and let it dry thoroughly.
4. Remove all the batteries and drain away all the water in the propeller unit before storage.
NOTE: Always store the Aqua Blast Bumper Boats™ in a dry place. Never leave in the pool or outside when not in use.
5. Once the product is completely dry, carefully deflate and then roll it up. Store in a secure location away from children. Do not store it indoors or in a closed container until it is completely dry.
NOTE: Store this product in a secure place, away from children, to prevent suffocation.