

EASY LIFT TRAILER JACK

163890




⚠WARNING: Do Not Exceed 4000lb Rated Load Capacity. Failure to Follow Instructions and Heed Warnings May Result in Personal Injury and/or Property Damage


⚠WARNING: This jack is for use on trailers only. Only use jack on hard flat surface. Never attempt to lift more than one wheel. Do not raise inflated tires over 2" (5cm) above the ground. Correct operation requires a minimum of two people. Avoid being under any part of the trailer when the jack is in use.

⚠CAUTION: The operation of this jack requires two people that have read and fully understand these instructions.


⚠CAUTION: • Keep free of debris and grease
• Clean with soap and water

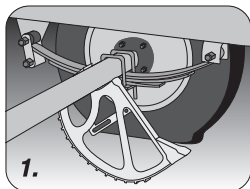


Step 1. Position the trailer onto a hard packed or solid surface that is as level as possible. Place the EZ Lift Trailer Jack under the trailer axle closest to the wheel that you want to lift. Make sure to locate an area that the jack's movement will not be obstructed by any trailer components such as U-bolts or brackets as it moves forward. Position the axle notch onto the trailer axle with the flat side of the EZ Lift Trailer Jack facing the tow vehicle. Wedge the jack securely between the axle and the ground. (See fig 1.)

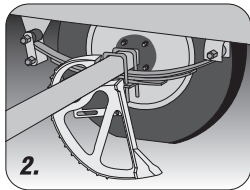

Step 2. With a second person observing the operation of the jack from a safe distance away from both the trailer and tow vehicle slowly pull the tow vehicle forward until the flat side of the EZ Lift Trailer Jack is in a vertical position. The observer will instruct you when the jack is in the correct position. (See fig 2.)

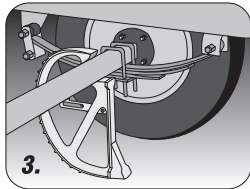

Step 3. Once the EZ Lift Trailer Jack is in the proper vertical position turn off the tow vehicle. Apply the emergency brake and chock the remaining trailer wheel/s both forward and to the rear of the wheel/s for safety. Perform the necessary maintenance to the trailer being careful not to have your hands, legs or other body parts under the frame or running gear of the trailer at any time. (See fig 3.)

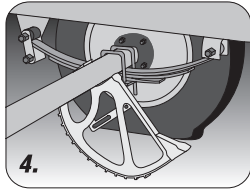

Step 4. Once you have completed the necessary maintenance on your trailer inspect the surrounding area to make sure that it's free of any tools or other obstacles that could interfere with the performance of the jack. Then with the observer positioned at a safe distance from the trailer and tow vehicle remove the chocks from the trailer wheel/s. Disengage the tow vehicle's emergency brake and slowly back up until the observer indicates that the tire is lowered back onto the ground and the jack is free from the axle. Remove the jack from under the trailer and store. (See fig 4.)

WARRANTY INFORMATION

This product has been manufactured under the highest standards of quality and workmanship. We warrant to the original consumer purchaser that all aspects of this product will be free of defects in material and workmanship for one year from the date of purchase. A replacement for any defective part will be supplied free of charge for installation by the consumer. Defects or damage caused by the use of other than genuine parts are not covered by this warranty. This warranty shall be effective from the date of purchase as shown in the purchaser receipt.

This warranty is valid for the original consumer purchaser only and excludes industrial, commercial or business use of the product, product damage due to shipment or failure which results from alteration, product abuse, or product misuse, whether performed by a contractor, service company, or consumer. We will not be responsible for labor charges and/or damage incurred in installation, repair or replacement nor for incidental or consequential damage.