


What’s in the Box

1. Front LED Lights
2. Power Button
3. Charging Port
4. Charger
5. Charging Cable

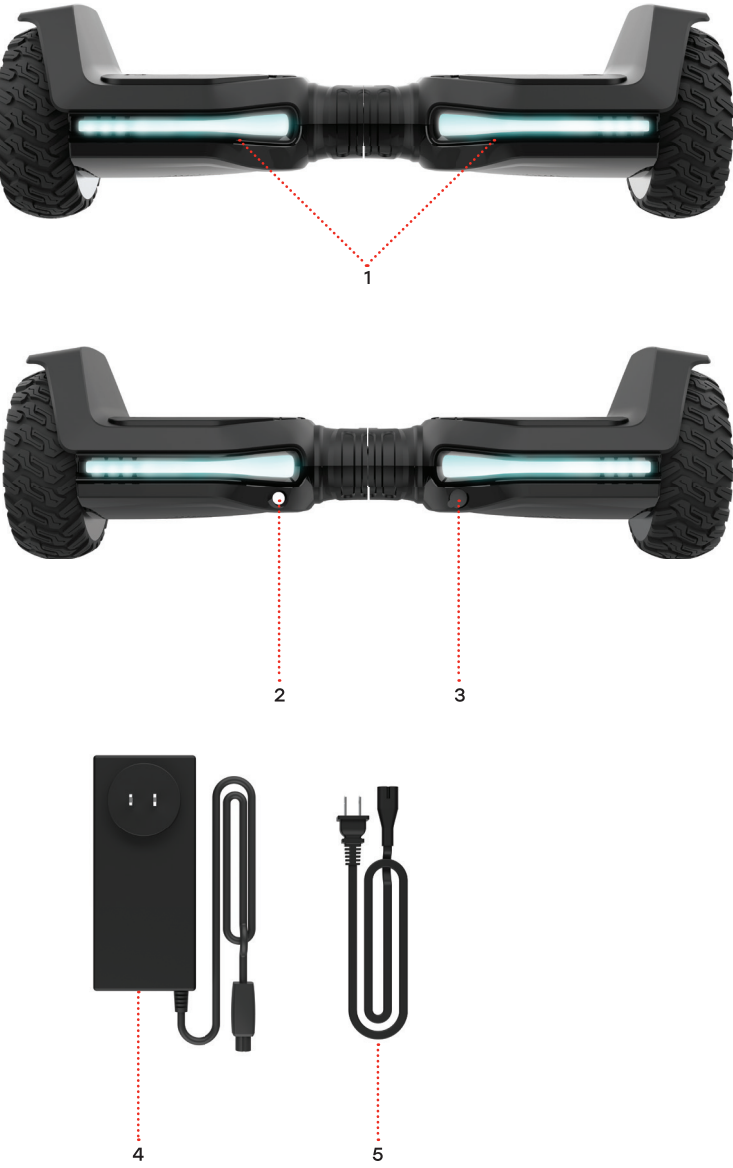

Please Note: Images may not reflect exact appearance of actual product.

Specs & Features

- Weight Limit: 220 lb
- Product Weight: 22 lb
- Recommended Age: 12+
- Tire Size: 6.5" All-Terrain Tires
- Max Speed: Up To 10 mph
- Max Range: Up To 12 Miles
- Battery: 24V, 4.0Ah Lithium-Ion
- Motor: 500W, Dual Hub Motor
- Charger: UL LISTED, 110-240V
- Charge Time: Up To 3 Hours
- Climbing Angle: Up To 15°


1. Get Started

1.1 Charging the Battery

- Only use the included charger
- Plug the charger into the wall before the Charging Port
- Don’t turn on the Flash while it’s charging
- Charge the battery until it is fully charged - up to 3 hours
- Replace the cover over the Charging Port when done



1.2 Indicator Lights

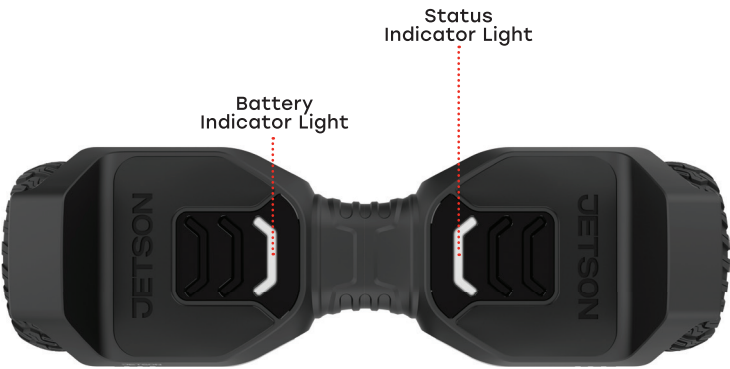


Battery Indicator Light	<div></div>	<div></div>	<div></div>
Percentage	< 20%	20-49%	50% +

Warning: The Flash will automatically turn off once the battery power goes below 10% as a safety precaution.

Status Indicator Light - If the Status Indicator Light turns red or if you are having issues with the Flash, you may need to recalibrate it.

 1.3 How to Recalibrate

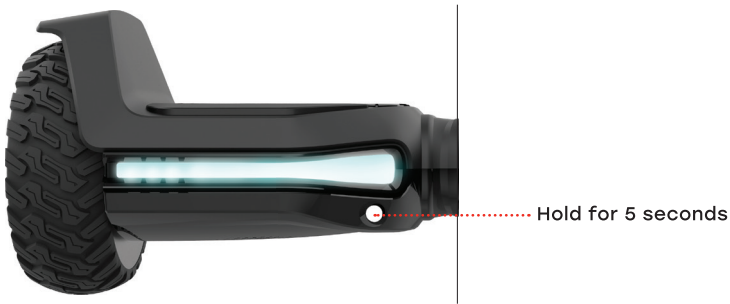

Follow these 3 simple steps...

1. Place the Flash on a flat, level surface.
2. Hold the Power Button (for about 5 seconds) until you are notified of a successful recalibration.
3. Restart the Flash by turning it off and then on.

2. Make Moves

2.1 Riding the Flash



Connecting to Bluetooth®

The Flash comes equipped with two Bluetooth® modules - one for the Bluetooth® speaker and one for the Ride Jetson app.

To connect to your Bluetooth® speaker:

- Turn on the Flash, and it will become discoverable to your handheld device.
- Activate your Bluetooth® in your handheld device's settings.
- Find the Flash in your handheld device's list and select it.
- Now you can play your music.

To connect to the Ride Jetson app:

- Open the Ride Jetson app on your handheld device.
 - Tap the Bluetooth® symbol in the top left corner of the app.
 - Select your Flash. Default password is 000000.
- (To customize your password go to Settings in the App. If you forget your new password, you can factory reset the Flash by recalibrating).
- You should now be connected to the Flash!

MODE SETTINGS

In the Ride Jetson app you can choose from three settings:

- **Beginner Mode Max Speed:** Up to 6 mph
- **Intermediate Mode Max Speed:** Up to 8 mph
- **Advanced Mode Max Speed:** Up to 10 mph

NOTE: Other features that can be adjusted include Steering Sensitivity, Driving Force, and Auto Shutdown Time.

If you are having issues connecting to Bluetooth®, follow these steps:

1. Try restarting the Flash by turning it off and then on.
2. Click the Scan button to refresh.
3. Restart the Ride Jetson app.
4. Contact Jetson Customer Support for assistance.

Care & Maintenance

RIDING RANGE

The maximum range is 12 miles. However, many factors will affect how far you can go per charge:

- Driving Surface: A smooth, flat surface will increase driving distance.
- Weight: More weight means less distance.
- Temperature: Ride, store, and charge the Flash above 50°F.
- Maintenance: Timely battery charging will increase driving distance.
- Driving Style: Frequent starting and stopping will reduce driving distance.

CLEANING THE FLASH

To clean the Flash, carefully wipe with a damp cloth, then dry with a dry cloth. Do not use water to clean the Flash, as the electrical and electronic systems may get wet, resulting in personal injury or malfunction of the Flash. If the electric parts or battery get wet, do not power on the Flash. Please contact Jetson Customer Support for assistance.

BATTERY


- Keep away from fire and excessive heat.
- Avoid intense physical shock, severe vibration, or impact.
- Protect from water or moisture.
- Do not disassemble the Flash or its battery.
- Contact Jetson Customer Support if there are any issues with the battery.

STORAGE

- Fully charge the battery before storing. The battery should be fully charged once a month after this.
- Cover the Flash to protect against dust.
- Store the Flash indoors, in a dry place.

Remember to be safe and most importantly, have fun!

DISPOSAL OF USED BATTERY

 Battery may contain hazardous substances which could endanger the environment and human health. This symbol marked on the battery and/or packaging indicates that used battery shall not be treated as municipal waste. Batteries should be disposed of at an appropriate collection point for recycling. By ensuring the used batteries are disposed of correctly, you will help preventing potential negative consequences for the environment and human health. The recycling of materials will help to conserve natural resources. For more information about recycling of used batteries, please contact your local municipality waste disposal service.

NOTICE OF COMPLIANCE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Safety Warnings

- Before use, please read the user manual and safety warnings carefully, and make sure you understand and accept all the safety instructions. The user will be responsible for any loss or damage caused by improper use.
- Before use, check to confirm that any and all axle guards, chain guards, or other covers or guards are in place and in serviceable condition. Check that the tires are in good condition, inflated properly and have sufficient tread remaining. Check that all guards and pads are in proper place and in serviceable condition.
- Components shall be maintained and repaired in accordance with the manufacturer's specifications and using only the manufacturer's authorized replacement parts with installation performed by dealers or other skilled persons.
- Don't allow hands, feet, hair, body parts, clothing, or similar articles to come in contact with moving parts, wheels, or drive train, while the motor is running.
- This product should not be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction (IEC 60335-1/A2:2006).
- Children, the elderly, pregnant women, and those with heart conditions should not use the product.
- Unsupervised children should not play with the product (IEC 60335-1/A2:2006).
- Adult supervision is required.
- The rider should not exceed 220 lbs.
- Never use near motor vehicles.
- The area that the product is to be operated should be safe and suitable for safe operation.
- Avoid streets and surfaces with water, sand, gravel, dirt, leaves, and other debris. Wet weather impairs traction, braking, and visibility.
- Avoid riding in narrow spaces or on steep slopes.
- Avoid riding around flammable gas, steam, liquid, or dust that could cause fire.
- Do not ride at night.
- Only ride the product with adequate daylight conditions for visibility.
- Do not ride after consuming alcohol, drugs, or while intoxicated.
- Do not ride the product if you have had any head, back, or neck ailments, or prior surgeries to those areas.
- Do not carry items when riding.
- Never operate the product barefooted.
- Always wear shoes and keep shoelaces tied.
- Make sure your feet are always placed securely on the deck.
- Always wear protective equipment such as helmet, knee pads, and elbow pads.
- Always give way to pedestrians.
- Always comply with local traffic laws and regulations.
- Operators shall adhere to all of the manufacturer's recommendations and instructions, as well as comply with all laws and ordinances.
- Be alert to things in front and far away from you.
- Do not allow distractions when riding, such as answering the phone or engaging in any other activities.
- The product cannot be ridden by more than one person.
- When you ride the product along with other riders, always keep a safe distance to avoid a collision.
- When turning, be sure to maintain your balance.
- Riding with improperly adjusted brakes is dangerous and can result in serious injury or death.
- Applying brakes too hard or too suddenly can lock up a wheel, which could cause you to lose control and fall. Sudden or excessive application of the brake may result in injury or death.
- If device or internal components come in contact with water or moisture, do not use, Contact Jetson Customer Support for assistance.
- Do not ride without proper training. Do not ride at high speeds, on uneven terrain, or on slopes. Do not perform stunts or turn abruptly.
- Check whether all safety labels are in place and understood before riding.
- The owner shall allow the use and operation of the unit after a demonstration that such operators can understand and operate all components of the unit before use.
- We encourage you to highlight the product, for visibility, by using lighting, reflectors, and signal flags on flexible poles.
- Recommended for indoor use.
- Prolonged exposure to UV rays, rain and the elements may damage the enclosure materials, store indoors when not in use.
- When the battery is fully charged, stop charging and unplug the unit.
- Use caution when charging. Do not operate charger near flammable materials. Unplug charger and disconnect from product when not in use.

California Proposition 65

WARNING:

This product can expose you to a chemical such as Cadmium that is known to the state of California to cause cancer or birth defects or other reproductive harm. For more information go to www.p65warnings.ca.gov/product

MODIFICATIONS

Do not attempt to disassemble, modify, repair, or replace the product or any components of the unit without instruction from Jetson Customer Support. This will void any warranty, and can lead to malfunctions which may cause injury.

ADDITIONAL OPERATION CAUTIONS

Do not lift the product off the ground while it is on and the wheels are in motion. This can result in freely spinning wheels, which may cause injury to yourself or others nearby. Do not jump on or off the product, and do not jump while using it. Always keep your feet firmly planted on the mat sensors while in operation. Always check the battery charge before using.

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, inc. And any use of such marks by Jetson Electric Bike LLC. is under license. Other trademarks and trade names are those of their respective owners.

JETSON

Flash Dynamic Hoverboard.

A guide for your ride.

Enjoying the ride?

Leave a review on ridejetson.com/reviews or share your photos with us online using the #RideJetson hashtag!

Questions? Let us know.

US 1-(888) 976-9904
UK +44 (0)33 0838 2551
Spain/Portugal +34 952 179 479

Hours of Operation: 7 Days a Week, 10am-6pm
help@ridejetson.com

Jetson Electric
1 Rewe St.
Brooklyn, NY 11211
www.ridejetson.com



Follow us @ridejetson
#MakeMoves

