



**MAGELLAN**  
**O U T D O O R S<sup>®</sup>**

# Assembly Instructions

**10 ft x10 ft SCREEN HOUSE**

159109



**Please keep this instruction manual for future reference**

**Customer Service: (888) 922-2336**

**7:00 am to 12:00 am CST (daily)**

**Live Chat at: [www.academy.com](http://www.academy.com)**

**Email: [customerservice@academy.com](mailto:customerservice@academy.com)**

**Made In Bangladesh**

# Table of Contents

Warnings..... 2

Parts List.....3

Assembly Instructions..... 4-5

Care and Maintenance.....6

Warranty Information.....7

Note: Before beginning assembly of product, make sure all parts are present. Compare parts with package content list and hardware contents. If any part is missing or damaged do not attempt to assemble the unit. Contact customer service for replacement parts.

# Warnings

## IMPORTANT SAFETY AND TIP INFORMATION

TO MAXIMIZE THE ENJOYMENT OF YOUR PRODUCT PLEASE ASSEMBLE AND USE YOUR PRODUCT AS SAFELY AS POSSIBLE.





THE PURPOSE OF THE SAFETY ALERT SYMBOLS ⚠ TO CALL YOUR ATTENTION TO POSSIBLE HAZARDS RELATING TO THE USE AND ASSEMBLY OF YOUR PRODUCT.

THE PURPOSE OF THE TIP SYMBOL 🖱 IS TO CALL YOUR ATTENTION TO SUGGESTIONS THAT WILL ASSIST YOU IN THE ASSEMBLY/DISASSEMBLY PROCESS AND ENHANCE YOUR CAMPING EXPERIENCE. WHEN YOU SEE THESE SYMBOLS, PLEASE CLOSELY FOLLOW THE INFORMATION PROVIDED.

## ⚠ WARNING

- **KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS SCREEN HOUSE FABRIC.** This fabric is not fireproof. It is made with flame resistant fabric, which meets CPAI-84 specifications. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the fabric may render the flame-resistant properties ineffective.
- Do not erect this product near an open flame.
- Never use any fuel burning, oxygen consuming devices, or any device that produces fumes (including, but not limited to cooking stoves, lanterns, candles, hibachis, or heaters) in or around your product. Inhalation of fumes may result in carbon monoxide poisoning, injury and/or death.
- Our recreational products are constructed to rigid specifications. They are not made, however, for extreme weather, climates, or environments. Modification, abuse and extreme weather are some conditions that may adversely affect the structural integrity.
- Additional precautions may be necessary during inclement or "surprise" weather conditions. Here are some tips that may help during these times.
  - 🖱 Use guy lines to help secure your structure during periods of heavy winds.
  - 🖱 Storms or steady rains may collect in water pockets on the roof. This will add weight, which can weaken the overall structure causing the uprights to collapse. Maintain a watchful eye and remove any water accumulation that may occur.

# Parts List


A	Fiberglass pole with pre-bend		2
B	Screen house body		1
C	Guy rope		4
D	Stakes		8

# Assembly Instructions

## Verify Parts

### Step 1:


1. Refer to the parts list and verify all the parts are included and undamaged.

 **Tip: Do this at home prior to your first use of the product.**

## Assembling the Screen House

### Step 2:


1. On a level surface, unfold the screen house so all the corners are visible.
2. Assemble both fiberglass poles (A).
3. Insert the fiberglass poles (A) through pole sleeves, located on the top of the screen house. Refer to image 1.
4. Insert the pin into the fiberglass pole ferrule at the pin & ring, located at the bottom of each corner of the screen house. Refer to image 2.

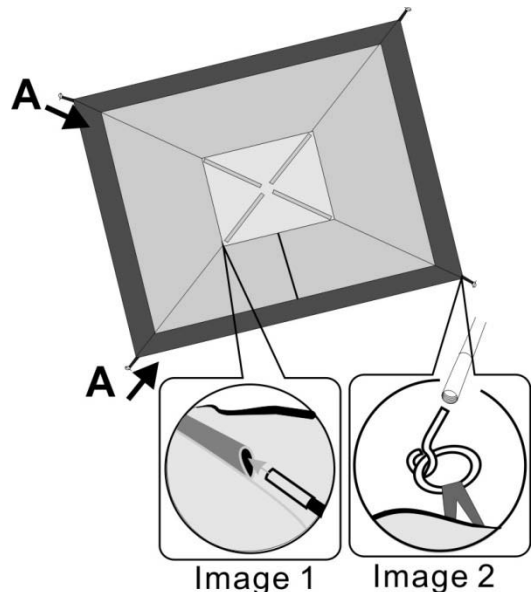

# Assembly Instructions

## Step 3:

1. Now the screen house is standing. Secure it to the ground with a stake through the ring on the corner. Refer to image 1.
2. Attach the screen house to pole with hook-and-loop tape. Refer to Image 2.

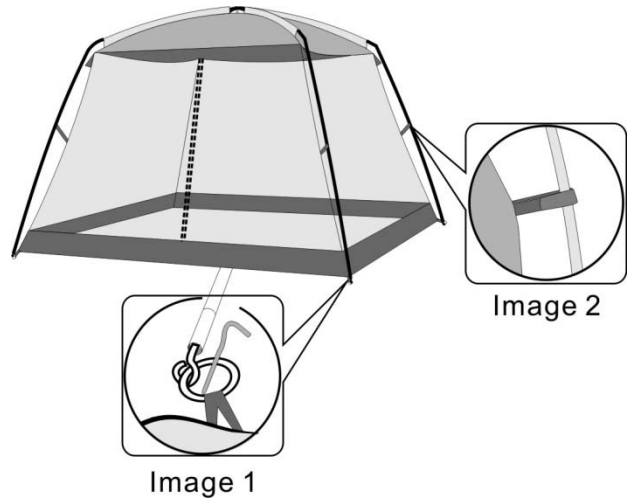

## Step 4:

1. To secure the guy ropes, locate the plastic slider and look for the portion of the guy rope opposite the knot. Pull this portion, forming a loop (works like a slip knot). Extend the guy rope to the desired distance from the screen house and secure the stake into the ground. Refer to Image 1.



## Care and Maintenance

- This product is not waterproof.
- Your product is water repellent, however, during heavy rain some leakage may occur. Keep objects from touching the inside, as objects may cause leakage at the point of contact.
- To prevent seam leakage (floor seams in particular), a seam sealer compound must be applied to the seams. Use recommended water repellent compounds on our product. Read the label on any product before using. Questions? Call our customer Service number.
- Do not spray or apply insecticide or pesticide on your product. It may damage UV resistant and/or water repellent properties of our product. Any damage caused by applying insecticide or pesticide on your product is not covered by the limited warranty.
- Your product must be stored dry. One of the easiest ways to damage your product is storing it while it is wet. Storing a wet product as short a 24 hours in warm weather is likely to cause mildew on the fabric coatings and are not covered by the limited warranty.
- If you must close camp in the rain, open your product and set it up to allow it to dry as soon as possible. Even when your product appears to be dry after use, it is always best to unfold and assure it is completely dry before storing. Try hanging it outside or even leaving loosely clumped in your house for a few days. Turning it inside and out to assure it has dried everywhere, can help prevent damage.
- Do not leave your screen house set up for weeks at a time. Exposure to ultraviolet rays from the sun can damage and/or discolor the material.
- Clean the screen house, when it is set up, using a mild soap and lukewarm water solution. Rinse and dry completely. Do not use detergent, washing machines, or dryers because they can damage the screen house's protective coating and seams.
- Clean the poles with a cloth and lubricate them with a silicone spray to help prevent corrosion and keep from being gritty. This is especially important after using the screen house around the salt water.
- Store the stakes in a separate storage bag. Do not pack the stakes inside the screen house.

## Warranty Information

This product has been manufactured under the highest standards of quality and workmanship. We warrant to the original consumer purchaser that all aspects of this product will be free of defects in material and workmanship for one year from the date of purchase. A replacement for any defective part will be supplied free of charge for installation by the consumer. Defects or damage caused by the use of other than genuine parts are not covered by this warranty. This warranty shall be effective from the date of purchase as shown in the purchaser receipt.

This warranty is valid for the original consumer purchaser only and excludes industrial, commercial or business use of the product, product damage due to shipment or failure which results from alteration, product abuse, or product misuse, whether performed by a contractor , service company , or consumer. We will not be responsible for labor charges and/or damage incurred in installation, repair or replacement nor for incidental or consequential damage.