



MAGELLAN
O U T D O O R S[®]

Assembly Instructions
DELUXE 14 ft. X12 ft. SCREEN
HOUSE
FSMGCT5000



Please keep this instruction manual for future reference

Customer Service: (888) 922-2336

7:00 am to 12:00 am CST (daily)

Live Chat at: www.academy.com

Email: customerservice@academy.com

Made In Bangladesh

Table of Contents

Warnings..... 2

Parts List..... 3



Assembly Instructions..... 4-6

Care and Maintenance.....7

Note: Before beginning assembly of product, make sure all parts are present. Compare parts with package content list and hardware contents. If any part is missing or damaged do not attempt to assemble the unit. Contact customer service for replacement parts.



Warnings

IMPORTANT SAFETY AND TIP INFORMATION






TO MAXIMIZE THE ENJOYMENT OF YOUR PRODUCT PLEASE ASSEMBLE AND USE YOUR PRODUCT AS SAFELY AS POSSIBLE. THE PURPOSE OF THE SAFETY ALERT SYMBOL  IS TO CALL YOUR ATTENTION TO POSSIBLE HAZARDS RELATING TO THE USE AND ASSEMBLY OF YOUR PRODUCT. THE PURPOSE OF THE TIP SYMBOL  IS TO CALL YOUR ATTENTION TO SUGGESTIONS THAT WILL ASSIST YOU IN THE ASSEMBLY/DISASSEMBLY PROCESS AND ENHANCE YOUR CAMPING EXPERIENCE. WHEN YOU SEE THESE SYMBOLS, PLEASE CLOSELY FOLLOW THE INFORMATION PROVIDED.



WARNING

- **KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC.** This fabric is not fireproof! It is made with flame resistant fabric, which meets CPAI-84 specifications. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the fabric may render the flame-resistant properties ineffective.
- Do not erect this product near an open flame.
- Never use any fuel burning, oxygen consuming devices, or any device that produces fumes (including, but not limited to cooking stoves, lanterns, candles, hibachis, or heaters) in or around your product. Inhalation of fumes may result in carbon monoxide poisoning, injury and/or death.
- This product is not waterproof!
- Your product is water repellent, however, during heavy rain some leakage may occur. Keep objects from touching the inside, as objects may cause leakage at the point of contact.
- To prevent seam leakage (floor seams in particular), a seam sealer compound must be applied to the seams. Use recommended water repellent compounds on our product. Read the label on any product before using. Questions? Call our Customer Service number.
- Your recreational product is made from synthetic fabric that has been treated and is highly resistant to the sun's Ultraviolet (UV) light. No fabric can withstand prolonged exposure to sunlight. UV damage is not covered by the limited warranty.
- Do not spray or apply insecticide or pesticide on your product. It may damage UV resistant and/or water repellent properties of our product. Any damage caused by applying insecticide or pesticide on your product is not covered by the limited warranty.
- Our recreational products are constructed to rigid specifications. They are not made, however, for extreme weather, climates, or environments. Modification, abuse and extreme weather are some conditions that may adversely affect the structural integrity.
- Additional precautions may be necessary during inclement or "surprise" weather conditions. Here are some tips that may help during these times.
 -  Use guy lines to help secure your structure during periods of heavy winds.
 -  Storms or steady rains may collect in water pockets on the roof. This will add weight, which can weaken the overall structure causing the uprights to collapse. Maintain a watchful eye and remove any water accumulation that may occur.

Parts List


A	Yellow Coded fiberglass pole		2
B	Red Coded fiberglass pole		2
C	Gray steel pole		8
D	Screen house body		1
E	Stakes		16

Assembly Instructions

Verify Parts


Step 1:

1. Refer to the parts list and verify all the parts are included and undamaged.

 **Tip: Do this at home prior to your first use of the product.**


2. On a level surface, unfold the screen house so all the corners are visible.
3. Assemble the fiberglass poles (A) and (B) and the gray steel poles (C).

Assembling the Screen House

 **Tip: Start the assembly with the roof portion of the tent**

Step 2:

1. Insert the fiberglass poles (A) and (B) through pole sleeve, located on the top of the screen house. Refer to image 1.
2. Insert the fiberglass pole end of (A) and (B) into the ribbed hole(color coded) of the two way plastic hub. **Coded color on fiberglass pole ends must match with that on plastic hub.** Refer to image 2.

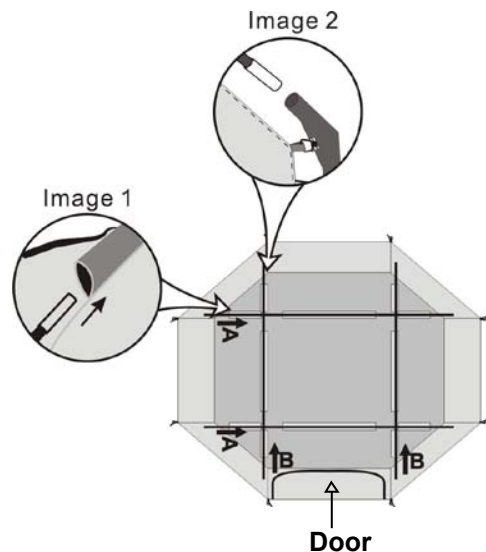

Assembly Instructions

Step 3:

1. Insert one end of gray steel poles (C) into the larger diameter hole(smooth) of the two way plastic hub. Refer to image 1.



Step 4:

1. Place the pin (located at the bottom of the screen house) into the other end of gray steel pole (C). Refer to image 1.
2. Attach the "G hook" onto the gray steel pole (C). Refer to image 2.



Assembly Instructions

Step 5:

1. Secure the screen house into the ground by using the stakes (F). Refer to image 1.
2. Extend the guy ropes and secure them down using the stakes (F) to stabilize the screen house. Refer to image 2.



Care and Maintenance

- Your product must be stored dry. One of the easiest ways to damage your product is storing it while it is wet. Storing a wet product as short a 24 hours in warm weather is likely to cause mildew on the fabric coatings and are not covered by the limited warranty.
- If you must close camp in the rain, open your product and set it up to allow it to dry as soon as possible. Even when your product appears to be dry after use, it is always best to unfold and assure it is completely dry before storing. Hanging it outside or even leaving loosely clumped in your house for a few days. Turning it inside and out to assure it had dried everywhere, can help prevent damage.
- Do not leave your screen house set up for weeks at a time. Exposure to ultraviolet rays from the sun can damage and/or discolor the material.
- Clean the screen house, when it is set up, using a mild soap and lukewarm water solution. Rinse and dry completely. Do not use detergent, washing machines, or dryers because they can damage the screen house's protective coating and seams.
- Clean the poles with a cloth and lubricate them with a silicone spray to help prevent corrosion and keep from being gritty. This is especially important after using the screen house around the salt water.
- Store the stakes in a separate storage bag. Do not pack the stakes inside the screen house.