 


Instruction Manual GROUND ANCHOR SYSTEM

ITEM:161730





Thank you for your purchase of this quality Game Winner Product! In order to reduce your risk of injury, you MUST read and thoroughly understand all of the safety warnings, usage instructions and other information contained within the written instructions and warnings provided with this product and any other equipment used. Retain the instructional and warning materials and review them periodically (at least once a year and always with any new user). Failure to follow all instructions and warnings may lead to serious injury or death. DO NOT USE THIS PRODUCT UNTIL AND UNLESS YOU HAVE READ AND THOROUGHLY UNDERSTAND ALL INSTRUCTIONS, SAFETY WARNINGS AND OTHER MATERIALS. If you have any questions, do not use the product until you have contacted the manufacturer at 949-262-3416 or email customerservice@innopower.biz.

Business Hours:

Monday through Friday, 8:00 am to 5:00 pm ET. If you are unable to speak with a representative, please leave a voicemail with your contact information and your call will be returned within one (1) business day.

For Customer Service, please call <u>949-262-3416</u> or

E-mail: customerservice@innopower.biz

(Made In China)

Warnings 3 -	4
Tools Required	4
Parts List	5
Product Diagram	5
Assembly & Installation Instructions 6 -	7
Care and Maintenance	7
Warranty Information	8

Note: Before beginning assembly of product, make sure all parts are present. Compare parts with package content list and hardware contents. If any part is missing or damaged do not attempt to assemble the unit. Contact customer service for replacement parts.

Warnings



ATTENTION!

WHEN YOU SEE A A SYMBOL OR THE WORD "WARNING!" BE SURE TO READ THE MESSAGE! THE INFORMATION CONTAINED IN THESE MESSAGES CAN SAVE YOUR LIFE OR PREVENT SERIOUS INJURY!! BE SAFE! FOLLOW ALL WARNINGS!!



WARNING! THIS SYSTEM IS ONLY INTENDED AS ADDITIONAL ANCHOR SYSTEM TO BE USED IN ADDITION TO AND IN CONJUNCTION WITH ANCHORS ALREADY PROVIDED WITH PRODUCT BEING SECURED. NEVER USE AS A SINGLE ANCHOR SYSTEM. NEVER USE ON PRODUCTS WITH MAXIMUM LOAD EXCEEDING 300LBS (ON SOFT OR MUDDY SOIL DO NOT EXCEED 250LBS)! USE ACCORDING TO MANUFACTURER'S INSTRUCTIONS OF PRODUCT YOU ARE SECURING. FOLLOW ALL INSTRUCTIONS AND WARNINGS OF THE PRODUCT YOU ARE SECURING AND INCLUDED INSTRUCTIONS AND WARNINGS. FAILURE TO FOLLOW ALL INSTRUCTIONS/WARNINGS AND THE INSTRUCTIONS/WARNINGS OF THE PRODUCT YOU ARE SECURING MAY RESULT IN INSTABILITY, MODIFICATION OF THE INTENDED USES OF ITEM YOU ARE SECURING, DAMAGE TO ITEM YOU ARE SECURING OR SERIOUS INJURY OR DEATH!



WARNING! WHEN USING THIS PRODUCT ON ELEVATED PLATFORMS FALLS CAN OCCUR ANYTIME AFTER LEAVING THE GROUND. THESE FALLS RESULT IN EITHER SERIOUS INJURY OR DEATH! FOR YOUR PERSONAL SAFETY, READ THIS PRODUCTS INSTRUCTION MANUAL ALONG WITH ELEVATED PLATFORM MANUFACTURERS' INSTRUCTION MANUAL IN ITS ENTIRETY BEFORE ATTEMPTING TO ASSEMBLE, SET-UP, INSTALL AND/OR OTHERWISE USE THIS PRODUCT. ANNUALLY REVIEW THE CONTENTS OF THIS INSTRUCTION MANUAL. ADDITIONALLY, KEEP THESE INSTRUCTIONS FOR THE ENTIRE DURATION YOU OWN THIS PRODUCT. FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN SERIOUS INJURY OR DEATH!



WARNING! NEVER USE THIS PRODUCT WITHOUT USING ANCHORING SYSTEM INCLUDED WITH YOUR PRODUCT BEING SECURED SUCH AS POD, TRIPOD, ELEVATED PLATFORM, ETC. FAILURE TO FOLLOW ALL INSTRUCTIONS AND INSTRUCTIONS OF PRODUCT YOU ARE SECURING MAY RESULT IN INSTABILITY, MODIFICATION OF THE INTENDED USES OF ITEM YOU ARE SECURING, DAMAGE TO ITEM YOU ARE SECURING OR SERIOUS INJURY OR DEATH!



WARNING! It is the responsibility of the consumer to install tie down anchor in solid / firm soil as soil types may differ from location to location. Never install tie down anchor in soft, muddy or sandy soil or conditions that may not hold the tie down auger. Failure to follow these instructions may result in serious injury, death or damage to your product!



WARNING! Depending on the size / profile of the product being secured, soil type, and wind conditions it may take more than one ground anchor system to properly secure your product. This is responsibility of the consumer to determine how many ground anchor systems are needed to secure your product. Innopower Inc. is not liable for any damage, injuries or deaths that may occur from not adequately securing your product.



WARNING! It is the responsibility of the consumer to remove their product if severe weather (such as high winds or other potentially damaging conditions) is forecasted in your area as Innopower Inc. is not liable for any damage, injuries or deaths that may occur as a result of severe weather.



WARNING! Prior to Installation, consult with all local building codes and check with local authorities for underground pipes, gas lines, water lines, electric wires or wires before you install auger into the ground. Failure to follow these instructions may result in serious injury or death!



WARNING! When securing elevated platforms you must check the ground under the elevated platform to make sure it is firm and level. Sloping ground or uneven surfaces (e.g., one foot on a rock) can cause your ladder to tilt or shift as you climb. Failure to follow these instructions may result in serious injury or death!

Warnings



WARNING! When securing elevated platforms, you MUST ensure that your elevated platform is erected so that the platform is level. Any installation other than level, will result in a dangerous condition for the user. If you find your elevated platform canted, un-level or in any condition other than level, you must remove it and review manufacturers' installation step by step to insure that you have properly assembled the stand. If the cantor is the result of a sloping ground, do not hunt from that location. Find an alternative installation site that affords level installation. Failure to follow these instructions may result in serious injury or death!



WARNING! Periodic tensioning of the auger stake and wire rope maybe required as your product settles. For elevated platforms, check tension each time before climbing. Failure to follow these instructions may result in serious injury, death or damage to your product!



WARNING! Thoroughly inspect this or any other product prior to use for signs of wear, rot, corrosion, cracks, fraying, deterioration and/or any other type of damage. DO NOT use this or any other product(s) if they show evidence of wear, rot, corrosion, cracks, fraying, deterioration and/or any other type of damage. Failure to follow these instructions may result in serious injury or death!



WARNING! This product is designed for adult use only. No one under the age of 18 should attempt to use this or any other Game Winner product(s) without direct adult supervision.



WARNING! Do not remove, modify any portion or otherwise mechanically modify this product or its assemblies in any manner. Make certain that all parts are used in the assembly of this product. Parts are designed and tested to work together. Modification, additions, misuse, part omission or substitution shall immediately void your factory warranty and may result in serious injury or death! If you suspect a part(s) is missing and/or damaged, immediately contact Innopower Inc. at (949) 262-3416 for replacement of missing or detective parts. Never modify this product in any way by making repairs, or altering, omitting, adding or attaching anything to it. ALWAYS USE GENUINE FACTORY AUTHORIZED INNOPOWER INC. REPLACEMENT PARTS. USE OF ANY REPLACEMENT PARTS OTHER THAN GENUINE INNOPOWER INC. PARTS VOIDS YOUR WARRANTY AND RELIEVES INNOPOWER INC. OF ANY RESULTANT LIABILITIES AND MAY RESULT IN SERIOUS INJURY OR DEATH! DO NOT modify, fix/repair, alter, bend, cut, weld, or heat this product in any way. Failure to follow these instructions may result in serious injury or death!



WARNING! DO NOT modify, fix/repair, alter, bend, cut, weld, or heat this product in any way. Failure to follow these instructions may result in serious injury or death!


TOOLS REQUIRED

Qty 1 – Adjustable Wrench (Not Included)



Parts List

1	Auger Stake	Qty 1
2	Wire Rope with Loop	Qty 1
3	Wire Rope Clips	Qty 2
4	Auger Installation Tool	Qty 1

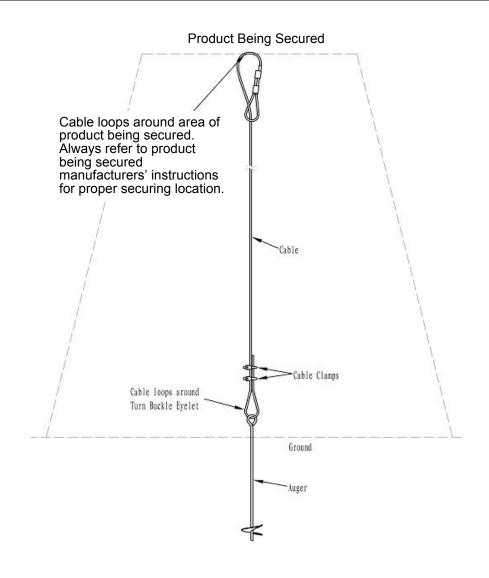

Assembly & Installation Instructions


Step 1:

WARNING! This ground anchor system is only intended as additional anchor system to be used in addition to and in conjunction with anchors already provided with product being secured. Never use as a single anchor system. Failure to follow these instructions may result in serious injury or death or damage to your product!

WARNING! Always use according to manufacturer's instructions of product you are securing. Follow all instructions and warnings of the product you are securing and included instructions and warnings. Failure to follow these warnings and the instructions of the product you are securing may result in instability, modification of the intended uses of item you are securing, damage to item you are securing or serious injury or death!

Wire Rope Installation on Product You are Securing:

Follow manufacturer's instructions of product you are securing to locate proper securing location to attach wire rope. Wrap loop end of wire rope around/through securing location. Place other end of wire rope through wire rope loop and pull wire rope through loop end. Continue pulling wire rope through loop end until wire rope and loop end are tight on the securing location of your product. See figure 1.

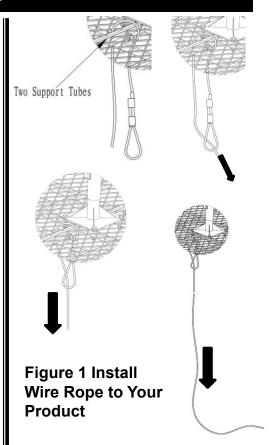

Step 2:

WARNING! It is responsibility of the consumer to install auger stake in solid / firm soil as soil types may differ from location to location. Never install auger stake in soft, muddy, or sandy soil or conditions that may not hold the auger stake. Failure to follow these instructions may result in serious injury, death or damage to your product!

Auger Stake Installation:

Follow manufacturer's instructions of product you are securing to locate auger stake location making sure auger stake location has solid / firm soil. If soil is soft, muddy, or sandy, move product to new location that has solid / firm soil.

Twist auger stake into solid / firm soil. Turn the auger stake until the anchor extends above the ground approximately 2 inches. See figure 2. (It will make the auger stake easier to twist into the ground if all grass and vegetation is removed before installation)

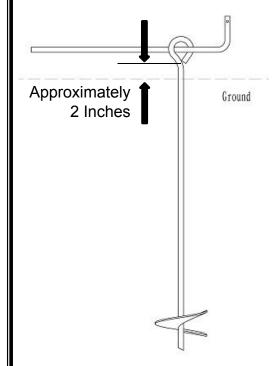


Figure 2 Auger Stake Installation

Assembly & Installation Instructions

Step 3:

String the wire rope through the eye on the Auger Stake and pull up to remove all slack in wire rope. See figure 4.

Secure the wire rope with (2) wire rope clips so clip loop is over short end of wire loop shown in Figure 5. Securely tighten the wire clips with adjustable wrench (not included) to prevent the wire rope from slipping.

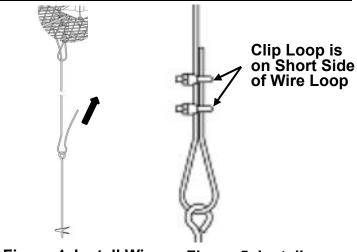


Figure 4 Install Wire Rope to Auger Stake

Figure 5 Install Wire Rope Clips

Step 4:

Twist auger stake into soil so auger stake eye is at ground level or until wire rope is tight. See figure 6.

Note – Do not overtighten wire rope to avoid damage on product you are securing. Ground Anchor System is installed.

WARNING! Depending on the size / profile of product being secured, soil type, and wind conditions it may take more than one ground anchor systems to properly secure your product. This is responsibility of the consumer to determine how many ground anchor systems are needed to secure your product. Innopower Inc. is not liable for any damage, injuries or deaths that may occur from not adequately securing your product.

WARNING! Periodic tensioning of the auger stake and wire rope maybe required as your product settles. For elevated platforms, check tension each time before climbing. Failure to follow these instructions may result in serious injury, death or damage to your product!

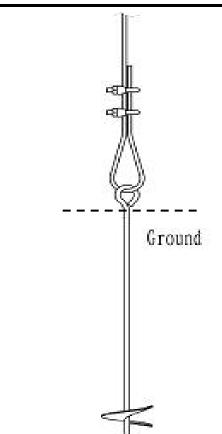


Figure 6 Anchor System Installed with Wire Rope Tight

Care and Maintenance

Periodic tensioning of the auger stake and wire rope maybe required as the securing product settles. For elevated platforms, check tension each time before climbing to platform.

Warranty Information

Important Warranty Information

Innopower Inc. warrants this Game Winner product against defect(s) in material and workmanship, under proper use and storage, for the period of one (1) year from the date of purchase. Proof of purchase, plus, the return of your warranty application card to our home office, is required for any warranty claim. In the events this product is found to be defective within the warranty period, Innopower Inc.'s only obligation and your exclusive remedy shall be replacement or repair of any defective parts at our discretion. To obtain warranty service, please contact Innopower Customer Service at (949) 262-3416. Exclusions to this warranty include seat, paint, plastics, webbing and/or defects caused by operator misuse and/or abuse. Limitation to liability include the forgoing warranty is made in lieu of all other warranties, express or implied and Innopower Inc. disclaims any implied warranty of merchantability and fitness. Innopower Inc. shall not be liable for any damages direct, consequential or incidental arising out of the use or inability of this product.

Warranty Application Card				
I have read and understand the safety, assembly and operating instructions provided with my Game Winner product. I have read the warranty information and know that I can call				
Innopower Inc. at (949) 262-3416 with any questions or concerns that I may have about this or any other Game Winner product. Mail to: INNOPOWER INC.				
PO Box 265, E. Irvine, CA 92650. Email: customerservice@innopower.biz				
NamePurchase Location				
Address				
City/State/Zip				
Purchase Date				
Product				