



Instruction Manual 20FT OFFSET STICKS 2.0

161737

Maximum Weight Capacity (User and Equipment) - 300 pounds (136 kg)





YOU MUST READ ALL WRITTEN INSTRUCTIONS AND WATCH THIS SAFETY VIDEO BEFORE USING!



WATCH THIS SAFETY VIDEO BEFORE USING!



or Visit



www.standsafety.com/in7

Scan the QR code with your smart phone, tablet or similar device.

OR

Type the website address into your web browser to view an important safety video before using this product.

STICK LADDER SAFETY



Every year people are injured from hunting related falls. Most of these injuries could have been prevented by following the instructions and warnings provided with the tree stand and safety harness. Tree stands are used at height and falls can result in serious injury or death. Your own safety, and the safety of any user of this product, should be your first priority. In order to reduce your risk of injury, you MUST read and thoroughly understand all of the safety warnings, usage instructions and other information contained within the written and safety video instructions and warnings provided with this product, and any other hunting equipment used. Retain the instructional and warning materials and review them periodically (at least once a year and always with any new user). Failure to follow all instructions and warnings may lead to serious injury or death. DO NOT USE THIS PRODUCT UNTIL AND UNLESS YOU HAVE READ AND THOROUGHLY UNDERSTAND ALL INSTRUCTIONS, SAFETY WARNINGS AND OTHER MATERIALS. If you have any questions, do not use the product until you have contacted the manufacturer at 949-262-3416 or email customerservice@innopower.biz.

Business Hours:

Monday through Friday, 8:00 am to 5:00 pm ET. If you are unable to speak with a representative, please leave a voicemail with your contact information and your call will be returned within one (1) business day.

For Customer Service, please call 949-262-3416 or

E-mail: customerservice@innopower.biz

(Made In China)

Warnings	3-7
Parts List	8
Tools Required	8
Hardware	9
Product Diagram	9
Assembly Instructions	10
Installation Instructions	11-14
Removal Instructions	15
Care and Maintenance	15
Warranty Information	16

Note: Before beginning assembly of product, make sure all parts are present. Compare parts with package content list and hardware contents. If any part is missing or damaged do not attempt to assemble the unit. Contact customer service for replacement parts.



ATTENTION!

WHEN YOU SEE A SYMBOL OR THE WORD "WARNING!" BE SURE TO READ THE MESSAGE! THE INFORMATION CONTAINED IN THESE MESSAGES CAN SAVE YOUR LIFE OR PREVENT SERIOUS INJURY!! BE SAFE! FOLLOW ALL WARNINGS!!



WARNING! FALLS FROM A TREESTAND CAN OCCUR ANYTIME AFTER LEAVING THE GROUND. THESE FALLS RESULT IN EITHER SERIOUS INJURY OR DEATH! FOR YOUR PERSONAL SAFETY, PLEASE TAKE A MOMENT TO CAREFULLY READ THIS PRODUCT INSTRUCTION MANUAL IN ITS ENTIRETY BEFORE ATTEMPTING TO ASSEMBLE, SET-UP, INSTALL AND/OR OTHERWISE USE THIS GAME WINNER PRODUCT. ANNUALLY REVIEW THE CONTENTS OF THIS INSTRUCTION MANUAL. ADDITIONALLY, KEEP THESE INSTRUCTONS FOR THE ENTIRE DURATION YOU OWN THIS PRODUCT(S). FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN SERIOUS INJURY OR DEATH!



WARNING! THE SAFE USE AND OPERATION OF THIS PRODUCT(S) IS THE SOLE RESPONSIBILITY OF THE USER. IT IS THE SOLE RESPONSIBILITY OF THE OWNER TO PROVIDE ANY PERSON(S) WHO BORROW OR PURCHASE THIS PRODUCT WITH ALL WRITTEN AND SAFETY VIDEO INSTRUCTIONS AND WARNINGS PRIOR TO USE. DO NOT ALLOW A PERSON TO USE THE PRODUCT THAT HAS NOT REVIEWED ALL WRITTEN AND SAFETY VIDEO INSTRUCTIONS AND WARNINGS PRIOR TO USE. FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN SERIOUS INJURY OR DEATH! STORE ALL WRITTEN AND SAFETY VIDEO INSTRUCTIONS AND WARNINGS IN A SAFE LOCATION WHERE THEY CAN BE SHARED WITH POTENTIAL USERS. IF ANY INSTRUCTIONS OR WARNINGS ARE LOST OR DISCARDED, DO NOT USE THE PRODUCT AND DO NOT ALLOW ANY OTHER PERSON TO USE THE PRODUCT.



WARNING! THIS PRODUCT CARRIES A STRICT WEIGHT LIMITATION. DO NOT USE THIS PRODUCT IF YOU EXCEED THIS TOTAL LIMIT. PLEASE NOTE THIS WEIGHT LIMIT INCLUDES THE USER AND EQUIPMENT. FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN SERIOUS INJURY OR DEATH!



WARNING! Prior to each hunt, make certain you have a signaling device (e.g., mobile phone, cell phone, radio, whistle, signal flare, Personal Locator Device [PLD], etc.) in your possession and on your person in an operable condition. This device must be within easy access should you experience the need to contact emergency assistance. Failure to follow this instruction may result in serious injury or death!



WARNING! Failure to read and strictly comply with the instructions contained in this Instruction Manual may result in serious injury or death!



WARNING! Thoroughly inspect this or any other Game Winner product(s) prior to use for signs of wear, rot, corrosion, cracks, fraying, deterioration and/or any other type of damage. DO NOT use this or any other Game Winner product(s) if they show evidence of wear, rot, corrosion, cracks, fraying, deterioration and/or any other type of damage. Failure to follow these instructions may result in serious injury or death!



WARNING! This product is designed for adult use only. No one under the age of 18 should attempt to use this or any other Game Winner product(s) without direct adult supervision.



WARNING! Do not remove, modify any portion or otherwise mechanically modify this product or its assemblies in any manner. Make certain that all parts are used in the assembly of this product. Parts are designed and tested to work together. Modification, additions, misuse, part omission or substitution shall immediately void your factory warranty and may result in serious injury or death! If you suspect a part(s) is missing and/or damaged, immediately contact Innopower Inc. at (949) 262-3416 for replacement of missing or detective parts. Never modify your stand in any way by making repairs, altering, omitting, adding or attaching anything to it. ALWAYS USE GENUINE FACTORY AUTHORIZED INNOPOWER INC. REPLACEMENT PARTS. USE OF ANY REPLACEMENT PARTS OTHER THAN GENUINE INNOPOWER INC. PARTS VOIDS YOUR WARRANTY AND RELIEVES INNOPOWER INC. OF ANY RESULTANT LIABILITIES AND MAY RESULT IN SERIOUS INJURY OR DEATH!



WARNING! Prior to attempting to use this or any Game Winner product(s), you must take a moment and become familiar with its assembly, setup, installation and removal. You must practice setting-up, using and removing the product(s) at ground level prior to attempting to use it at heights above ground-level. Once you have become thoroughly knowledgeable and comfortable with this products set-up, use and removal at ground-level, you are now ready to use it at heights above ground-level. Failure to follow these instructions may result in serious injury or death!



WARNING! When hunting from a treestand, falls can occur any time after leaving the ground causing injury or death. Always wear your full-body fall arrest system (FAS) comprising a full-body harness, tether, tree belt, lineman's climbing strap and Suspension Relief Device at all times after leaving the ground. You must stay connected at all times after leaving the ground. Using climbing sticks (including using them with a fixed position stand) requires the use of lineman's style belt that will allow you to stay connected until you reach the platform. The use of a lineman's style belt will allow you to climb up to the platform, connect the tether to the tree strap above the platform and only then release the lineman's style belt. Using this method allows the user to remain connected to the tree at all times after leaving the ground. The use of this double connection technique is explained in the harness instructions. Always remain attached to the tree! Single safety belts and chest harnesses are no longer allowed and should never be used as they put the user at serious risk of injury or death. If you are not wearing your full-body arrest harness properly attached to the tree that is protecting you from a fall, do not leave the ground. Failure to follow these instructions may result in serious injury or death!



WARNING! Never rely on a tree branch for support while climbing. Failure to follow these instructions may result in serious injury or death!



WARNING! You must always inform someone of your hunting location, where the tree stand will be located and the expected duration of the hunt. Failure to follow these instructions may result in serious injury or death!



WARNING! Inspect all safety devices each time before each use. DO NOT leave the ground or use these devices if they show signs of wear, damage, deterioration, vandalism, fraying or other damage. Factors such as tree growth, vandals, weather and animals may affect the performance of an unattended tree stand or safety device. Do not store these devices outdoors when not in use. Failure to follow these instructions may result in serious injury or death!



WARNING! Practice using your full-body fall arrest harness at ground-level in the presence of a responsible adult to experience the feeling of hanging suspended before using in a hunting environment. Failure to follow these instructions may result in serious injury or death!



WARNING! The length of the full-body fall arrest tether must be minimized at all times. It should be adjusted so that it is above the head with no slack (snug) in the sitting position and you should have the minimum amount of slack possible when climbing. Failure to follow these instructions may result in serious injury or death!



WARNING! Failure to follow harness instructions could result in not being able to return to the stand and being suspended in a harness after a fall. If your hunting location is unknown by anyone and communications efforts are unsuccessful, you must have a personal plan for self-recovery/escape should you experience a fall. Prolonged suspension in a harness can be fatal. It is important to exercise the legs by pushing against the tree or doing other forms of continuous leg exercise to avoid blood pooling while being suspended. Varying degrees of physical fitness may require different plans for self-recovery/escape to avoid the effects of prolonged suspension. Have a personal plan and practice it in the presence of a responsible adult before leaving the ground. No one escape/rescue plan will work for every hunter, on every tree, in every circumstance. Only you can determine the best self-recovery/escape plan for your hunting situation and you must have a self-recovery/escape plan for your individual situation before leaving the ground. There is time to make a correct decision on what action to take if a fall occurs while wearing a full-body fall arrest harness. It is important to remember, "DO NOT PANIC." You must only hunt from the ground when self-recovery/escape ability is absent. Failure to follow these instructions may result in serious injury or death!

Several optional products/systems are available that offer self-recovery or self extraction from a fall when suspended in a harness. Some systems automatically descend the user while others allow user control. One of these products/systems can be considered for use as an additional safety precaution against prolonged suspension and suspension trauma. Be sure to follow the manufacturers' directions on the safe use of these products/systems.



WARNING! A suspension relief device must be on your person and readily accessible while using your full-body fall arrest harness. These devices allow the user to relieve the load on the lower extremities if suspended in a harness and help maintain circulation in the legs, mitigate suspension trauma (blood pooling) or allow descent to the ground. Be sure to follow the directions on the safe use of any suspension relief device. Failure to follow these instructions may result in serious injury or death!



WARNING! If you have a limiting physical and/or health condition, DO NOT hunt from heights above ground level. Hunt from the ground when self-recovery/escape ability is absent. Failure to follow these instructions may result in serious injury or death!



WARNING! NEVER allow the harness tether to get under your chin or around your neck. This poses a choking hazard that can lead to serious injury or death. Failure to follow these instructions may result in serious injury or death.



WARNING! Never attempt to climb up or climb down with a weapon and/or gear. ALWAYS unload your weapon and pull it up to hunting height using a pull up rope when raising or lowering firearms, the chamber must be open and the barrel pointing toward the ground. ALWAYS lower your unloaded weapon down to the ground prior to attempting to climb down. Use this same method when raising or lowering all other gear. Failure to follow these instructions may result in serious injury or death!



WARNING! DO NOT attempt to use this and/or any other Game Winner product(s) when ice, snow and/or freezing rain has deposited or formed on any portion of the product or tree you intend to climb. Failure to follow these instructions may result in serious injury or death!



WARNING! ALWAYS maintain three (3) point contact when climbing up/down when using this product. Proper three (3) point contact means having either two (2) feet with one (1) hand on step or one (1) foot with two (2) hands on the step portion of the climbing aids at all time when climbing up or down. Failure to follow these instructions may result in serious injury or death!



WARNING! NEVER adjust ANY straps, cables, and/or adjustable support bars while standing on 🖺 climbing sticks. Make all adjustments at ground level and secure climbing stick sections before you step upon them. DO NOT use any climbing stick if there is wear, rot, corrosion, cracks, fraying, deterioration and/or any other type of damage on any part of the climbing stick. Failure to follow these instructions may result in serious injury or death!



WARNING! DO NOT modify, fix/repair, alter, bend, cut, weld, or heat this product in any way. Failure to follow these instructions may result in serious injury or death!



WARNING! DO NOT lean out from a climbing stick or treestand for any reason. Never use your full-body arrest harness to help you lean out from your treestand to make a difficult shot. Failure to follow these instructions may result in serious injury or death!



WARNING! DO NOT use this or any other Game Winner product(s) if you have a history of heart problems, back problems, impaired vision, joints that lock-up, spinal fusions, equilibrium problems, high blood pressure, are not well-rested and/or any other physical impairment that may limit your ability to use and/or operate this product(s) in the safe manner outlined in this instruction manual. Additionally, do not use this or any other Game Winner product(s) if you are currently taking any medication (including prescription or over-the-counter [OTC]) and/or using and/or consuming any substance, or consumed any substance, including alcohol, that may limit your ability to use this product as outlined and described in this instruction manual. Never use a tree stand when feeling ill, nauseous or dizzy. Do not use any Game Winner product(s) without consent from your medical doctor. Failure to follow these instructions may result in serious injury or death!



WARNING! DO NOT attempt to use this or any other Game Winner product(s) when lightning or thunderstorms are threatening and/or present within five (5) miles. Do not attempt to use this or any other Game Winner product(s) during or under threat of any adverse weather condition. This includes weather conditions which have the potential for producing winds, lightning, rain, snow, sleet and/or any other atmospheric condition which may limit the user's ability to operate this product in a safe manner as described in this instruction manual. Should inclement weather conditions arise during your use of this product, return to the ground immediately. Failure to follow these instructions may result in serious injury or death!



WARNING! DO NOT use this product, or attempt to use a treestand, on a dead, leaning, diseased, loose barked tree (bark that flakes or falls off), irregular shaped trees or utility poles. DO NOT use this product on any tree that does not allow for a level standing platform. Failure to follow these instructions may result in serious injury and death!



WARNING! Never jump or bounce on a treestand or this product for any reason. Failure to follow these instructions may result in serious injury or death!

SPECIAL CONSIDERATIONS FOR CLIMBING STICK USAGE



WARNING! When using this product and when hunting from a treestand falls can occur any time after leaving the ground causing serious injury or death. Always wear fall arrest system (FAS) comprising of full body harness and lineman's/climbing strap at all times after leaving the ground. You must remain connected to tree at all times after leaving the ground while using this product or any treestand.



WARNING! THIS PRODUCT DOES NOT COME WITH A FULL BODY HARNESS. Full body harnesses are provided with all treestands that have been certified by an independent testing facility to meet or exceed industry standards and are also available as after market purchases. This product is never intended to be used without a full body harness with lineman's climbing strap. If full body harness with lineman's climbing strap is unavailable, do not install or use this product.



WARNING! A full body harness is an integral part of climbing sticks. Never use without using a full body harness with lineman's/climbing strap that has been tested by a third party testing laboratory to meet or exceed industry standards. Single safety belts and chest harnesses are no longer allowed and should never be used.



WARNING! If you are not wearing a full body harness with lineman's/climbing strap properly attached to a tree that is protecting you from a fall, do not leave the ground.



WARNING! READ THE MANUAL THAT CAME WITH YOUR FULL-BODY FALL ARREST HARNESS THOROUGHLY AND FOLLOW ALL THE INSTRUCTIONS! Failure to wear a full-body harness when using this product puts the user at serious risk of injury or death. Failure to follow these instructions may result in serious injury or death!



WARNING! Before each use, inspect climbing sticks, treestand and all safety devices for damage including but not limited to corrosion, rust, cracks, deformity, bends, rot, wear, cuts or fraying and other damage to tree strap, cables, crimps, hardware, platform, upright, seat, etc. Do not use if damage, wear, deterioration, vandalism, etc. is detected or suspected.



WARNING! Never leave this product or any treestand in a tree for more than two (2) weeks (14 days). Weather, elements, animals, vandalism, and/or other mechanisms could damage this product. Tree growth can also stress and damage straps, chains and buckles. Failure to follow these instructions may result in serious injury or death!



WARNING! ALWAYS have a second adult present or at least accessible by cell phone or other means when installing/removing or using this product and/or a treestand. The ability to get help quickly may save your life in the event of a fall. A good non-slip safety boot is important for your safety. Be especially careful that bootlaces do not get hooked on the treestand or climbing aids (tuck shoelaces into boot before climbing). Failure to follow these instructions may result in serious injury or death!



WARNING! Replace tree straps every two years or sooner if wear, damage, deterioration, rust cuts, tears, rot, etc. or vandalism is detected or suspected. Do not use this product after it expires. Contact the nearest Game Winner dealer or call Innopower at (949) 262-3416 for replacement parts. The use of unauthorized replacement parts may result in serious injury or death.



WARNING! BEFORE each use, make sure all nuts and bolts are secure. CHECK this product (and any treestand being used) including but not limited to all hardware, attachment points and webbing prior to every use to make sure no damage has occurred. Keep webbing from coming into contact with any sharp edges. DO NOT USE THIS PRODUCT IF ANY DAMAGE IS SEEN OR SUSPECTED ON THIS PRODUCT OR THE TREESTAND OR ANY OF THEIR COMPONENTS. Failure to follow these instructions may result in serious injury or death!

Parts List


1	Bottom Section #1	111	Qty 1
2	Middle Section #2,		Qty 2
3	Middle Section #3		Qty 1
4	Section #5		Qty 1
5	V-Brackets		Qty 5
6	U-Brackets	•	Qty 4
7	Ratchet Straps with 2 Hooks	S	Qty 2
8	Cam Buckle Strap with 2 Hooks		Qty 3

Tools Required (Provided)



Hardware				
	01	M0V40 / ''' 0	M6x40	Qty
	Step 1	M6X40 (with 2 steel washers and nut)		8
	Step 2	M8X55 (with 2 steel washers and nut)	M8x55	Qty 5

Product Diagram

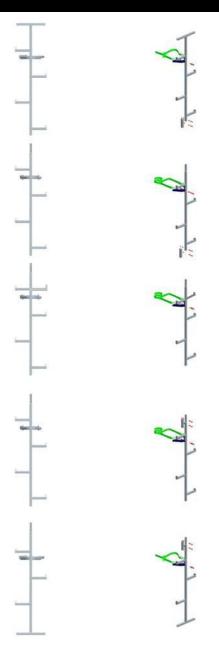


Assembly Instructions

STEP 1:

CONNECTING STICK SECTIONS

- Connect Stick Section #1 to Stick Section #2 by inserting sections together. Attach U-Brackets to the connection. Make sure steps are staggered from one side to the other. If they are not, remove stick and flip over so steps are staggered.
- 2. Secure using two (2) M6x40mm Bolt, four (4) Steel Washers and two (2) Nuts by wrenches as shown in Figure 1 and Figure 2.
- 3. Repeat for remaining Stick Sections.

WARNING! U-Brackets are required and must be used to provide support for the attachment points between the ladder sections. Bolts must be threaded through them on both sides of the ladder section. DO NOT omit these U-Brackets. Failure to properly use the U-Brackets could lead to serious injury or death.

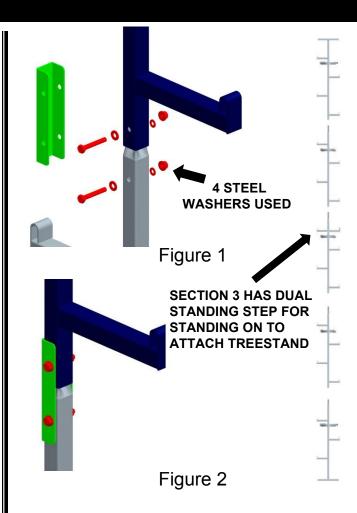


STEP 2:

ATTACHING V-BRACKETS

- Attach V-bracket to tree side of Stick Section #1 using one (1) M8x55mm Bolt, 2 Steel Washers and Nut. Securely tighten with wrenches as shown in Figure 3.
- Repeat for remaining Stick Sections making sure Vbrackets are all on same side of Stacking Stick.

WARNING! V-BRACKETS
MUST BE INSTALLED PRIOR
TO USE!

DO NOT USE IF V-BRACKETS ARE NOT ALL INSTALLED OR ALL INSTALLED ON SAME SIDE.

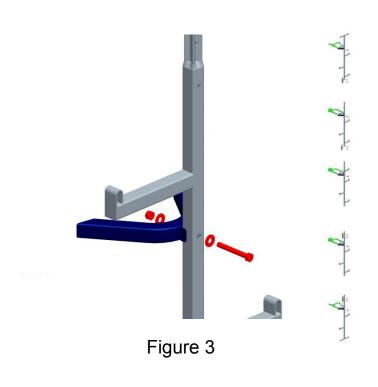

SELECTING A SAFE TREE:



CLIMBING STICK MINIMUM AND MAXIMUM TREE SIZE: 9 – 22" DIAMETER!

Never use on a dead, leaning, diseased, loose barked tree, tree with excessive vine or on a utility pole or any other man made structure.

Never use on trees that contain nails, screws, or other sharp objects that may cut, sever, or puncture strap webbing or cables!

Never rely on a tree branch for support!

Failure to follow these instructions can lead to serious injury or death!

- Select a healthy straight tree that fits within size limits larger than 9-inches in diameter and smaller than 22-inches in diameter at attachment height.
- Always thoroughly inspect tree from all sides before installing product.
- Be sure climbing sticks are level. Tree must not lean or have any irregular shapes.
- Do not select a tree with vines or limbs below your desired hunting height.
- Never attach climbing sticks to limbs! Always attach climbing sticks to main trunk of tree.
- Never use climbing sticks on trees with wet, icy, slippery, loose or scaly bark.

PRACTICE AND BECOME FAMILIAR WITH PRODUCT AT GROUND LEVEL:

Always practice attaching/detaching, adjusting and using climbing sticks at ground level prior to using at elevated positions.

Prior to using climbing sticks at elevated positions for first use of each season, test operation and use at ground level.

FULL BODY SAFETY HARNESS (FALL ARREST SYSTEM - FAS):

Not to use without a Full Body Harness (Fall Arrest System) that meets the requirements of Test Method F2337.

You must wear and use a full body harness with lineman's climbing strap that has been tested by a third party testing laboratory to meet or exceed industry standards before attempting to install, remove or use this product.



Always remain connected to tree with lineman's climbing strap and tree strap from the moment you leave ground until you return to ground.

Read and understand manufacturer's Full Body Harness Instructions, Warnings, and watch safety video for instructions on using your full body harness with lineman's climbing strap before installing, removing or using your climbing sticks.

Use of full body harness with lineman's climbing strap is required to stabilize yourself to tree when installing, climbing up/down climbing sticks and/or climbing into/out of hang-on treestand.

Never attempt to install, climb or climb into/out of climbing sticks and hang-on treestand without being stabilized by lineman's climbing strap.

Failure to follow these instructions can result in serious injury or death.

Refer to Full Body Harness (FAS) with Lineman's Climbing Strap manufacturers instruction manual for proper wear, adjustment, usage and maintenance.

THE REST OF THE INSTRUCTIONS IN THIS MANUAL REQUIRE YOU ARE WEARING AND USING A FULL BODY HARNESS WITH LINEMAN'S CLIMBING STRAP THAT HAS BEEN TESTED BY A THIRD PARTY TESTING LABORATORY TO MEET OR EXCEED INDUSTRY STANDARDS.

Never rely on a tree branch for support.

Never exceed 18-inches of step spacing between multiple climbing sticks.

CLIMBING STICKS MUST EXTEND MINIMUM OF 24 INCHES ABOVE final position of hang-on platform.

ALWAYS step down from climbing stick onto hang-on platform.

Never attempt to climb up onto a hang-on platform from climbing stick mounted below hang-on platform.

Always attach and tighten tree strap/buckle around tree.

Always check to ensure tree strap hook is attached to climbing stick bracket.

Never jump or bounce on climbing stick in an attempt to cause it to dig into tree.

Never hunt at heights you are not completely comfortable. Depending on tree and conditions, choose minimum height that allows for safe and effective hunting.

Never hurry! While climbing, make slow, even movements and make sure you have proper contact with tree and/or climbing sticks or treestands every time you move.

Always maintain 3 points of contact when climbing up/down climbing sticks and in/out of treestand.

Always use a hoist rope to raise and lower climbing sticks. Never climb with anything on your back.

Failure to follow these instructions can result in serious injury or death.

Step 1:

WARNING!


With bottom of stacking stick next to tree, lift top of stick and walk stick up tree. Continue until stacking stick is vertical and Vbrackets are next to tree.

Step 2:

On Stick Section #1, attach hook of ratchet strap to the hole on V-bracket with hook facing away from tree. Wrap ratchet strap around tree and attach hook to other hole on V-bracket with hook facing away from tree.

With the ratchet strap installed, ratchet it tight. (Figure 4)

For ratchet strap threading instructions refer to Figure 5.

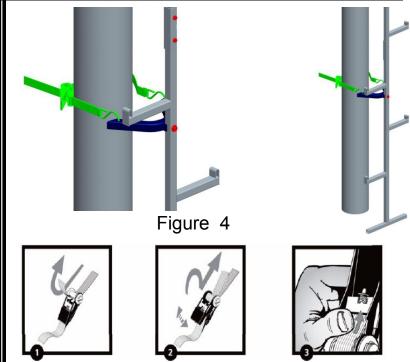

Step 3:

Double check to assure you are wearing and properly attached to tree with full body harness with lineman's climbing strap. If you are not, STOP and do not leave the ground.



Read and follow manufacturer's Full Body Harness Instructions, Warnings and watch safety video for instructions on using Full Body Harness with lineman's climbing strap.

Always remain connected to tree with lineman's climbing strap and tree strap from moment you leave ground until you return to ground.

Step 4:

While attached to tree with full body harness and lineman's climbing strap, climb up ladder to second V-bracket on Stick Section #2 using 3 point climbing method.

Attach hook of cam buckle strap to the hole on V-bracket with hook facing away from tree. Wrap ratchet strap around tree and attach hook to other hole on V-bracket with hook facing away from tree as shown in Figure 6.

Pull end of cinch tree strap until strap is snug around tree. Make sure V-bracket is firmly against tree as shown in Figure 7.

Repeat this step for Stick Sections #3 and Stick Section #4.

For cam buckle strap threading instructions refer to Figure 8.

WARNING! When climbing, always maintain three points of contact (i.e. two feet and one hand or two hands and one foot) whenever using this product. Never hurry! While climbing, make slow, even movements and make sure you have proper contact with climbing sticks every time you move.

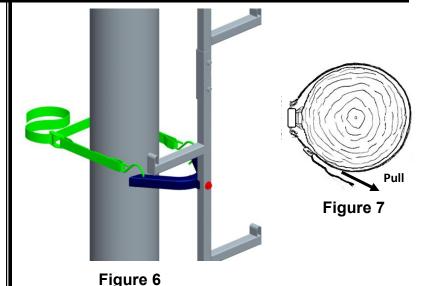








Figure 8

ALWAYS FOLLOW MANUFACTURES SAFETY HARNESS INSTRUCTION



Use of full body harness with lineman's climbing strap is required to stabilize yourself to tree when installing, climbing up/down stacking sticks and/or climbing into/out of hang-on treestand.

Step 5:

While attached to tree with full body harness and lineman's climbing strap and lower stick sections connected to tree. continue climbing up ladder to top V-bracket Stick Section #5 using 3 point climbing method.

Wrap ratchet strap around tree and attach hook to bracket on V with hook facing away from tree as shown in Figure 9.

Tighten ratchet strap following ratchet instructions. Make sure V-bracket is firmly against tree.

Your Offset Climbing Sticks are ready for use.

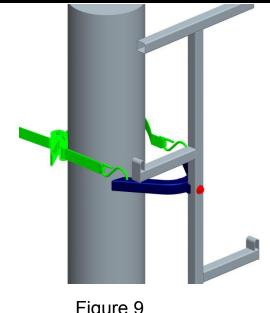


Figure 9

Step 6:

DOUBLE CHECK

WARNING!

- Before climbing check to ensure Offset Climbing Stick is secure and properly attached to tree.
- Always check to ensure tree strap hooks are attached to offset climbing stick bracket.
- •Always check to ensure 3 cam buckle straps and 2 ratchet straps are tight on tree.
- Always check to ensure all 5 V-brackets are contacting tree.
- Before climbing always check every climbing stick connection to assure sections are not separating. If separating, remove climbing stick from tree and reconnect sections.
- Do not use if any of these conditions exist.


Step 7:

Always position offset stick above hang-on platform so you step down onto platform.

WARNING!

Always use a hoist rope to raise and lower treestand.

Never climb with anything on your back. **CLIMBING STICKS MUST EXTEND** MINIMUM OF 24 INCHES ABOVE FINAL POSITION OF HANG-ON PLATFORM.

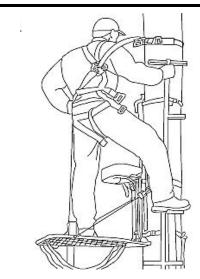

WARNING! DO NOT use this or any other Game Winner product(s) to climb utility poles, telephone poles, structural columns or any other manmade structures. Never use this or any other Game Winner product(s) around power generation (e.g., transformers, generators, substations, etc.) and/or power transmission equipment. Failure to follow these instructions will result in serious injury or death!

Removal Instructions



Full body harness with lineman's climbing strap must be used when removing climbing sticks or climbing out of hang-on treestand.

Never attempt to remove climbing sticks or climb out of hang-on treestand without being stabilized by lineman's climbing strap.

Failure to follow these instructions can result in serious injury or death.

Step 1: Using Full Body Harness and Lineman's Climbing Strap, slowly and carefully climb to top stick section.

Step 2: Standing on climbing stick below one being removed, loosen ratchet strap and unhook strap from V-bracket.

Step 3: Climb down to next section. While standing on section below one being removed, loosen cam buckle straps and unhook strap from V-bracket. Repeat for remaining 3 tree straps.

Step 4: Once all tree straps are detached, walk offset climbing stick down tree by pulling climbing sticks off tree and with base against tree slowly move away from tree and walking hands down climbing stick as climbing stick slowly lowers to the ground.



WARNING! Never drop climbing sticks out of tree as this may damage climbing sticks. Always use a hoist rope to lower to ground.

Care and Maintenance

This product contains no user serviceable parts except for tree strap.

Replace tree strap every two years or sooner if wear, damage, deterioration, rust, cuts, tears, rot, etc. or vandalism is detected or suspected. Only replace with official Game Winner replacement parts.



Proper maintenance and inspection is required for this product.

Always inspect climbing sticks, treestand and all safety devices for damage including but not limited to corrosion, rust, cracks, deformity, bends, rot, wear, cuts or fraying and other damage to tree straps, steps, brackets, cables, crimps, hardware, platform, upright, seat, etc. Do not use or leave the ground if damage is detected or suspected.

Failure to follow these instructions can lead to serious injury or death.

Store climbing sticks, full body safety harness, etc. indoors in a clean, dry environment free from direct sunlight, harmful chemicals, excessive heat and dust. Exposure to sunlight, excessive heat and the elements can weaken tree strap or affect its performance.



WARNING! Never leave this product in a tree for more than two weeks (14 days) since weather or animals could cause damage. Tree growth can also stress and damage straps and buckles.

Warranty Information

Important Warranty Information

Innopower Inc. warrants this product against defect(s) in material and workmanship, under proper use and storage, for the period of one (1) year from the date of purchase. Proof of purchase, plus, the return of your warranty application card to our home office, is required for any warranty claim. In the events this product is found to be defective within the warranty period, Innopower Inc.'s only obligation and your exclusive remedy shall be replacement or repair of any defective parts at our discretion. To obtain warranty service, please contact Innopower Customer Service at (949) 262-3416. Exclusions to this warranty include seat, paint, plastics, webbing and/or defects caused by operator misuse and/or abuse. Limitation to liability include the forgoing warranty is made in lieu of all other warranties, express or implied and Innopower Inc. disclaims any implied warranty of merchantability and fitness. Innopower Inc. shall not be liable for any damages direct, consequential or incidental arising out of the use or inability of this product.

Warranty Application Card

I have read and understand the safety, assembly and operating instructions provided with my Game Winner product. I have read the warranty information and know that I can call Innopower Inc. at **(949) 262-3416** with any questions or concerns that I may have about this or any other Game Winner Product. Mail to: INNOPOWER INC.

. ,	duct. Mail to: INNOPOWER INC.
PO Box 265, E. Irvine, CA 9265	50. Email: customerservice@innopower.biz
Name	Purchase Location
Address	
au (a) () =	
City/State/Zip	
Purchase Date	
Product	