

Care and Maintenance

- Your product must be stored dry. One of the easiest ways to damage your product is storing it while it is wet. Storing a wet tent as briefly as 24 hours in warm weather is likely to cause mildew on the fabric coatings. If you must close camp in the rain, open your product and set it up to allow it to dry as soon as possible. Allow dirt to dry on the fabric after a rainfall before lightly sweeping it off with a brush. For tougher stains, spray the area with water and lightly wipe it off with a few strokes. Do not use washer or dryer. DO NOT SCRUB THE FABRIC. ALWAYS MAKE SURE TENT IS COMPLETELY DRY BEFORE REPACKING.
- Do not leave your tent set up for weeks at a time. Exposure to ultraviolet rays from the sun can damage and/or discolor the material.
- Clean the poles with a cloth and lubricate them with a silicone spray to help prevent corrosion and keep from becoming gritty. This is especially important after using the tent around salt water.
- Store the stakes in a separate storage bag. Do not pack the stakes inside the tent.

Warranty Information

This product has been manufactured under the highest standards of quality and workmanship. We warrant to the original consumer purchaser that all aspects of this product will be free of defects in material and workmanship for one year from the date of purchase. A replacement for any defective part will be supplied free of charge for installation by the consumer. Defects or damage caused by the use of other than genuine parts are not covered by this warranty. This warranty shall be effective from the date of purchase as shown in the purchaser receipt.


This warranty is valid for the original consumer purchaser only and excludes industrial, commercial or business use of the product, product damage due to shipment or failure which results from alteration, product abuse, or product misuse, whether performed by a contractor , service company , or consumer. We will not be responsible for labor charges and/or damage incurred in installation, repair or replacement nor for incidental or consequential damage.



Instruction Manual

EL OCHO FAMILY TENT

Magellan Style #: 155803

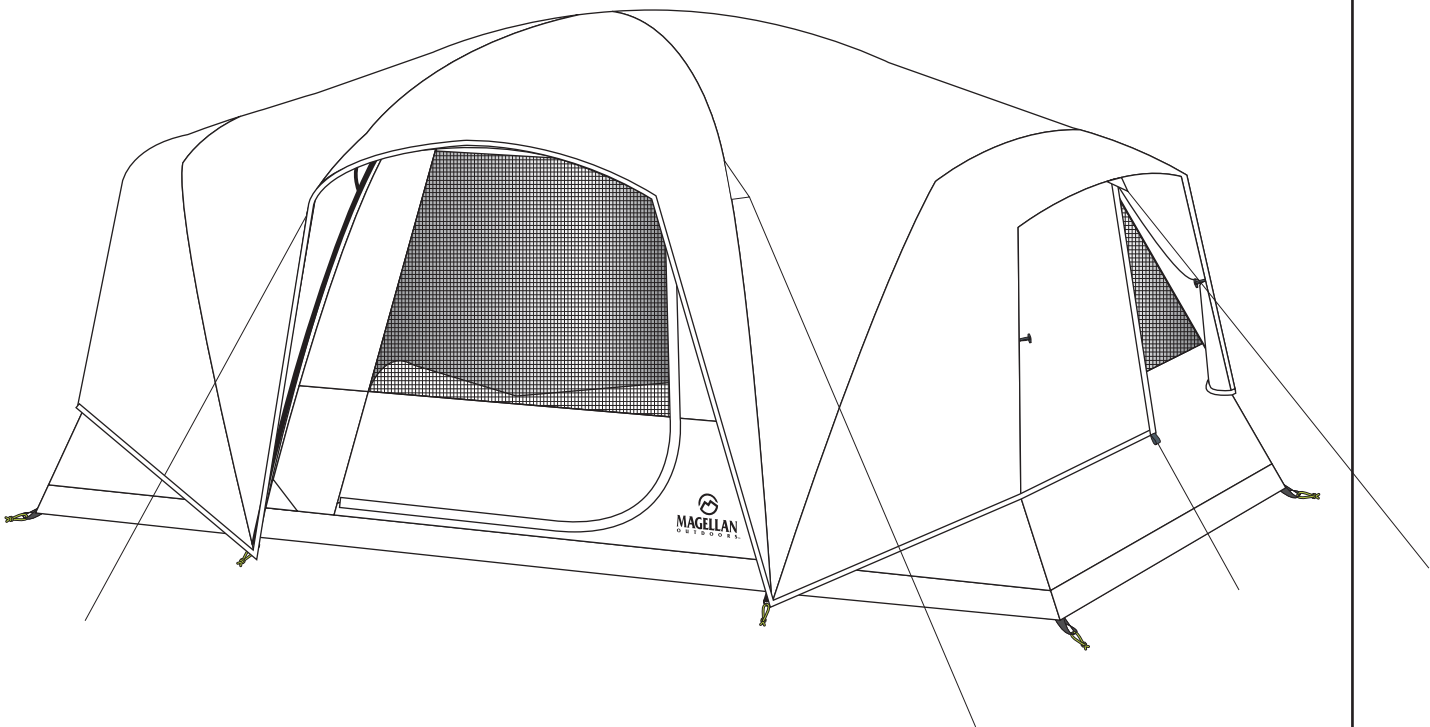

Please keep this instruction manual for future reference

Customer Service: (888) 922-2336








7:00 am to 12:00 am CST (daily)

Live Chat at: www.academy.com

Email: customerservice@academy.com

(Made in Bangladesh)

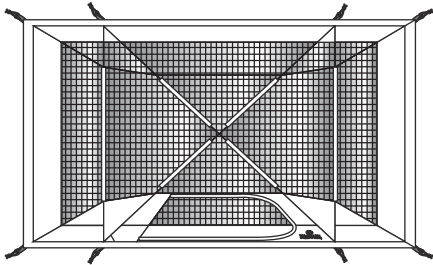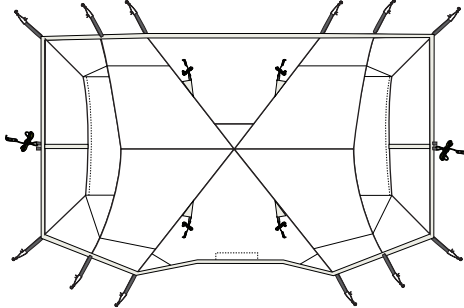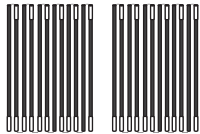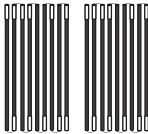Parts List

No.	Part Name	Image	Quantity
1	Tent		1 each
2	Rainfly		1 each
3	Poles	<div> (A) Main - 2 each</div> <div> (B) Side (Yellow) - 2 each</div> <div> (C) Fly Side Pole - 2 each</div> <div> (D) Fly - 1 each</div>	7 total
4	Tent Stakes		16 each

Assembly Instructions

Step 1: Assemble Poles Spread Tent and Insert Roof Poles

- 1) Assemble the tent poles by placing fiberglass sections into the metal ferrules.


Seven poles are provided

2 each (A) Main pole

2 each (B) Side poles (Yellow)


2 each (C) Fly side pole

1 each (D) Fly pole

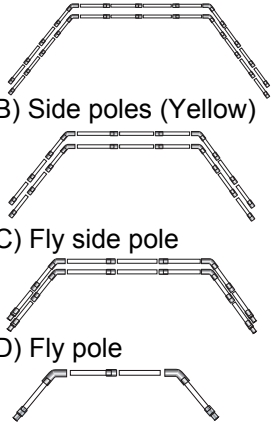


Step 2: Spread Tent and Insert Poles

- 1) Spread out the tent flat (1), floor side down.
- 2) Using the diagram as a guide, slide the main pole (A) through the pole sleeve on either side of the door (fig: 1).
- 3) Slide each side pole (B) through the side pole sleeves.

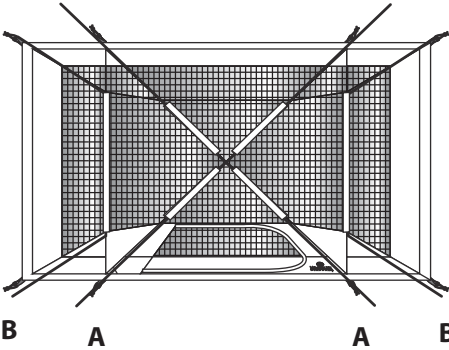



(fig: 1)

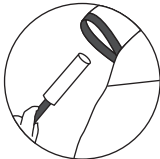

Step 3: Raise the Tent

- 1) Starting at the front of the tent, have one person place and hold a main tent pole (A) onto the pin located at the side of the door (fig: 2).
- 2) The second person at the rear of the tent takes hold of the other end of the same pole. The pole is then flexed into an arch and carefully placed onto the corresponding pins.
- 3) Repeat this process for remaining main pole and each of the side poles (B).

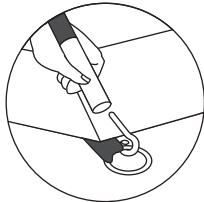


(fig: 2)

Assembly Instructions

Step 4: Stake the Tent and Fasten Hooks

- 1) Secure the tent by inserting a stake through the stake loops located along the perimeter of the tent.
- 2) Make certain the tent floor is pulled out evenly and tightly.
- 3) Hammer the stakes into the ground at a 45° angle using a hammer or mallet (fig: 3).
- 4) Clip the plastic hooks on the tent to the fiberglass pole frame (fig: 4).

(fig: 3)

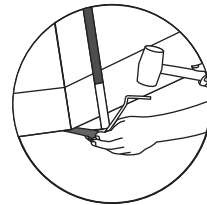

(fig: 4)




Step 5: Attach Fly


- 1) Unfold the fly (2) and stretch out all corners.
- 2) Place the fly over the tent, making certain the fly awning is over the front door.
- 3) Insert the fly side pole (C) through the sleeve found at the side of the fly at both sides.
- 4) Flex the pole and insert each end into the reinforced metal gromets located at each side of the tent (fig: 4.1).
- 5) Attach the fly to the tent by hooking the plastic s-hooks on the fly corners to the corresponding o-ring located at the stake loops (fig: 5).



(fig: 4.1)

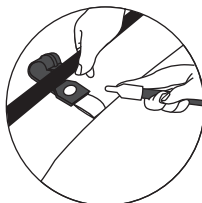


(fig: 5)

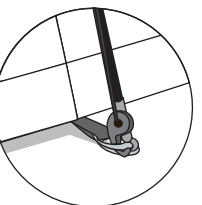

Step 6: Secure Fly Pole and Fasten the Fly

- 1) Insert the fly pole (D) through the sleeve found at the edge of the fly awning over the front door (fig: 6).
- 2) Flex the pole and insert each end into the hole on the pole clip located on either side of the door (fig: 7).

(fig: 6)

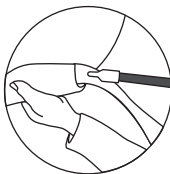

(fig: 7)



Warnings

⚠ DANGER!

Stoves, lanterns, candles, grills, heaters and other fuel burning devices produce carbon monoxide and will consume the available oxygen in this tent. Use of such devices in this tent will cause asphyxiation, carbon monoxide poisoning, and death or serious and permanent injuries. For this reason:

- DO NOT use fuel burning devices inside or near this tent
- Your failure to follow this warning will cause death or serious and permanent injury to you or others using this tent.

⚠ WARNING!

- KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS FABRIC.

This product is made with flame resistant fabric which meets CPAI-84 specifications.




 
 
IT IS NOT FIREPROOF!

The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the fabric may render the flame resistant properties ineffective.

- Anchor properly at all times and carefully consider campsite choice. Be aware of possible falling rocks or tree limbs, lightning strikes, flash-floods, strong winds and other hazards which may cause damage to this product or injury to it's occupants.
- Minimum of two adults for recommended assembly. During assembly poles are under tension. If not held firmly in place during assembly, poles could break or flip up possibly causing serious injury.
- Safety glasses may be worn throughout the assembly process as an additional precaution.
- Exercise care when using electric devices in and near tents.

Table of Contents

Warnings	2
Parts List	3
Assembly Instructions . . .	4-6
Care and Maintenance	7
*Owner's Manual attached inside carry bag	

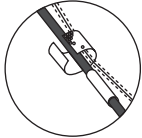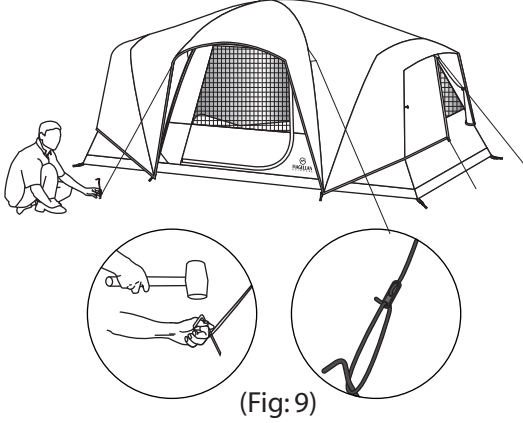Assembly Instructions	
3) Wrap the hook & loop fasteners, sewn on the under side of the fly, around the fiberglass tent poles (fig: 8).	 (fig: 8)
Step 7: Secure Guy Lines 1) Secure tent using all guy lines and stakes (Fig: 9). Tent must be secured for proper function.	 (Fig: 9)
Step 8: Fully Assembled Tent appears as shown.	
Step 9: Disassembly 1) To take down the tent, disassemble in reverse order. 2) Remove and fold fly. 3) Be sure to leave doors and windows unzipped to avoid zipper damage. 4) Remove stakes with hammers or stake puller. DO NOT pull on tent. 5) Carefully disengage poles from pins. Push poles away from you through the sleeves to minimize risk of damage to tent or poles. 6) Keep poles and stakes together in bags provided.	Step 10: Packing the Tent 1) Spread tent flat, distribute evenly. 2) Fold into quarters not to exceed the length of pole bag.  Dimension A should be close to but not exceed the length of the pole bag. 3) Lay pole bag at opposite end from door. Tightly roll bag, skin and fly forcing air through unzipped door.  4) Secure with ties and place in carry bag with stakes and accessories. 5) Tent must be clean and dry before storage. Store off concrete floor.