



Assembly Instruction & User Manual

Multi Purpose Utility Cart

Style # 160249



Please keep this instruction manual for future reference

Customer Service: (888) 922-2336, 7:00am to 12:00am daily CST

Live Chat @ Academy.com: 24/7

Email: customerservice@academy.com

-----OR-----

(877) 579-1550, 8:30am to 5:30pm Monday thru Friday, EST

(Made in China)

Table of Contents

| | |
|----------------------------|---|
| Warnings..... | 2 |
| Tools and Parts..... | 2 |
| Assembly Instructions..... | 3 |
| Care and Maintenance..... | 6 |
| Warranty Information..... | 6 |

Note: Before beginning assembly of product, make sure all parts are present. Compare parts with package content list and hardware contents. If any part is missing or damaged do not attempt to assemble the unit. Contact customer service for replacement parts.

Warnings


Carefully follow the conditions listed below to avoid product breakage and possible injury.

- Adult assembly required. Keep removable hardware away from children.
- This folding cart holds a maximum weight of 225lbs. Do not exceed.
- When using the cart as a tote do not exceed 100 lbs.
- Care should be taken to avoid finger injuries and pinching while folding the cart.
- Keep children away from the cart during folding/unfolding.
- Do not allow children or pets in cart.
- This product is designed for storing and transporting only. Do not carry passengers.
- Please secure all products in the cart to avoid dropping.

Tools & Hardware Required

No tools or Hardware required.

Parts List
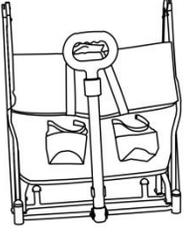
| | | | |
|---|----------------------------------|--|-------|
| A | Cart |  | Qty:1 |
| B | Front Wheels (MARKED "FRONT") |  | Qty:2 |
| C | Rear Wheels (MARKED "REAR") |  | Qty:2 |


INSTRUCTION

Step 1:

Locate the cart frame and 4 wheels.


Lay cart frame sideways on a non-abrasive surface.

Assemble 1 front and 1 rear wheel by pushing into frame until they click into place.

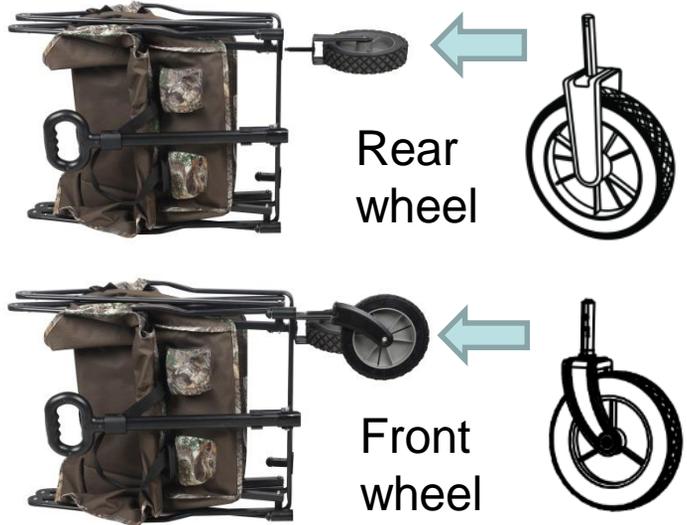

Step 2:

Repeat for the other side.

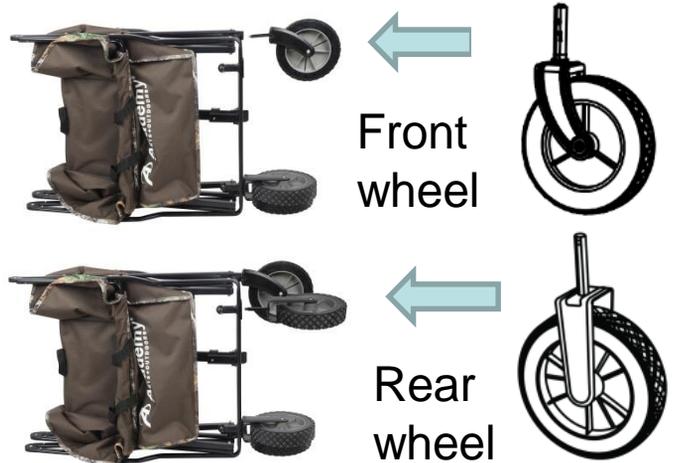

Step 3:

Open the cart by releasing the hook & loop tape on the handles at the top of the cart. Then pull apart the ends of the frame. Finish by pushing in the middle of the bed until the frame is fully extended.



INSTRUCTION

Step 4:

Extend the handle by pulling up till it clicks into place.



Step 5:

To fold the cart start by pulling up on the webbing loop in the middle of the cart bed. Next push the front and rear ends of the frame toward the center and join the top handles with the hook and loop tape.



Tip: With handle extended, cart can be conveniently rolled for transport. Push button and retract handle for storage.



DETACH & ATTACH THE BED INSTRUCTION

Step 1:

Detach the hook & loop fasteners at the bottom.



Step 2:

Detach the front and back hook & loop fasteners.



Step 3:

Take out the bed from the frame.

Tips: When fully detached, the bed can be used as a tote.



Step 1:

Open cart frame as is.

Step 2:

Put the cart bed onto the frame. Attach the hook and loop on the front & back side of the frame.



Step 3:

Attach the hook & loop fastener at the bottom.



Care and Maintenance

- This cart is designed to be enjoyed outdoors.
- This cart should be cleaned on a regular basis to promote safe use and prolong product life.
- Wipe the frame with a smooth damp cloth and air dry.
- Do not use abrasive cleaner as it may damage or scratch the surface paint.
- Do not leave this product in harsh weather conditions for extended periods of time.
- During prolonged periods of non-use, this cart may be stored indoors or by using a cloth cover. Storing in a dry location will help.

Warranty Information

The appliance has been manufactured under the highest standards of quality and workmanship. We warrant to the original consumer purchaser that all aspects of this product will be free of defects in material and workmanship for one year from the date of purchase. A replacement for any defective part will be supplied free of charge for installation by the consumer. Defects or damage caused by the use of other than genuine parts are not covered by this warranty. This warranty shall be effective from the date of purchase as shown in the purchaser receipt.

This warranty is valid for the original consumer purchaser only and excludes industrial, commercial or business use of the product, product damage due to shipment or failure which results from alteration, product abuse, or product misuse, whether performed by a contractor, service company, or consumer. We will not be responsible for labor charges and/or damage incurred in installation, repair or replacement nor for incidental or consequential damage.