




Assembly Instructions & User's Manual

13x13 One Push Gazebo

Style Number: 161806

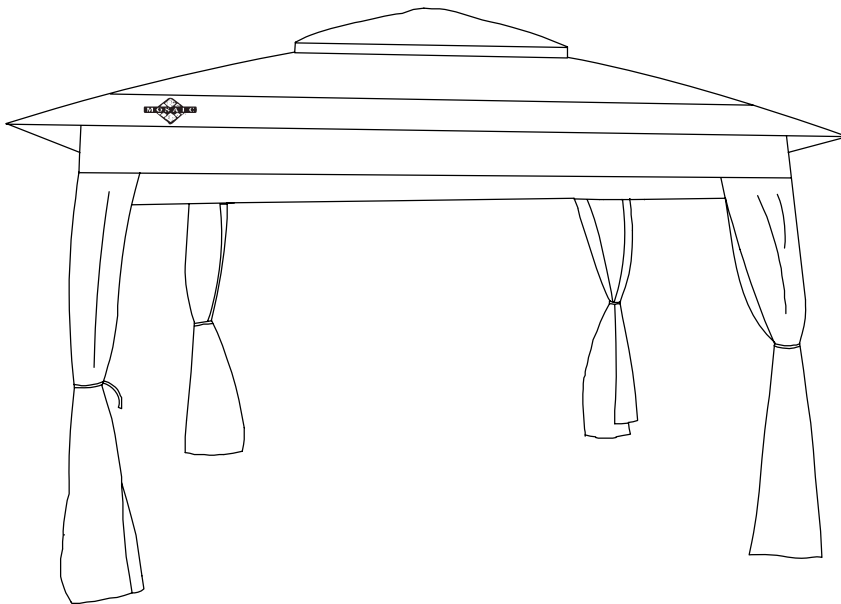

Please keep this instruction manual for future reference

Customer Service: (888)922-2336, 8:00am to 12:00am Everyday CST

Live [Chat@Academy.com](https://www.academy.com): 24/7

Email: customerservice@academy.com

OR

Customer Service: 888-502-9589

Mon thru Fri: 9:00am to 4:00pm PST Time

Email care@OutdoorDesignz.com

[Made in China]



**SCAN ME FOR
MORE
IMPORTANT
PRODUCT
INFORMATION.**

Table of Contents

Warnings.....2

Parts.....3

Assembly Instructions.....4

Components list.....8-9

Care and Maintenance.....10

Warranty Information.....10

Note: Before beginning assembly of product, make sure all parts are present. Compare parts with package content list and hardware contents. If any part is missing or damaged do not attempt to assemble the unit. Contact customer service for replacement parts.

Warnings

WARNING: When assembling and using this product, basic safety precautions should always be followed to reduce the risk of personal injury and damage to the equipment.

Please read all instructions before assembly and usage.

WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS CANOPY FABRIC. This canopy meets the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.

WARNING: This product is for outdoor use only.

WARNING: Do not climb on top of the canopy. Falling off the canopy can result in serious injury, possibly even death.

CAUTION: Never set up or continue to use in any rain, wind, or storm conditions, especially lightning storms. Damage can occur to the tent and put you and others in potential danger.





CAUTION: Be careful not to pinch your fingers in the frame during set up and take down.

CAUTION: Do NOT use this tent for permanent shelter. It is designed for temporary use only.




CAUTION: Avoid setting up the tent on steep inclines.

CAUTION: Never leave the tent unattended.

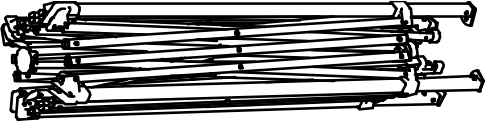Parts List

I	Frame		1
II	Small Top		1
III	Large top		1
IV	Wheeled Storage Bag		1

  Hardware

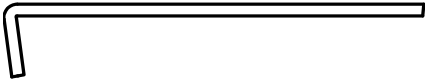
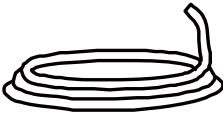
V	Stake Kit		8
VI	Guy Rope		4
VII	Allen Wrench		1

Assembly Instructions

Step 1: Opening the canopy frame

With one person lift and partially pull the canopy frame (I) apart.


Note: At this step do not press the center up yet.

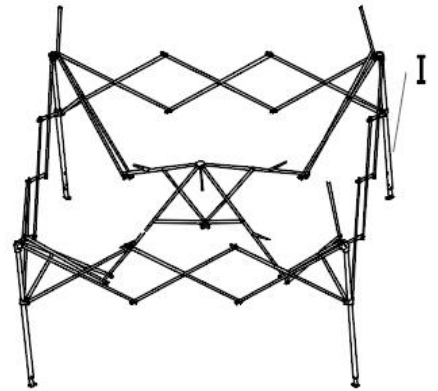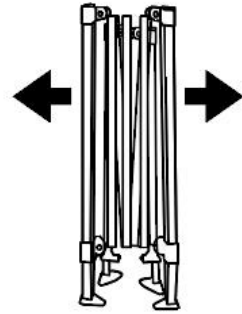

Step 2: Attaching the small canopy top

Unfold the small top (II) and place it over the open frame (I).

Attach the four canopy corners to the frame top.

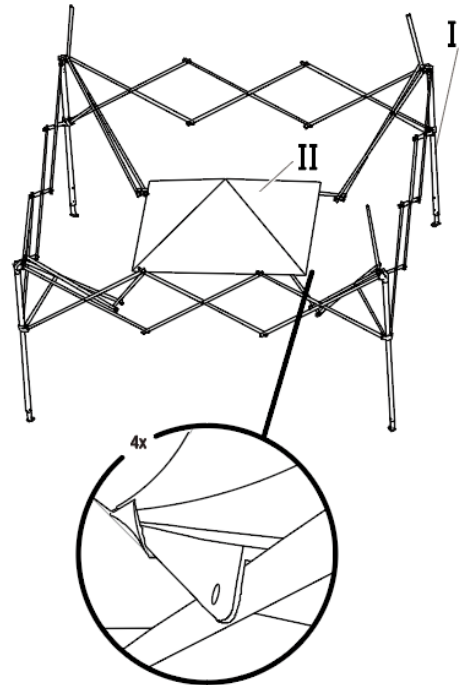


Assembly Instructions

Step 3: Attaching the large canopy top

Unfold the large top (III) and place it over the open frame (I). Be sure the neckband of the large top (III) is totally under the small top (II)


Attach the four canopy corners to the awning pole.

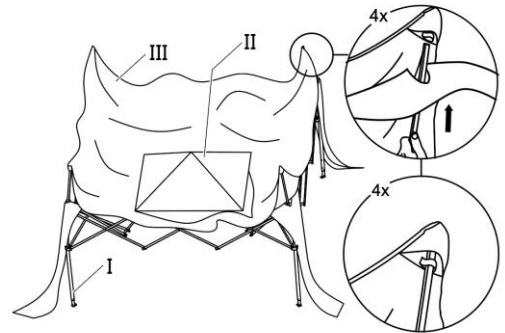

Step 4: Locking the frame

Under the canopy, place one hand on the upper frame and use the other hand to push the central hub straight up until it clicks into the central pole and touches with the bottom tray part.


Finish attaching the large canopy (III) inside the canopy frame (I) using the hook and loop closures.

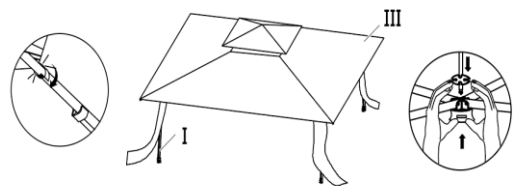

Assembly Instructions

Step 5: Adjusting the canopy height

Press the dark brown/blue button on each leg to raise or lower to adjust the canopy height.

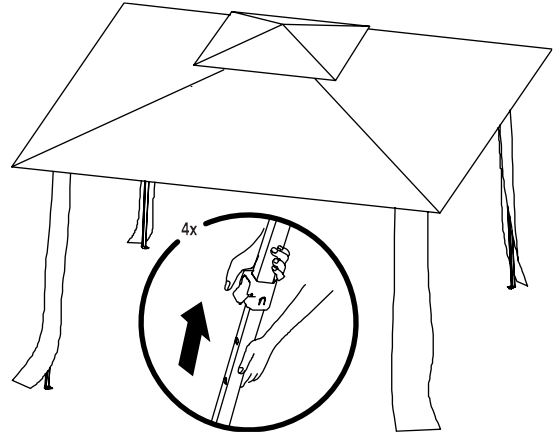


Step 6: Securing the canopy

Please fill in the pockets with bottle water or rocks / sand / bricks as weights.

Tips: Weights must be applied to prevent damage from wind.

Secure the ropes through the metal rings and have the proper tension by adjusting the plastic adjusters on the ropes

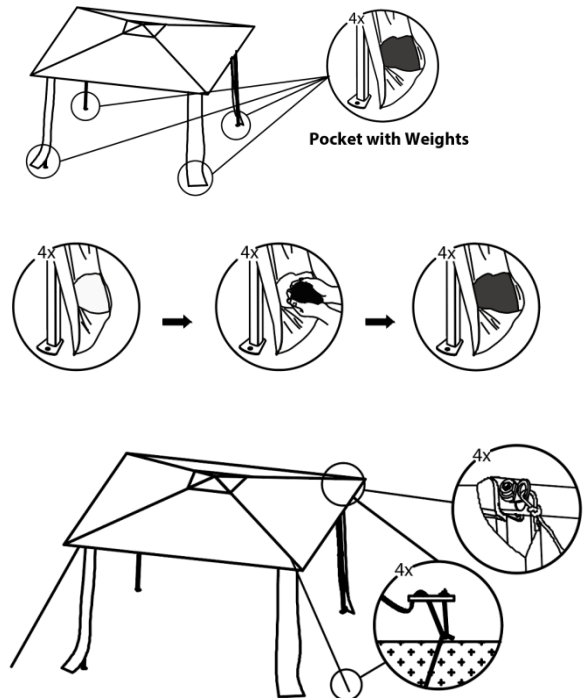


Take down Instructions

Step 1: Removing the stakes and retract the legs


Remove stakes & ropes.

Press the dark brown/blue buttons on all 4 legs to collapse the canopy legs.

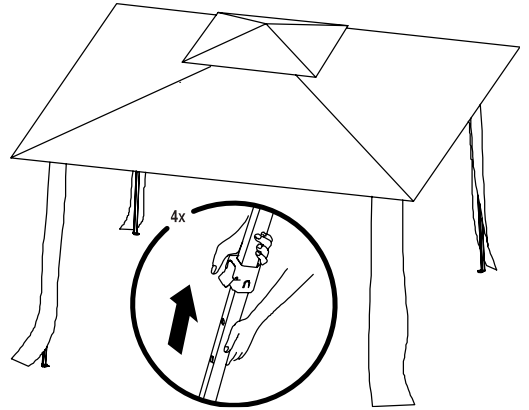

Step 2: Unlock the central lock


Release the center by pressing the dark brown/blue button on the center hub and pulling down toward the ground.

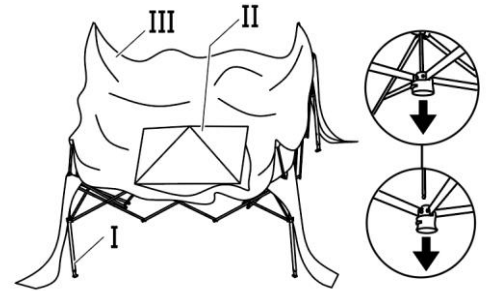


Step 3: Fold down the frame & packing the canopy in the roller bag

Go to the outside of the canopy and push canopy legs together toward the center.

Place canopy back in the roller bag with canopy top still on. Place stakes and ropes in pouch on the exterior of the bag.

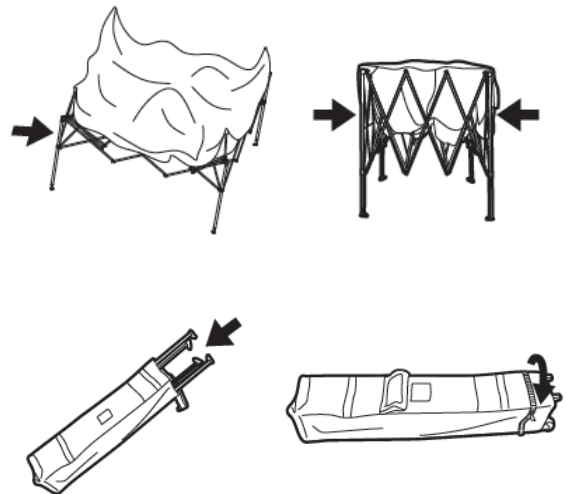

Components

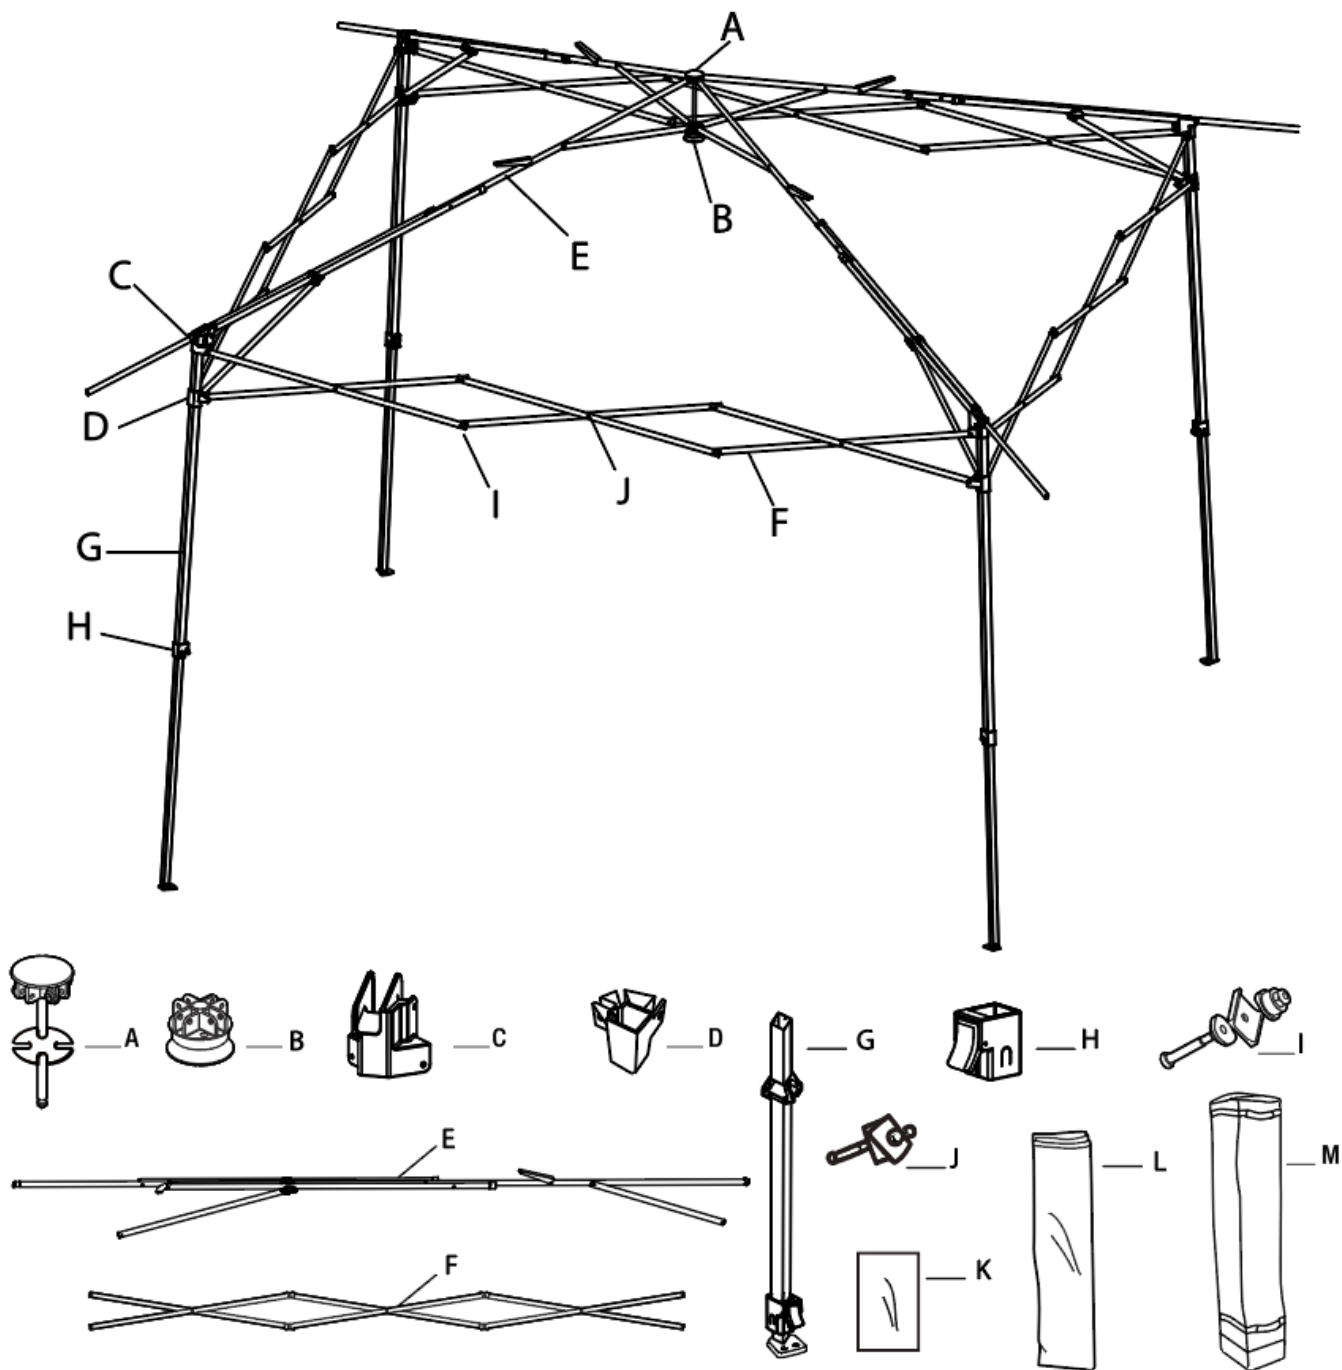

Components

Mosaic 13X13 One Push Gazebo

Two colorways are designed for this canopy, dividing into:

Item A: Khaki & Brown

Item B: Gray & Blue

Note: Please refer to the Reference No. and contact the aftersales service if any part of your canopy needs to be changed under warranty.

Part	Description	Reference No. Item A (Khaki & Brown)	Reference No. Item B (Gray & Blue)
A	Central Pole	MSCP82BEMI	MSCP82GYDK
B	Central Bottom Hub	MSCH00BECL	MSCH00GYDK
C	Leg Cap	MSLC11BEMI	MSLC11GYDK
D	Leg Slider	MSLS11BEMI	MSLS11GYDK
E	Ceiling Assembly	MSCA13BE00	MSCA13GYDK
F	Eave Assembly	MSEA13BE00	MSEA13GYDK
G	Leg Assembly	MSLA13BE00	MSLA13GYDK
H	Leg Extender	MSLE11BEKH	MSLE11GYBL
I	M5 Bolt Kits	UNBK05BE00	UNBK05GYDK
J	M4 Bolt Kits	UNBK04BE00	UNBK04GYDK
K	Small Top	MSTS13BR00	MSTS13BL00
L	Large Top	MSTL13KB00	MSTL13GB00
M	Wheeled Storage Bag	MSCB13BRBW	MSCB13BLBW
V	Stake Kit	UNSK02GA8P	
VII	Guy Rope	UNGR67WB08	

Care and Maintenance

Before using, clean the canopy completely with a soft dry towel.

Do not put your canopy in wet conditions where there is a risk of rust developing.

When not in use, store in the bag in a cool, dry area.

Warranty Information

This product has been manufactured under the highest standards of quality and workmanship. We warrant to the original consumer purchaser that all aspects of this product will be free of defects in material and workmanship for one year from the date of purchase. A replacement for any defective part will be supplied free of charge for installation by the consumer. Defects or damage caused by the use of other than genuine parts are not covered by this warranty. This warranty shall be effective from the date of purchase as shown in the purchaser receipt.

This warranty is valid for the original consumer purchaser only and excludes industrial, commercial or business use of the product, product damage due to shipment or failure which results from alteration, product abuse, or product misuse, whether performed by a contractor , service company , or consumer. We will not be responsible for labor charges and/or damage incurred in installation, repair or replacement nor for incidental or consequential damage.