



**O'RAGEOUS**

**Assembly Instructions and User's Manual**

**O'RAGEOUS 10FT WATER TRAMPOLINE**

**Style # 160385**



**Please keep this instruction manual for future reference**

Customer Service: (888) 922-2336  
7:00 am to 12:00 am CST (daily)  
Live Chat at: [www.academy.com](http://www.academy.com)  
Email: [customerservice@academy.com](mailto:customerservice@academy.com)  
(Made in China)

## Table of Contents

Warnings .....	2
Product Instructions and Safe Use .....	3-4
Watersports Responsibility Code.....	5
Parts list .....	6
Assembly and Operating Instructions .....	7-9
Care and Maintenance, Troubleshooting .....	10
Repair Instruction .....	11
Warranty Information .....	12

Note: Before beginning assembly of product, make sure all parts are present. Compare parts with package content list and hardware contents. If any part is missing or damaged do not attempt to assemble the unit. Contact customer service for replacement parts.

## WARNINGS

USE OF THIS PRODUCT AND PARTICIPATION IN WATERSPORTS OF BOUNCER INVOLVES INHERENT RISKS OF INJURY OR DEATH.

- Don't allow more than one person to jump on the product at the same time.
- Never tow this product behind a boat or other device. Do not use in swimming pools or within 15 feet of boats, docks or piers.
- Do not attempt somersaults or flips. Paralysis or death can result if you land on your head or neck.
- This product should never be used by children except under adult supervision.
- This is not a personal flotation device.
- Always wear a U.S. Coast Guard approved Type III (PFD) vest.
- This is not a lifesaving device. Do not leave child unattended while in use. Use only under competent adult supervision.
- Do not dive from or swim under this product.
- Do not allow children or user to play with any sharp objects while using the product.
- Remove eye glasses, jewelry, and other abrasive apparel before using product.
- Do not exceed the manufacturer's recommended number of users (1) for this product.
- Do not allow anyone to poke the product with any sharp object.
- Do not bounce too high. Keep a low, steady, controlled jumps on the center of the mat.
- Control is more important than height.
- Jump in the center of the water bouncer.
- Properly secure the product when not in use.
- 1 Person max and the weight capacity is 170lb.
- Read Owner's Manual before use. Do not remove warning.



## PRODUCT INSTRUCTIONS AND WARNINGS

**Watersports can be safe and fun for all levels of enthusiasts. The Instruction Manual is presented to enhance your enjoyment of the sport. It is intended to alert you to some of the potentially dangerous conditions that can arise in all watersports.**

**The product is recommended for use by children at least 6 years and older.**

**Adult supervision required.**

**170 lb (77kg) weight limit.**

To reduce the risk of injury or death using this bouncer, follow these guidelines:

- Use this product only on water.
- Carefully read this manual and follow the instructions. Always have someone watch you when using the product. There should be no more than one person at a time on this product. Multiple users increase the risk of injury.
- Recommended for children at least 6 years and older. Constant adult supervision is required.
- Take all reasonable precautions in the use and operation of your product.
- Ensure that all valves are closed. Do not use this product before it is fully and properly inflated.
- Do not exceed the manufacturer's recommended number of users (1) for this particular product.
- Use only in large bodies of water in a depth of 10 feet minimum.
- Choose a location that is protected from high winds or waves where strong water currents are present.
- Always anchor securely before using the floating bouncer.
- Never strap or attach any equipment, accessories or persons to the product. Never put your feet or hands through the strapping of product. Never wedge your hands or feet under the cover or between the cover.
- Never attempt dangerous tricks with this product. Do not attempt somersaults or flips, this can result to paralysis or death if you land on your head or neck.
- Scout the area before use to avoid any debris or obstacles that might present a safety hazard.
- Know your own limits. Stop when you are tired. Act responsibly. Be in good physical condition and be cautious in your use of this or any other product.

## PRODUCT INSTRUCTIONS AND WARNINGS

- Check the ladder and connectors for frays, cuts, sharp edges, knots, or wear before each use. Discard rope if any such condition exists or if rope appears to be worn. Such conditions may lead to breaks.
- Do not use the product when under influence of drugs or alcohol. Do not smoke while using the product.
- Stop jumping if you become fatigued. Always control your jump.
- Do not leave the product under the sun or exposed in weather for more than 48 hours.
- The product should be replaced when signs of deterioration appear, indicated by the existence of discoloration, wear, fraying or unraveling.
- Never use this product when rough water conditions exist. In the event of lightning, immediately cease use of this product and get out of the water.
- Do not wear clothing with draw strings, loops, hooks, or hard abrasive buckles while using this product.
- Falling and the injuries that may result are inherent risks in the sport.
- Focus eyes on the center of this product. This will help control the bounce.
- Always properly anchor this product before use.

### **Electric Air Pump Warnings**

#### **Important:**

- Power supply must be 120 volt AC.
- This is a high-volume low-pressure pump. It is intended to inflate/deflate items. This pump is not designed for continuous use. Extended operation can overheat and damage the pump.
- Do not exceed 20 minutes of continuous operation.
- Keep this air pump away from the reach of children.
- Do not change the plug in any way.
- Do not obstruct ventilation holes.

#### **Warning:**

- Carefully follow instructions on articles to be inflated. Never exceed recommended pressure. Bursting items can cause serious injury.
- Never leave pump unattended during use.
- Do not use under wet conditions.
- Never allow sand, small rocks, etc. to be sucked into inflation or deflation port while operating.
- Never look into or point the inflate opening toward your eyes while pump is operating.
- Do not attempt to put hand or fingers into the inflation or deflation part at any time.



## **Watersports Responsibility Code**

Watersports are fun and challenging but involve inherent risks of injury or death. To increase your enjoyment of the sport and to reduce your risks, use common sense and follow these rules:

### **Before you start**

- Familiarize yourself with all applicable federal, state and local laws, the risks inherent with the sport and the proper use of the equipment.
- Use caution and common sense.

### **Your equipment**

- Inspect all equipment prior to use. Do not use if damaged.
- Always wear a U.S. Guard Type III (PFD) vest


## Parts List

A	Water Bouncer		1
B	Boston Valve		1
C	Ladder		1
D	Anchor Bag W/15ft Rope		1
E	Inflator/Deflator		1
F	Repair Patch Kit		2
G	User's Manual		1

# Assembly and Operating Instructions

## Step 1: Water Bouncer Assembly

**CAUTION: DO NOT OVER-INFLATE.** Use of an air compressor or over-inflating can rupture the tube beyond repair, thus voiding the warranty. Do not use a compressor to inflate.

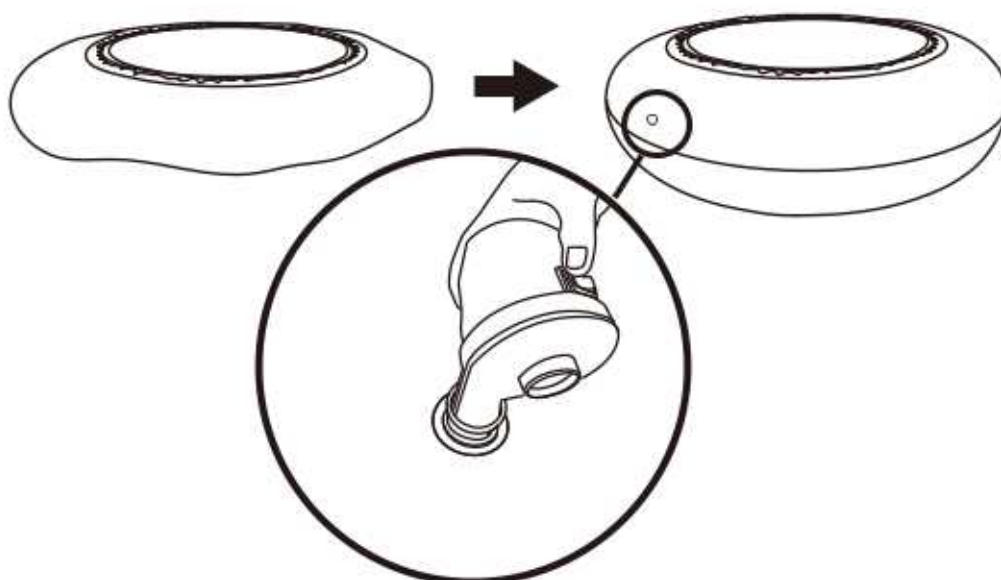

Lay the product face up on a flat surface. Make sure there are no sharp objects under the product that might puncture the tube.

Remove cap on valve and inflate the product using Inflator (Part E). Use the largest nozzle for quickest inflation.

### To Deflate Items:

- Open the inflation valve to deflate the bouncer.

**Note:** A firm and fully inflated product will perform better on the water than an under-inflated product and is less subject to damage. Use a hand pump to top off, if needed, to obtain this firmness. However, do not over-inflate. Inflate only until firm. After fully and properly inflated, check to ensure all valves are closed.


**Note:** The air pressure in the product will fluctuate depending on air and water temperatures. Adjust the air pressure in the product accordingly throughout the day to maintain proper firmness during use. To deflate, unscrew the entire Boston valve. This allows air to escape quickly and easily.



## Assembly and Operating Instructions

### Step 2: Ladder Assembly


Tie ladder to plastic rope and tie connector. Make sure these two connections are tied firmly enough before climbing.

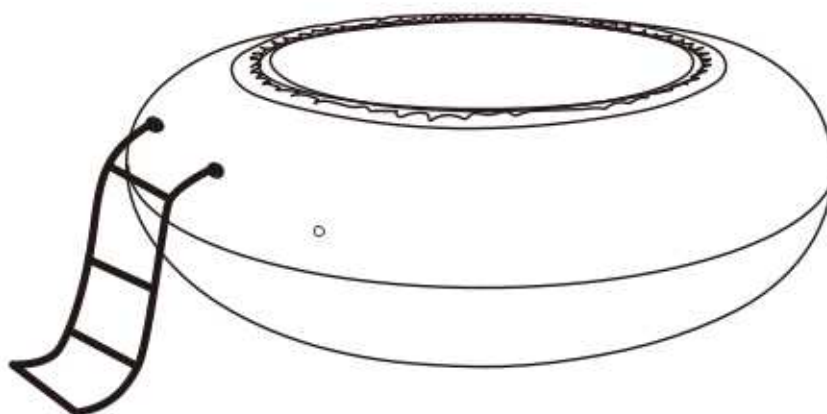

## Assembly and Operating Instructions

### Step 3: AnchorAssembly

To use anchor, fill with sand or soil and tie to bottom of Water Bouncer.  
Make sure the anchor bag (D) is fastened tightly to the bottom of the Water Bouncer with 15 ft rope.

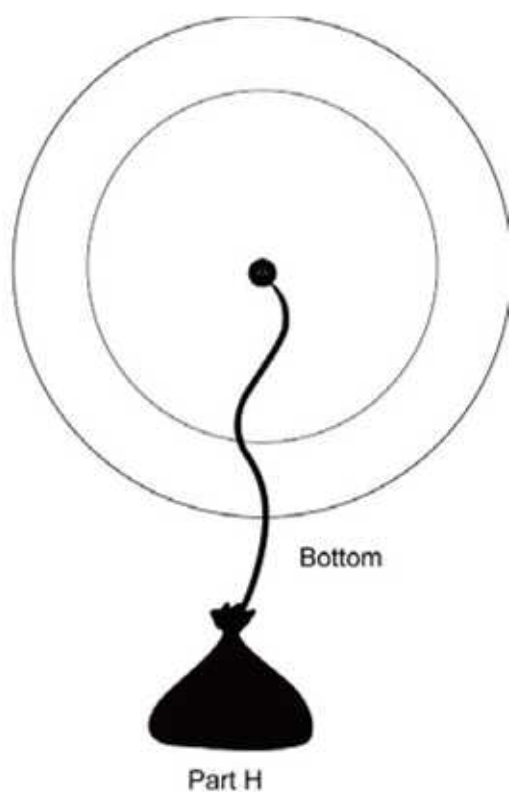

You can play now!



## Care and Maintenance

- When this product is not being used, we recommend that you store it in a covered, shaded area. This will help protect it against ultraviolet (UV) rays and extend the life of the product.
- Clean the inflatable completely with mild soap and fresh water. NEVER USE PETROLEUM BASED PRODUCTS OR SOLVENTS FOR CLEANING.
- Product should be completely dry and remain dry while stored.
- Roll the product loosely and place in a vented storage bag or container.
- Store in a cool, dry location. Do not store product directly on concrete surface. Place mothballs around stored inflatable to keep mice and insects away.
- Secure the product to prevent unauthorized or unsupervised use.


## Troubleshooting

Air chamber won't hold air:

- Check main Boston valve to ensure plastic ring is not caught under the seal or cap.
- Check for holes in bladder following the procedures in the "Repair" section.



## Repair Instruction

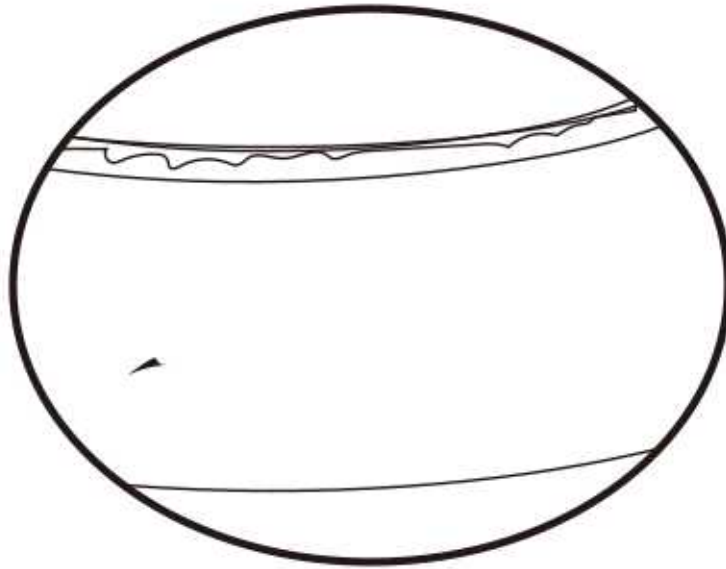

- Identify the location of the puncture or leak. Check exterior as well as inside air bladder for leaks.
- Deflate the product and gently clean the damaged area with a damp cloth. Allow area to dry thoroughly.
- Remove the adhesive backing from the repair patch and place it over the damaged area (cut to size if necessary).
- Press the repair patch to remove any air bubbles.
- Wait 30 minutes to allow the patch to dry before re-inflating.

## WARRANTY INFORMATION

This product has been manufactured under the highest standards of quality and workmanship. We warrant to the original consumer purchaser that all aspects of this product will be free of defects in material and workmanship for one year from the date of purchase. A replacement for any defective part will be supplied free of charge for installation by the consumer. Defects or damage caused by the use of other than genuine parts are not covered by this warranty. This warranty shall be effective from the date of purchase as shown in the purchaser receipt.

This warranty is valid for the original consumer purchaser only and excludes industrial, commercial or business use of the product, product damage due to shipment or failure which results from alteration, product abuse, or product misuse, whether performed by a contractor, service company, or consumer. We will not be responsible for labor charges and/or damage incurred in installation, repair or replacement nor for incidental or consequential damage.