


⚠ WARNING

THIS MACHINE CAN CAUSE PERSONAL INJURY! WEAR SAFETY GLASSES AT ALL TIMES AND KEEP FINGERS AWAY FROM SPINNER PLAT. FAILURE TO FOLLOW ALL SAFETY INSTRUCTIONS COULD RESULT IN INJURY.

Parts List

1. Sunslinger Kit
2. American Hunter Hopper
3. 6V Lantern Battery (not included)
4. (optional) Remote Activator (not Included)

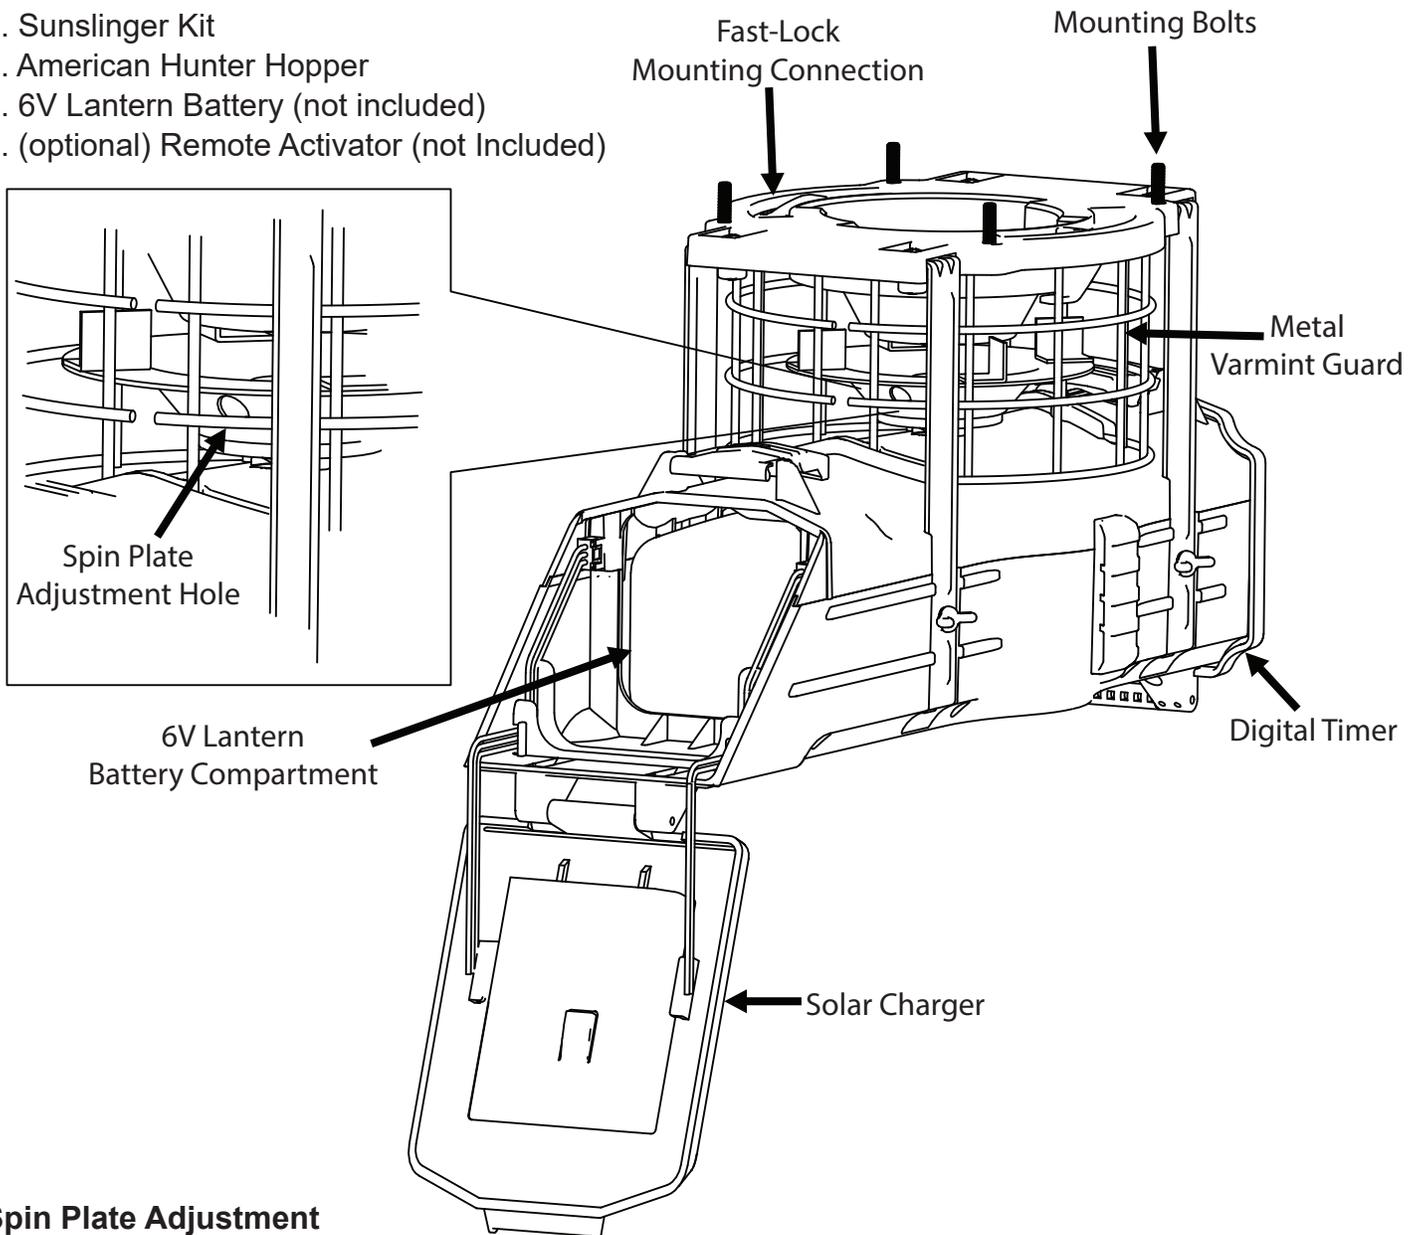

Spin Plate Adjustment

With the Sunslinger, you are able to raise and lower the spin plate to accommodate different feed sizes.

NOTE: IT IS NOT NECESSARY TO REMOVE VARMINT GUARD TO ADJUST SPIN PLATE.

1. Rotate spin plate so Spin Plate Adjustment Hole is accessible through varmint guard.
2. Loosen screw and to slide Spin Plate to desired height.
3. After height adjustment is complete, tighten screw to lock Spin Plate into place.

Digital Timer Instructions

Digital Timer Quick Set Modes			
	Time	Days	Length
QSET 1	6:30 AM 6:30 PM	ALL	3 sec
QSET 2	6:30 AM 6:30 PM	ALL	5 sec

Please read all instructions before attempting to set the clock

Setting time of day

1. Remove protective cover if installed
2. Press down the Right arrow on home screen
3. Press the Right arrow on the Current Time screen
4. The "Hour" indicator will begin to flash. Press Up or Down to adjust the hour. Press Right when complete.
5. The "Minute" indicator will flash. Press Up or Down to adjust the minute. Press Right when complete.
6. The "Day" indicator will flash. Press Up or Down to adjust the minute. Press Right when complete to return to the Current Time screen.
7. Press the Left to return to the home screen

Setting feed time (1st Setting)

1. Remove protective cover if installed.
2. Press the Left button to enter the timer viewing screen. A number will appear in the upper right corner, indicating which timer is being viewed.
3. Press the Right button to enter the timer programming screen
4. The "Day" indicator will flash. Press Up or Down to adjust the day. Press Right when complete
5. The "Hour" indicator will begin to flash. Press Up or Down to adjust the hour. Press Right when complete.
6. The "Minute" indicator will flash. Press Up or Down to adjust the minute. Press Right when complete.
7. The run time duration will flash. Press Up or Down to adjust the run time. Press Right when complete to return to the timer viewing screen. Press Left to exit to the home screen.

NOTE: If you want the feeder to operate at the same time every day of the week, it is only necessary to set 1 program cycle for that time of day. however, every day of the week must be shown at the bottom of the LCD display for that cycle.

Setting Feed Time 2 - 16 (For multiple feedings)

1. In the timer viewing screen, press the Up or Down arrows to change between timers.
2. Press Up to navigate to the next program cycle or Down to navigate to the last program cycle.
3. Repeat steps 2 through 7 above to set program 2-16. When all desired programs have been set just wait 5 seconds and timer will return to current time and day display.

Cancel Program feed time

To cancel a custom feed time, navigate to the "Day" adjustment. The option to disable a specific time is located just before the Sunday setting. Press the Up or Down arrow to navigate to the OFF setting and select it to disable this custom time.

Timer Reset

Press recessed button and all program cycle settings will be reset.

Test

1. Press and hold Right arrow to activate test. USE CAUTION! There is a 5 second delay and the test will begin.
2. Press the Left arrow during the timer countdown to cancel the test.
NOTE: If for any reason you need to turn off the timer to reboot the clock, you need to wait for at least 20 seconds before turning the clock back on. Failure to do so may result in clock failure.

WARNING: If the feeder become clogged, the motor will stop and try to dislodge the blockage 3 times. If this is unsuccessful, the message FFF will appear on the screen. To remove this message, press the left button

Parts List

1	Hex Nut		4 pcs
2	Hex Bolt		4 pcs
3	Flat Washer		4 pcs

LIMITED WARRANTY GSM

Outdoors warrants this product to the original purchaser to be free from defects in materials and workmanship, under normal use and conditions for a period of One Year from the date of the original purchase. Under this warranty, this unit will be replaced or repaired at our option, without charge for parts or labor, excluding batteries, for this period

This warranty is void if any of the following occur: 1. The warranty card was not sent in at the time of purchase 2. The unit is not owned by the original purchaser at the time of the warranty claim 3. The unit has been tampered with, opened or punctured 4. The unit has been physically abused

This shall be the exclusive written warranty of the original purchaser and neither this warranty or any other warranty, expressed or implied, shall extend beyond the 12-month period listed above. In no event shall HME's be liable for consequential damages, consequential property damage, or consequential personal injury. (Some states do not allow limitations on implied warranties or exclusions of consequential damages, so that these restrictions may not apply to you). This warranty gives you specific legal rights, and you may have other rights, which vary from state to state.

TOLL-FREE CUSTOMER SUPPORT (877) 269-8490

FCC COMPLIANCE



NOTE: This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television receptions, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measure:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or Modifications not expressly approved by the party responsible could void the user's authority to operate this device.

Product specifications are subject to change. Good Sportsman Marketing, LLC is not responsible for any photographic or typographical errors.

May be protected by one or more U.S. Patent numbers: 6,735,387 / 6,768,868 / 6,834,162 / 7,149,422 / 7,308,196 / 7,593,632 / 7,710,457 / 8,895,926.

This device complies with Canada ICES-003(B)/NMB-3(B)

Contact Us

Phone: 1.877.269.8490

Website: www.gsmoutdoors.com

GSM, LLC

P.O. Box 535189

Grand Prairie, TX 75053-9504