

Pop-Up Treestand Umbrella Installation





- 1. Insert the umbrella rod into the rod receiver (Fig. 1). Once the receiver lines up with the top square hole on the rod, click into place to secure.
- 2. Screw the threaded tip of the tree bracket limb into the tree at a position that is at least two feet above your head. If bow hunting, you may need to position the tree bracket higher to allow for full clearance of the bow. Note: For proper installation, make sure the threaded tip of the tree bracket limb is completely and securely screwed into the tree trunk, past the loose bark on the surface of the tree trunk. Failure to follow this instruction may result in the collapse of the product during use.
- 3. Align one of the four holes in the tree bracket base so that it faces directly upward. Insert the assembled umbrella rod into the upward facing hole of the tree bracket base (Fig. 2).
- 4. Secure by inserting the locking pin through the small holes in both the tree bracket base and the umbrella rod (Fig. 2 & 3).

The Pop-Up Umbrella is designed to fit snugly to the tree. The back side of the umbrella is cut away to allow it to wrap around the tree trunk for greater protection. Four nylon ties are included to help secure the umbrella portion around the tree.

5. Attach the four ties to the snaps located on the back side if the umbrella. Once all four ties are attached, locate the two top ties and wrap them around the tree and tie them together as shown below. Repeat this step with the bottom two ties.



Do not use this product when thunderstorms are present within five (5) miles or when any adverse weather conditions presents itself and always end your hunt immediately if these conditions arise. These include weather conditions which have the potential for producing winds, lightning, rain, snow, sleet and/or any other atmospheric condition which may limit your ability to operate this product in a safe manner. Failure to follow this instruction may result in serious injury or death!

Product Warranty and Liability

PRODUCT WARRANTY: This warranty remains in effect for six (6) months from the date of purchase against defects and workmanship. Purchases must be made through an authorized dealer. The warranty covers defects in workmanship and material. The warranty does not apply to units, which have been damaged or abused intentionally or unintentionally. A purchase from individuals or unauthorized Internet sites voids the warranty. Tampering with or altering the unit will void the warranty. Any unauthorized service will void warranty. Original sales receipt must be produced for any warranty services and a Return Authorization (RA) number must be obtained from customer service at 877-269-8490 prior to returning product. Any returns without Return Authorization (RA) number will not be accepted.

WARRANTY LIMITATIONS: The above warranty does not apply to products that are repaired, modified or altered by any party other than GSM, LLC; are subjected to unusual physical stress or conditions (such as overload or corrosion), natural disaster, theft, vandalism, or any reason beyond reasonable control; are damaged due to improper installation, misuse, abuse, accident or negligence in use, storage, transportation or handling, or tampering; due to normal wear and tear.

LIMITED LIABILITY: In no event shall THE AUTHORIZED DEALER be liable to the purchaser or any third party for any indirect, incidental, consequential, special, exemplary or punitive damages arising out of the use of the product, including, without limitation, property damage, loss of value of the product or any third party products that are used in or with the product, or loss of use of the product or any third party products that are used in or with the product.

Questions regarding the warranty on a specific product and warranty claims should be directed to our customer service at 877-269-8490.

SAVE THESE INSTRUCTIONS

GSM, LLC

P.O. Box 535189 Grand Prairie, TX 75053 www.gsmoutdoors.com