


DANGER! Although the Lifeline is designed to arrest a fall while climbing a tree, the tree must initially be climbed without it to install the Lifeline. While installing the Lifeline, you must wear a full-body safety harness and use a lineman's climbing rope that meets the standards recognized by the Treestand Manufacturers Association (TMA). All HSS harnesses and HSS Lineman's Climbing Ropes (LCR) meet these standards. You must stay attached to the tree from the moment you leave the ground until you return. For more information, please refer to the instructions and safe use manuals included with your HSS harness and LCR. If there is ANYTHING you do not understand or are uncertain about, call 1-877-296-3528 before using this or any HSS product.

REMEMBER: Safety and safe hunting practices are the most important elements of the hunting experience and are YOUR responsibility. If there is anything about this product, its usage or safety instructions that you do not understand, call 1-877-296-3528 before using this product. Help us to help you stay safe!

WARNING! Read and follow all instructions on BOTH sides of this instructional sheet prior to using this product. Failure to read, understand, and follow this information can cause serious injury or death! If there is ANYTHING you do not understand or are uncertain about, call 1-877-296-3528 and speak to a Hunter Safety System (HSS) product specialist BEFORE use. Although Hunter Safety System, Inc. is dedicated to manufacturing only the safest hunting equipment possible, this goal cannot succeed without the aid of our customers. Common sense in the use and understanding of this product is absolutely necessary.

WARNING! READ BEFORE USING THIS HSS PRODUCT

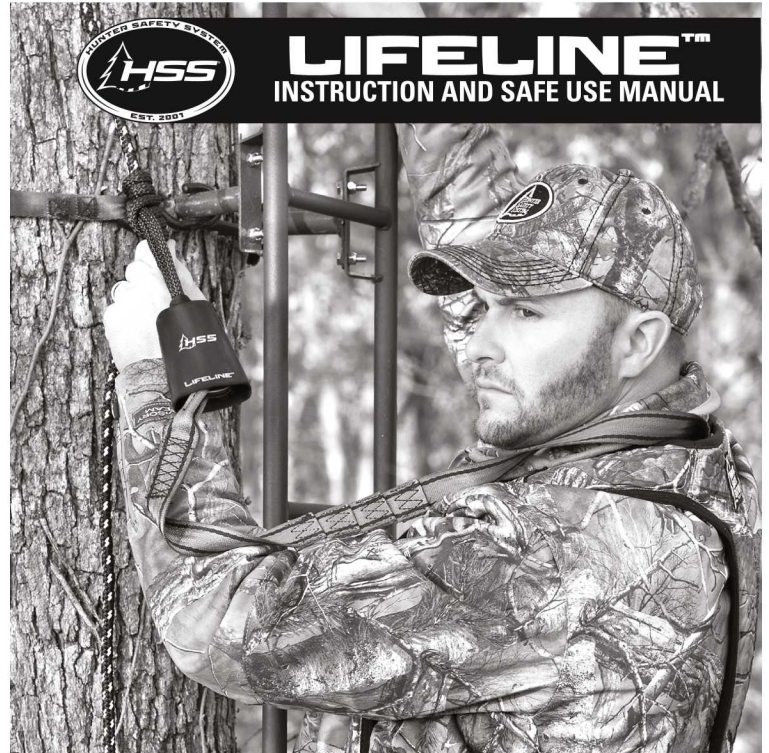

LIFELINE™
INSTRUCTION AND SAFE USE MANUAL



WARNING!

WARNING! Read, watch, and follow all written and video instructions prior to using any Hunter Safety System (HSS) product. Failure to read, watch, understand, and follow this information can cause serious injury or death! If there is ANYTHING you do not understand or are uncertain about, call 1-877-296-3528 and speak with an HSS product specialist BEFORE using this or any HSS product!

REMEMBER: Safety and safe hunting practices are the most important element of the hunting experience and are your responsibility. If there is anything about this product, its usage, or safety instructions that you do not understand, call 1-877-296-3528 and speak with a product specialist before using this product.

WARNING! If there is ANYTHING about this or any Hunter Safety System product or its instructions that you do not understand, CALL A PRODUCT SPECIALIST 1-877-296-3528. HunterSafetySystem.com


Complete instructions on the reverse side.

DO NOT WASH THIS PRODUCT IN A MACHINE!

WHEN TO REPLACE YOUR LIFELINE Be sure to discontinue using your Lifeline immediately and replace it if it shows any signs of wear, has been used to prevent a fall, has been subjected to a severe shock or overload for which it was not designed, such as towing a vehicle or ATV, or when you are in doubt as to its safety and/or effectiveness.

3528 and speak to a product specialist.

PRUSIK KNOT Before using your LLS, always make sure the Prusik knot has six (6) loops around the Lifeline (FIGURE 1). If less than six, DO NOT USE IT! **WARNING!** Always test your Prusik knot before each use. To do this, grip the rope slightly above the Prusik knot with one hand and pull sharply on the carabiner with the other. Make sure the knot tightens securely around the rope. If it ever fails to tighten securely, or if you are in doubt about its effectiveness, DO NOT USE IT. Call 1-877-296-3528 and speak to a product specialist.

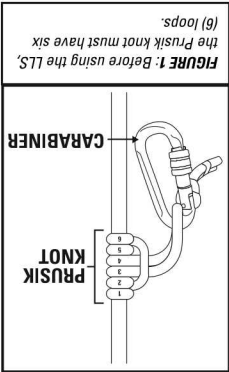

WARNING! READ BEFORE USING THIS HSS PRODUCT



LIFELINE™
PRODUCTS AND ACCESSORIES (SOLD SEPARATELY)



LIFELINE™ 3 PACK

Save money and stay connected in every tree by installing a LIFELINE with each treestand! Save 15% by buying a three pack.



LIFELINE™ TANDEM

The Lifeline Tandem allows two hunters to hunt safely from a treestand. It features two Prusik knots, 2 Recon carabiners, and 2 Cowbell sound dampeners.



ROPE-STYLE TREE STRAP

Stay connected when ascending, descending, and hunting with a climbing stand with our Rope-Style Treestrap.

CONNECT WITH US!

fb.com/HunterSafetySystem @HSSVest @HunterSafetySystem

©2021 Hunter Safety System, Inc.
8237 Danville RD, Danville AL 35619
1.877.296.3528
questions@huntersafetysystem.com
www.HunterSafetySystem.com

NOTE: When using this Lifeline, you must stay attached to it while ascending, hunting, and descending. You do not need to attach your harness to another form of treestrap when in the treestand. Stay connected to the Lifeline at all times.

INSTALLATION

1. Put on and adjust your HSS harness according to all written and video instructions.
2. Anytime you are above ground level, you **MUST** stay connected to the tree from the moment you leave the ground until you return. To accomplish this with hang-on style treestands prior to installing the HSS Lifeline, you must use the HSS Lineman's Climbing Rope (sold separately) in conjunction with the HSS Harness and treestrap. Follow all Lineman's Climbing Rope and harness written and video instructions for safely climbing a tree.
3. Once in the treestand, place the looped end of the Lifeline around the tree and pull the entire rope, Prusik knot, and carabiner through the loop (**FIGURE 2**).
4. Drop the tail end of the rope to the ground while leaving the Prusik knot and carabiner near the loop. Attach the Prusik knot's carabiner to your harness's tether, tighten the locking carabiner, and proceed to climb down the tree while sliding the Prusik knot down as you descend.
5. Once on the ground, disconnect your tether from the Prusik knot's carabiner and tie the slack end of the Lifeline rope near the bottom of your steps so that the rope is slightly taut.

CLIMBING WITH THE LIFELINE

1. While standing on the ground, attach and lock the Prusik knot's carabiner to the loop at the end of the harness's tether, grip the Prusik knot lightly, and slide it along the Lifeline rope as shown (**FIGURE 3**). **ALWAYS** remove your hand from the Prusik knot once it is moved into position. **DO NOT** hold the Prusik knot while climbing!
2. **WARNING!** Grabbing or holding the Prusik knot during a fall can cause you to slide the entire length of the rope resulting in serious injury or death!
3. While standing on your treestand, slide the Prusik knot to a location over your head so that there is no slack in your tether while in a sitting position.
4. Although the Lifeline is designed to be left in the tree for short periods of time, it **MUST** be examined closely for wear, weathering, or damage **BEFORE** each use. **WARNING!** **DO NOT** leave the Lifeline in the woods or outdoor elements from one season to the next. It must be examined for wear or damage from animals or outdoor elements each time it is used. Remove from the tree immediately following the season. Failure to do so may result in serious injury or death.
5. Do not use the Lifeline for any other reason than that which it is intended. For instance. Do not use the Lifeline for towing a vehicle, pulling an ATV from a bog, etc.
6. The lifeline must be replaced two years from the date of manufacture or purchase. Purchase receipt must be retained to show proof of the date of purchase.

IN CASE OF A FALL

1. If you experience a fall, **NEVER** grab the Prusik knot. Allow the knot to stop the fall. **WARNING!** Grabbing the Prusik knot during a fall can cause you to slide the entire length of rope resulting in serious injury or death!
2. If you experience a fall, **DON'T PANIC!** Remain calm and think about how to recover. If your stand or steps remain securely in place, get back onto them. If they are gone, use your suspension relief device to relieve pressure to your legs and body. Follow the harness manufacturer instructions for this process.
3. Suspension or hanging for long periods of time can cause discomfort, serious injury, or death. Always carry a screw-in step or a suspension relief strap (like the one provided with the HSS harness) with you in an easily accessible pocket at all times to relieve suspension trauma in the event of a fall.
4. **ALWAYS** let someone know where you will be and when you can be expected to return. **ALWAYS** carry a cell phone, whistle, personal location beacon, or two way radio with you to call for help.

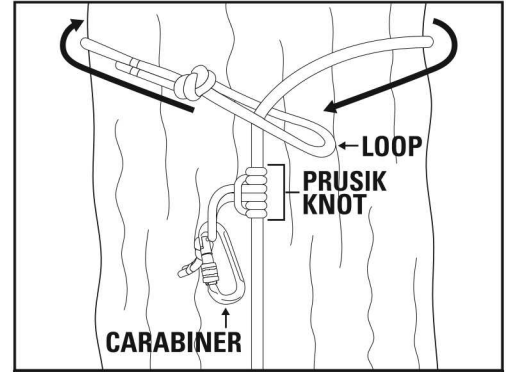


FIGURE 2: To attach the Lifeline to the tree, place the looped end of the Lifeline around the tree and pull the entire rope, Prusik knot, and carabiner through the loop.



FIGURE 3: Sliding the Prusik knot while climbing with the Lifeline.

WARNING!

If there is **ANYTHING** about this or any Hunter Safety System product or its instructions that you do not understand,

**CALL A
PRODUCT SPECIALIST
1-877-296-3528**

HunterSafetySystem.com