



MB80 Electric Pump

Instruction & Owner's Manual

Sea Eagle Boats Inc.
19 N. Columbia Street, Suite 1
Port Jefferson, NY 11777
1-800-748-8066

July 2017

MB80 Electric Pump



BTP
Includes the pump and multiple adapters.



Optional alligator clips are available for the MB80.

(Part number SP140)



WARNINGS:

Keep out of the reach of children.
Don't leave running unattended.
Do not use inflator for more than 20 minutes continuously as this can cause overheating and damage.



Connect the alligator clip adapter to the MB80.



Included with the MB80 are multiple adapters. None of these are needed for Sea Eagle Boats.



The alligator clips can be connected to a car or portable marine battery.



Insert the power adapter into a car's 12V power outlet.



WARNING:

Always connect red clip to the positive pole and the black clip to the negative pole. Cross connecting wires could damage both the pump and SUP.

MB80 Electric Pump



Insert the end of the pump directly into the air valve.

Contact Us

Unlike many other companies today we pride ourselves on answering the phone and helping you with any concerns, questions or special ordering needs that you may have! Feel free to give us a call at **1-800-748-8066** and we will be happy to talk with you! Our business hours are Monday to Friday from 9AM to 5PM, EST.

Sea Eagle Boats Inc.

19 N. Columbia Street, Suite 1

Port Jefferson NY 11777

1-800-748-8066

staff@seaeagle.com



Turn the pump on.



Turn pump off when desired pressure is met.

Note, the pump does not automatically turn off, but it will not inflate over 1.1 PSI.



WARNING:

Air compressors that are designed for other uses like tire inflation (usually over 30 psi) can easily over-inflate and cause harm to your Sea Eagle that uses a much lower pressure. For this reason, we recommend using only Sea Eagle electric pumps.