


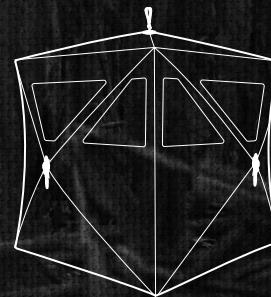

## HUB BLIND

Instructions & Safety Manual




## SET-UP

- ① After removing Blind from case, unbuckle cinch strap **Figure 1**. Unfold each corner outward and lay flat on ground as shown in **Figure 2**. Be sure material is NOT twisted or overlapping ends of poles.

Figure 1




Figure 2

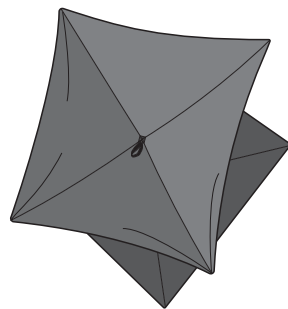

- ③ **Note:** If you cannot access the wall hub when starting to lift the blind in Step 4, rotate the opened wall left to right slightly as shown in **Figure 4**, while lifting. This will allow the blind to open so you can pull the remaining hubs into place.


Figure 4

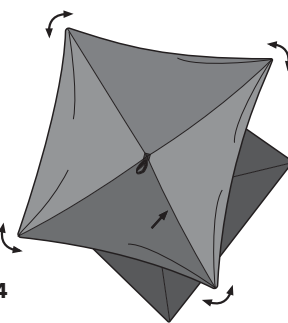

**NOTE:** Illustrations used are for demonstration purposes only and may not depict actual product.


- ② Firmly pull one of the hubs until it pops open. **Note:** You can start with any hub but it is usually best to open the roof hub first.

Figure 3

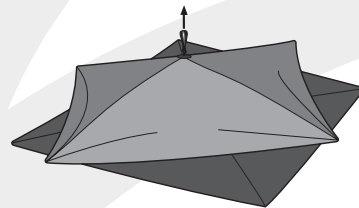


- ④ Lift the blind until you can access another wall hub and firmly pull until wall pops out as shown in **Figure 5**.

Figure 5

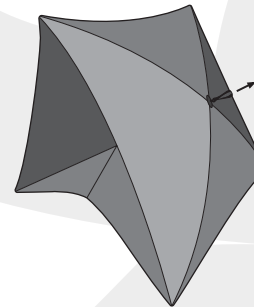


- ⑤ Continue around blind, pulling each center hub until all but door side hub is extended as shown in **Figure 6**.

Figure 6

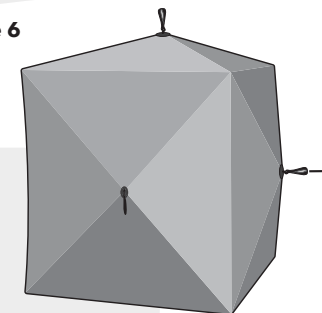


- ⑦ Your blind should now be set up. Use stakes to secure blind to the ground. Adjust windows, and add native brush to stubble pockets (if available on your model) to optimize your camouflage.

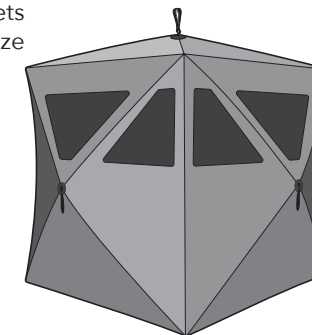

- ⑥ **IMPORTANT:** Make sure door zippers are fully closed so wall will keep tension. Now pull DOOR HUB out.

Figure 7

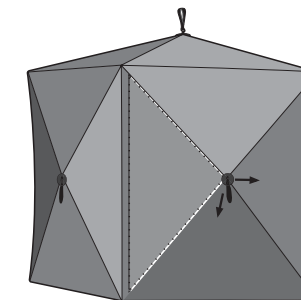


Be sure to follow these guidelines for using your Product. READ AND UNDERSTAND ALL INSTRUCTIONS and WARNINGS FIRST. If you have any questions regarding the use of this product contact our Customer Service Department.

## TAKE DOWN


- 1 Close and secure windows from interior. Exit Blind. UNZIP DOOR ZIPPER as shown in **Figure 1**.

Figure 1

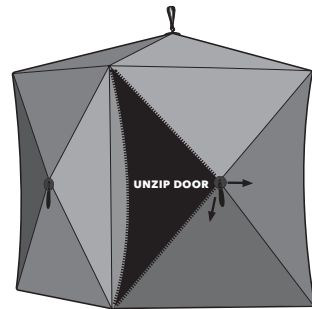


- 3 Repeat Step 2 on remaining walls. Once all walls have been pushed in, blind will collapse onto ground as shown in **Figure 3**.

Figure 3

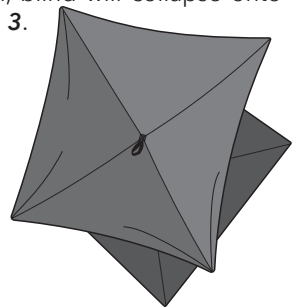


- 2 With an open palm, push center hub of one of the walls until the tension begins to give as shown in **Figure 2**.

Figure 2

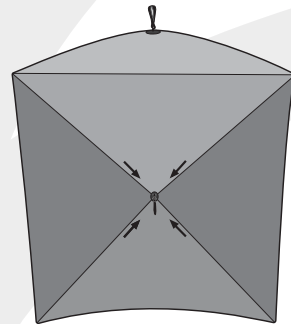


- 4 With an open palm, push center hub pole of roof until tension gives as shown in **Figure 4**.

Figure 4

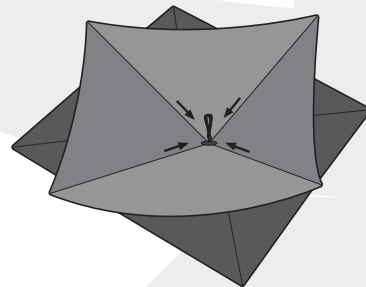

- 5 Gather all corners of blind as shown in **Figure 6**. **Note:** If you cannot bring all of the corners of the blind together, gently rotate the top-most corners from left to right as you continue to bring them together. You will feel them "free-up" and collapse as shown in **Figure 7**.

Figure 6

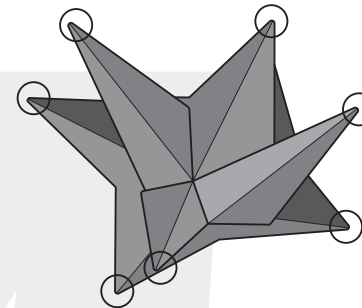


- 6 Buckle cinch strap around blind and return to its case for storage as shown in **Figure 8**.

Figure 8



Figure 7

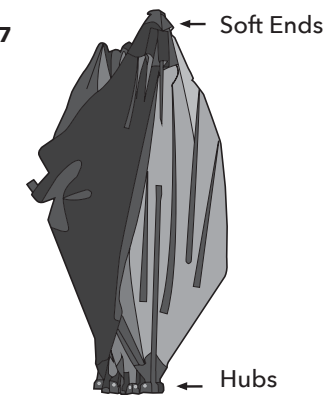

Be sure to follow these guidelines for using your Product. READ AND UNDERSTAND ALL INSTRUCTIONS and WARNINGS FIRST. If you have any questions regarding the use of this product contact our Customer Service Department.

## STORAGE & TIPS

- Store Blind in a cool dry place - free of native brush, dirt and any debris
- Never store Blind wet or damp
- Avoid leaving Blind outdoors for any extended period of time. Prolonged exposure to sunlight may cause fabric to fade.

### THINK SAFETY!

- NEVER USE A HEATER IN YOUR AMERISTEP® BLIND UN-VENTED FUMES COULD CAUSE SICKNESS OR DEATH
- NEVER EXPOSE YOUR BLIND TO ANY OPEN FLAME. THIS PRODUCT IS NOT FIREPROOF
- NEVER SHOOT THROUGH MESH WITH A FIREARM SPARKS OR FLAME FROM THE MUZZLE COULD IGNITE THE MATERIAL
- NEVER SHOOT EXPANDABLE BROADHEADS THROUGH THE TSC WINDOWS - THE MESH MAY CAUSE PREMATURE OPENING OF THE BLADES. USE FIXED BLADE BROADHEADS ONLY
- FOR BEST ARROW FLIGHT THRU TSC AND SHOOT-THROUGH MESH WINDOWS, ALIGN BROADHEAD BLADES WITH FLETCHING
- NEVER ALLOW CHILDREN TO PLAY WITH THIS PRODUCT WITHOUT ADULT SUPERVISION
- NEVER ALLOW MATERIAL TO COVER YOUR FACE. IT CAN CAUSE SUFFOCATION AND DEATH
- NEVER ALLOW ANYONE TO USE LIGHTED CANDLES, MATCHES OR OTHER SOURCES OF FIRE NEAR THIS PRODUCT



**WARNING:** KEEP ALL FLAME AND HEAT SOURCES AWAY FROM TENT FABRIC.

The fabric will burn if left in continuous contact with a flame source. It is not fireproof. Do not use candles, matches or open flames of any kind in or near a tent; do not cook inside a tent; do not smoke in a tent; do not store flammable liquids inside a tent; build campfires downwind and several meters away from a tent and be sure to fully extinguish campfires before leaving a campsite or before retiring for the night; exercise extreme caution when using fuel-powered lanterns or heaters inside a tent and use battery operated lanterns whenever possible; do not refuel lamps, heaters or stoves inside a tent; extinguish or turn off all lanterns before going to sleep.

- **UV (ULTRAVIOLET LIGHT) WARNING:**

Ultraviolet light breaks down lightweight fabric fibers (and almost any synthetic material). The material will fade (discolor), lose strength and eventually disintegrate if left in prolonged sunlight. To extend the life of your Ameristep® product avoid leaving it out in direct sunlight. Set up your portable ground blind or accessory in a shady spot whenever possible to extend the product life.

Be sure to follow these guidelines for using your Product. READ AND UNDERSTAND ALL INSTRUCTIONS and WARNINGS FIRST.

If you have any questions regarding the use of this product contact our Customer Service Department.