



INSTRUCTIONS FOR USE OF JET PINNER II

1. Spread measuring scale to open position (Fig.1).

2. LOADING INSTRUCTIONS:

- (a) Remove loading rack (Fig.1) by lightly lifting locking device "A" and sliding "loading rack" out from the rear of the pinner.
- (b) Slide "plunger" (on loading rack) back to "plunger locking position B" (plunger automatically locks).
- (c) Slide cartridge of pins on to loading rack (Fig.2). Note: Position pins as shown on rear label of loading rack.
- (d) Slide off end of plastic strip closest to plunger (Fig.2). Caution: Be sure that there are no crossed pins on loading rack.
- (e) Insert rails of loading rack into slot (rear of pinner) and slide loading rack in until "locking device A" engages (Fig.1).

Note: Plunger lock will automatically disengage, allowing plastic strip to protrude from front end of pinner.

- (f) Remove plastic strip from front of pinner (Fig.3). Pinner is now loaded.
- (g) Tilt and slide measure stop for desired pin height (Fig.3) pinner is now ready for use. Note: Scale markings designate distance from top of pleat to top of pin (Fig.4).

3. OPERATION OF PINNER

Insert pin by placing measuring scale on top of drapery heading. Squeeze pinner and set point of exposed pin into drapery pleat. Pull the pinner towards drapery head, rolling wrist forward. Still squeezing pinner, push away from drapery head to release pin into drapery pleat. Repeat process for next pin.

SIMPLE TO USE!



FIG. A



FIG. B



FIG. C