

Pinsetter Pick-Off Replacement

Materials and Supplies

Clear Pinsetter - #PS10/D

Pick-Off replacement part - #PS10PC

Step-by-Step:



Photo 1

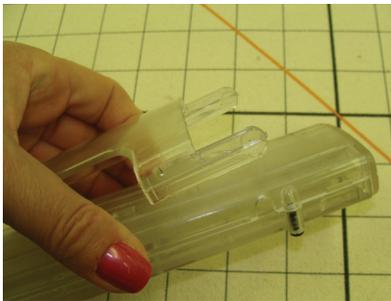


Photo 2



Photo 3



Photo 4



1. Remove the top piece by gently prying back the arm from the arm hole on the side (Photo 1).

2. Lift and remove from the pinsetter and set aside (Photo 2 & 3).

3. Slide out the pick-off at the end of the pinsetter.

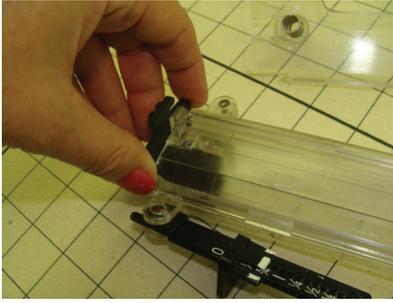


Photo 5

- 4. Slide in the replacement part PS10PC (Photo 5).

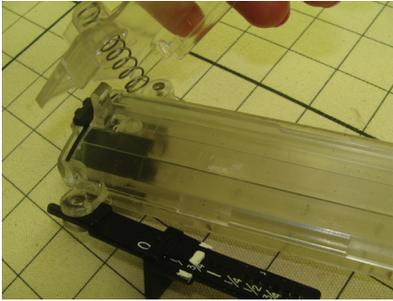


Photo 6

- 5. Replace the top piece by lining up the spring with the projection on the pinsetter and positioning the end under the lip. Hold end and spring in place with your left hand while pushing down on the opposite end with your right hand until the end projections are snapped into the holes on each side of the pinsetter (Photos 6, 7, and 7A).



Photo 7

Place under this small lip at the end of the pinsetter.



Photo 7A

- 6. Check to make sure the spring is working properly (Photos 8 & 9).



Photo 8



Photo 9