



Member's Mark™

Assembly Manual

Lakemont Shuffleboard 7pc Dining set


Model Number: GC-31025-7pc

Customer Assistance (spare/replacement parts):

Service Number: 1-888-691-2824 or

Service Email address: customerservice@coronadocasuals.com

Warning: Do not play in windy weather

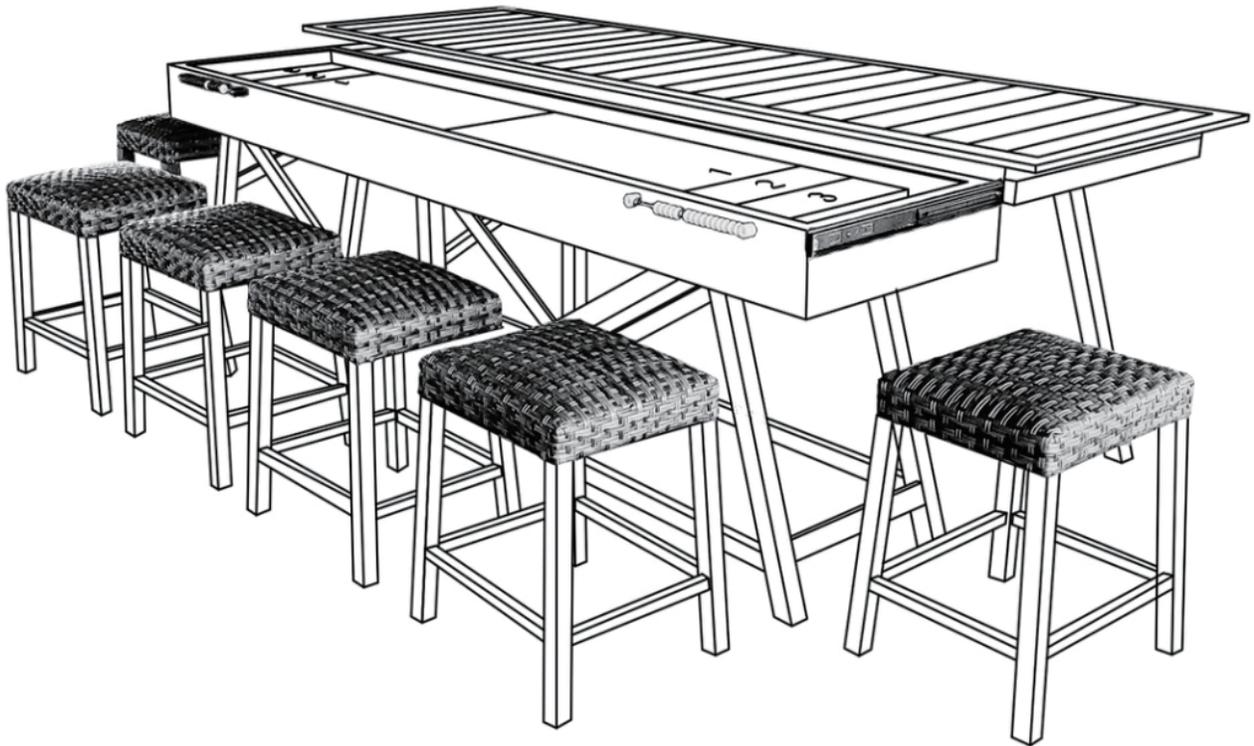

Two or more adults required assembly

***THIS ASSEMBLY MANUAL CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.***

Questions or Comments?

We would love to hear about your Member's Mark experience! Visit us at:
samsclub.com/membersmarkhelp



Important Safety Information

- *Please read all instructions carefully before assembling this furniture.*
- *For your safety, assembly by two or more adults is strongly recommended.*
- *Use only vendor-supplied hardware to assemble this item. Using unauthorized hardware could jeopardize the structural integrity of the item.*
- *Hardware may loosen overtime. Periodically check that all connections are tight.*

Before Assembly

- *Remove all parts and hardware from the box. Place all items on a carpeted or scratch-free work surface, as this will avoid damaging parts during assembly.*
- *The shipping box provides an ideal work surface.*
- *To avoid accidentally discarding small parts or hardware, do not dispose of any packaging or contents of the shipping carton until assembly is complete.*
- *Use the parts and hardware lists below to identify and separate each of the pieces included.*
- *The use of power tools for assembly is not recommended. Power tools can damage the hardware.*
- **Note:** *Do not fully tighten all bolts until all parts are in place. Failure to follow these instructions may cause the bolts to misalign during assembly.*


Care and Cleaning

- *Dust often and use a vacuum cleaner crevice tool to clean seams. To maintain the woven appearance, gently clean soiled areas with a soft cloth dampened with a mild, water based detergent. Remove all lather and wipe with a clean damp cloth. Dry with another soft cloth by blotting the damp surface (do not rub).*
-

Shuffle board table

Components

- | | |
|-------------------------------------|--|
| A.....Shuffle board table top.....1 | Q.....Bag for shuffleboard parts.....1 |
| B.....Shuffle board table leg.....2 | R.....Triangle.....1 |
| C.....Table leg panel-Upper.....3 | S.....Bowling Pin.....10 |
| D.....Table leg panel-Under.....2 | T.....Bowling Ball.....1 |
| E.....Dining table top.....1 | U.....Bag for Bowling set.....1 |
| F.....Dining table leg.....1 | V.....Furniture cover.....1 |
| L.....Black puck.....4 | W.....S-Hook.....1 |
| M.....White puck.....4 | X..... Scorer.....2 |
| N.....Shuffleboard Wax.....1 | AA..... Left Sliding rail.....1 |
| O.....Brush.....1 | BB..... Right Sliding rail.....1 |
| P.....Gradienter1 | |

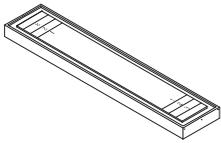

A




B



C



D

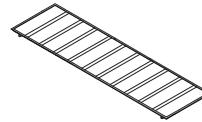

E



F



L



 
M




N



O



P

 

Q



R




S



T




U

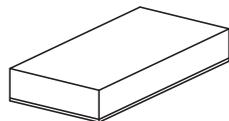


V




W

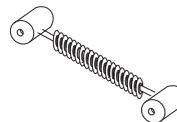

X

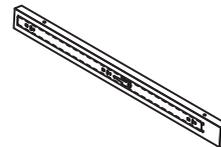


AA

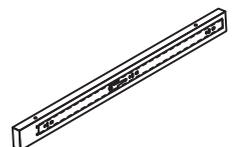

BB

 Hardware

<p>(G) Allen/Hex Bolt M6x20mm Qty: 26</p> 	<p>(H) Allen/Hex Bolt M6x30mm Qty: 8</p> 	<p>(I) Allen/Hex Bolt M6x70mm Qty: 16</p> 
<p>(J) M6 Washer Qty: 50</p> 	<p>(K) Allen Wrench Qty: 2</p> 	<p>(Y) Flat Head Bolt 4x40mm Qty: 4</p> 
<p>(Z) Screwdriver Qty: 1</p> 		

Step 1

(H)
Allen/Hex Head Bolt
M6x30mm
Qty: 4




(I)
Allen/Hex Head Bolt
M6x70mm
Qty: 6



(J)
M6 Washer
Qty: 10



(K)
M6 Allen Wrench
Qty: 1

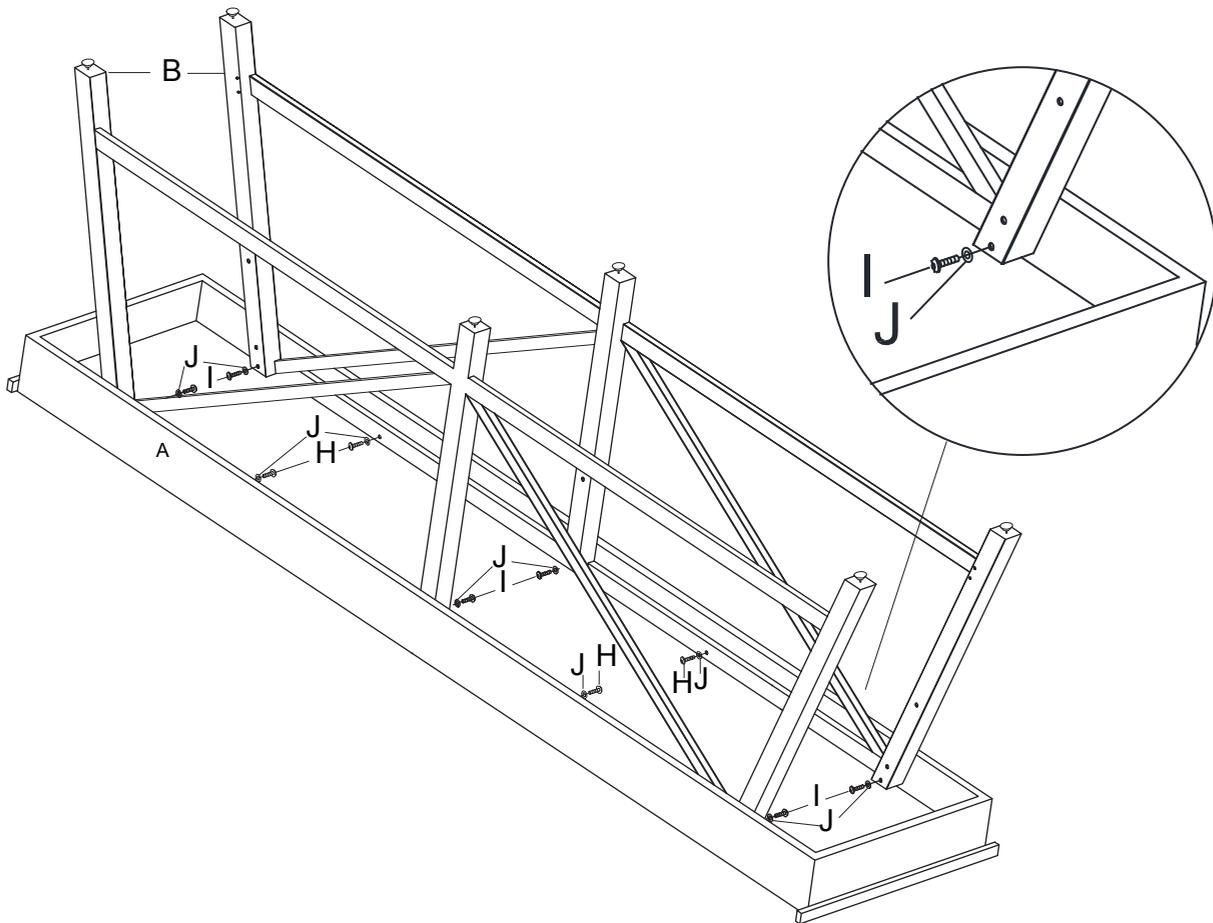


Carefully place shuffleboard table top (A) upside down a soft, flat and non-abrasive surface.

Attach the table legs(B) to table top (A) with bolts(H&I) and M6 Washer(J) by using M6 Allen Wrench(K).

Do not tighten the bolts until assembling is completed.

Step 2

(G) Allen/Hex Head Bolt M6x20mm Qty: 14 	(I) Allen/Hex Head Bolt M6x70mm Qty: 6 	(J) M6 Washer Qty: 20 
(K) M6 Allen Wrench Qty: 1 		

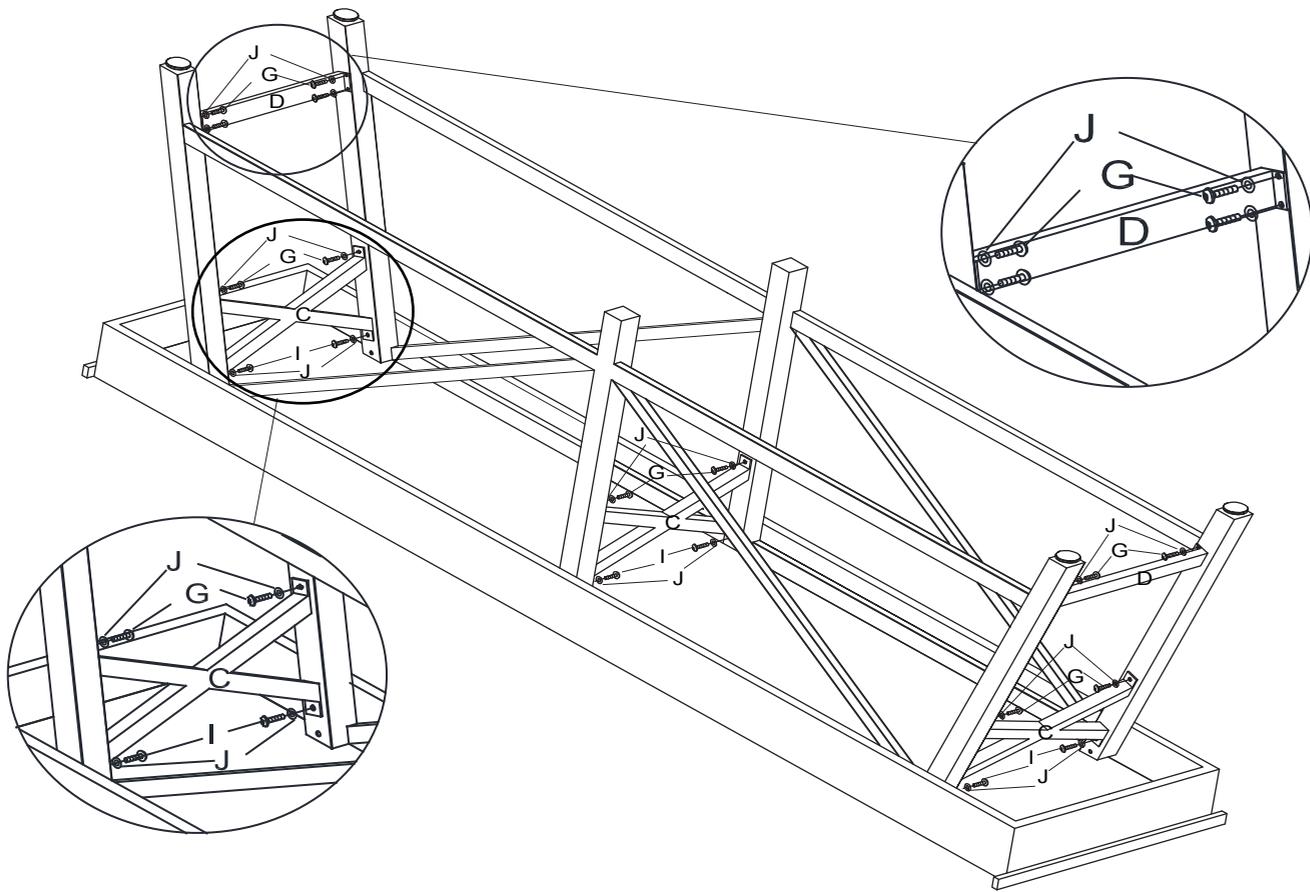


Attach the Upper table leg panels(C) to shuffleboard table legs (B) with bolts(G&I) and M6 Washer(J) by using M6 Allen Wrench(K).

Attach the Under table leg panels(D) to shuffleboard table legs (B) with bolts(G) and M6 Washer(J) by using M6 Allen Wrench(K).

Tighten all the bolts with M6 Allen Wrench(K).


Step 3

(G) Allen/Hex Head Bolt M6x20mm Qty: 12	(H) Allen/Hex Head Bolt M6x30mm Qty: 4	(J) M6 Washer Qty: 16
(K) M6 Allen Wrench Qty: 1		

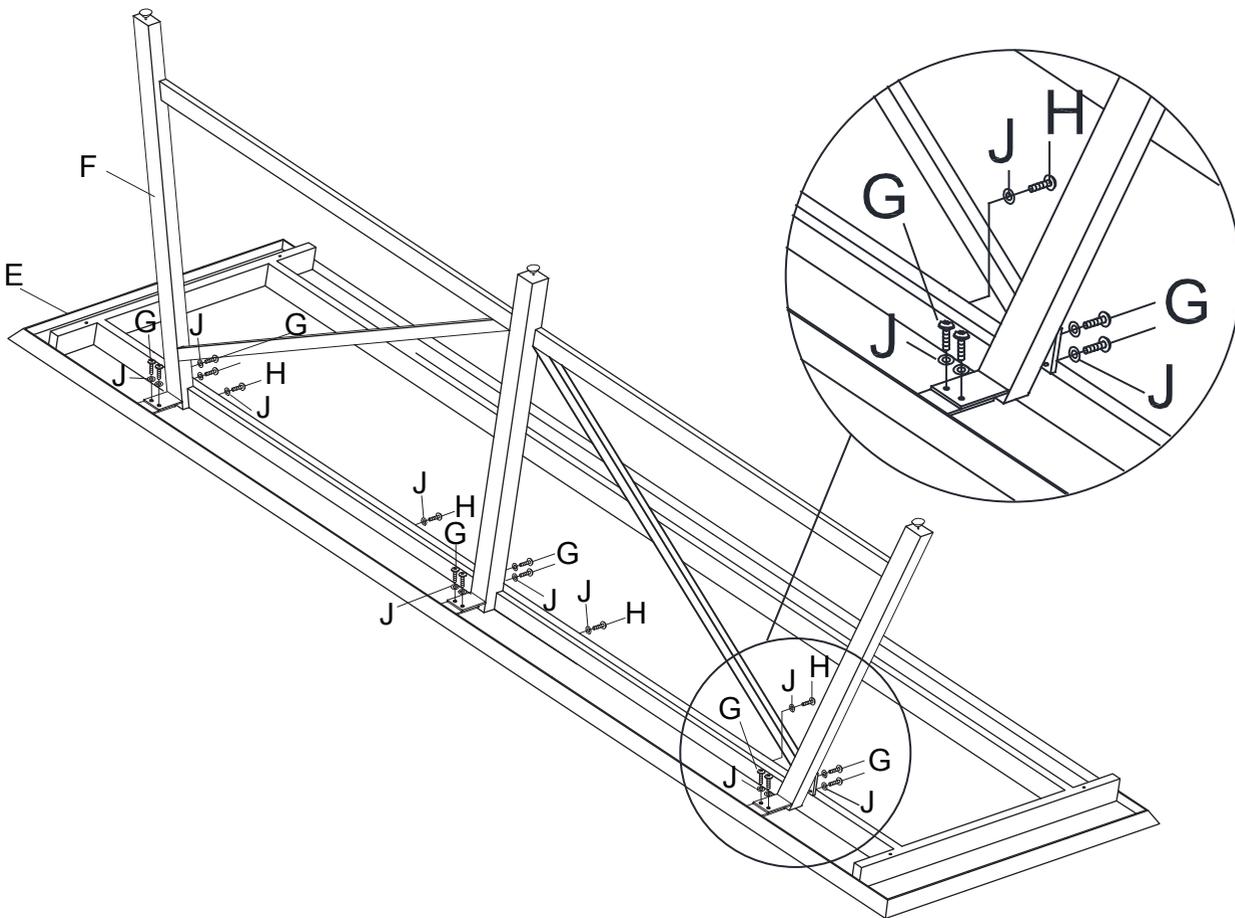

Carefully place dining table top (E) upside down a soft, flat and non-abrasive surface. Attach the dining table leg(F) to dining table top (E) with bolts(G&H) and M6 Washer(J) by using M6 Allen Wrench(K). Tighten all the bolts with M6 Allen Wrench(K).

Step 4

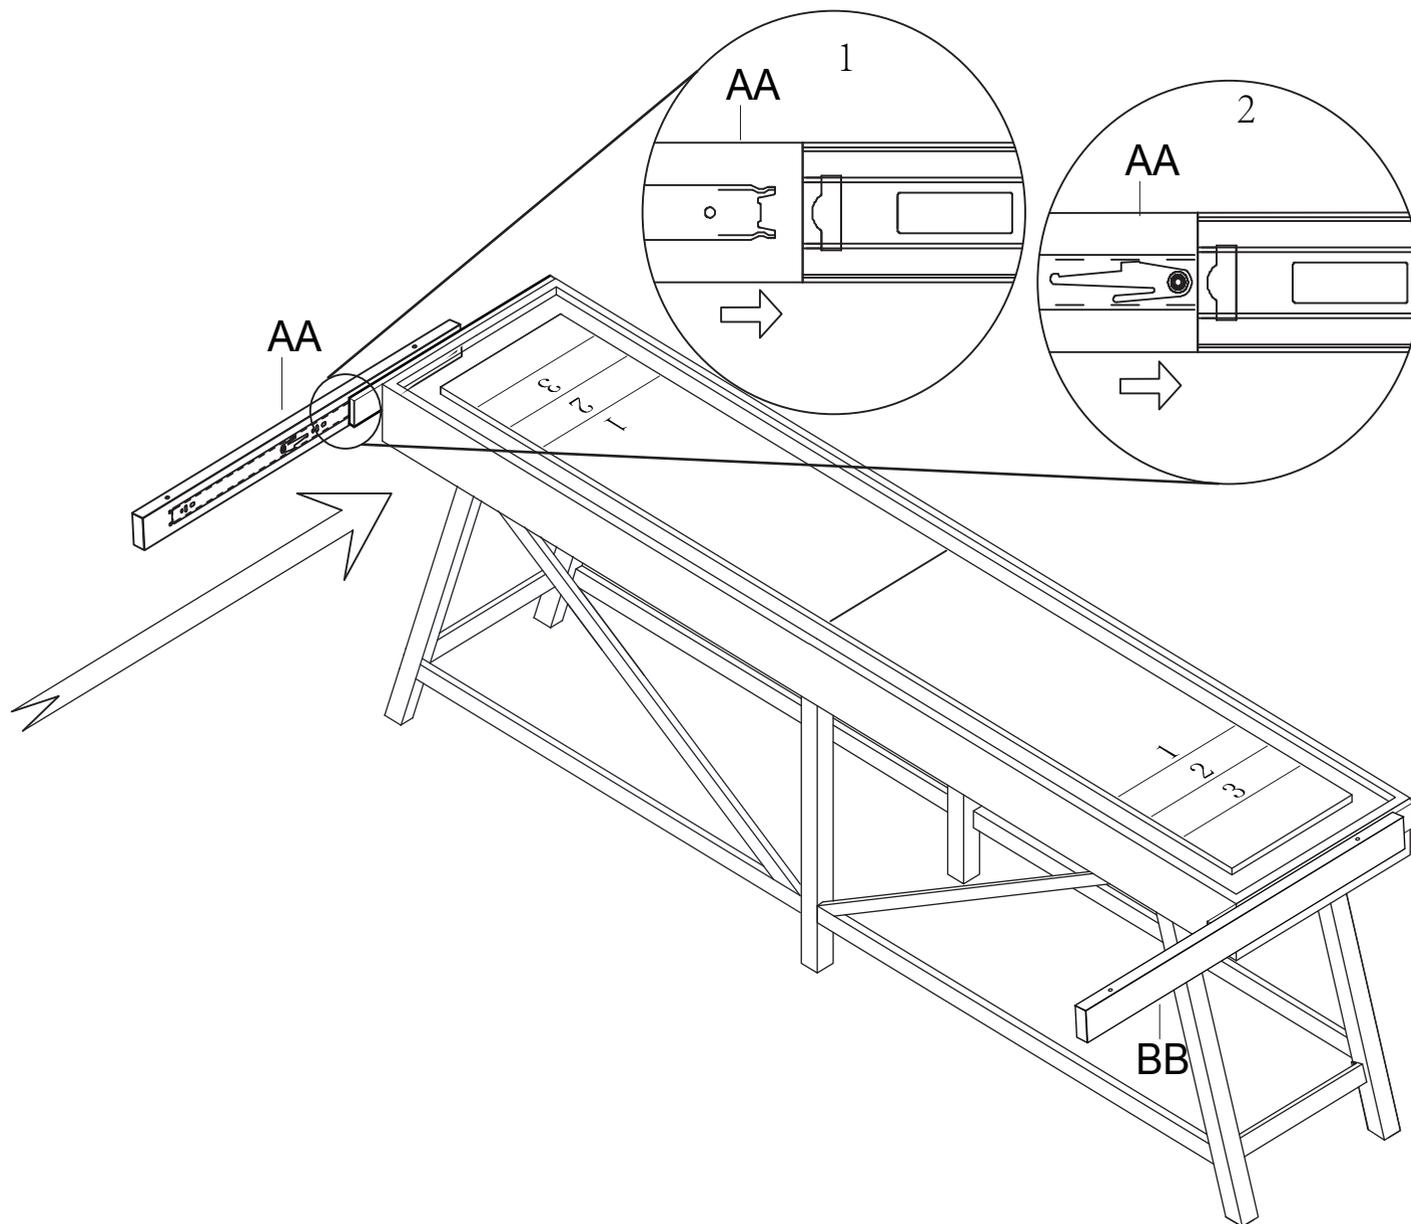

IMPORTANT

Carefully turn the shuffleboard table over.

Insert the Left Sliding **Color Coded** Rail (AA) into left **AA** chute.

Insert the Right Sliding **Color Coded** Rail (BB) into right **BB** chute.

Both mating rails & chutes for AA-AA and BB-BB must be on the same side of the table and shuffleboard for correct installation.

Step 5


(I)
Allen/Hex Head Bolt
M6x70mm
Qty: 4



(J)
M6 Washer
Qty: 4



(K)
Allen Wrench
Qty: 1

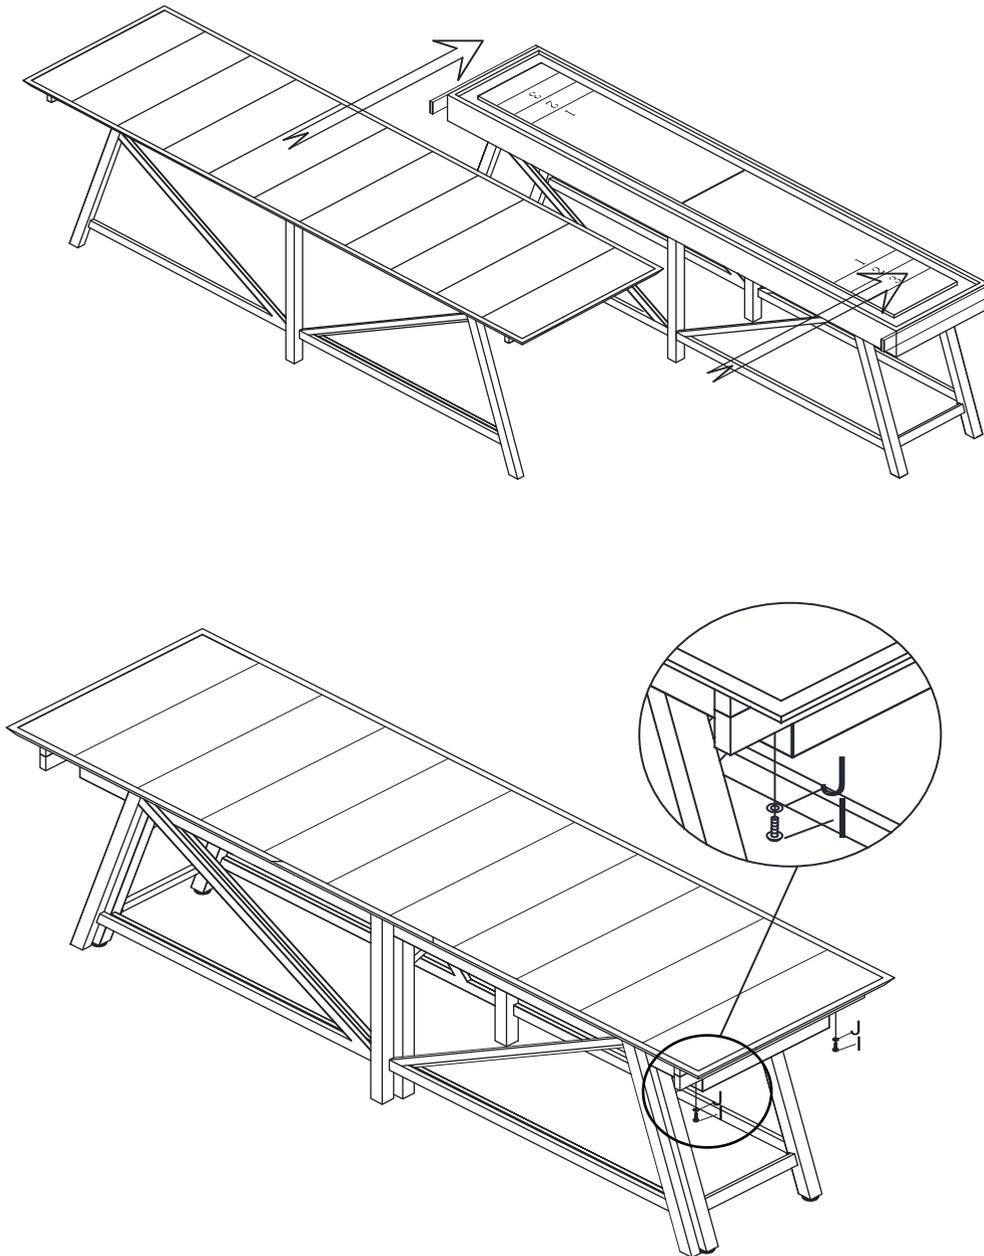


Carefully turn the dining table top over.

Attach the dining table top to shuffleboard table with bolts(I) and M6 Washer(J) by using M6 Allen Wrench(K).


Tighten all the bolts with M6 Allen Wrench(K).

Step 6

 (Y)
Flat Head Bolt
4x40mm
Qty: 4




(Z)
Screwdriver
Qty: 1

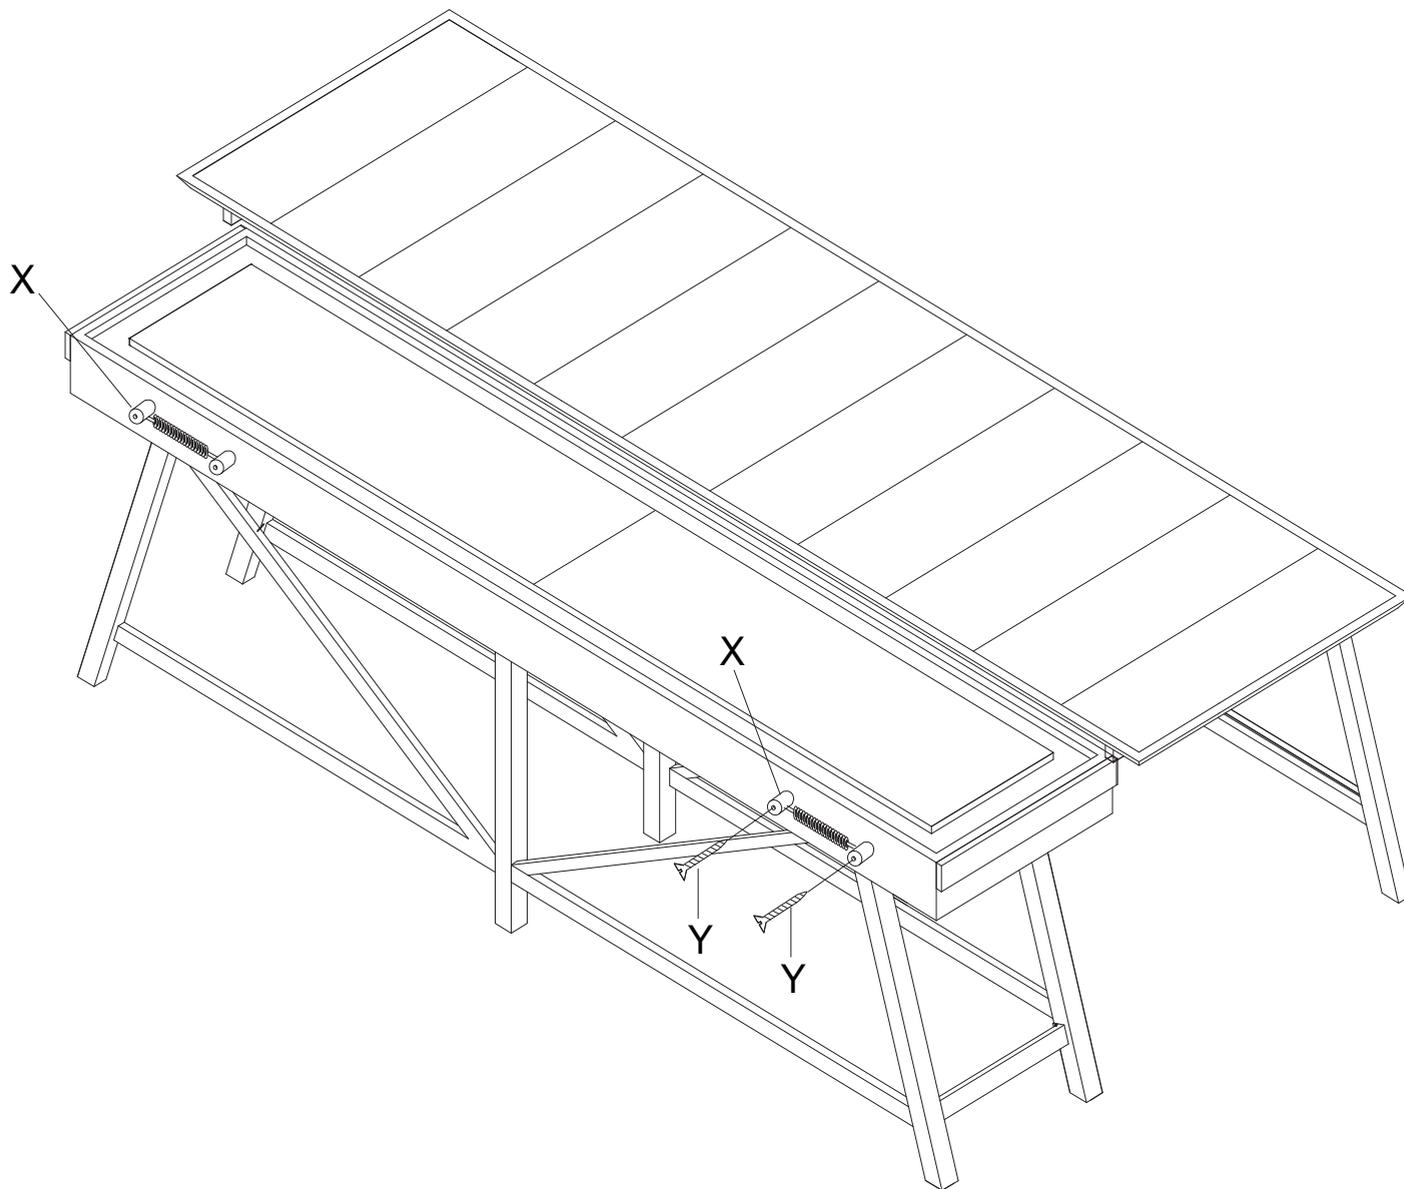

Attach the Scorers (X) to shuffleboard table with Flat Head Bolts(Y) by using Screwdriver(Z).
Tighten all the bolts with Screwdriver(Z).

Step 7

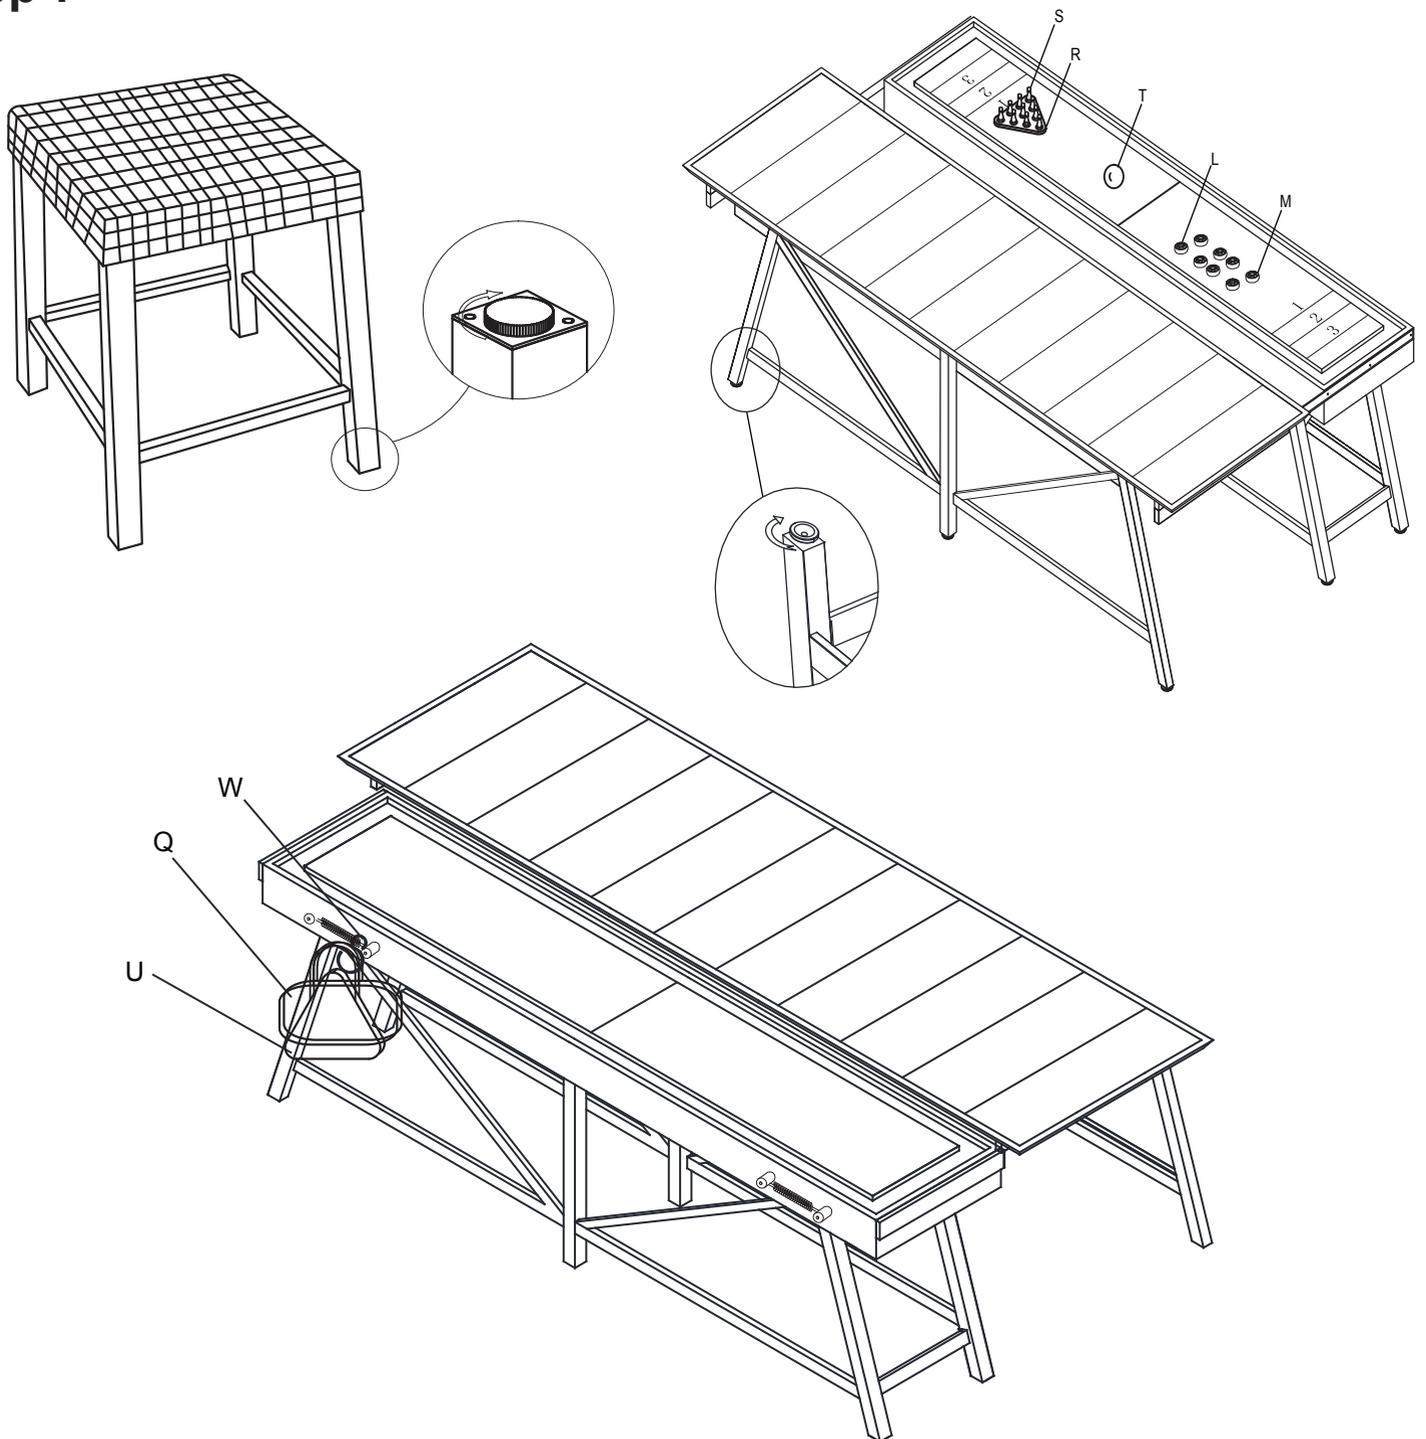


The shuffleboard table is ready for your enjoyment.
If the stools and table is uneven, you can adjust the feet to make it even.

Place shuffleboard accessories included 4pcs black puck(L), 4pcs white puck(M), 1pc Shuffleboard Wax (N), 1pc Brush and 1pc Gradienter on Shuffleboard parts bag (Q).

When not playing games, please store the Shuffleboard parts bag (Q) and Bowling Set Bag (U) on the Scorestick using S-Hook (W).

Furniture Cover

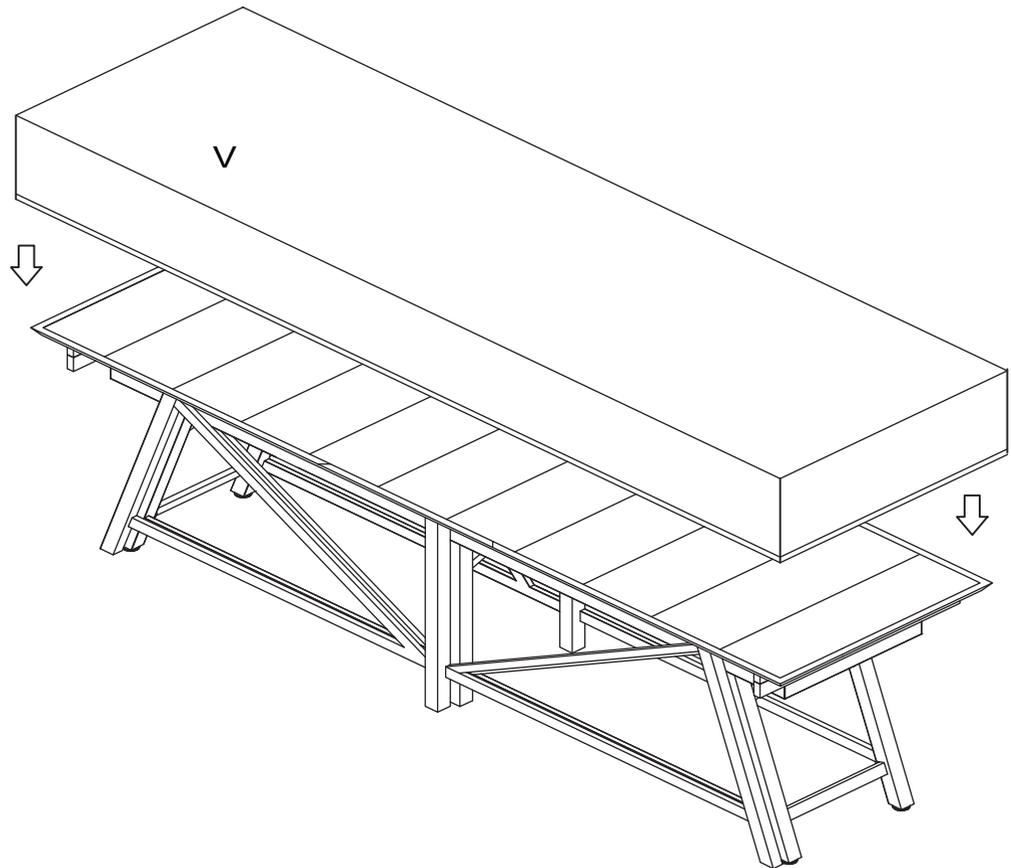

For maximum protection, use Heavy Duty Furniture Cover (V). Fasten adjustable cord lock to secure the cover from wind and snug fit.

Warranty

The game play is suitable for people over 14 years old and DO NOT play in windy days.

GAME RULES

Shuffleboard game play

Sprinkle included playfield Wax(N) on the surface. This will allow the weights/pucks to glide smoothly across the surface.

Players alternate sliding each of their 4 weights across the board (L&M). The goal is to get your weight to stop as close to the end of the board in the highest scoring zone, without falling off into the alley.

Players alternate shots until the round is over and all eight weights have been shuffled across the table. The score is then taken for the round and play continues from the other side of the table.

Scoring

Pucks can only be scored if they are further down the board than all of you opponent's pucks, meaning only one person/team can score in a round, All pucks that are past the opponent's pucks are ded up and that is th winner's score for the round.

The entire puck must be over the scoring line to count for the higher point value. If any part of the puck is hanging off the end of the board, it is called a "hanger", and is worth 4 points.

The game typically continues until someone reaches either 15 or 20 points. These winning point values are marked with alternate color scoring beads on the slide scorers.

Bowling game play

A game of American ten pins consists of ten frames. A player delivers two balls in each of the first nine frames unless a strike is scored. In the tenth frame, a player delivers three balls only if a strike or spare is scored. Every frame must be completed by each player bowling in regular order.

KEEPING SCORE – Except when a strike is scored, the number of pins knocked down by the player's first delivery is to be marked next to the small square in the upper right hand corner of that frame, and the number of pins knocked down by the player's second delivery is to be marked inside the small square. If none of the standing pins are knocked down by the second delivery in a frame, the score sheet shall be marked with a (-). The count for the two deliveries in the frame shall be recorded immediately.

STRIKE – A strike is made when the full setup of ten pins is knocked down with the first deliver in the frame. It is marked by an (x) in the small square in the upper right-hand corner of the frame when it was made. The count for one strike is 10 plus the number of pins knocked down on the player's next two deliveries.

DOUBLE – Two consecutive strikes is a double. The count for the first strike is 20 plus the number of points knocked down with the first delivery following the second strike.

TRIPLE OR TURKEY – Three successive strikes is a triple or turkey. The count for the first strike is 30. To bowl the maximum score of 300, the player must bowl 12 strikes in succession.

SPARE – A spare is made when the second delivery knocked down all the standing pins, and the score sheet shall be marked with a (/). The count of a spare is 10 plus the pins knocked down in the following delivery.