

SMCS - 0374,1901,7500,7620

i08316047

Telehandler

TH306D (S/N: TD21-UP; TD31-UP)

TH3510D (S/N: TH21-UP; TH31-UP)

TH357D (S/N: TD61-UP; TD71-UP)

TH408D (S/N: TH41-UP; TH91-UP)

TH514D (S/N: MWG1-UP)

TL1055D (S/N: ML51-UP; MNT1-UP)

TL1255D (S/N: ML71-UP; MYW1-UP)

TL642D (S/N: ML81-UP; MLG1-UP)

TL943D (S/N: MLD1-UP; MLJ1-UP)

Revision History:

Revision	Summary of Changes
01	Updated effectivity, added "Required Tools".

Table 1

Required Tools

Required Tools			
Item	Qty	Part Number	Part Name
T1a ⁽¹⁾	1	330-5251	Controller Kit
T1b	1	-	Laptop equipped with Caterpillar® Electronic Technician (Cat ET)
	1	421-5320	Cable Kit
	1	517-9882	Software

Table 2

⁽¹⁾ Use either (T1a) or (T1b), both are not required . Check SIS Web to ensure latest version of the software.



Illustration 1

g06187886

The machine Electronic Control Module (ECM) is programmed with a machine maintenance reminder. When this reminder activates, it triggers error code 874, "Maintenance Interval". If the machine is not equipped with the optional multifunction display monitor, the code number and the yellow maintenance icon will display on the gauge cluster. The factory default interval for the machine maintenance reminder is 500 hours. The reminder interval can be changed via the "Operator Tools" menu using the handheld analyzer. The reminder interval ranges from 100 hours to 500 hours.



Illustration 2

g06188213

If the machine is equipped with the optional display monitor as shown in Illustration 2, then the completed maintenance can be recorded using the monitor. Use the access level 2 passcode, 33271, to navigate to "Maintenance" - "Maintenance Log Entry", and select the maintenance interval that has been completed.

If the machine is not equipped with a display monitor, there are two ways to reset the reminder and clear the 874 error code after performing the required maintenance.

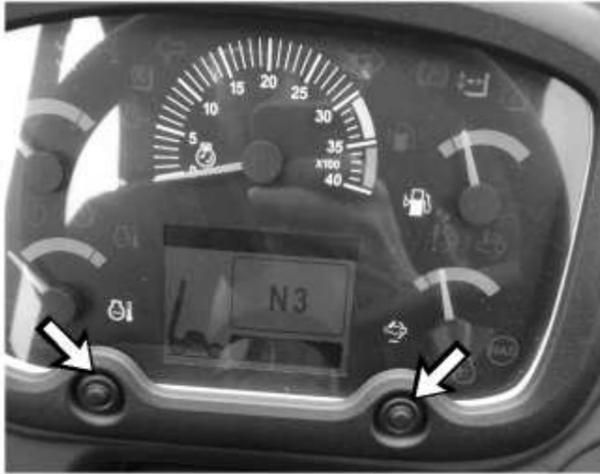


Illustration 3

g06187890

Method 1: Press and hold the two display brightness control buttons (Illustration 3) simultaneously.

Method 2: Refer to Table 2 for the correct tools for this method. Navigate to "Operator Tools", select "Confirm Machine Maintenance", then select "Yes".

PIP-10087702

2021/03/30

15:01:14+01:00

i06985777

© 2021 Caterpillar Inc.

Caterpillar:

Confidential Green