



QUICKSTER® SOCCER GOAL



INSTRUCTION MANUAL

INCLUDES:

- » Soccer Goal
- » Carry bag
- » Ground stakes (4)

Thank you for choosing SKLZ Quickster Soccer Goal. We are dedicated to providing you with the best tools and instruction possible to help you unleash your athletic potential. If there is anything else we can do to help you optimize your training, don't hesitate to send us an email (customerservice@sklz.com) or give us a call (1-877-225-7275).

BEFORE YOU BEGIN:

- » Adult assembly required.
- » Make sure you have all of the Soccer Goal components. Please contact SKLZ customer service toll free at 877-225-7275 x128 if you are missing anything.
- » Read all setup and usage instructions carefully.
- » When done, disassemble Soccer Goal and store after use. Do not leave Soccer Goal outdoors.
- » Regularly check for wear and tear. Stop using net if any part of it breaks. Failure to do so could result in injury.
- » Keep away from fire and heat sources.

⚠ WARNING:

- » Quickster Soccer Goal is under tension when set up. Please take the utmost care when releasing the tension during disassembly. Failure to do so may result in injury.
- » Do not climb or hang on the Quickster Soccer Goal.
- » When in use, make sure the Quickster Soccer Goal is set up in a clear area to avoid injury and/or damage to property.
- » To avoid pinching, use caution when connecting the push-button tubing.



Training Videos & Articles: SKLZ.com
facebook.com/SKLZsoccer
twitter.com/SKLZ


VISIT SKLZ.COM FOR INSTRUCTIONAL VIDEO AND CONTENT

QUICKSTER SOCCER GOAL PARTS:


A – Net




B – Base Frame

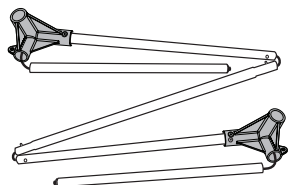

C – Tension-Tite™ Arm Pole (2)

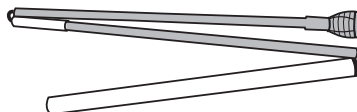

D – Ground Stakes (4)

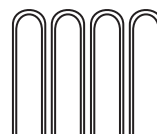

ASSEMBLY

STEP 1

BASE FRAME & TENSION-TITE™ ARM POLE

NOTE: Base Frame and Tension-Tite arm poles come pre-attached by elastic.


- 1 – Layout one Tension-Tite Arm Pole (C) and link together to form a straight pole. Repeat with second Tension-Tite Arm Pole. Layout Base Frame (B) and link the frame together. Make sure to secure the poles with the push buttons.

WARNING: To avoid pinching, use caution when assembling the push button.

NOTE: The slight bowing on the Base Frame is part of the Tension-Tite system design.

- 2 – Slide the Tension-Tite™ Arm Poles into each side of the Base Frame.



NOTE: Ensure arm poles are fully inserted. Failure to do so may result in damage to the Soccer Goal.

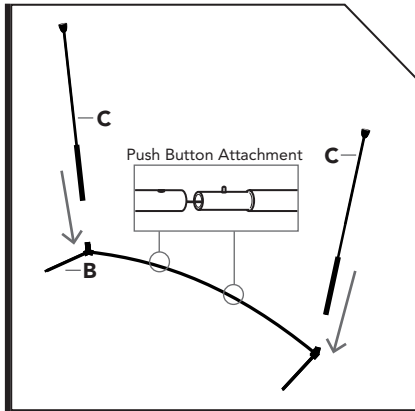


STEP 2

CONNECT THE NET TO THE FRAME

- 1 – Unfold the Net (A) and make sure that the top Quickster logo on the net is facing away from the frame. Connect the net loops on the bottom of the net to each side of the frame.
- 2 – Slide the pin at the top of the net into the top of the Tension-Tite Arm Pole. Repeat on the other side.
- 3 – Secure the net to the frame by wrapping the velcro straps around both the Tension-Tite Arm Poles and the Frame Base.

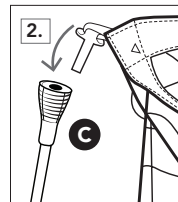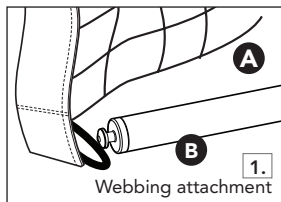

NOTE: Check the frame to make sure it is securely and fully assembled with the net before securing to the ground.

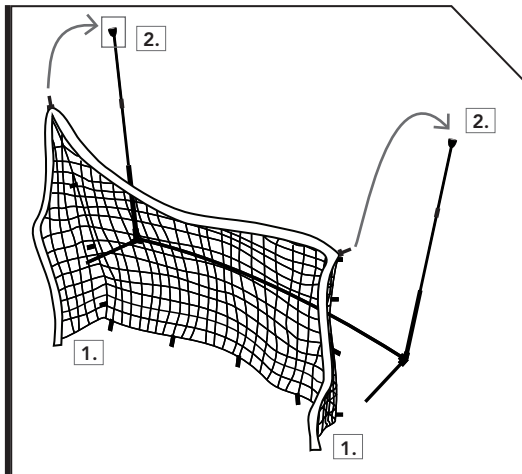

STEP 3



SECURE THE SOCCER GOAL TO THE GROUND

- 1 – Place your Soccer Goal in the desired location. Make sure that you are on level ground. Secure the goal into the ground with the included Ground Stakes (D). If you are unable to press them into the ground with your hand or foot, you may use a mallet.

NOTE: Do not use Ground Stakes on the back of the base frame. Poles will bend and tension system will not function properly.

NOTE: Care should be taken when pressing in the ground stakes. Poles can be bent if driven too far into the ground or hard surface.

CAUTION: Make sure the Soccer Goal is secured into the ground before play. During play, make sure that the Ground Stakes are secured regularly as a loose Ground Stake may cause injury.

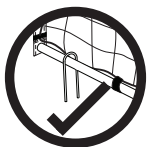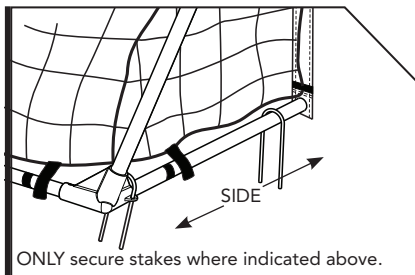

SKLZ offers a limited 1-year warranty for this product, visit SKLZ.com for full warranty details and to register your product.

STORING YOUR QUICKSTER®

Remove the Ground Stakes and detach the net from the frame. Place the ground stakes into the carry bag.

WARNING: Soccer Goal is under tension when assembled. Please take the utmost care when releasing the tension during disassembly. Failure to do so may result in injury.

Hold one pin in one hand and one Tension-Tite™ Arm Pole in the other while pulling the pin out. Repeat on the other side. Remove the Net webbing attachments from each side of the frame. If needed, air dry the net before you fold and place it into the carry bag.

Pull the Tension-Tite Arm Poles out of each side of the base frame and unlink and fold them down to store.

NOTE: Store Tension-Tite Arm Pole in the carry bag with the round tops facing away from each other. Unlink the push buttons on the Base Frame to unlink the frame. Fold and store in carry bag.