

ALWAYS, BEFORE YOU RIDE

- WARNING: ADULT ASSEMBLY AND SUPERVISION IS REQUIRED.**
- WARNING: THE GOMO 3 WHEEL SCOOTER MUST BE USED WITH CAUTION SINCE SKILL IS REQUIRED TO AVOID FALLS OR COLLISIONS CAUSING INJURY TO THE USER OR THIRD PARTIES.**
- WARNING: ALWAYS INSPECT GOMO 3 WHEEL SCOOTER PRIOR TO RIDING.** Proper inspection and maintenance of your GOMO 3 Wheel Scooter can reduce the risk of injury. Check all fasteners before every ride. Always inspect your GOMO 3 Wheel Scooter before riding, and maintain it regularly. Replace worn or broken parts immediately. Adults must assist children in the assembly and initial adjustment procedure.
- WARNING: CHECK ALL LOCAL LAWS REGARDING GOMO 3 WHEEL SCOOTER USE.** Check all local laws and regulations to see where and how you may use your NextSport GOMO 3 Wheel Scooter legally. In many states and local areas, scooter riders are required BY LAW to wear a helmet. Check and obey local laws and regulations regarding helmet use and GOMO 3 Wheel Scooter operation in your area.
- WARNING: REMEMBER TO ALWAYS WEAR PROTECTIVE GEAR.** This includes a helmet, elbow and knee pads.
- WARNING: NEVER RIDE ON THE STREET.** Use the scooter in areas free from fixed or moving hazards such as poles, curbs, hydrants, walls, parked automobiles and traffic. Avoid sharp bumps, drainage gates, and sudden surface changes. Avoid water, speed bumps, sand, gravel, and anything else that could cause the wheels to suddenly stop. When in doubt, avoid bumps.
- WARNING: ALWAYS WEAR SAFETY EQUIPMENT SUCH AS HELMET, KNEE PADS AND ELBOW PADS.** Always wear a helmet when riding your scooter and keep the chinstrap securely buckled. Always wear shoes.
- WARNING: RIDE ON SMOOTH, PAVED SURFACES AWAY FROM MOTOR VEHICLES.**
- WARNING: WATCH OUT FOR PEDESTRIANS.**
- WARNING: DO NOT RIDE AT NIGHT.**
- WARNING: BRAKE WILL GET HOT FROM CONTINUOUS USE. DO NOT TOUCH AFTER BRAKING.**
- WARNING: AVOID EXCESSIVE SPEED ASSOCIATED WITH DOWNHILL RIDES.**
- WARNING: REGARDING USE OF NON-NEXTSPORT PRODUCTS WITH YOUR NEXTSPORT GOMO 3 WHEEL SCOOTER.** Your GOMO 3 Wheel Scooter has been built according to NextSport's design specifications. All the original equipment supplied at the time of sale was selected on the basis of compatibility with the frame, wheels, pivots, and all other parts. Certain after-market products may or may not be compatible with YOUR NextSport GOMO 3 Wheel Scooter. Contact NextSport's customer service prior to modifying or replacing any component with a non-factory specified part.
- WARNING: NO MODIFICATIONS OTHER THAN TO THE MANUFACTURER'S INSTRUCTIONS SHALL BE MADE.**

LIMITED WARRANTY

- Warranty ONLY applicable in the United States.
- Please fill out the information at <http://nextsport.com/warranty> to complete warranty registration.
- This limited warranty is the only warranty for NextSport GOMO 3 Wheel Scooter. There is no other express or implied warranty. The manufacturer warrants this product to be free of manufacturing defects for a period of one year from date of purchase. This limited warranty does not cover normal wear and tear, or any damage, failure, or loss caused by improper assembly, maintenance, storage, or use of the GOMO 3 Wheel Scooter. This limited warranty will be void if the product is ever: used in a manner other than for recreation or transportation, modified in any way, rented.
- Check local laws and regulations to see where you can ride your GOMO 3 Wheel Scooter legally. The manufacturer is not liable for incidental or consequential loss or damage due directly or indirectly from the use of this product. To obtain service under this warranty you must have purchased this product in the United States and, within the warranty period, contact NextSport directly by phone at 510-601-8802 or email at warranty@nextsport.com. NextSport will provide warranty replacements at its sole discretion. Authorized warranty services ONLY available from NextSport. Specifications are subject to change without notice.

NEXTSPORT PRODUCTS ARE PROTECTED BY US AND INTERNATIONAL PATENTS AND TRADEMARKS.

© Copyright 2020
NextSport, Inc.
2340 Powell Street, Suite 198
Emeryville, CA 94608
warranty@nextsport.com

All rights reserved.

**DO NOT RETURN
PRODUCT TO STORE!**
We want to help you directly!

For assistance, contact
warranty@nextsport.com



GET OUT MORE OFTEN



PATENT PENDING

**VISIT US AT NEXTSPORT.COM
FOR PRODUCT SUPPORT, REPLACEMENT
PARTS & GENERAL HELP.**




MANUAL VERSION 1A-2020

PARTS

Remove all outer wrappings and refer to the parts diagram and list below:

PLEASE NOTE:
Small parts hazard.
Must be assembled by
an adult.

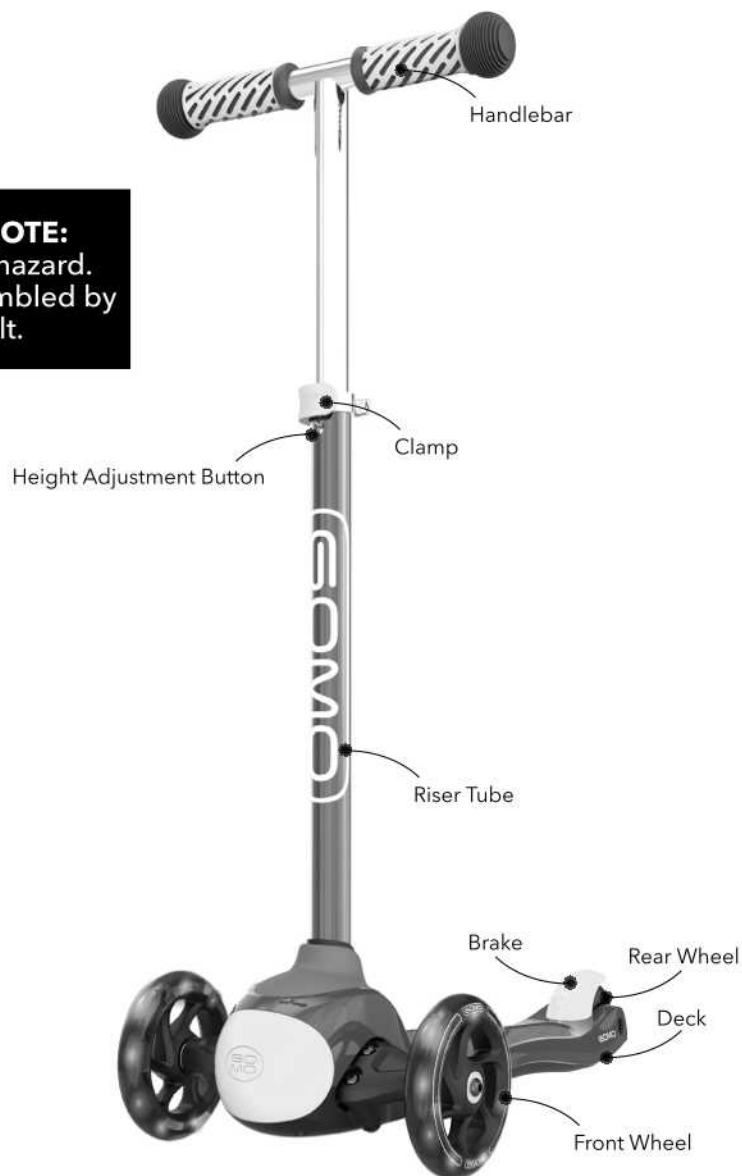

TO ASSEMBLE THE SCOOTER



(1) Depress the lower button on the riser bar and insert the riser bar into the deck. Push down until it clicks into place.



(2) To adjust riser bar height, first open clamp on the riser bar.



(3) Adjust height by depressing button and raising or lowering the bar. Make sure spring button pops into place to secure the new height.



(4) Close clamp.

GET OUT MORE OFTEN

PLEASE CONTACT US AT CS@NEXTSPORT.COM IF YOU HAVE ANY ASSEMBLY QUESTIONS.

MAINTENANCE

Keeping your GOMO clean and dry will extend its life and prevent rust. Always ensure that all nuts, bolts, and clamps are secure. Avoid riding through water, sand or oil as this may damage wheel bearings. Check wheels regularly to ensure there is no damage. Damaged wheels should be replaced.

BEFORE RIDING

Ensure all clamps and the handlebar are secure and the handlebar height is set appropriately for the rider. Check tire wear.

HOW TO RIDE YOUR GOMO 3 WHEEL SCOOTER:

RIDING:

Standing on the scooter with a hand on each handlebar grip, push with one foot to move forward. Repeat. Proceed with caution at first.

BRAKING:

A brake is located over the rear wheel. Step gradually on the brake to slow down or stop.

LEAN & STEER:

Whichever way the rider leans, the scooter will move in that direction.

READ AND UNDERSTAND THIS ENTIRE MANUAL BEFORE USING THIS PRODUCT.