Style Number: ORC21040
Model Number: TR-21827

DSG STROLLER WAGON
OWNER'S MANUAL

DICK'S Sporting Goods 345 Court Street Coraopolis, PA 15108

TABLE OF CONTENTS

SECTION	PAGE
BEFORE YOU BEGIN	2
IMPORTANT SAFETY NOTICE	2
IMPORTANT CARE AND MAINTENANCE	4
IMPORTANT OPERATIONAL INSTRUCTIONS	4
WARNING LABEL PLACEMENT	10
PARTS LIST	10
ASSEMBLY INSTRUCTIONS	11
EXPLODED DIAGRAM	13
DISASSEMBLY INSTRUCTIONS	14
LIMITED WARRANTY	16

BEFORE YOU BEGIN

Thank you for selecting the DSG STROLLER WAGON. For your safety and benefit, read this manual carefully before using the product. If you have any questions, or find there are missing or damaged parts, please contact our Customer Service Agents.

Toll-Free Customer Service Number
1-877-846-9997
Mon. – Fri. 9 a.m. – 5 p.m. EST

RETAIN THESE INSTRUCTIONS FOR FUTURE USE

IMPORTANT SAFETY NOTICE

For your safety and benefit, read the following instructions carefully prior to assembly or use. Failure to follow all instructions and safety precautions can result in serious injury or death or damage to equipment.

Weight Capacity: The maximum combined weight for two child occupants is 110 lbs. Each seat holds up to 55 lbs.

⚠WARNING

IMPORTANT! This wagon is recommended for children age 2 years- 7 years.
1. CHOKING HAZARD. Adult assembly required because of small parts. Keep assembly parts out of reach of children under 3 years.
2. NEVER leave children unattended. **ALWAYS** keep children in view while in the product.
3. This wagon is suitable for use with one or two child occupants. The use of more than two children may cause an unstable condition which can injure your child. The maximum combined weight for two child occupants is 110 lbs. Each seat holds up to 55 lbs. Excessive weight may cause a hazardous unstable condition to exist.
4. Check that the harness and all attachment devices are correctly engaged before use. Ensure your child is properly positioned and using the harness during use.
5. Avoid serious injury from falling or sliding out. Always ensure that the child is properly positioned by using the safety harness.
6. Ensure that all locking device are engaged before use.
7. Check that the fabric is correctly engaged before use.
8. DO NOT use product if any parts are missing or broken.
9. Children must remain seated, secured by harness, and **ALWAYS** keep their arms and legs inside while riding.
10. ALWAYS apply brakes when taking children in or out and never leave child unattended.
11. Make sure all items in the wagon are properly secured and away from children to reduce the risk of injury.
12. To avoid injury, ensure that your child is kept away when unfolding and folding this product. There are pinch points between the product supports and frame that may injure fingers. Stay clear of pinch points when opening or closing the product or when adjusting.
13. DO NOT allow child to climb on, into or out of product unassisted. **DO NOT** allow child to jump on seat.
14. This wagon is **NOT A TOY! DO NOT** let your child play in or around this product.
15. Load attached to the handle or sides will affect the stability of the wagon.
16. DO NOT hang items on the product at any time. The product may become unstable.
17. DO NOT sit on top rail or canopy, this may cause serious injury.
18. DO NOT sit on the top of the tray, maximum load bearing of the detachable integrated tray is 11 lbs. Excessive weight may cause a hazardous unstable condition to exist.
19. The maximum weight capacity of the rear backpack bag is 10.8 lbs, the maximum weight capacity of the front cover pocket and cup bag is 1.54 lbs/bag. Excessive weight may cause a hazardous unstable condition to exist.
20. DO NOT place hot liquids in storage pockets. Spills can burn you or your child. Sharp or heavy objects placed in pockets may cause damage to the product, or injury to the child.
21. DO NOT make any alterations or modifications as this may cause instability or structural damage not covered under warranty or lead to injury. If a parcel bag other than one recommended by the manufacturer is used, the product may become unstable. **DO NOT** install mattresses or similar items for in wagon.
22. DO NOT use as a child car seat or to transport children in a motor vehicle.
23. DO NOT use the product on stairways, escalator, or moving walkway.
24. Use at a normal walking pace only; faster strolling can cause a loss of control and injury to the child.
25. DO NOT use the product while running or jogging, with bicycles or motor vehicles, or while skating or during other similar activities.
26. DO NOT park on elevated or sloped surface with children on board, even if the brakes have been locked. Use caution on uneven surfaces.
27. DO NOT use near open flames or other sources of heat. This product is flammable.
28. AVOID STRANGULATION: – DO NOT suspend strings or toys from the canopy.

- **DO NOT** place product anywhere near cords from window blinds, draperies, phone, etc.
- **DO NOT** place items with a string around your child's neck such as hood strings or pacifier cords.
- If not properly secured, the child may slip into leg openings and strangle.

IMPORTANT! CARE AND MAINTENANCE

1. Inspect all parts before using the product for signs of wear or failure. If parts are worn or damaged, DO NOT use. Contact Customer Service for replacement parts.
2. Periodically wipe down plastic parts. Always dry any metallic parts to prevent it from getting rusty.
3. Regularly check the condition of the wheels.
4. Do not fold or store kids wagon if frame or fabric is wet. Do not store kids wagon in a damp environment.
5. Use a mild household soap with cold water.
6. The maximum combined weight for two child occupants is 110 lbs. Each seat holds up to 55 lbs.
7. Dimensions (LXWXH): 37.8" x 27.5" x 46.5"
   Collapsed Dimensions (LXWXH): 5.5" x 27.5" x 29.1"

Wash by hand in cold water

Do not bleach

Dry Flat

Do not iron

Do not dry clean

IMPORTANT! OPERATIONAL INSTRUCTIONS

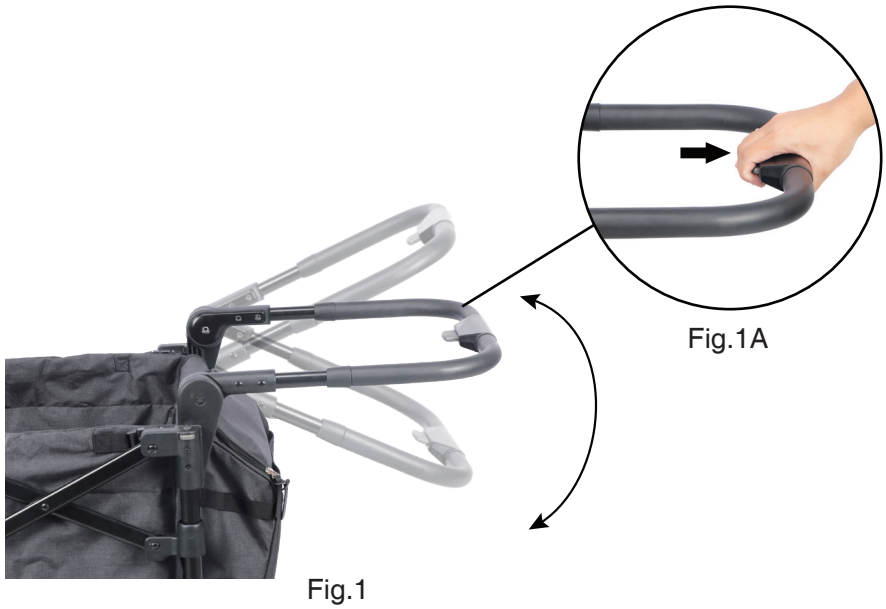

Fig.1

Fig.1A

Fig.1B

Adjusting the push handle

1. Push the gray button on the center of the push handle to make adjustments. Fig.1 Fig.1A
2. When not using the push handle, press the gray button continuously until the handle folds downward. Fig.1B

Fig.2

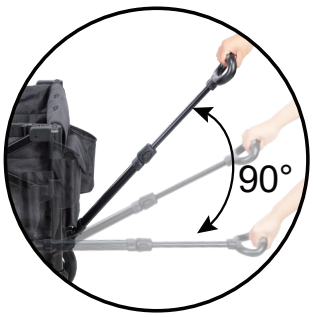

Fig.2A

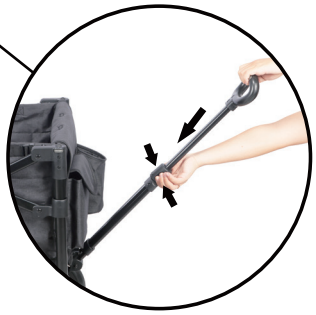

Fig.2B

Fig.2C

Adjusting the pull handle

1. Hold the “D” shape handle and pull out directly. Fig.2
2. In this range, pull handle can be used and held at whatever position is best for your needs. Fig.2A
3. When not using the pull handle, press and hold the unlock button on both sides of the telescopic sleeve while pressing down the "D" shape handle until it is completely closed. Fig.2B Then fold the pull handle toward the wagon vertically. Fig.2C

Fig.3A

Fig.3B

Use of the Front and Rear Bags

1. The photo shows the front bags. One drink holder pocket, one small pocket with cover and one zip bag for storing canopy set. Fig.3A
2. One backpack style rear bag. The upper layer is a larger storage space that can be used to store clean items. The lower pocket is a mesh part that can be used to store dirty shoes, used diapers and other items. Fig.3B

WARNING! Always apply brakes when taking children in or out.
Always apply brakes when taking items in or out.
Always apply brakes when not holding the handle or leaving the wagon unattended.

Fig.4

Fig.4A

Front wheel brakes

1. To lock: Step downward on the side of the pedal of each wheel. Push down on the pedal with your foot as far as the pedal goes down and the wheel locked. The front wheels will not move. Fig.4
2. To unlock: Place your foot on underside of pedal of each wheel. Lift the pedal up with your foot as the pedal goes up. The front wheels will move. Fig.4A

Fig.4B

Fig.4C

Locking rear axle

1. To lock: Step downward on the top of the pedal as far as the pedal will go. Make sure the pedal is fully depressed and that the rear wheels will not move. Fig.4B
2. To unlock: Place your foot on the pedal and press forward fully. The rear wheels will move. Fig.4C

WARNING! Before placing your child in or out of wagon, make sure the brake pedals are pressed down completely.

Fig.5A

Fig.5B

Fig.5C

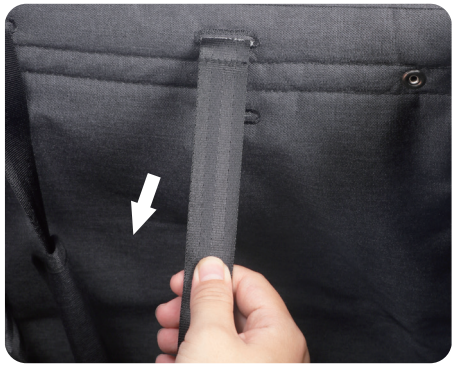

Fig.5 D

Fig.5E

Fig.5F

Fig.5G

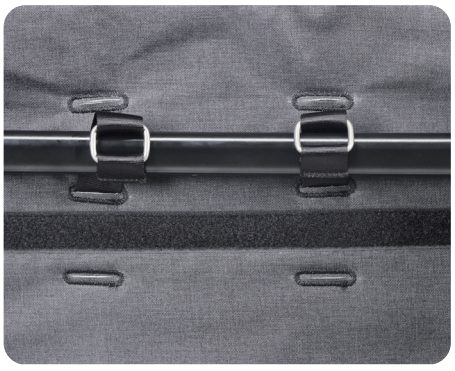

Fig.5H

Fig.5I

Changing shoulder harness anchor points

1. The shoulder harness straps can be adjusted to fit your child. Has three(3) positions A.B.C. Fig.5E
2. Before adjusting the straps, let your child sit on the seating area, confirm which position fits your child best. For example: A child height 42” and weight 45 lbs, we suggest to use position A.
3. To move shoulder harness straps to lower/higher position, undo snaps and the hook and loop closure behind the front/rear pocket,Fig.5A 5B. unbuckle the harness straps,Fig.5C. pull the straps back through fabric as shown. Fig.5D
4. Push shoulder harness straps through the anchor point slot, Fig.5E. undo snaps and hook and loop closure, Fig.5F. pull shoulder straps out then back, Fig.5G wrap the bar then clip as shown. Fig.5H

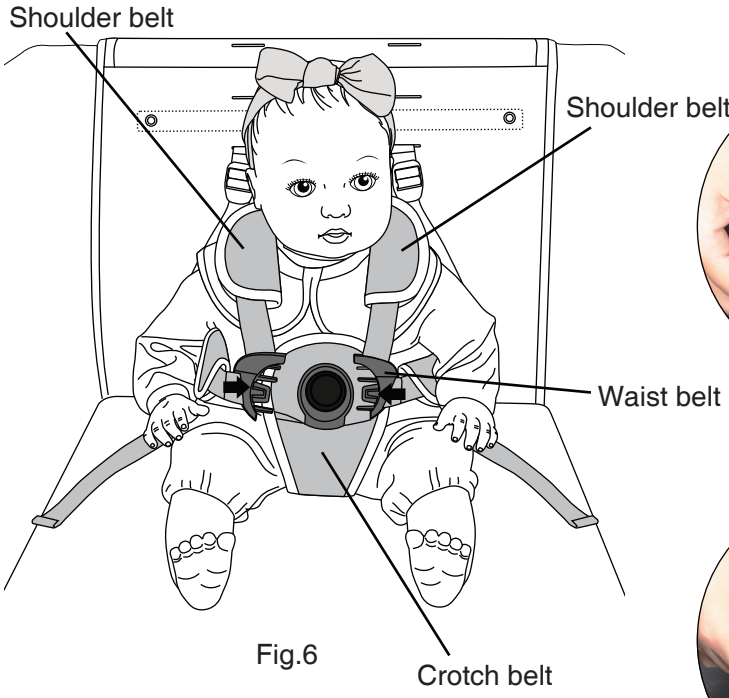

Fig.6

Fig.6A

Fig.6B

Fig.6C

Fig.6D

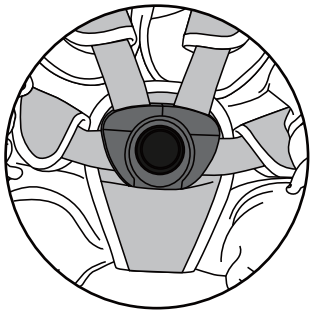

Fig.6E

Locking and unlocking the harness

1. Place your child in the wagon, position the crotch belt between your child's legs. Fig.6
2. Pull shoulder belt over child's arm and shoulder, then pull waist belt over child's waist, fit these two together as one large male buckle. Fig.6A 6B.
3. Fasten the large male buckle to the female buckle on the crotch belt making sure you hear a "click" on both sides. Fig.6C. Fig.6D.
4. Check to make sure the harness is securely attached. Fig.6E

Fig.7A

Fig.7B

Unlock the harness

1. Press down on button to release the two fastening points. Fig.7A Fig.7B

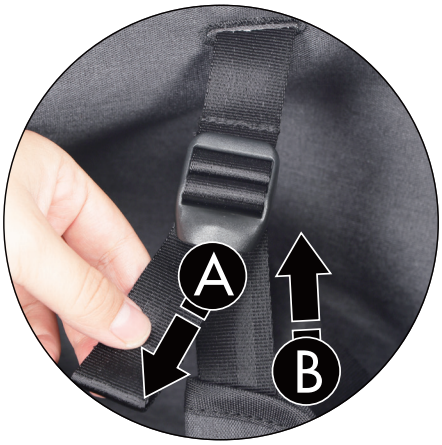

Fig.8A

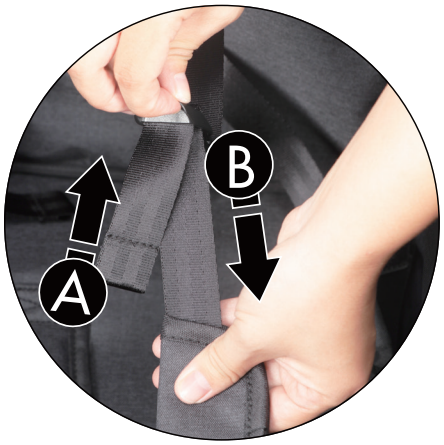

Fig.8B

Adjusting the length of harness

1. Both shoulder and waist belts are adjustable.
2. Pull the free end of the straps (A) to tighten the harness. Fig.8A
3. Lift the black buckle as shown and pull the straps (B) to loosen the harness. Fig.8B

WARNING LABEL PLACEMENT

The warning label shown here has been placed on the DSG STROLLER WAGON. If the label is missing or illegible, please call customer service at 1-877-846-9997 for replacements. Apply the labels in the location shown.

DSG STROLLER WAGON PARTS LIST

Part#	Description	Qty
1	Rear wheels	2
2	Front wheels	2
3	Canopy set	1
4	Locking rear axle	1
5	integrated tray	1
6	Assembly wagon	1

1

2

3

4

5

6

ASSEMBLY INSTRUCTIONS

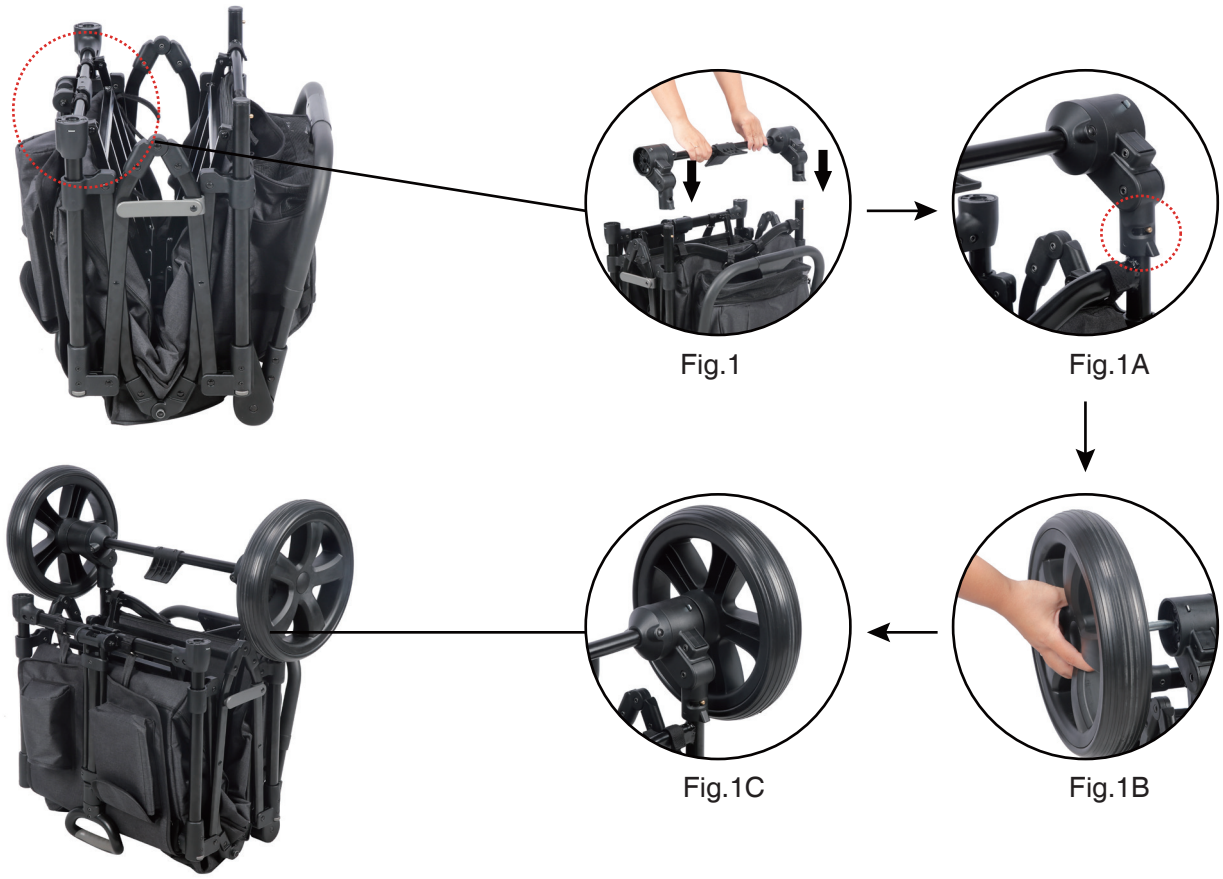

Fig.1

Fig.1A

Fig.1C

Fig.1B

Installing rear axle

1. Position rear axle on kids wagon frame with pin facing outward as shown below. Fig.1
2. Make sure the position of the pin is aligned with the hole site. Fig.1
3. Push axle assembly down on frame as shown. Fig.1
4. Axle shown properly locked to kids wagon frame. Fig.1A

Installing rear wheels

1. Put the rear wheels face toward the axle as shown. Fig.1B
2. Insert the wheels on the axle and make sure the wheels are secured. Fig.1C

Fig.2

Fig.2A

Installing front wheels

1. Put the front wheels face downwards as shown. Fig.2
2. Insert wheel on the kids wagon frame and make sure the front wheels are secured. Fig.2A

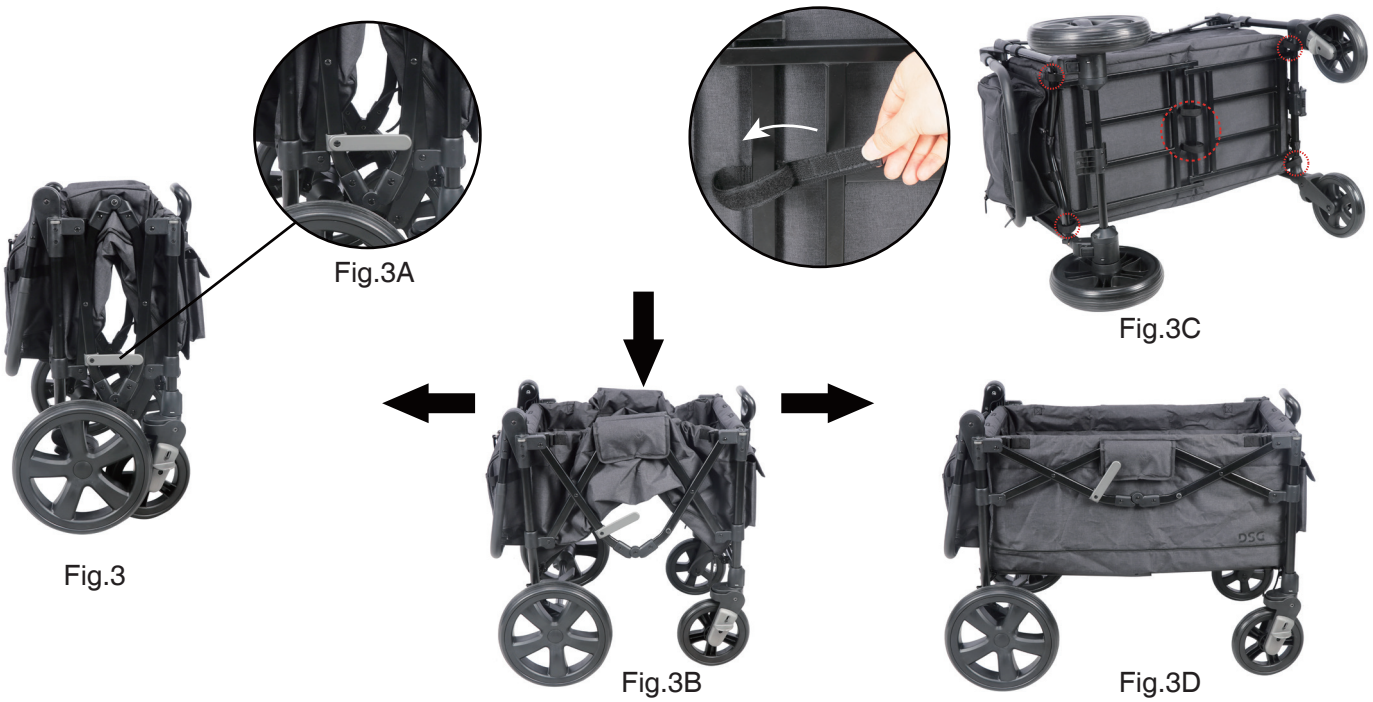

Fig.3A

Fig.3C

Fig.3

Fig.3B

Fig.3D

Unfolding and locking the product

1. Unlock the side auto lock. Fig. 3 3A
2. Pull to the sides to open the product and unfold. Fig.3B
3. Put the kids wagon side down, make sure the bottom bar is fastened as shown in red circle. Fig.3C
4. Right the kids wagon, press the bottom of the wagon until it is fully opened. Fig.3B Fig.3D

Fig.4

Fig.4A

Fig.4B

Installing the integrated tray on the main wagon

1. Pull fabric off as shown and the side frame is exposed. Fig.4A
2. Place the tray on the side frame as shown, then clip the outer groove on two sides of the frame. Fig.4B
3. Ensure the integrated tray fully fits. Use the tray to keep drinks, snacks and any other important items for your children nearby.

WARNING! Remove all items from the tray when pushing or pulling the wagon. Items cannot be secured and could fall, which may cause injury to children in or around the wagon.

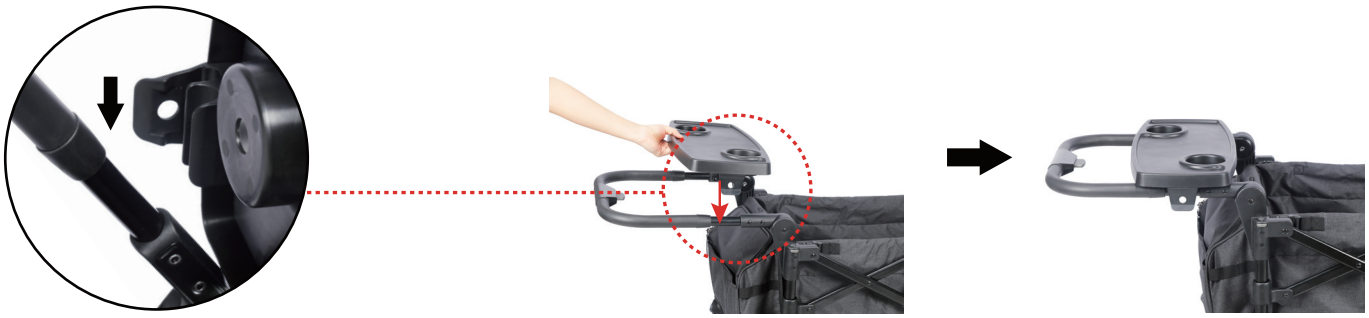

Fig.4C

Installing the integrated tray on the push handle

1. Place the tray on the push handle as shown and clip the inner groove on the handle. Fig.4C
2. Lay the push handle flat as shown with the integrated tray installed and use it for holding drinks and snack.

WARNING! Do not put items on the tray when moving.

Fig.5

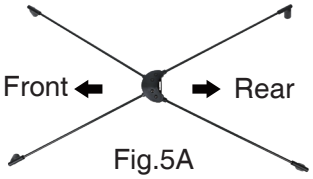

Fig.5A

Fig.5B

Fig.5C

Fig.5D

Installing the canopy

1. Unfolded the canopy support pole. Fig.5
2. Please make sure the hub is facing the direction as shown. Fig.5A
3. Insert canopy support pole ends into the housing directly one by one. Make sure that the four canopy support poles are firmly inserted. Fig. 5B 5C
4. Put the canopy on the top, tie the inner elastic rope to the head of the plastic joints. Make sure all four corners are fastened. Fig.5D

EXPLODED DIAGRAM

DISASSEMBLY INSTRUCTIONS

Fig .1

Fig .1A

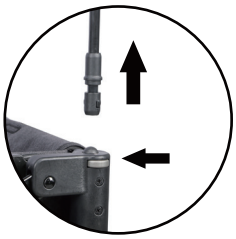

Fig .1B

Fig .1C

Fig .1D

Fig .1E

Fig .1F

Fig .1G

Folding and locking the product

1. Take off the canopy fabric. Fig.1A
2. Press the gray button then take out the canopy pole directly. Fig.1B
3. Put the canopy pole set on the canopy fabric, wrapped as shown. Fig.1C
4. Put the whole canopy set in the front zipper bag and zip it. Fig.1D
5. Press the gray button on the push handle and adjust it to the “Not in use” position. Fig.1E
6. Press and hold the unlock button on both sides of the telescopic sleeve, while pressing down the “D” shape hand until it is completely closed. Fig.1E
7. To fold the kids wagon, pull up on the strap located at the interior center of the wagon. Fig.1F
8. Fold on both sides to lock. Fig.1G

Fig .2A

Fig .2B

Fig .2C

Remove wagon wheels

1. Remove rear wheels: Invert wagon, Press the lock continuously as shown, then take the rear wheel off. Fig.2A
2. Remove rear axle: press pin on each side, lift the rear axle up to remove from frame. Fig.2B
3. Remove front wheels: Press the lock continuously as shown, then take the front wheel off. Fig.2C

Fig .3A

Fig .3B

Fig .3C

Fig .3D

Fig .3E

Remove fabric

1. Turn the wagon on its side, undo underside hook and loop straps from frame. Fig.3A
2. Undo all buckles on the four corners. Fig.3B
3. Undo hook and loop flaps on the side. Fig.3C
4. Remove shoulder harness straps and waist harness straps from wagon frame. Fig.3D,3E

Note: Installing fabric just follow these steps in reverse.

DICK'S LIMITED WARRANTY

Who is Covered?

This limited warranty ("Limited Warranty") covers only the person who first purchased the product. This Limited Warranty expires at the time of transfer and is not transferable to anyone else. Proof of purchase is required to make a warranty claim.

DICK'S warrants this product to be free from defects in workmanship and materials as follows:

What the Warranty Covers

This Limited Warranty covers defects in materials and workmanship.

What the Warranty Does Not Cover

This Limited Warranty does not cover:

- Expendable items, including by way of example only and not by way of limitation: batteries, light bulbs, fuses, zippers, tires, belts, shoe soles, fabric, and other items that experience wear as a result of normal use.
- Damage through improper use, negligence, abuse, misuse, transportation, acts of nature, or accident, including failure to perform routine maintenance or follow the assembly and/or operating instructions supplied with the product.
- Products used in commercial or rental applications.
- Products that have been modified using replacement parts that were not provided by DICK'S.
- Defects or damage caused by using third-party parts or services.

This Limited Warranty does not cover any consequential or incidental damages of any kind, including transportation to get warranty service, loss of time, and loss of use. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you.

What the Period of Coverage Is

This Limited Warranty lasts for a period of one year from receipt of the product. Any implied warranty arising under state law is limited in duration to the one-year period of this Limited Warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

How to Make a Warranty Claim

You can make a warranty claim by bringing the product to any store location of the chain the product was purchased as long as: (1) it meets the warranty criteria, (2) is within the warranty period (one year), (3) you have a valid proof of purchase and provide that to the store at the time of making the warranty claim, and (4) you are the original purchaser of the product. If you are unable to find your valid proof of purchase, please contact 1-877-846-9997 and a customer service representative may be able to assist.
Please direct all warranty service inquiries as follows:

If in writing, mail to:

DICK'S Sporting Goods, Inc.
345 Court St.
Coraopolis, PA 15108
Attn: Customer Service

If by telephone, call: 1-877-846-9997

What DICK'S Will Do to Correct the Problem

Once you make a valid warranty claim, DICK's will either:

- Return or exchange the product; or
- Provide a free replacement part, if applicable; or
- Repair the product for free, if applicable.

How State Law Applies

This Limited Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.