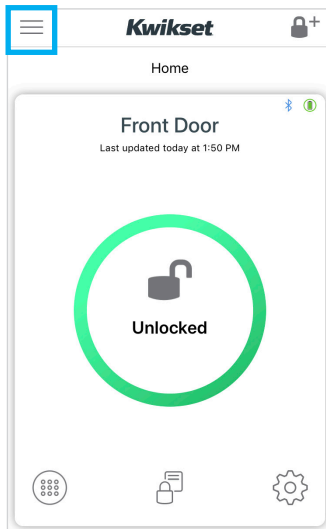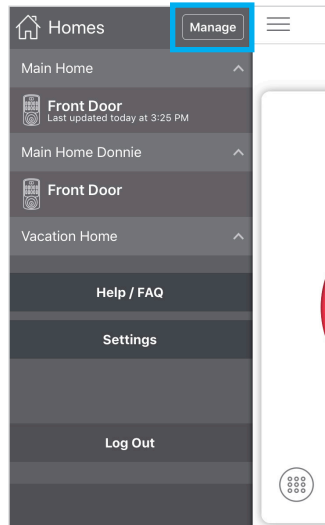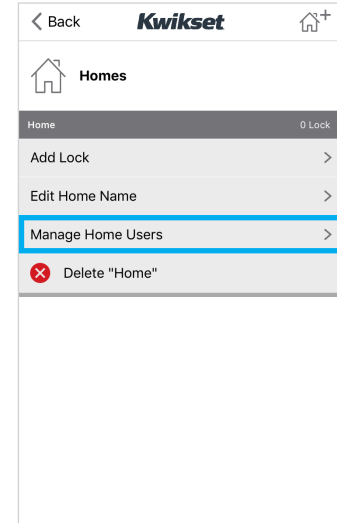**1** Tap ≡ in the upper left corner.
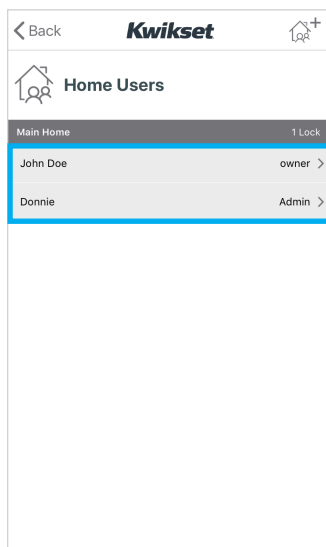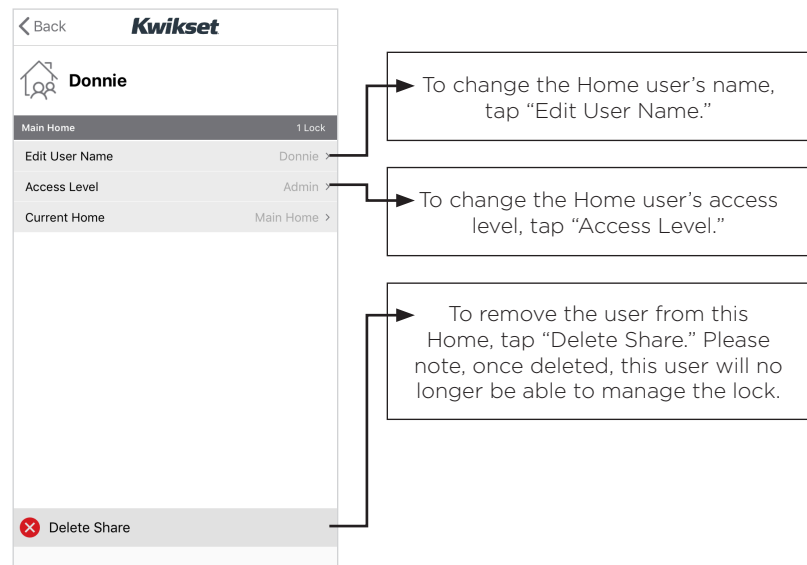

2 Tap "Manage."

3 Tap "Manage Home Users."

4 To manage users who you have shared your Home with, tap the user's name.

5 Tap the button for the setting you would like to edit.

To change the Home user's name, tap "Edit User Name."

To change the Home user's access level, tap "Access Level."

To remove the user from this Home, tap "Delete Share." Please note, once deleted, this user will no longer be able to manage the lock.

For more information about home sharing management, see the **Sharing a Home** page on www.kwikset.com