




Tools Required:








Herramientas requeridas:




1/8"

3/8"



26.25" Wire Shelf	3G60	2	
12" Brackets	3F58	4	
17" Uprights	1951646	3	
Connectors	NP3Q55LWWHT	3	
Screws	1603168	6	
0.5" Drywall Anchors	3J65	6	
Anchor Push Pin	3J66	1	

1

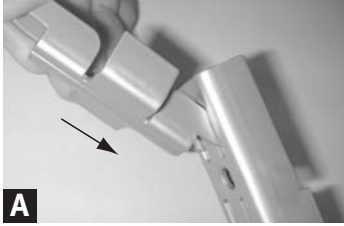

A

Slide connector into top 2 upright notches.

Deslice el conector en las 2 ranuras superiores del montante.



B

Slide connector into bottom 2 mounted upright notches of closet kit. Ensure uprights are 22" apart.

Deslice el conector en los 2 muescas del soporte inferiores del juego para clóset. Asegúrese de que los soportes estén separados por 22 pulg.




C

Level upright and drill 1/8" pilot hole and fasten both screws (use 3/8" bit if there is not a stud).

Nivele el soporte y perforo un agujero piloto de 1/8 pulg. y asegure ambos tornillos (use una broca de 3/8 pulg. si no hay montante).

2

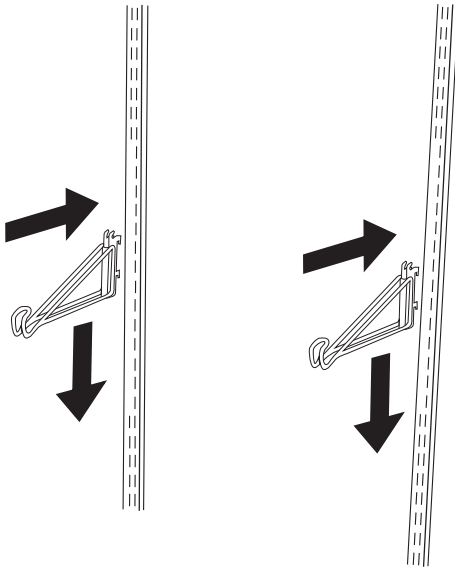

3

