



ASSEMBLY INSTRUCTIONS

UltraHD Rolling Drawer Cabinet (Model No. 20085, 20086)


Granite Graphite


28 in.W X 25 in. D X 34.5 in. H
(71.1 cm x 63.5 cm x 87.6 cm)

ULTRAGUARD®


FINGERPRINT RESISTANT SURFACES
AND INCREASED DURABILITY

Reference page 12 for special care
and maintenance of stainless steel

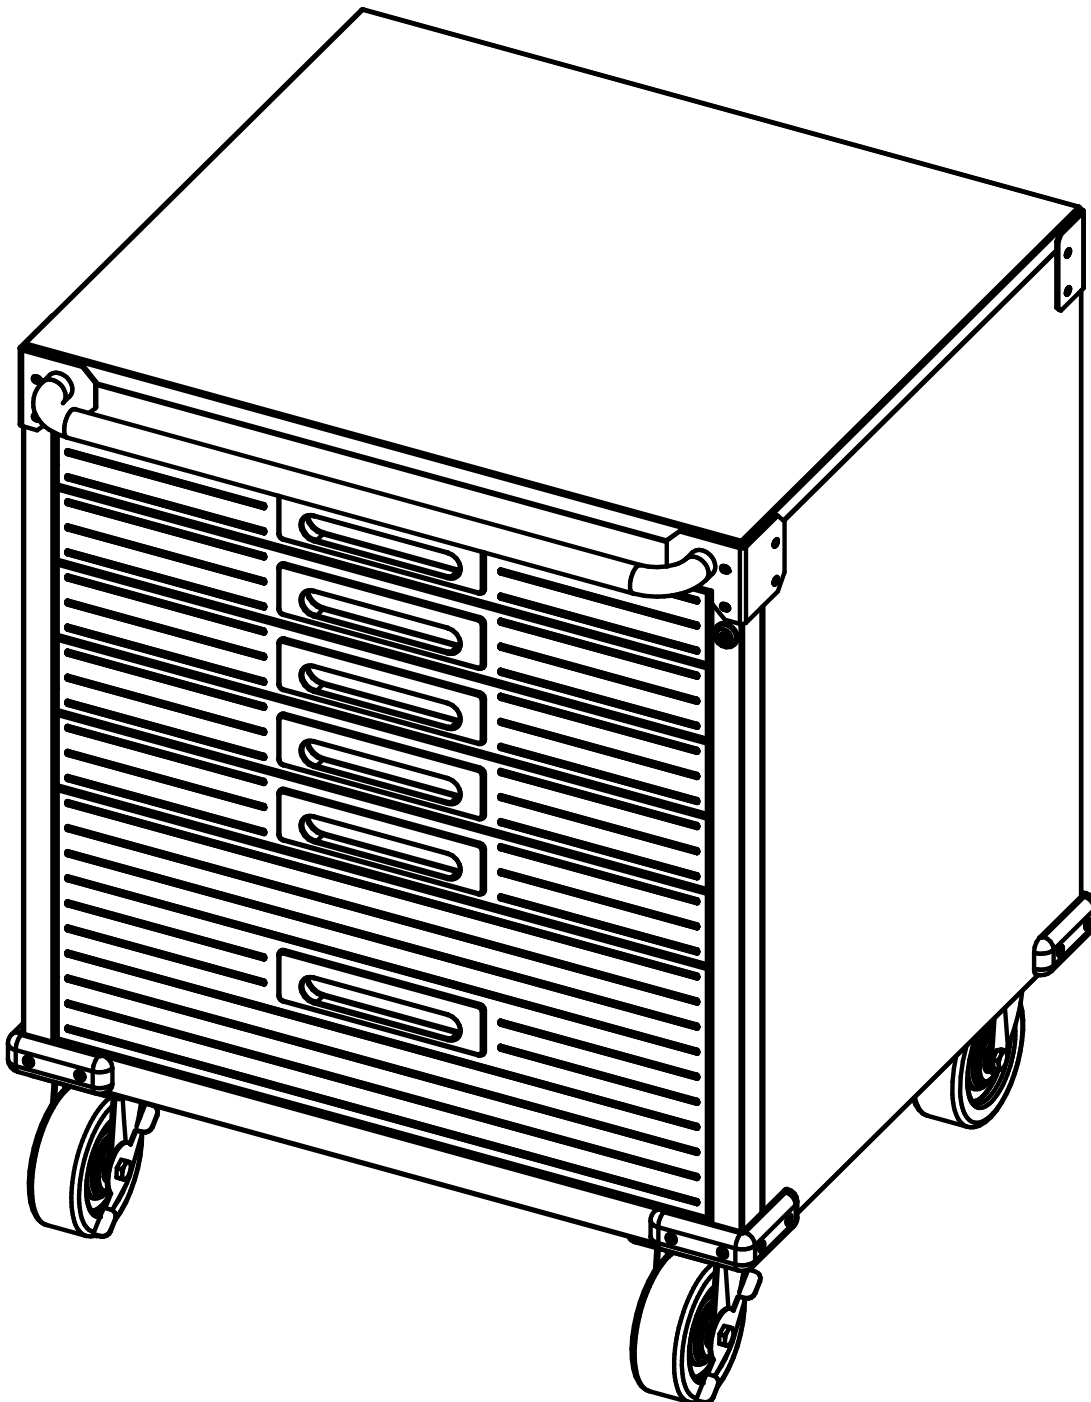


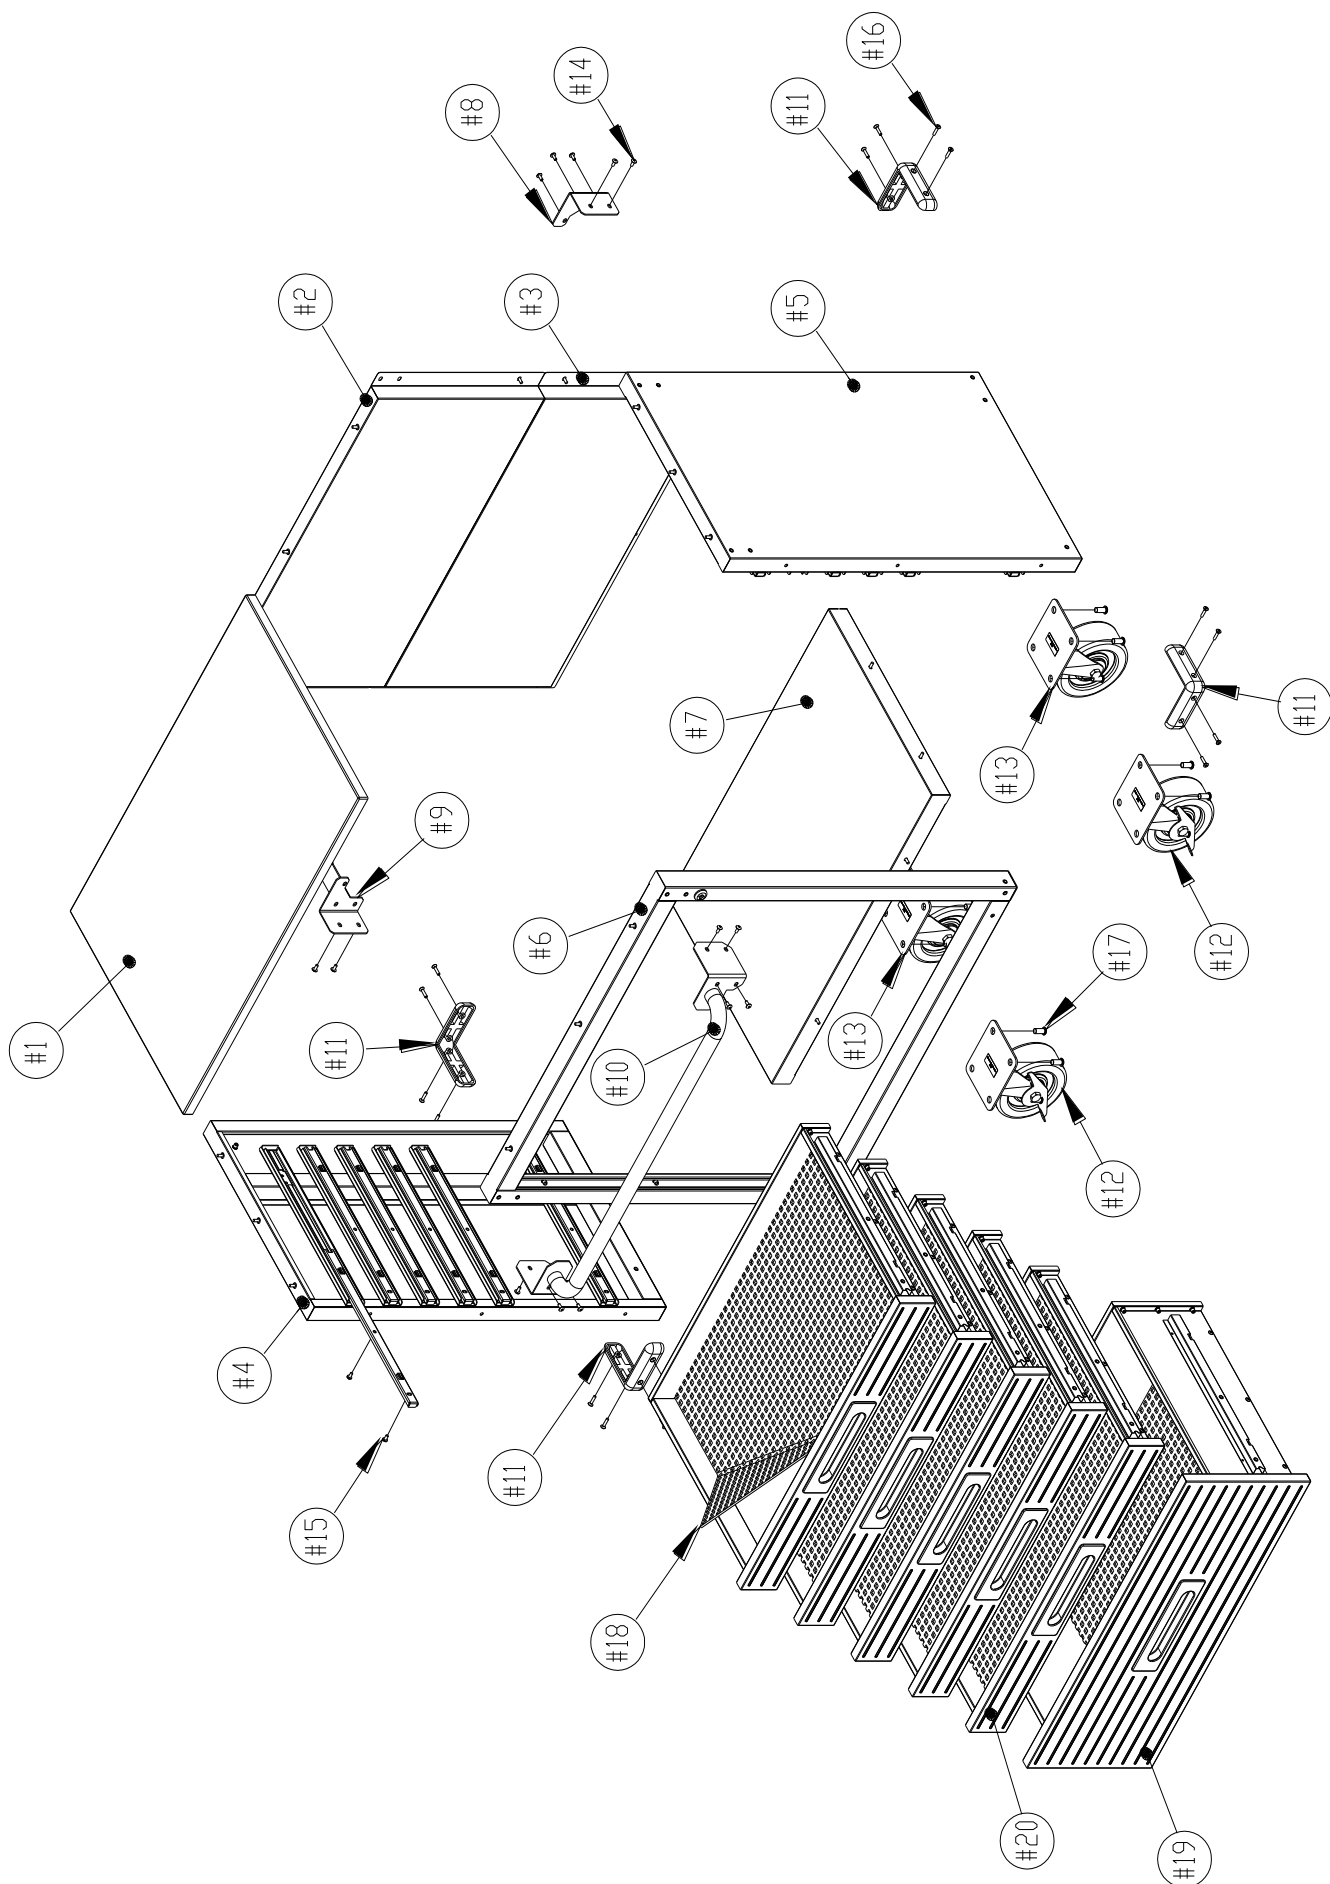

Large Drawer








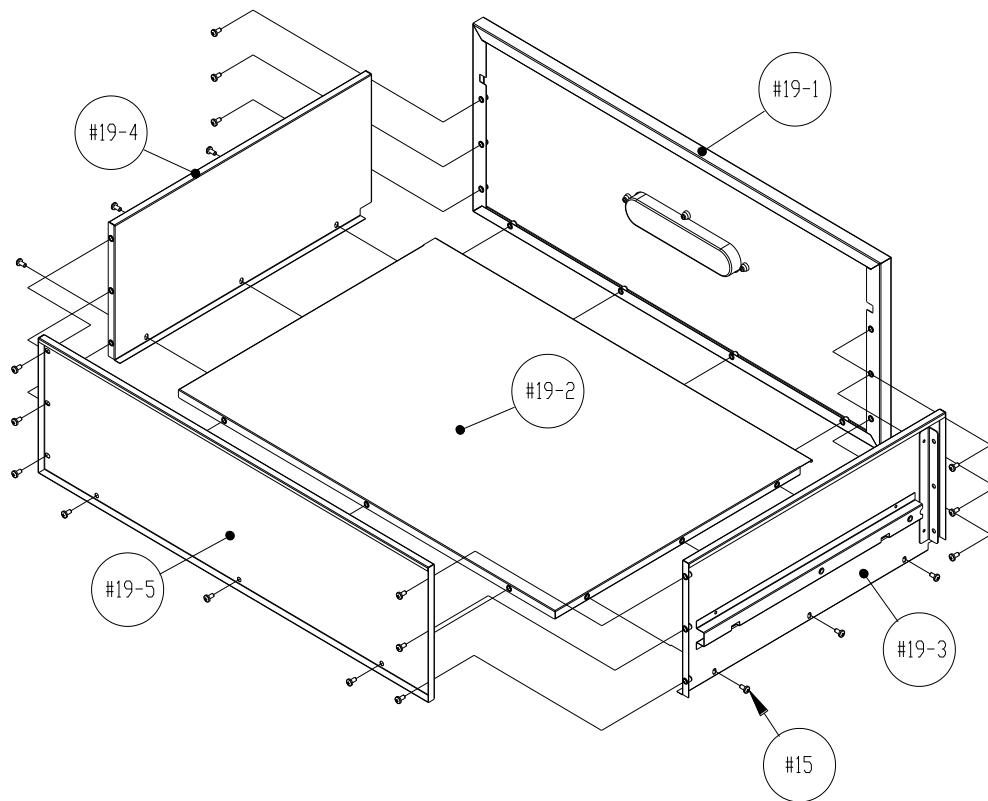


Small Drawer

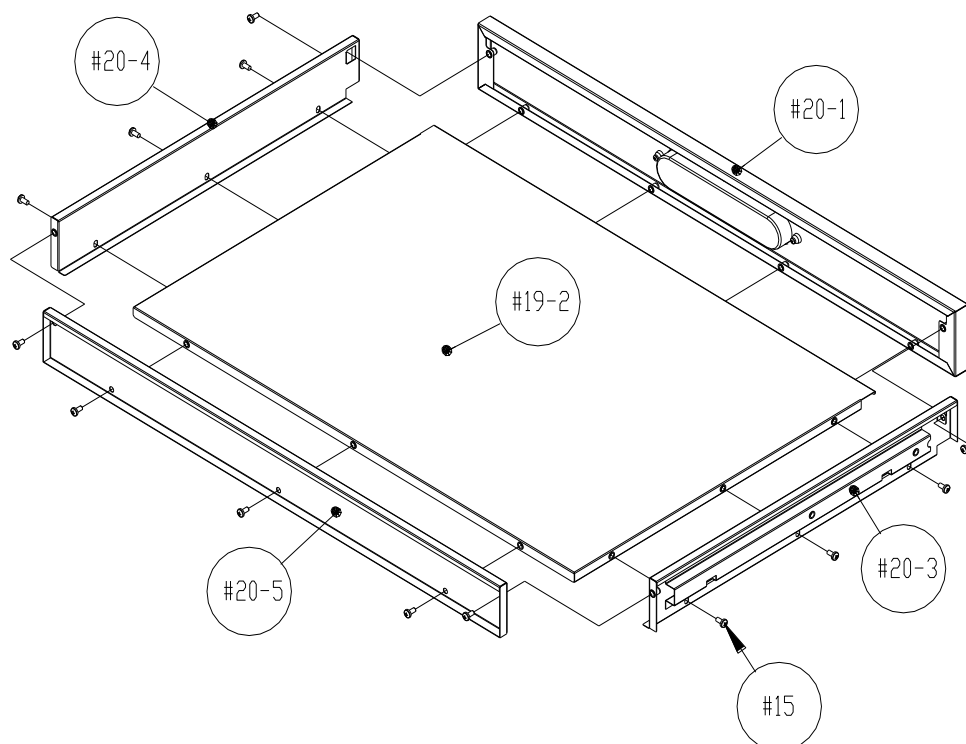









PARTS LIST

Please check the parts carefully according to the parts list. If you are missing any parts, please contact our customer service department (please refer to page 13 of 13).

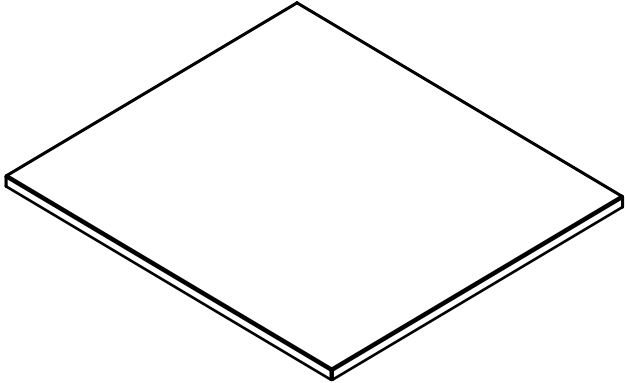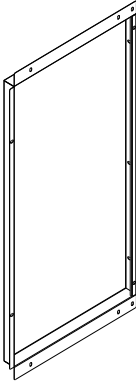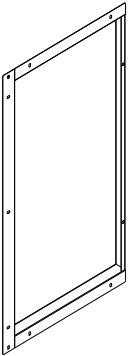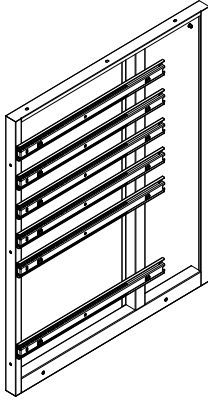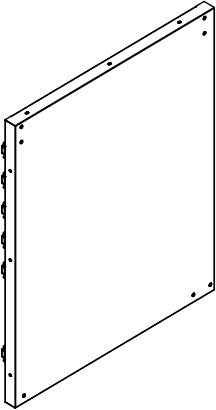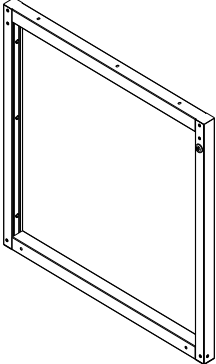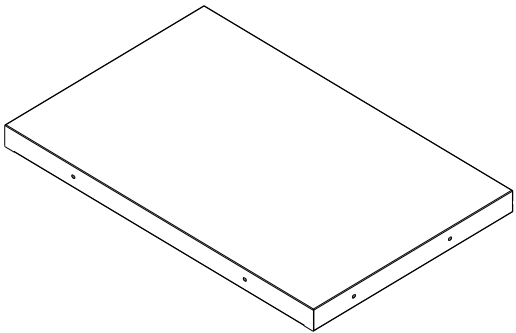	
(#1) SOLID HARDWOOD TOP x 1 PC	(#2) UPPER BACK PANEL x 1 PC
	
(#3) BOTTOM BACK PANEL x 1 PC	(#4) LEFT PANEL x 1 PC
	
(#5) RIGHT PANEL x 1 PC	(#6) FRONT FRAME x 1 PC
	
(#7) BOTTOM PANEL x 1 PC	(#8) RIGHT BACK CORNER PROTECTOR x 1 PC









PARTS LIST

Please check the parts carefully according to the parts list. If you are missing any parts, please contact our customer service department (please refer to page 13 of 13).

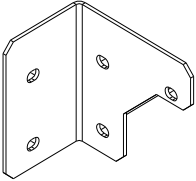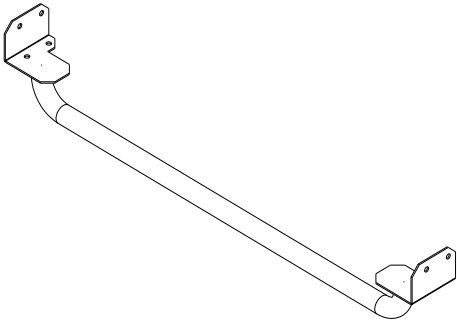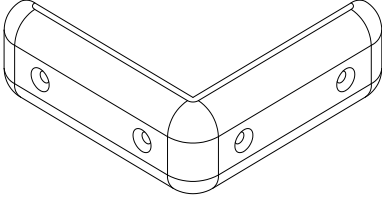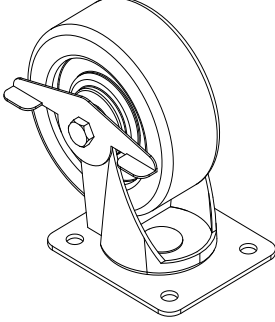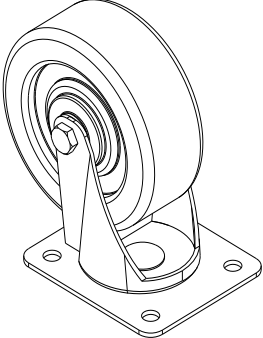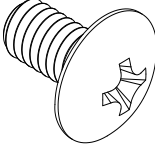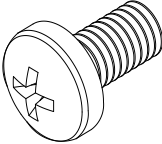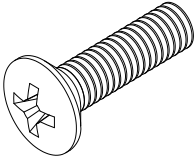	
(#9) LEFT BACK CORNER PROTECTOR x 1 PC	(#10) PUSH BAR x 1 PC
	
(#11) BUMPER x 4 PCS	(#12) SWIVEL WHEEL WITH BRAKE x 2 PCS
	
(#13) SWIVEL WHEEL W/O BRAKE x 2 PCS	(#14) SCREW A (M4 x 10) x 51 PCS
	
(#15) SCREW B (M4 x 8) x 134 PCS	(#16) SCREW C (M4 x 18) x 16 PCS


PARTS LIST

Please check the parts carefully according to the parts list. If you are missing any parts, please contact our customer service department (please refer to page 13 of 13).

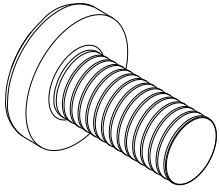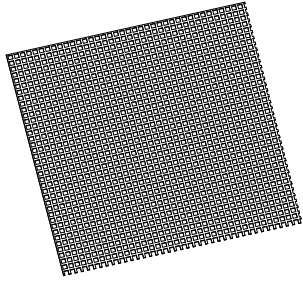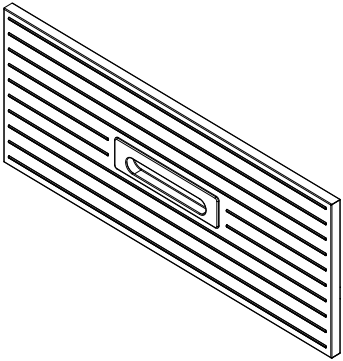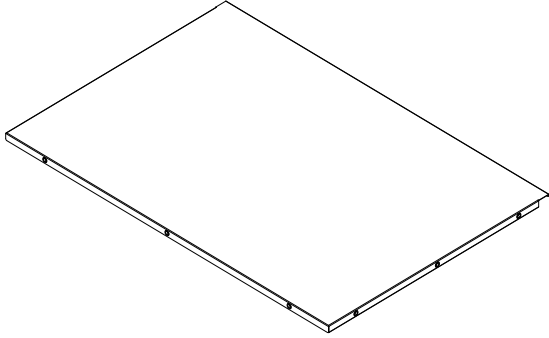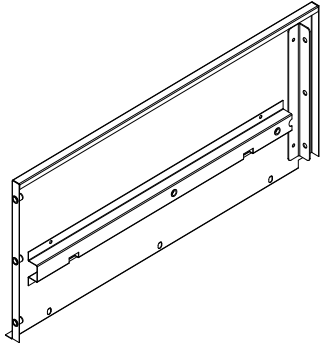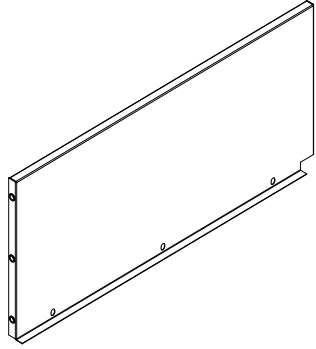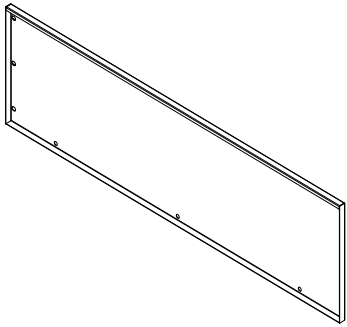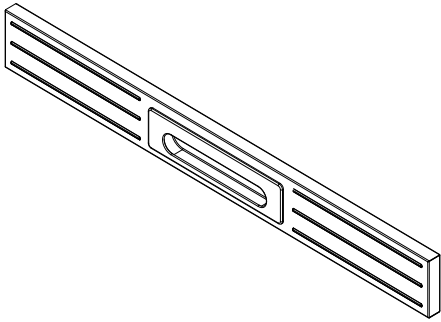
	
(#17) SCREW D (M8 x 18) x 16 PCS	(#18) DRAWER MAT x 6 PCS
	
(#19-1) LARGE DRAWER FRONT PANEL x 1 PC	(#19-2) DRAWER BASE PANEL x 6 PCS
	
(#19-3) LARGE DRAWER LEFT PANEL x 1 PC	(#19-4) LARGE DRAWER RIGHT PANEL x 1 PC
	
(#19-5) LARGE DRAWER BACK PANEL x 1 PC	(#20-1) SMALL DRAWER FRONT PANEL x 5 PCS

PARTS LIST


Please check the parts carefully according to the parts list. If you are missing any parts, please contact our customer service department (please refer to page 13 of 13).

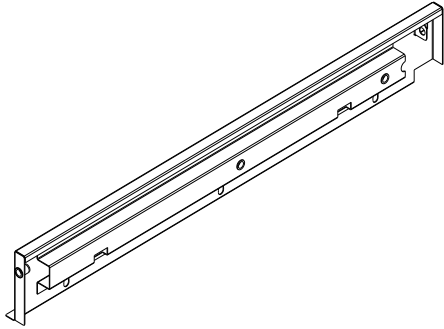


(#20-3) SMALL DRAWER LEFT PANEL x 5 PCS

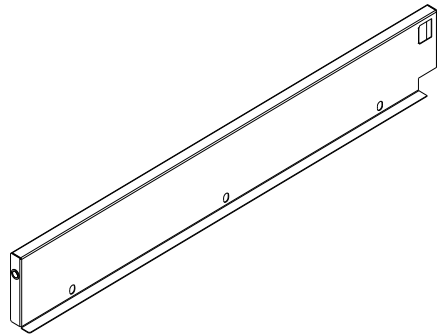


(#20-4) SMALL DRAWER RIGHT PANEL x 5 PCS

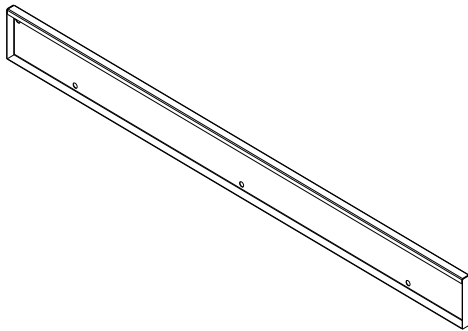

(#20-5) SMALL DRAWER BACK PANEL x 5 PCS

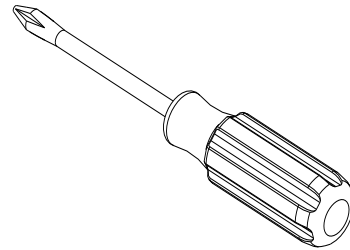

(#21) SCREWDRIVER x 1 PC

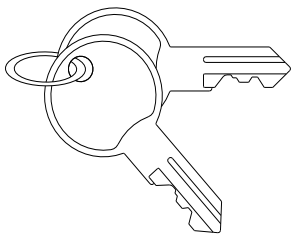

(#22) DRAWER KEY x 2 PCS

UltraHD Rolling Drawer Cabinet (Model No. 20085, 20086)



***NOTE:** We recommend using TWO people to assemble the cabinet.



TIP: A magnetic screwdriver is included for your convenience. If a power screwdriver is used, keep on a low torque setting.




Step 1. Open the package, remove and place all parts to the side. Then open the package of the Solid Hardwood Top (#1).

Note: The Solid Hardwood Top is packed within an inner cardboard box.




Step 2. Install Front Frame (#6)

Locate the Front Frame (#6) and attach to the "Front" of the Solid Hardwood Top (#1), using 3pcs Screw A (#14) and Screwdriver (#21) to tighten.

Note: The screw holes have some tolerance so make sure that the top and sides of the Front Frame are flushed with the Solid Hardwood Top – this may save time by avoiding having to make slight adjustments later.

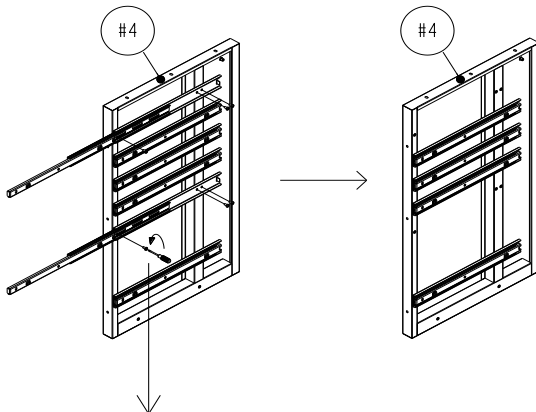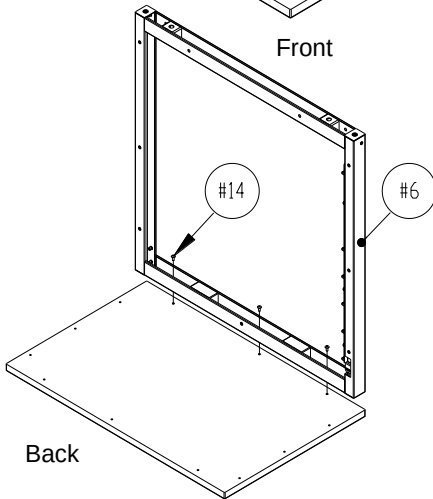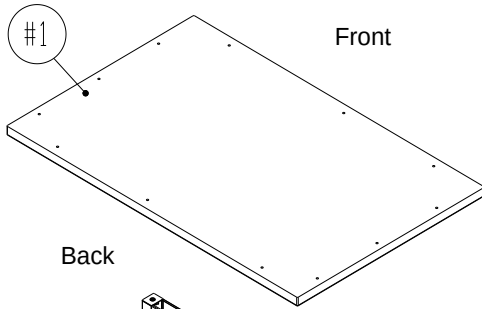


Remove 2 Slides to create the space needed to use the Screwdriver (#21).

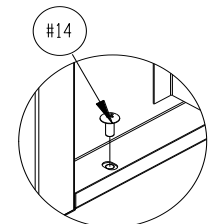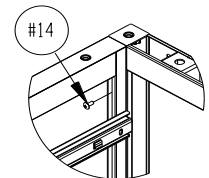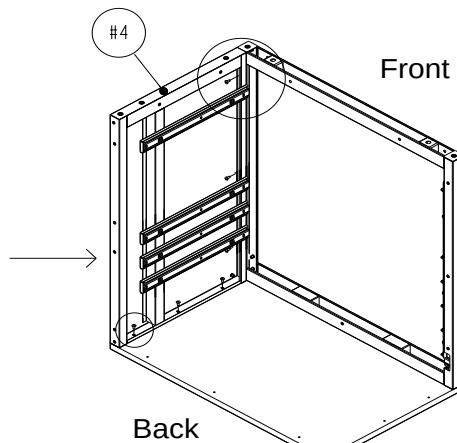

Step 3. Install the Left Panel (#4)

Remove 2 Slides to create the space needed to use the screwdriver (#21). Then, attach the Left Panel (#4) to the Front Frame (#6) and the Solid Hardwood Top (#1). Make sure the "Top" of the Left Panel (#4) is on the Solid Hardwood Top (#1) and the screw holes are lined up to the Front Frame (#6). Use Screwdriver (#21) and 6pcs Screw A (#14) to tighten the Left Panel (#4) to the Front Frame (#6), and then to Solid Hardwood Top (#1).

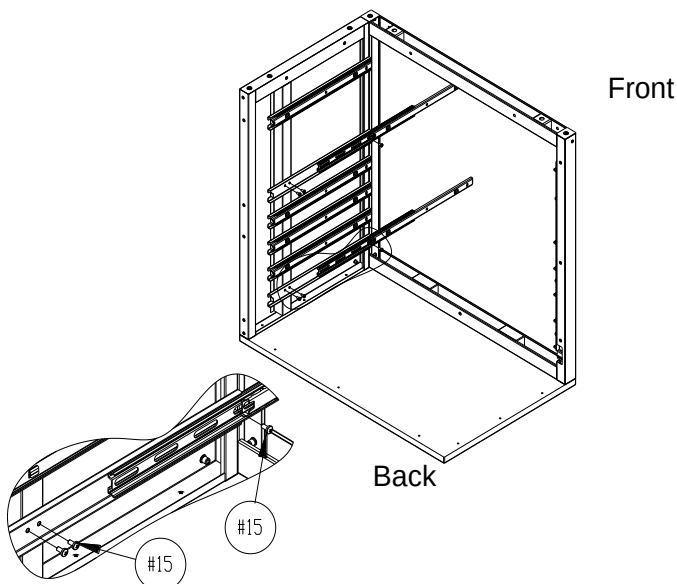


Step 4. Install the 2 removed slides back to the Left Panel (#4).

UltraHD Rolling Drawer Cabinet (Model No. 20085, 20086)




***NOTE: We recommend using TWO people to assemble the cabinet.**

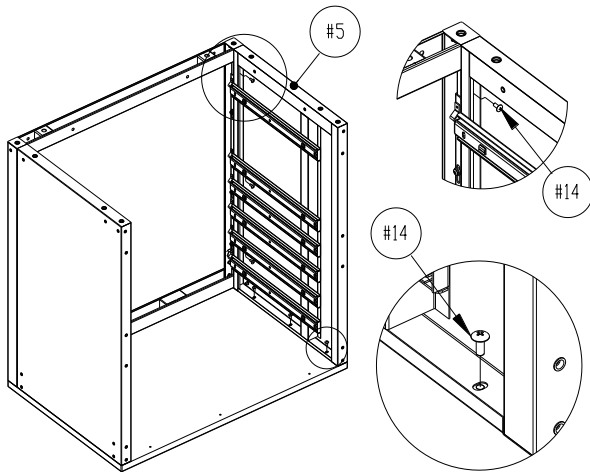

Step 5. Install the Right Panel (#5).

First, remove 2 Slides to create the space needed to use the screwdriver (#21). Then, attach the Right Panel (#5) to Front Frame (#6) and The Solid Hardwood Top (#1), Make sure the “Top” of the Right Panel (#5) is on the Solid Hardwood Top (#1) and the screw holes are lined up to the Front Frame (#6), Use Screwdriver (#21) and 6pcs Screw A (#14) to tighten the Right Panel (#5) the Front Frame (#6) and Solid Hardwood Top (#1).


Note: Remember to reinstall the 2 removed slides back to the Right Panel (#5).

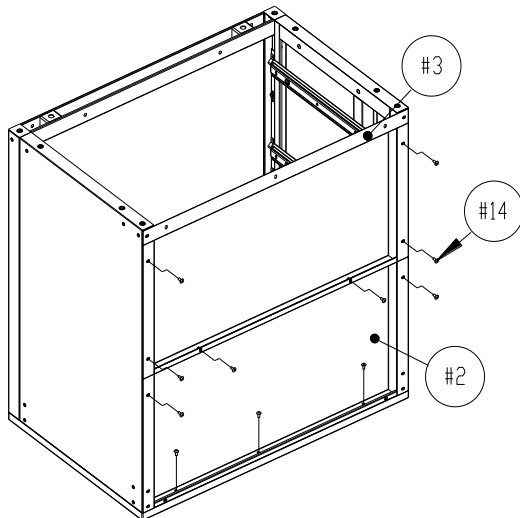

Step 6. Install the Upper Back Panel (#2) and Bottom Back Panel (#3).

a. Attach the Upper Back Panel (#2) between the Left Panel (#4) and Right Panel (#5). Make sure the “Top” of the Upper Back Panel (#2) is on the Solid Hardwood Top (#1) as the sticker indicates. Line up the screw holes and use Screw A (#14) to tighten up the Upper Back Panel to the Solid Hardwood Top (#1), Left Panel (#4) and Right Panel (#5).

b. Attach Bottom Back Panel (#3) between the Left Panel (#4) and Right Panel (#5). Make sure the “Top” of the Bottom Back Panel (#3) is to the Upper Back Panel (#2) as the sticker indicates. Line up the screw holes and use Screw A (#14) to tighten the Bottom Back Panel (#3) to the Upper Back Panel (#2), Left Panel (#4) and Right Panel (#5).

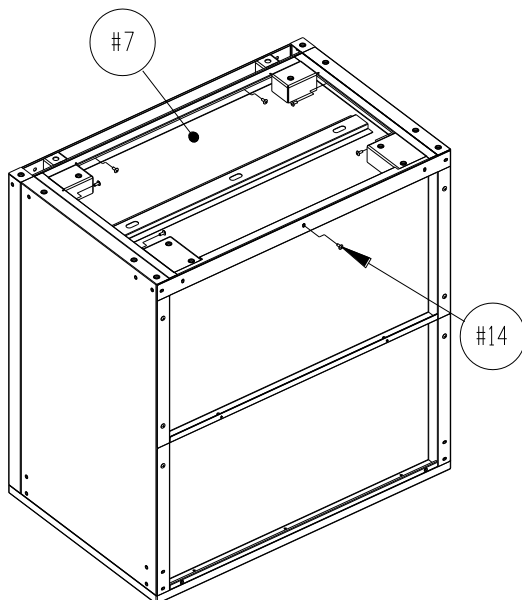


Step 7. Install the Bottom Panel (#7)

Attach the Bottom Panel (#7) to the Left Panel (#4), Right Panel (#5), Front Frame (#6), Bottom Back Panel (#3), line up screw holes and use 7pcs Screw A (#14) to tighten.

UltraHD Rolling Drawer Cabinet (Model No. 20085, 20086)




***NOTE:** We recommend using TWO people to assemble the cabinet.

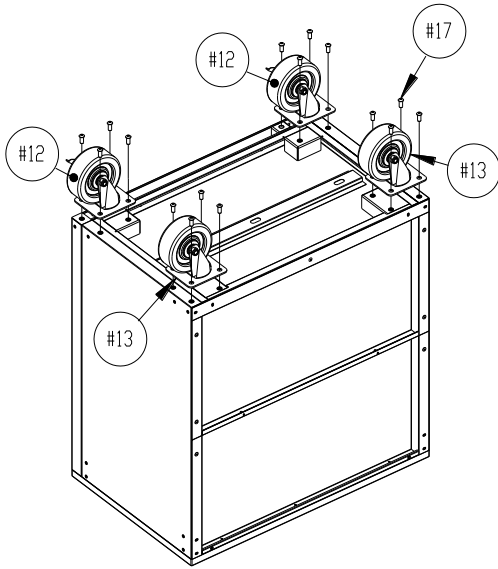

Step 8. Install Wheels (#12 and #13).


Attach Wheels (#12 and #13) to the Bottom Panel (#7) and surrounding frame. Make sure the Swivel Wheels with Brake are installed at the front side. Use Screw D (#17) to tighten them.

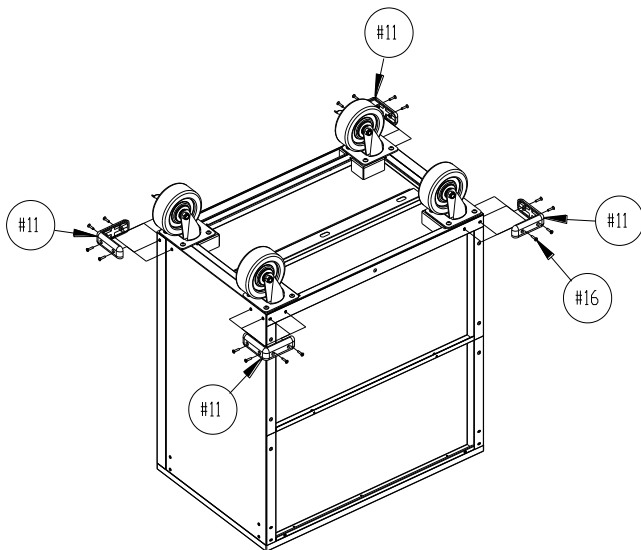

Step 9. Install Bumpers (#11).

Attach Bumpers (#11) to the bottom four corners of the cabinet. Use Screw C (#16) to tighten them.

Note: After step 9, turn the cabinet upright.

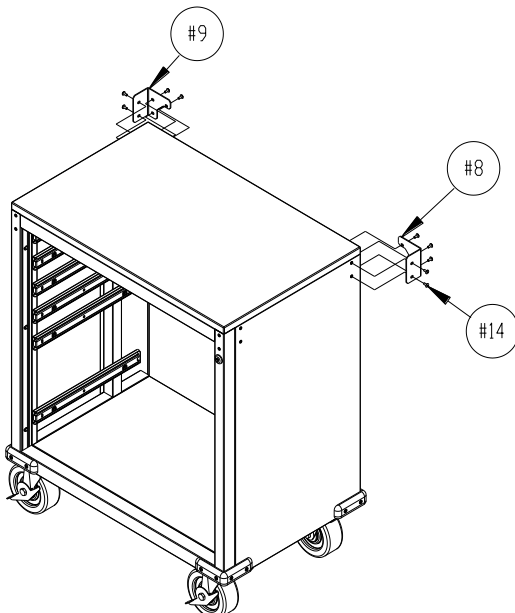

Step 10. Install Right Back Corner Protector (#8) and Left Back Corner Protector (#9)

After turning the cabinet upright, attach the Right Back Corner Protector (#8) to the top right back corner, and attach the Left Back Corner Protector to the top left back corner, using 10pcs Screw A (#14) to tighten.

UltraHD Rolling Drawer Cabinet (Model No. 20085, 20086)



***NOTE:** We recommend using TWO people to assemble the cabinet.



Step 11. Install Large Drawer Side Panels (#19-3 and #19-4).

Attach the Large Drawer Side Panels (#19-3 and #19-4) one at a time, to the back of the stainless steel Large Drawer Front (#19-1), Make sure the Drawer Side Panels are placed in all the way making contact with the rear of the Large Drawer Front Panel (#19-1). Line up the screw holes and use Screw B (#15) to tighten them.

Step 12. Install Large Drawer Base Panel (#19-2)

From above, fit and attach Large Drawer Base Panel (#19-2) between the two sides and into the back of the Large Drawer Front Panel (#19-1). Use Screw B (#15) to tighten.


Note: Do not fully tighten any one screw until all screws are partially screwed in.

Step 13. Install Large Drawer Back Panel (#19-5).

Attach the Large Drawer Back Panel (#19-5) to the rest of the assembled drawer. Use Screw B (#15) to tighten.

Step 14. Assemble and Install Small Drawer the same way.


Repeat Steps 11-13 using Small Drawer Left Panel (#20-3), Small Drawer Right Panel (#20-4), Small Drawer Front Panel (#20-1), Small Drawer Back Panel (#20-5) and Drawer Base Panel (#19-2) to assemble the Small Drawer. Assemble all five small drawers.

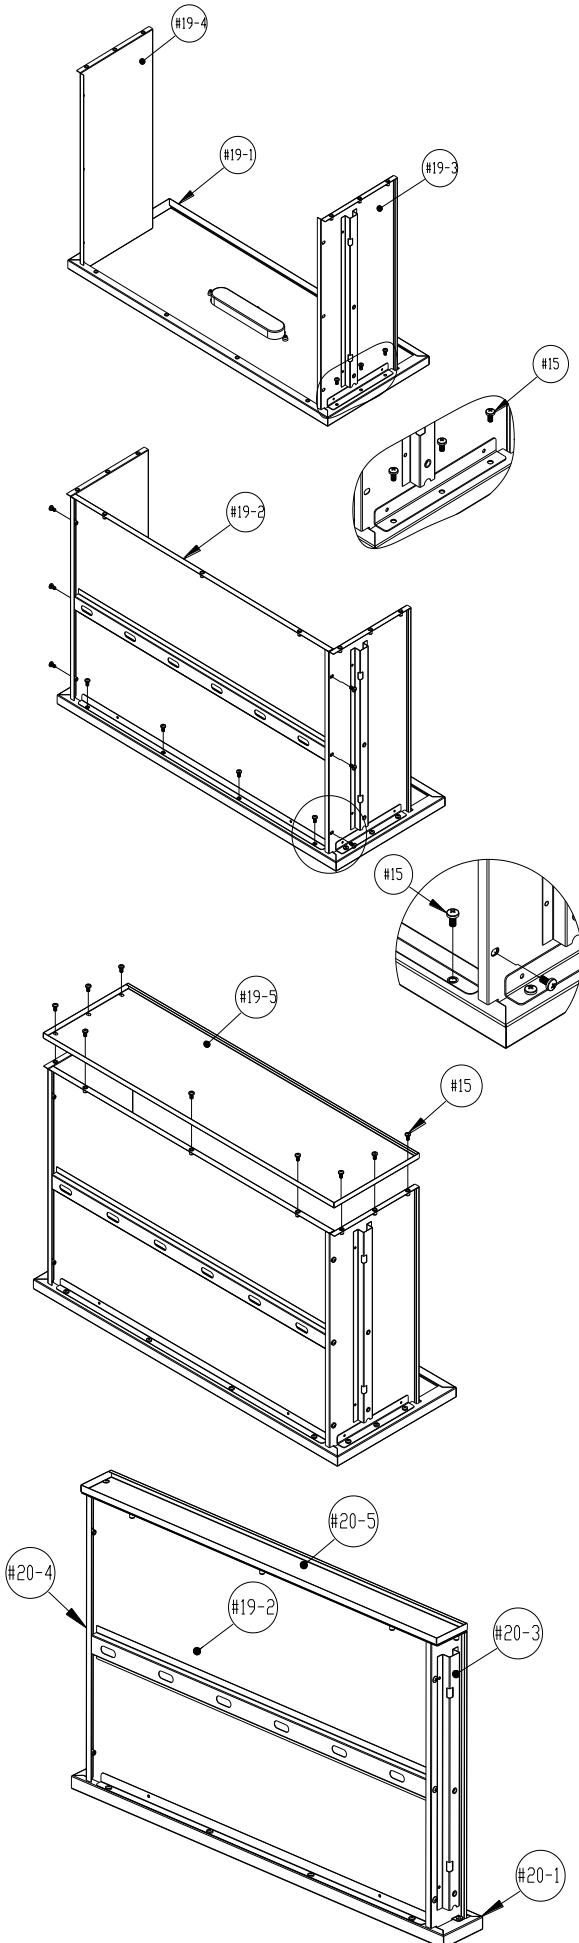

UltraHD Rolling Drawer Cabinet (Model No. 20085, 20086)




*NOTE: We recommend using TWO people to assemble the cabinet.

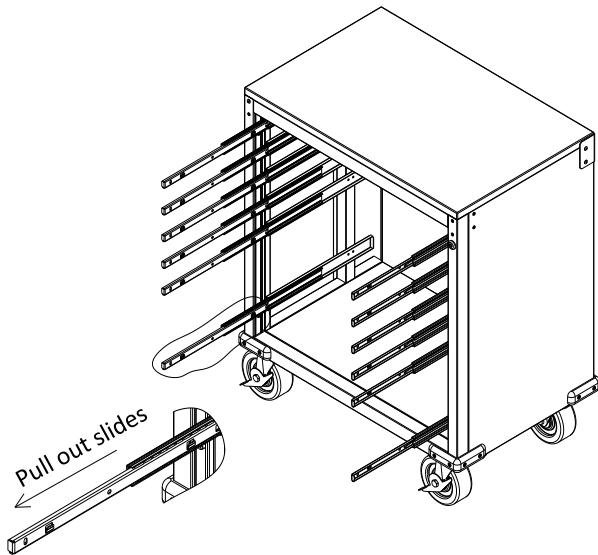




WARNING: Check the key/lock, it must be unlocked before placing all the drawers.

Step 15. Install Drawers into cabinet.

- Pull out the slides for the large drawer. Hook the big drawer between both slides, make sure the slides hooks are insert into the square holes on the drawer side panels completely.
- Line up the screw holes, and using 4pcs Screw B (#15) to tighten the drawer.
- Repeat above steps to place other Drawers.

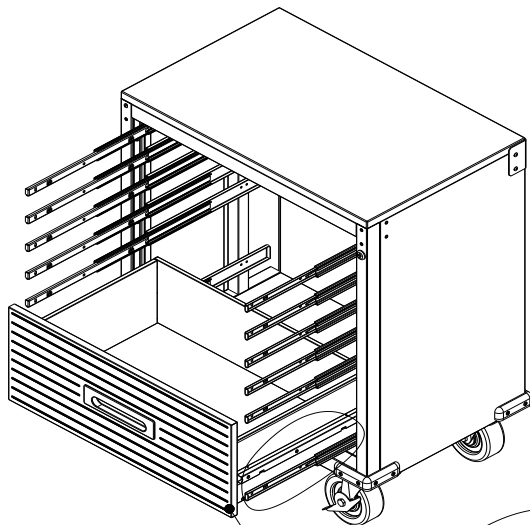

#19

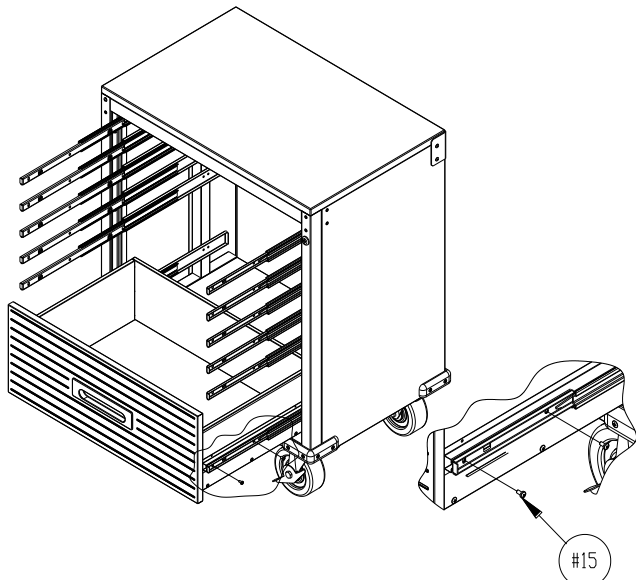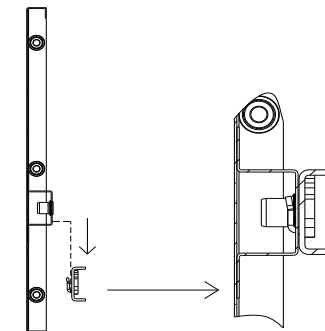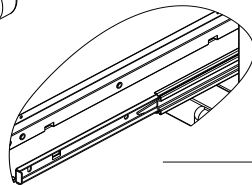


#15

UltraHD Rolling Drawer Cabinet (Model No. 20085, 20086)




***NOTE:** We recommend using TWO people to assemble the cabinet.

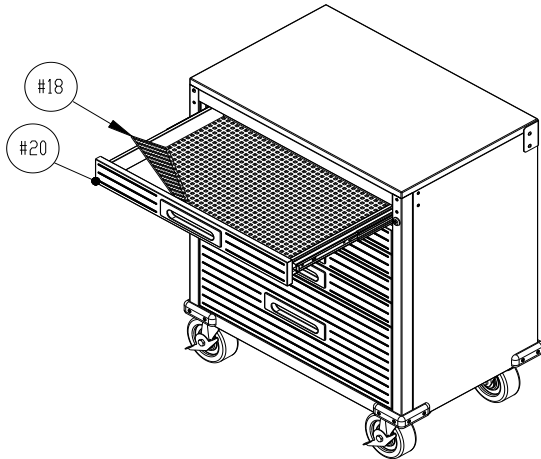

Step 16. Place Drawer Mats (#18) into Drawers

After placing all the Drawer Mats (#18), close all the drawers.

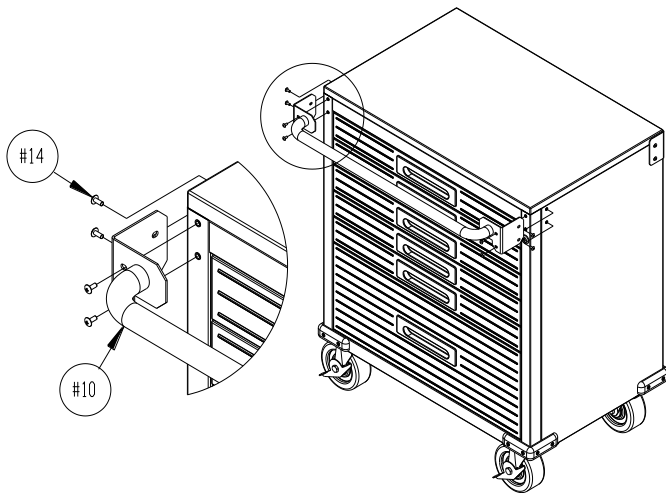

Step 17. Install Push Bar (#10).

Attach Push Bar (#10) to the top of cabinet, using 8pcs Screw A (#14) to tighten.

Stainless Steel Maintenance:

These parts have an UltraGuard® fingerprint resistant finish. Do not use traditional stainless steel cleaners on this unit. Lightly wipe off once a month with clean warm water and a soft cloth (preferably a microfiber cloth). This is the safest formula to prevent new stains from appearing over time and manage unwanted fingerprints or grease marks. Remember to always wipe in the direction of the surface grain (NEVER ACROSS) and always use a lint-free cloth. Once the surface is clean, thoroughly wipe dry with a soft absorbent cloth.

CAUTION



**Only open one drawer
at a time to avoid tipping.
40 lbs. maximum loading for
each drawer.**

CONTACT INFORMATION


If you are missing any parts, have any questions, or need additional assistance in assembly, please contact our bilingual (English and Spanish) customer service department at:




Seville Classics, Inc.
19401 Harborage Way Torrance, CA 90501 USA
Telephone: (800) 323-5565 within USA
Fax: (310) 533-3899
Hours: 9:00am - 4:30pm (Pacific Standard Time)
E-mail: support@sevilleclassics.com
Website & Online Store: www.sevilleclassics.com

*****Please visit our website or call and inquire about our additional UltraHD Line*****

UltraHD® Line

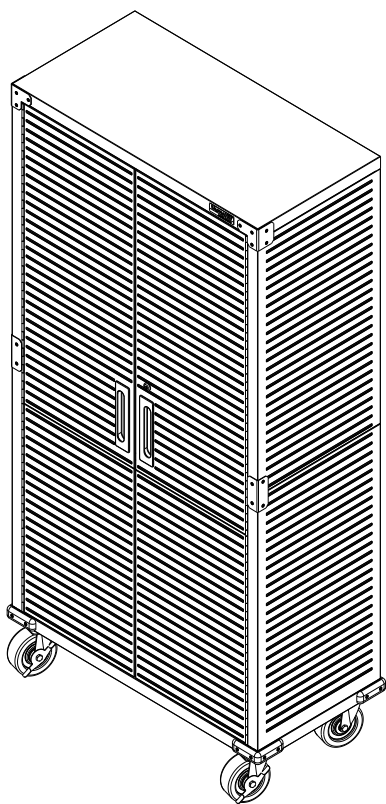


UltraHD® Tall Storage Cabinet
Model No. 16236 (Granite)
Model No. 20143 (Graphite)
Model No. 20153 (Red)
Model No. 20133 (White)

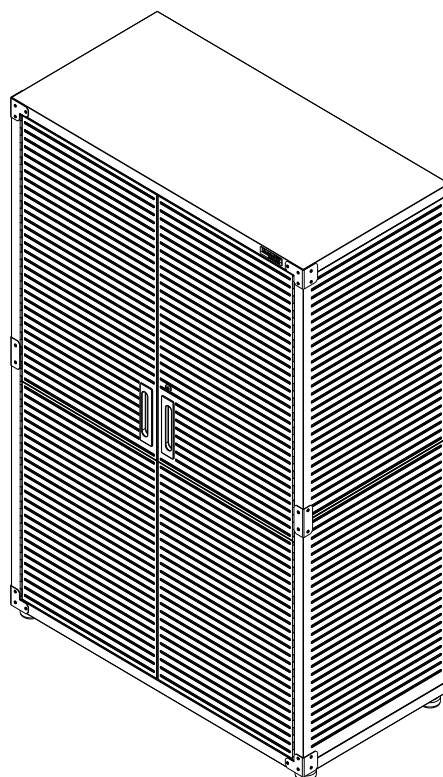

UltraHD® Mega Storage Cabinet
Model No. 16238 (Granite)
Model No. 20148 (Graphite)
Model No. 20158 (Red)
Model No. 20138 (White)

UltraHD® Line

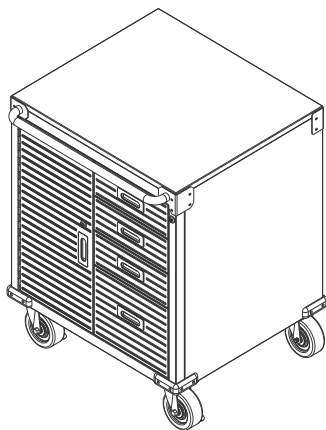


UltraHD® Rolling Cabinet

Model No. 20225 (Granite)

Model No. 20081 (Graphite)

Model No. 20082 (Red)


Model No. 20083 (White)

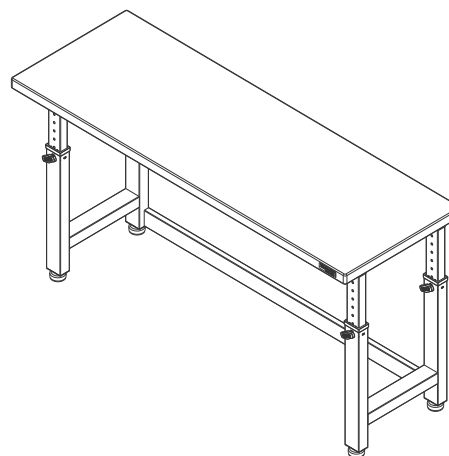

UltraHD® 6-Foot Height Adjustable Workbench

Model No. 20292 (Granite)

Model No. 20293 (Graphite)

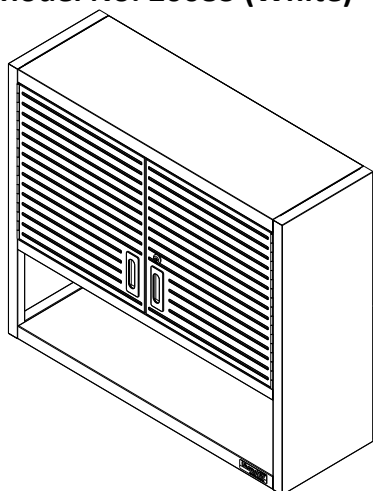


UltraHD® Wall Cabinet with Open Shelf

Model No. 20230 (Granite)

Model No. 20140 (Graphite)

Model No. 20150 (Red)

Model No. 20130 (White)

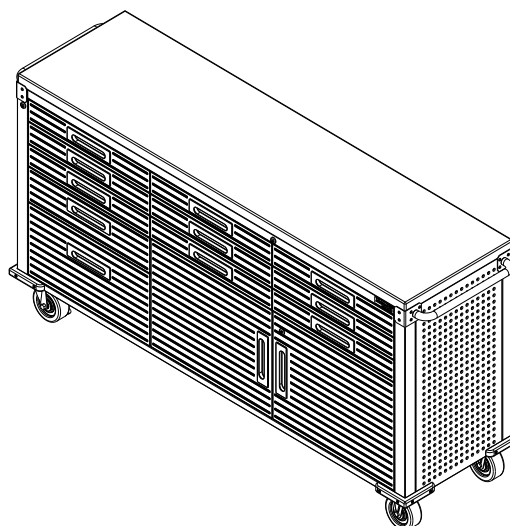


UltraHD® 2-Door Rolling Workbench

Model No. 20262 (Granite)


Model No. 20142 (Graphite)

Model No. 20152 (Red)

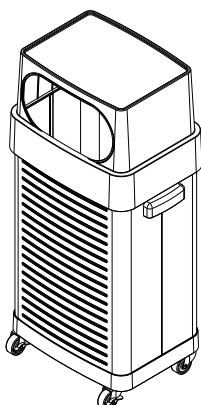

UltraHD® Rolling Trash Bin

Model No. 20215

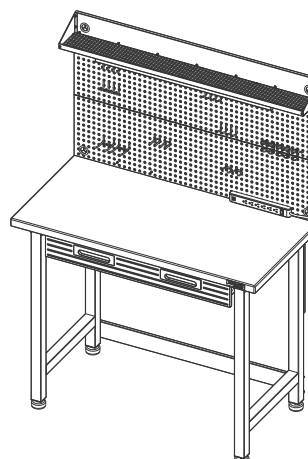

UltraHD® Lighted Workcenter

Model No. 20247 (Granite)

Model No. 20246 (Graphite)

Model No. 20157 (Red)