



ASSEMBLY INSTRUCTIONS

UltraHD® Storage Cabinet (Model No. 16264B, 16267B, 16268B, 16269B)

Granite

Graphite

Red


White


48 in. W x 18 in. x 72 in. H
(121.9 cm x 45.7 cm x 1.83 m)

ULTRAGUARD®


FINGERPRINT RESISTANT SURFACES
AND INCREASED DURABILITY

Reference page 12 for special care and
maintenance of stainless steel

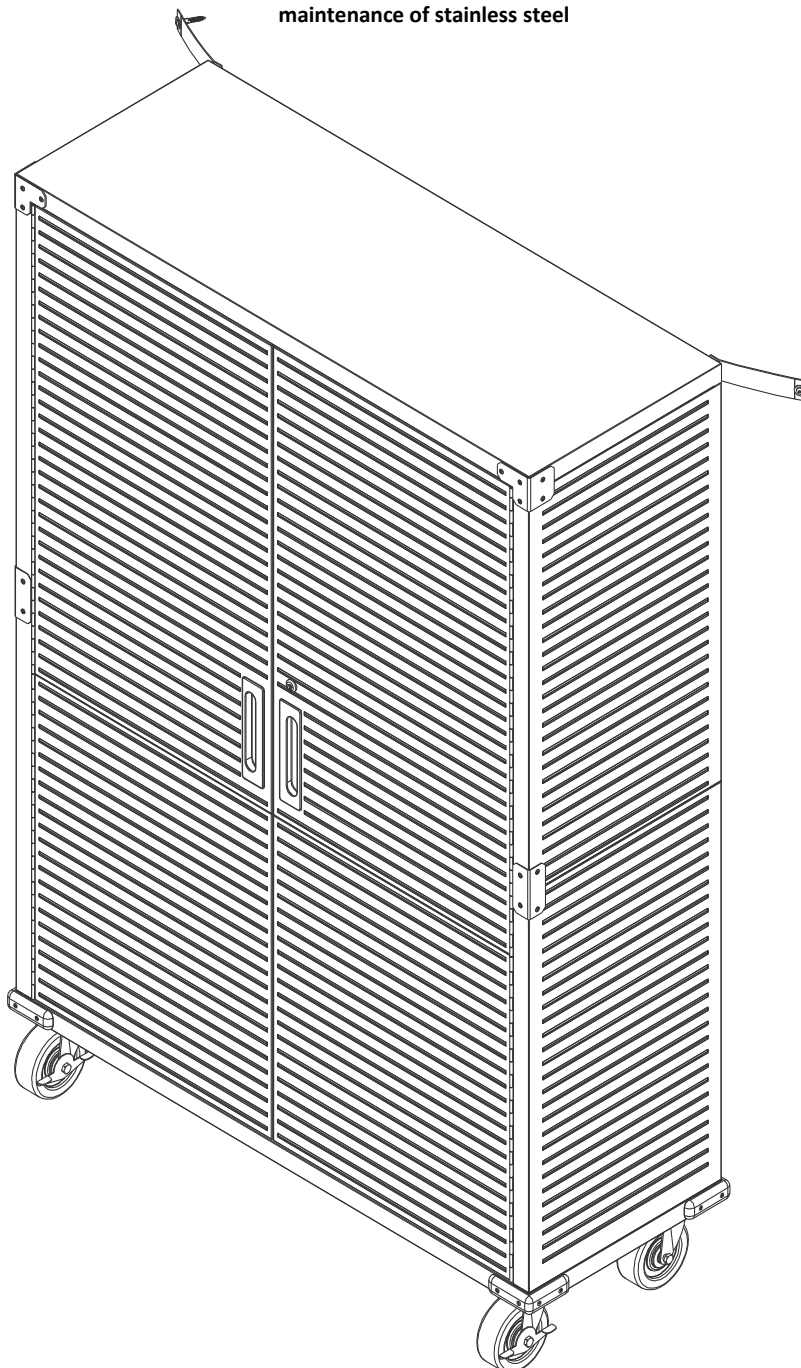


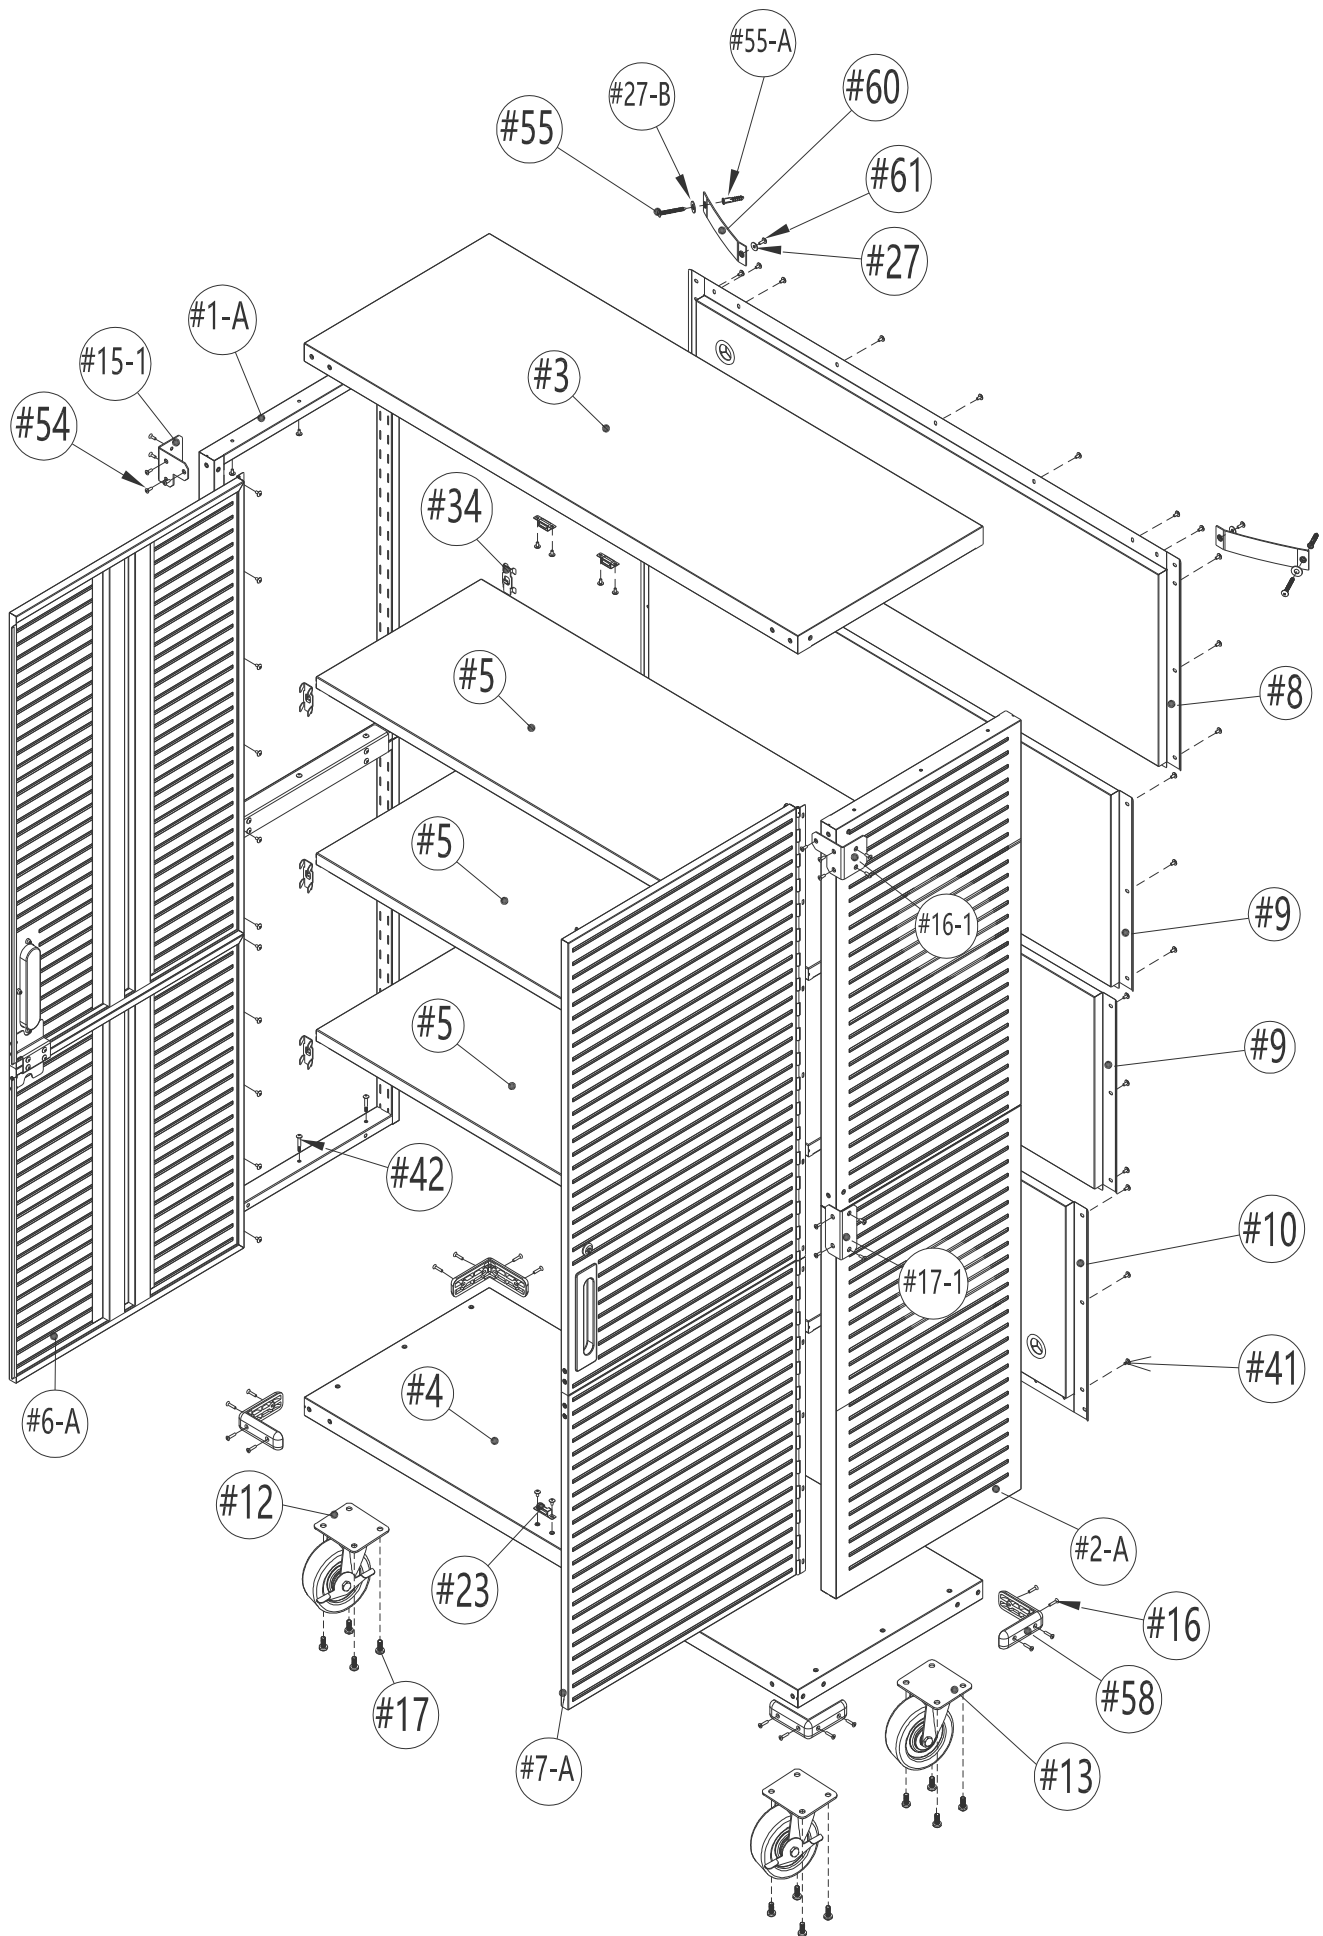


(#1-A) Left Side Panel

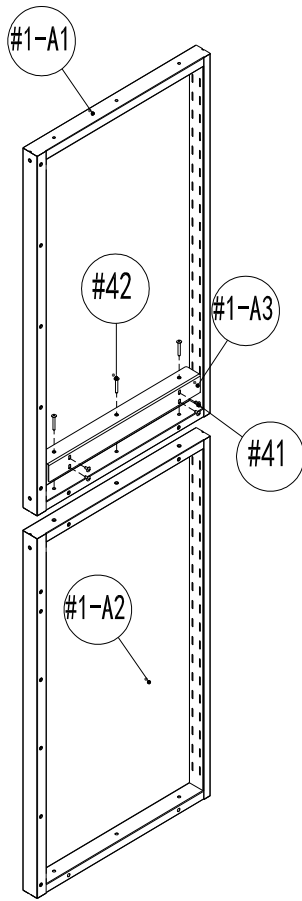


(#2-A) Right Side Panel

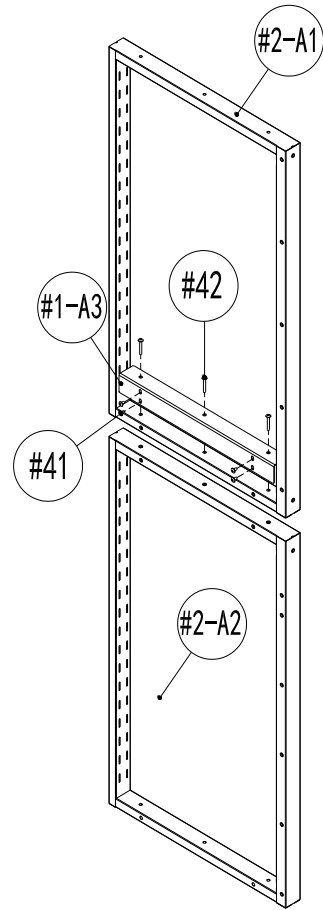

(#6-A) Left Door

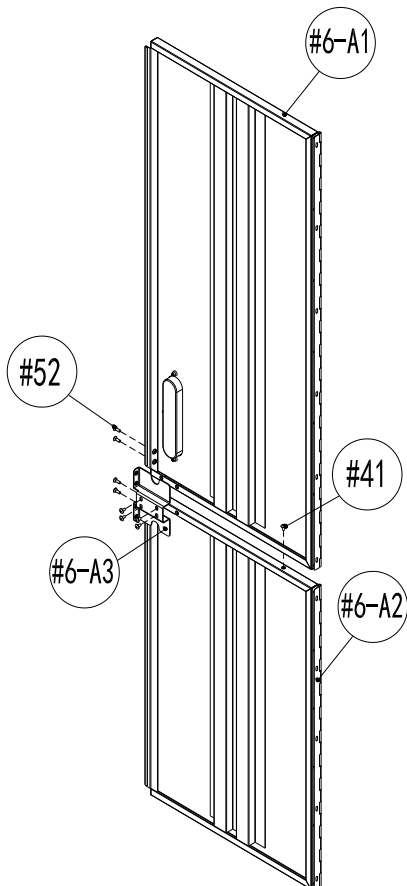


(#7-A) Right Door

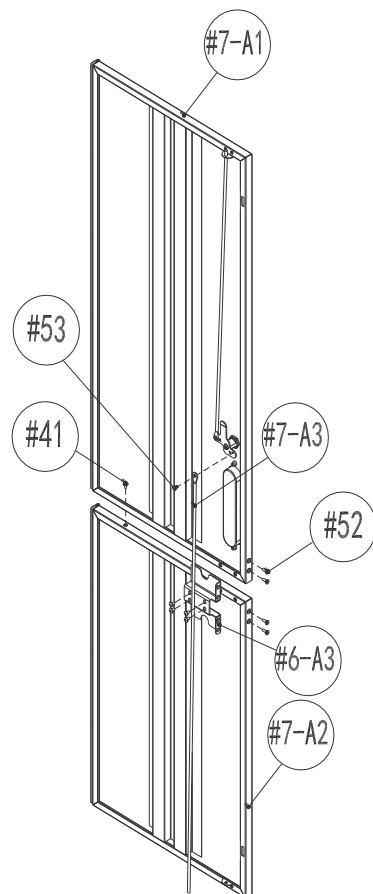


PARTS LIST


Please check the parts carefully according to the parts list. If you are missing any parts, please contact our customer service department (please refer to page 13).

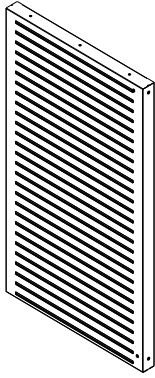


(#1-A1) Left Side - Upper Panel x 1 PC

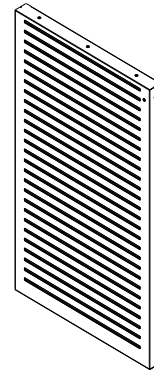


(#1-A2) Left Side - Bottom Panel x 1 PC

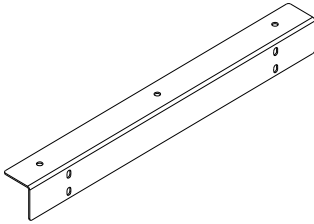


(#1-A3) Side Panel Reinforcement Connection Part x 2 PCS

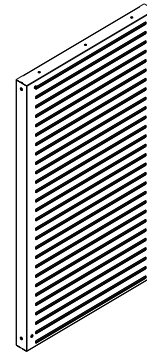


(#2-A1) Right Side - Upper Panel x 1 PC

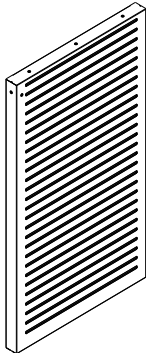


(#2-A2) Right Side - Bottom Panel x 1 PC

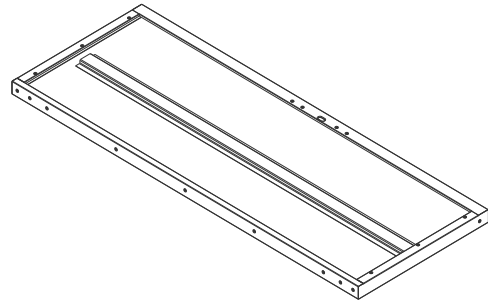

(#3) Top Panel x 1 PC

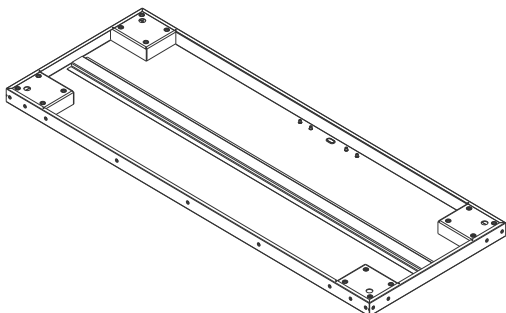








(#4) Bottom Panel x 1 PC

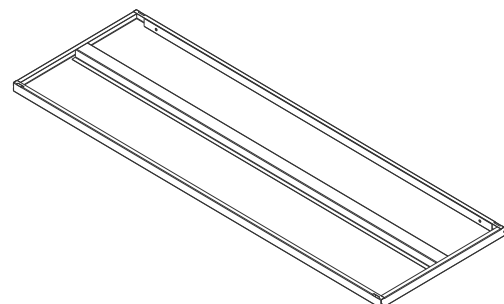

(#5) Middle Shelf x 3 PCS









PARTS LIST

Please check the parts carefully according to the parts list. If you are missing any parts, please contact our customer service department (please refer to page 13).

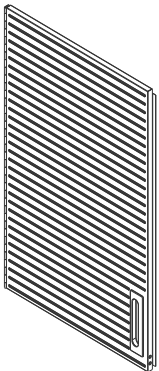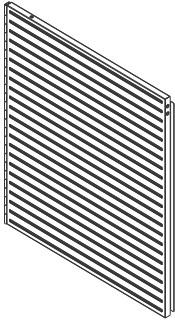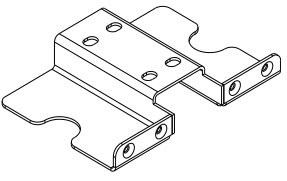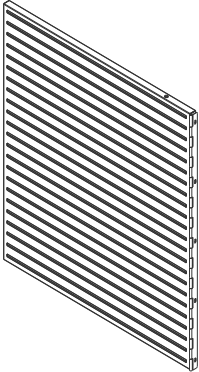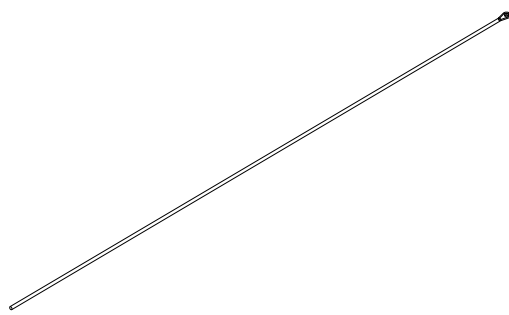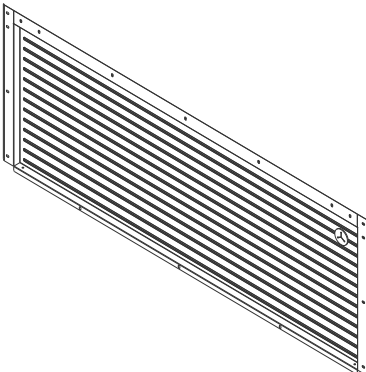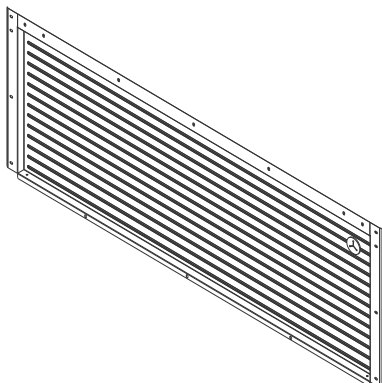	
(#6-A1) Left Door - Upper Panel x 1 PC	(#6-A2) Left Door - Bottom Panel x 1 PC
	
(#6-A3) Door Panel Connection Part x 2 PCS	(#7-A1) Right Door - Upper Panel x 1 PC
	
(#7-A2) Right Door - Bottom Panel x 1 PC	(#7-A3) Key Rod x 1 PC
	
(#8) Upper Back Panel x 1 PC	(#9) Middle Back Panel x 2 PCS


PARTS LIST

Please check the parts carefully according to the parts list. If you are missing any parts, please contact our customer service department (please refer to page 13).

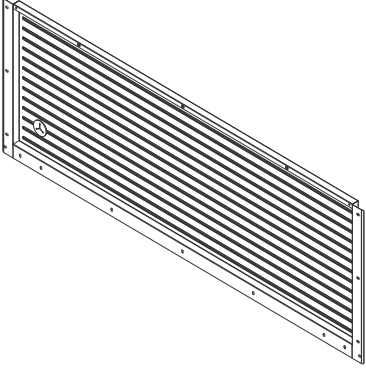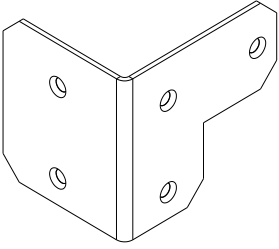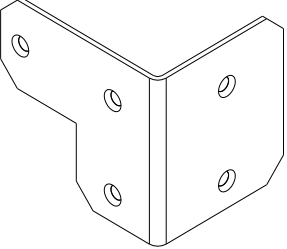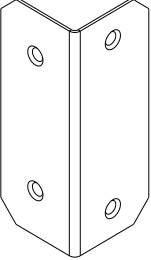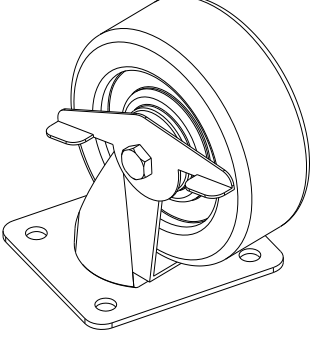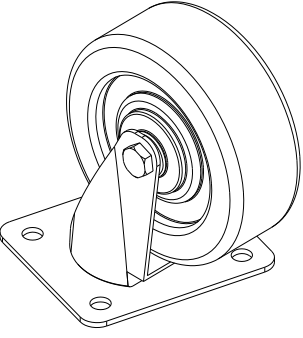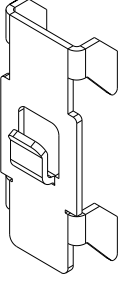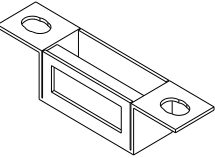
	
(#10) Bottom Back Panel x 1 PC	(#15-1) Corner Protection - A x 1 PC
	
(#16-1) Corner Protection - B x 1 PC	(#17-1) Middle Corner Protection x 2 PCS
	
(#12) Wheel with Brake x 2 PCS	(#13) Wheel W/O Brake x 2 PCS
	
(#34) Hook x 12 PCS	(#23) Magnet x 4 PCS

PARTS LIST


Please check the parts carefully according to the parts list. If you are missing any parts, please contact our customer service department (please refer to page 13).

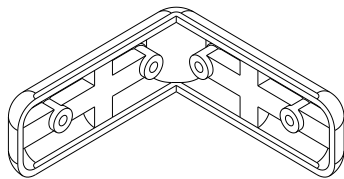


(#58) Bumper x 4 PCS

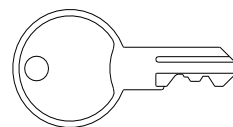


(#22) Key x 2 PCS

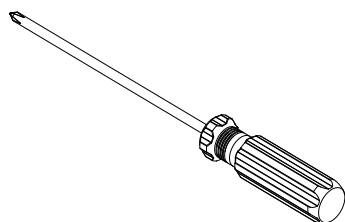


(#21) Screw Driver x 1 PC




(#41) Screw F (M4 x 8L) x 101 PCS

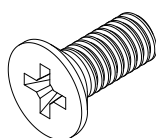


(#52) Screw K (M5 x 10L) x 8 PCS

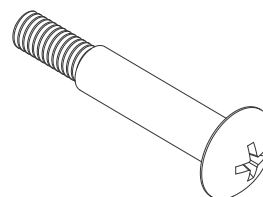

(#42) Screw G (M4 x 30L) x 12 PCS




(#53) Screw L (M4 x 6L) x 1 PC

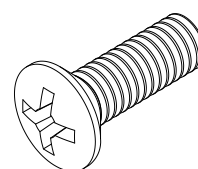


(#54) Screw N (M4 x 10L) x 18 PCS

PARTS LIST


Please check the parts carefully according to the parts list. If you are missing any parts, please contact our customer service department (please refer to page 13).

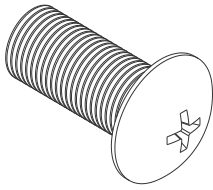


(#17) Screw D (M8x18L) x 16 PCS

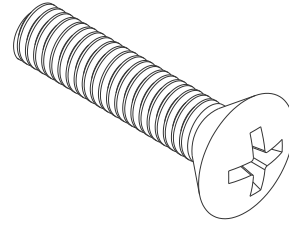


(#16) Screw C (M4x18L) x 16 PCS

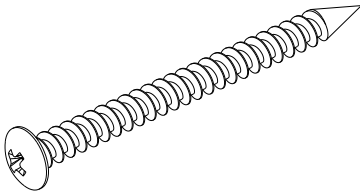


(#55) Screw M (M6 x 50L) x 2 PCS

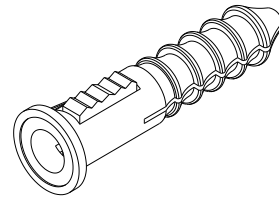


(#55-A) Wall Anchor x 2 PCS

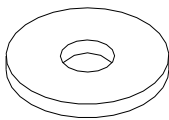


(#27) Washer (M4) x 2 PCS

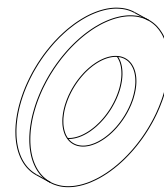

(#27-B) Washer (M8) x 2 PCS

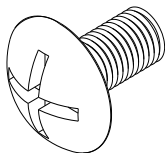

(#61) Screw O (M4 x 12L) x 2 PCS

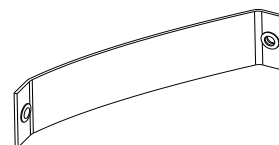

(#60) Mounting Strap x 2 PCS

UltraHD® Storage Cabinet (Model No. 16264B, 16267B, 16268B, 16269B)



*NOTE: We recommend using TWO people to assemble the cabinet.



TIP: A magnetic screwdriver is included for your convenience. If using a power screwdriver, keep torque setting on LOW during assembly.

WARNING: Some parts may have sharp edges. To avoid injury, wearing gloves is recommended during assembly.

Step 1: Install (#1-A) Left Side Panel.

Place the (#1-A1) Left Side - Upper Panel and (#1-A2) Left Side - Bottom Panel together, place the (#1-A3) Side Panel Reinforcement Connection Part over the touching edges, line up screw holes, use 3 pcs of (#42) Screw G to tighten from the side, then use 4 pcs of (#41) Screw F to tighten from the top side.

Note: Make sure the (#1-A1) Left Side Upper Panel is flush with (#1-A2) Left Side Bottom Panel.

Step 2: Install (#2-A) Right Side Panel.

Repeat **Step 1**, use (#2-A1) Right Side Upper Panel, (#2-A2) Right Side Bottom Panel, (#1-A3) Side Panel Reinforcement Connection Part, 3 pcs of (#42) Screw G and 4 pcs of (#41) Screw F to install (#2-A) the Right Side Panel.

Step 3: Install (#6-A) Left Door.

1). Place (#6-A1) the Left Door - Upper Panel and (#6-A2) Left Door - Bottom Panel together, line up screw holes, use 1 pc of (#41) Screw F to tighten from the side.

2). Place the (#6-A3) Door Panel Connection Part over the touching sides, line up the screw holes, use 4 pcs of (#41) Screw F to tighten from the top, and use 4 pcs of (#52) Screw K to tighten from outside edge.

Note: Make sure the (#6-A1) Left Door - Upper Panel is flushed with (#6-A2) Left Door - Bottom Panel.

UltraHD® Storage Cabinet (Model No. 16264B, 16267B, 16268B, 16269B)



*NOTE: We recommend using TWO people to assemble the cabinet.



Step 4: Install (#7-A) Right Door.

Repeat **Step 3**, use (#7-A1) the Right Door - Upper Panel, (#7-A2) Right Door - Bottom Panel and (#6-A3) the Door Panel Connection Part, use 1 pc of (#41) Screw F to tighten the touching sides, use 4 pcs of (#41) Screw F to tighten from the top touching side, and 4 pcs of (#52) Screw K to tighten from outside edge.

Note: Make sure the (#7-A1) Right Door - Upper Panel is flushed with (#7-A2) Right Door - Bottom Panel.

Step 5: Install (#7-A3) Key Rod.

Attach and insert (#7-A3) the Key Rod into the bottom tab hole of (#7-A2) Right Door - Bottom Panel, twist out the Pre-assembled (#53) Screw L on the key rod linkage plate, attach (#7-A3) the Key Rod by lining up the screw hole and tightening back in (#53) Screw L.

Step 6: Install (#3) Top Panel to (#1-A1) Left Side Upper Panel and (#2-A1) Right Side Upper Panel.

Attach (#3) Top Panel to (#1-A1) the Left Side Upper Panel and (#2-A1) Right Side Upper Panel. Make sure the front of the panel faces downward. Line up screw holes, use 6 pcs of (#41) Screw F to tighten.

Note: Before tightening screws, make sure the bottom corners of (#1-A1, #2-A1) Left Side Upper Panel and Right Side Upper Panels are completely flush with the back and front corners of (#3) Top Panel.

Step 7: Install (#4) Bottom Panel to (#1-A2) Left Side Bottom Panel and (#2-A2) Right Side Bottom Panel.


Attach (#4) the Bottom Panel to (#1-A2) the Left Side Bottom Panel and (#2-A2) Right Side Bottom Panel, line up screw holes, use 6 pcs of (#42) Screw G to tighten.

Note: Before tightening screws, make sure the bottom corners of (#1-A2, #2-A2) Left Side Bottom Panel and Right Side Bottom Panels are completely flush with the back and front corners of (#4) Bottom Panel.

UltraHD® Storage Cabinet (Model No. 16264B, 16267B, 16268B, 16269B)




*NOTE: We recommend using TWO people to assemble the cabinet.

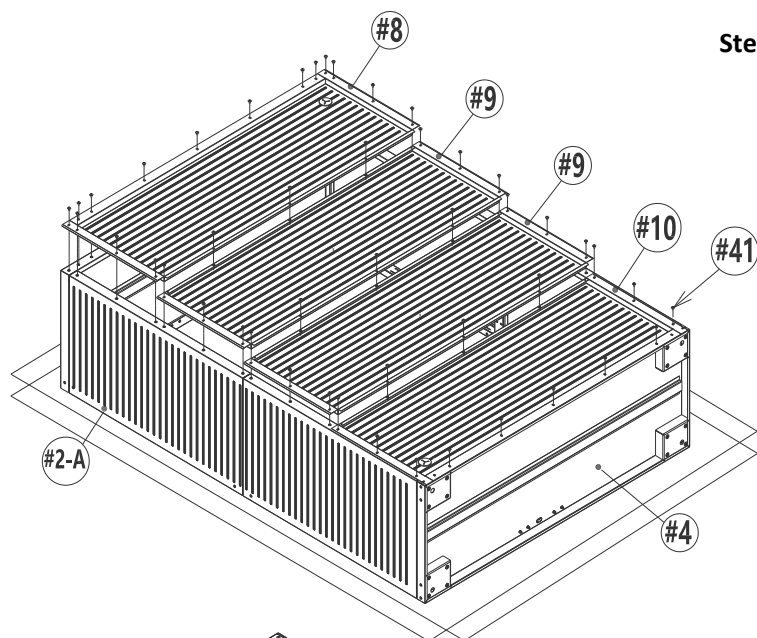

Step 8: Install (#8, #9 and #10) Back Panels.

- 1). Attach (#10) the Bottom Back Panel onto both Bottom of Left and Right Side Panels (#1-A2 and #2-A2) and Bottom Panel (#4), line up screw holes, use 11 pcs of (#41) Screw F to tighten.
- 2). Attach 2 pcs of (#9) the Middle Back Panel above (#10) the Bottom Back Panel the same way. Place the groove of the (#9) Middle Back Panel onto the top edge of the (#10) Bottom Back Panel, use 18 pcs of (#41) Screw F to tighten.
- 3). Use 18 pcs of (#41) Screw F to install (#8) the Upper Back Panel the same way.

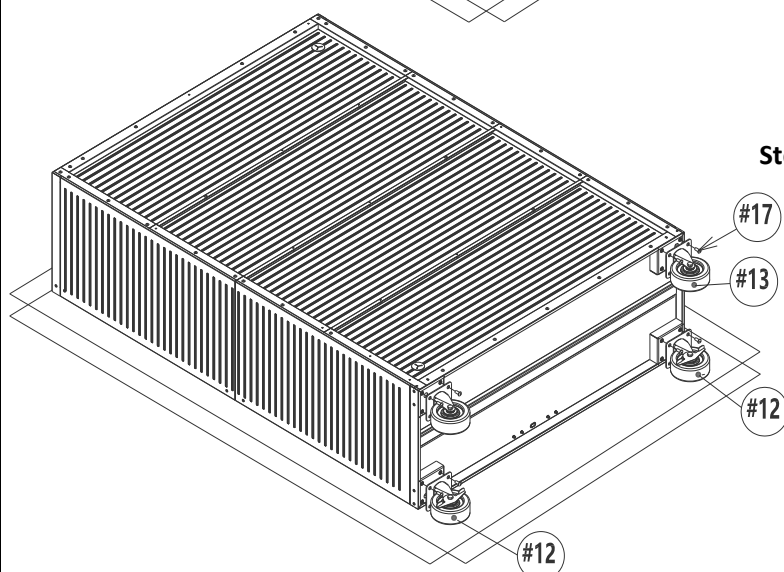


Step 9: Install (#12 & #13) Wheels.

Attach the Wheels (#12 and #13) to the Bottom Panel and surrounding frame.

Make sure the Wheels with Brake are installed at the front side.

Use 16 pcs of Screws D (#17) to tighten.

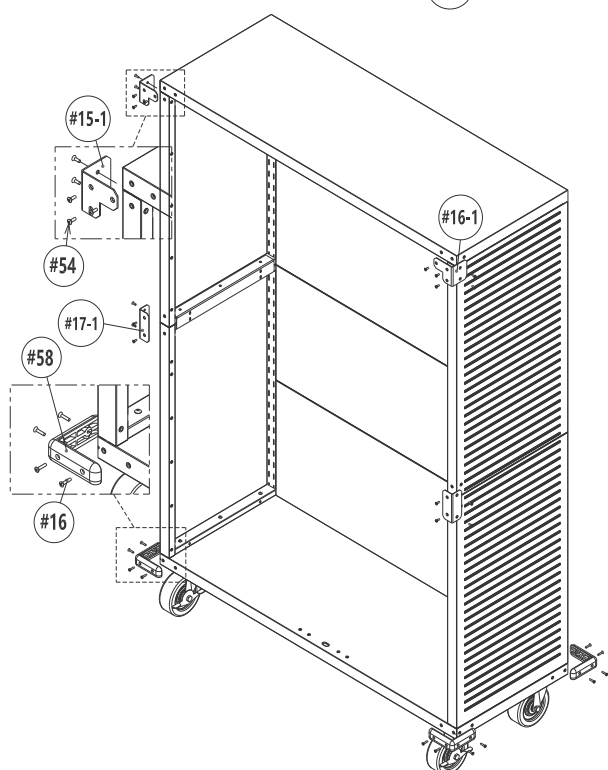


Step 10: Install (#15-1, #16-1 and #17-1,#58) Corner Protections.

- 1). Attach (#15-1, #16-1) Corner Protection A and B onto Top and Bottom of the cabinet, use 10 pcs of (#54) Screw N to tighten.
- 2). Attach (#17-1) the Middle Corner Protection to the middle of (#1-A) the Left Side Panel and (#2-A) Right Side Panel, use 8 pcs of (#54) Screw N to tighten.
- 3). Attach Bumpers (#58) to the bottom four corners of the cabinet. Use 16 pcs of screws C (#16) to tighten them.

UltraHD® Storage Cabinet (Model No. 16264B, 16267B, 16268B, 16269B)



*NOTE: We recommend using TWO people to assemble the cabinet

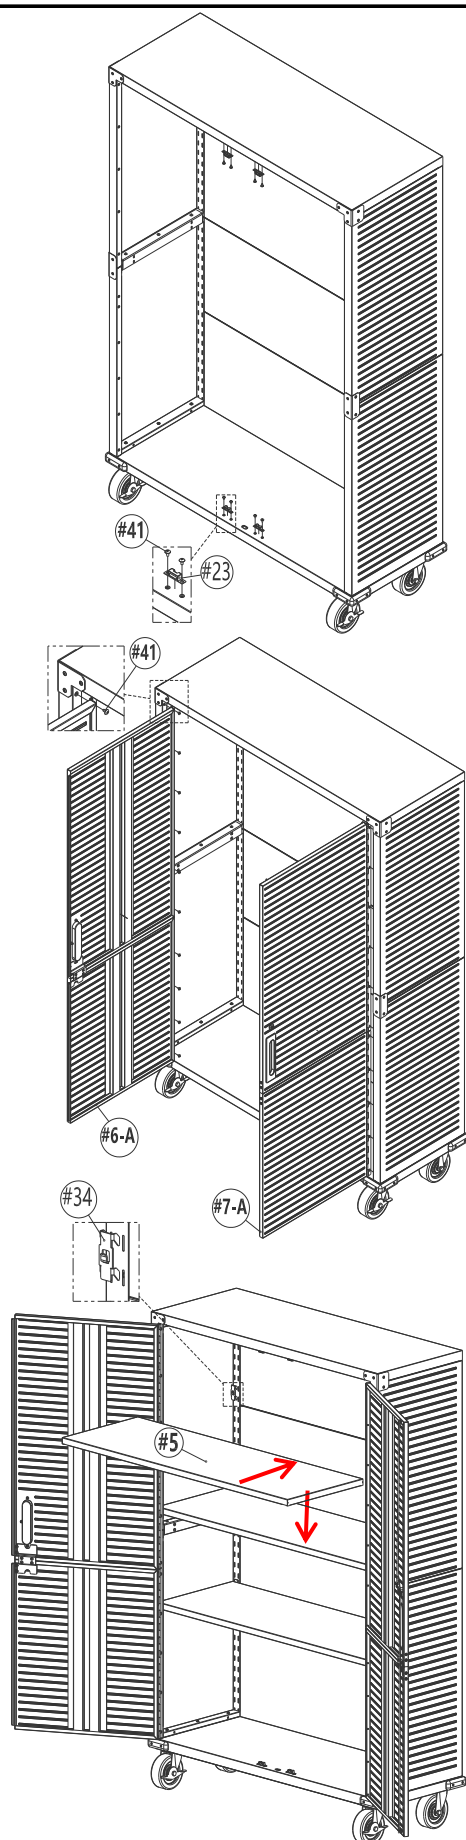

Step 11: Install (#23) Magnet.

Place (#23) Magnet onto (#3) Top Panel and (#4) Bottom Panel facing the front, use 8 pcs of (#41) Screw F to tighten.

Step 12: Install (#6-A, #7-A) Left and Right Doors.

1). Attach (#6-A) Left Door to (#1-A) Left Side Panel, use 11 pcs of (#41) Screw F to tighten.

Note: The screw holes on the door hinge have tolerance, enabling the door to be adjusted and centered in the door frame. Place top, middle and bottom Screws first. Don't tighten screws completely -- this may save time by making it easier to level door panels later.

2). Install (#7-A) Right Door the same way.

Note: The leveling feet may need to be adjusted after this step to help align door panels in the door frame.

Step 13: Install (#5) Middle Shelf.

1). Decide the height for each Middle Shelf (#5). Place 1 pc of (#34) Hook into the hook slot where each corner of shelf should be placed. Make sure the hooks supporting each shelf are at the same height.

Note: All (#5) Middle Shelves need a hook at each corner to support it.

2). Place each (#5) Middle Shelf into cabinet and push down onto (#34) Hooks.


Note: An additional Middle Shelf (#5) may be purchased separately at www.SevilleClassics.com. See below for compatibility list:

Storage Cabinet Model No. / Color	Compatible Middle Shelf (#5) Model No. / Color
UHD16264B (Granite)	UHD16264S (Granite)
UHD16267B (Graphite)	UHD16267S (Graphite)
UHD16268B (Red)	UHD16268S (Red)
UHD16269B (White)	UHD16269S (White)

UltraHD® Storage Cabinet (Model No. 16264B, 16267B, 16268B, 16269B)



*NOTE: We recommend using TWO people to assemble the cabinet.

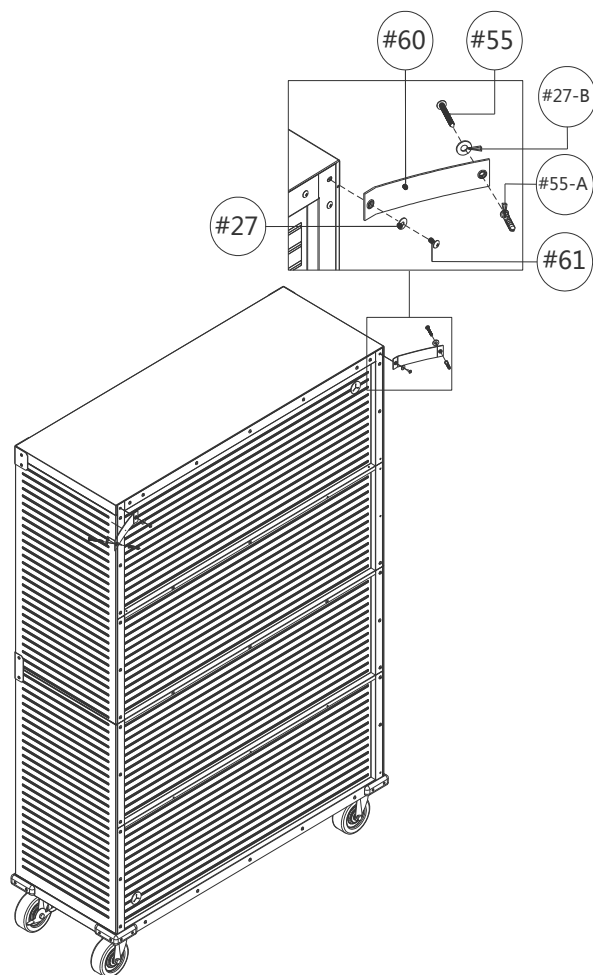

Step 14: Install Mounting Strap (#60)

A. Remove 1 pc of (#41) Screw F from the back corner protection.

B. Attach the Mounting Strap (#60) to the back Corner Protection brackets as the left illustration shows using Screw O (#61) and Washer (#27).

C. Drill a hole in the wall with a 5/16" drill bit, insert the Wall Anchor (#55-A) into the hole.

D. Attach the other end of the Mounting Strap (#60) to the wall using Screw M (#55) and Washer (#27-B).

Repeat steps A through D to install the other mounting strap.

Total Weight Capacity Evenly Distributed on 5" Dia. Wheels	Weight Capacity per Shelf Evenly Distributed on 5" Dia. Wheels
600 lbs. (272.2 kg)	150 lbs. (68 kg)

UltraHD® Stainless Steel Care Instructions

The stainless steel is protected with UltraGuard® fingerprint resistant finish.

DO NOT use traditional stainless-steel cleaners. To safely manage unwanted fingerprints and prevent new stains, perform the following steps once monthly:

- Lightly wipe with warm water and clean microfiber cloth
- Always wipe in the direction of the surface grain (NEVER ACROSS)
- Wipe away excess water with dry clean cloth

CONTACT INFORMATION


If you are missing any parts, have any questions, or need additional assistance in assembly, please contact our bilingual (English and Spanish) customer service department at:




Seville Classics, Inc.
19401 Harborage Way Torrance, CA 90501 USA
Telephone: (800) 323-5565 within USA
Fax: (310) 533-3899
Hours: 8:30am - 4:30pm (Pacific Standard Time)
E-mail: support@sevilleclassics.com
Website & Online Store: www.sevilleclassics.com

*****Please visit our website or call and inquire about our additional UltraHD® Line*****

UltraHD® Line

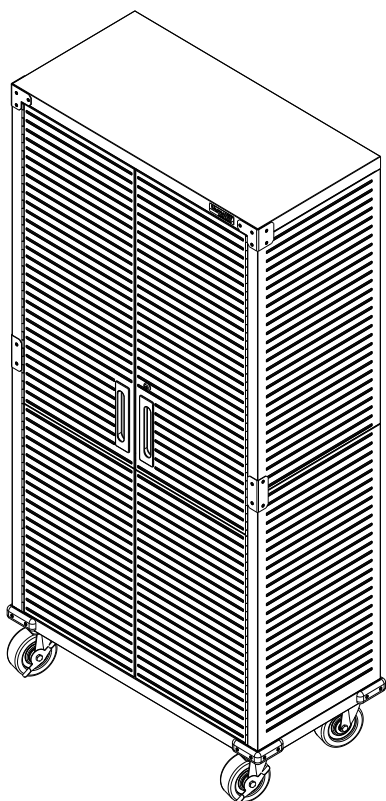


UltraHD® Tall Storage Cabinet
Model No. 16236 (Granite)
Model No. 20143 (Graphite)
Model No. 20153 (Red)
Model No. 20133 (White)

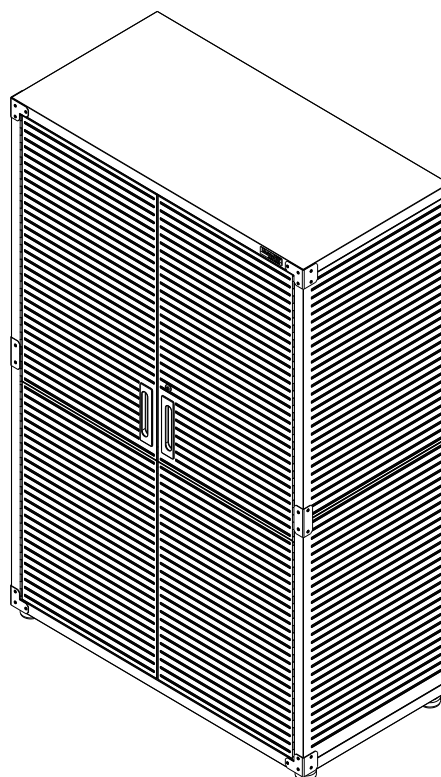

UltraHD® Mega Storage Cabinet
Model No. 16238 (Granite)
Model No. 20148 (Graphite)
Model No. 20158 (Red)
Model No. 20138 (White)

UltraHD® Line

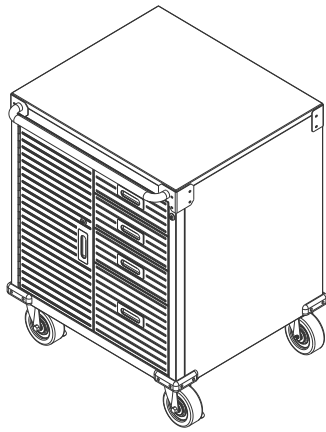


UltraHD® Rolling Cabinet

Model No. 20225 (Granite)

Model No. 20081 (Graphite)

Model No. 20082 (Red)


Model No. 20083 (White)

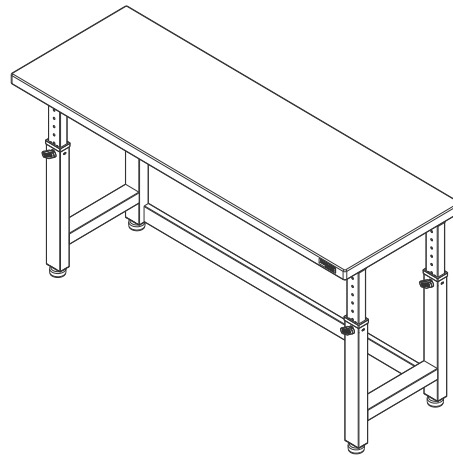

UltraHD® 6-Foot Height Adjustable Workbench

Model No. 20292 (Granite)

Model No. 20293 (Graphite)

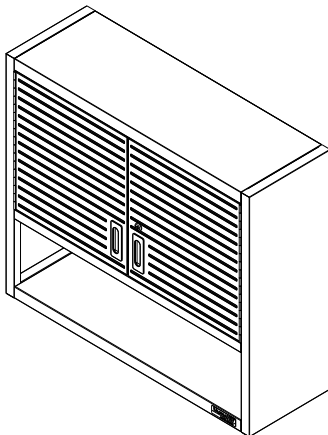


UltraHD® Wall Cabinet with Open Shelf

Model No. 20230 (Granite)

Model No. 20140 (Graphite)

Model No. 20150 (Red)

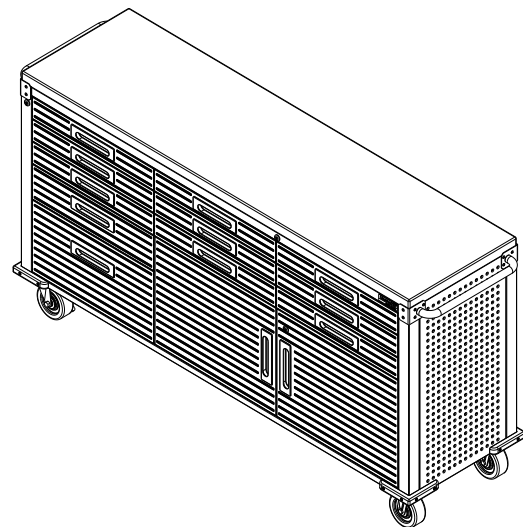


UltraHD® 2-Door Rolling Workbench

Model No. 20262 (Granite)


Model No. 20142 (Graphite)

Model No. 20152 (Red)

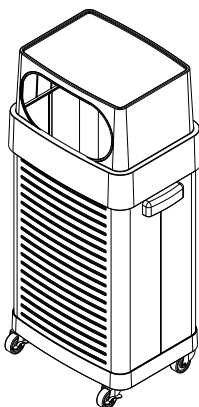

UltraHD® Rolling Trash Bin

Model No. 20215

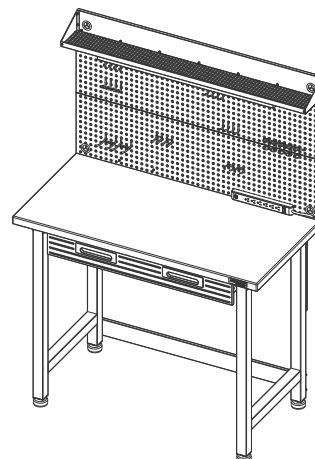

UltraHD® Lighted Workcenter

Model No. 20247 (Granite)

Model No. 20246 (Graphite)

Model No. 20157 (Red)