




# How to set up your Marmot Space Wing 2P

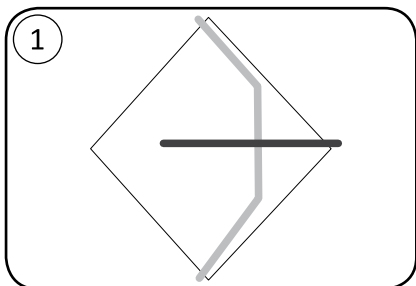


1  
CONNECT POLES LEAVING NO SPACE BETWEEN SECTIONS AND LAY OUT ON CANOPY.  
NOTE: CANOPY WILL NOT LAY FLAT DUE TO PERMANENT STRAP ON BOTTOM OF TENT

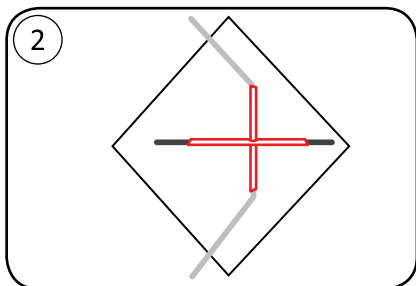


2  
INSERT BOTH POLES THROUGH POLE SLEEVES.  
NOTE: **DO NOT** MOVE TO #3 BEFORE COMPLETING #2

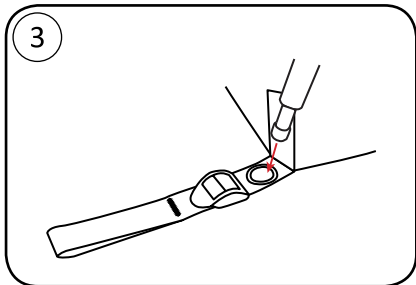


3  
INSERT POLE TIPS INTO CORNER GROMMETS.

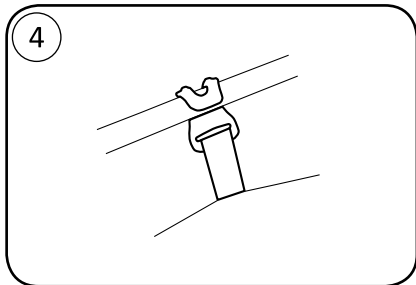


4  
CONNECT CLIPS. MATCH WEBBING COLOR TO POLE COLOR.

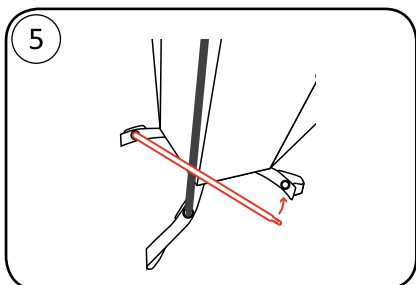

5  
INSERT LOOSE END OF PRE-ASSEMBLED RIDGE POLE INTO OPEN GROMMET.

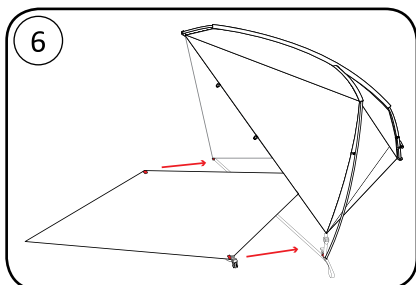


6  
LAY TENT FLOOR INSIDE TENT WITH RED TABS FACING UP.

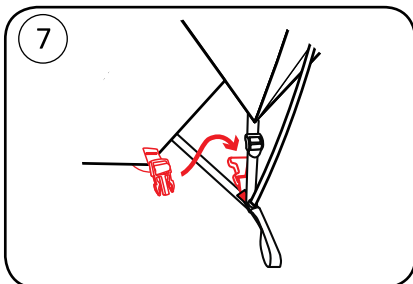


7  
CLIP FLOOR TO TENT.

FOR CLOSED TENT

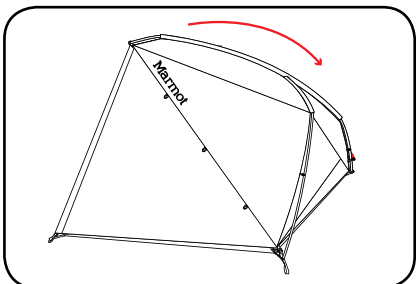


TIP TENT SO CORNER WITH RIDGE POLE IS DOWN.


FOR OPEN SHELTER

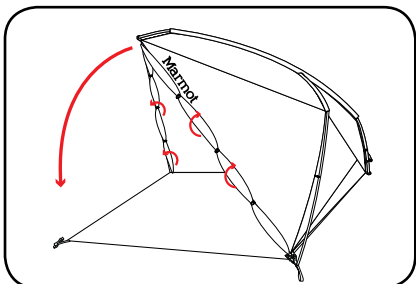

8  
ROLL UP VESTIBULE.  
TIP TENT SO CORNER WITH RIDGE POLE IS POINTED UP.

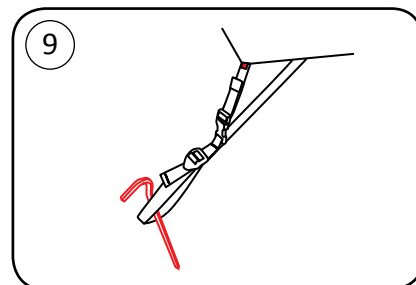

9  
STAKE OUT CORNERS AND VESTIBULES.

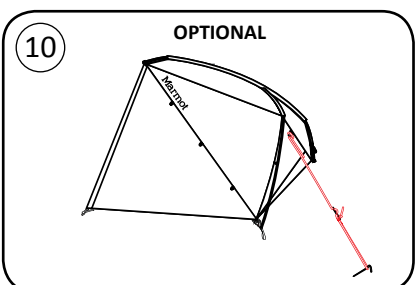

10  
OPTIONAL  
GUY OUT IN HIGH WIND.