



How to set up your Marmot Superalloy 2P Tent

1

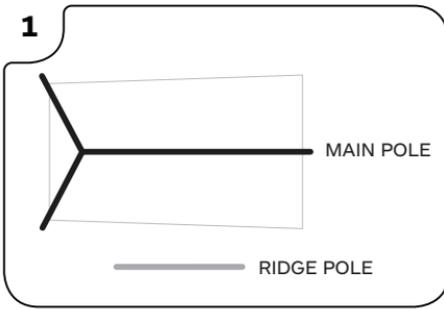


CONNECT POLES LEAVING NO SPACE BETWEEN SECTION AND LAY MAIN POLE ON TENT BODY

2

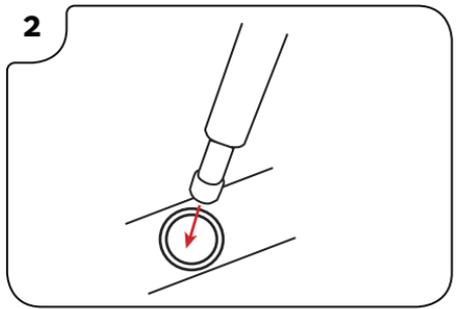


INSERT POLE TIPS INTO GROMMETS

3

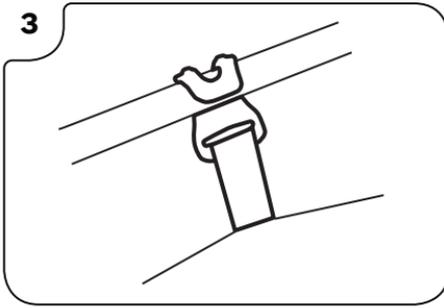


CONNECT CLIPS TO POLES

4

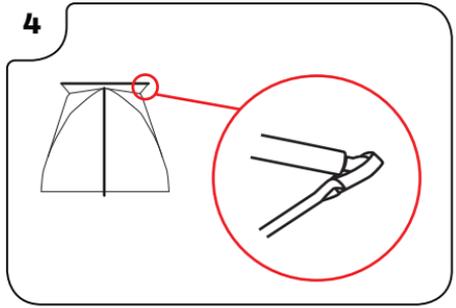


PLACE BROW POLE ON TOP OF MAIN POLES AND INSERT INTO PLASTIC CAPS

5

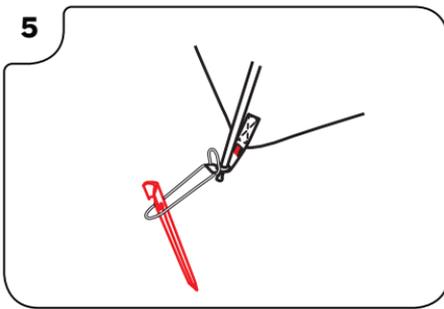


STAKE OUT CORNERS

6

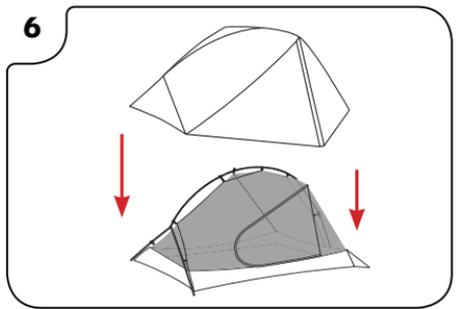


PULL RAINFLY OVER BODY

7

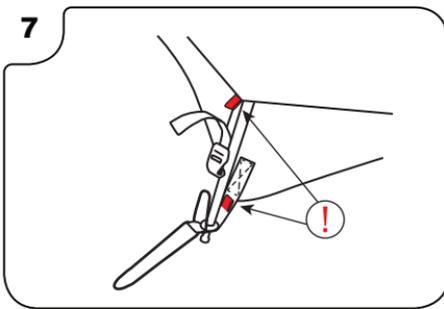


MATCH UP RED TABS ON FRONT CORNERS. HOOK BUCKLE AROUND CORD AND PULL TO TIGHTEN

8

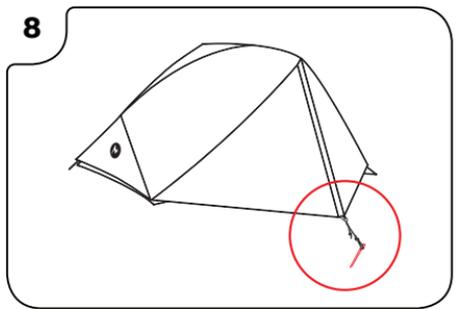


STAKE OUT VESTIBULES

OPTIONAL

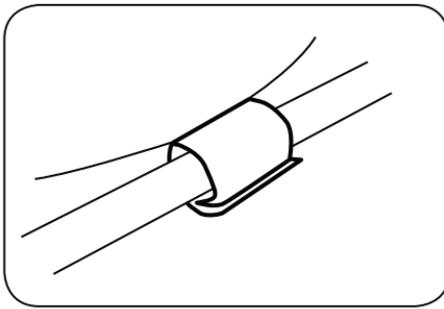

LOOK UNDER FLY - VELCRO FLY TO TENT POLES

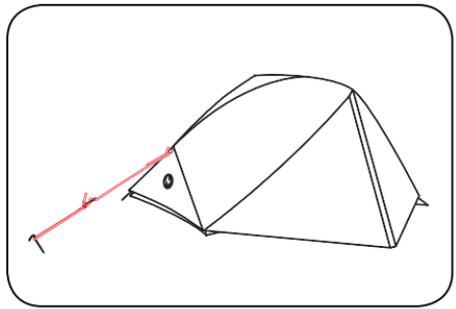

GUY OUT IN HIGH WIND

For additional information about your Marmot® tent please visit www.marmot.com