


How to set up your Marmot Tungsten 2P/3P

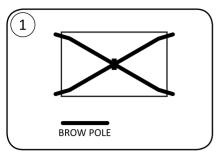


CONNECT POLES LEAVING NO SPACE BETWEEN SECTIONS AND LAY ON TENT BODY

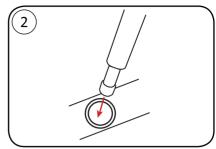

INSERT POLE TIPS INTO CORNER GROMMETS

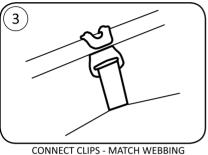

COLOR TO POLE COLOR

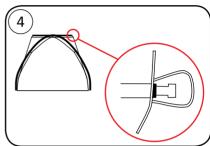


PLACE BROW POLE ON TOP OF "X" POLES AND INSERT INTO GROMMETS




PULL RAINFLY OVER BODY




NOTE RED TABS ON FRONT CORNERS CONNECT BUCKLES AND PULL TO TIGHTEN

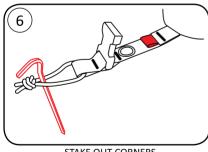

STAKE OUT CORNERS

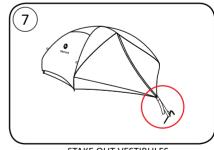

STAKE OUT VESTIBULES

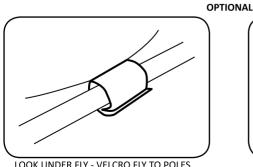

LOOK UNDER FLY - VELCRO FLY TO POLES



GUY OUT IN HIGH WIND