


How to set up your Marmot Tungsten UL 2P or 3P Tent

1

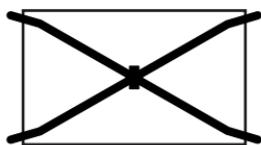

— BROW POLE


CONNECT POLES LEAVING NO SPACE BETWEEN SECTION AND LAY MAIN POLES ON TENT BODY

2




INSERT POLE TIPS INTO GROMMETS

3

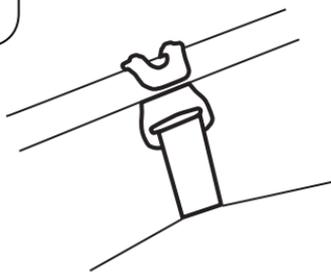


CONNECT CLIPS TO POLES
MATCH WEBBING COLOR TO POLE COLOR

4

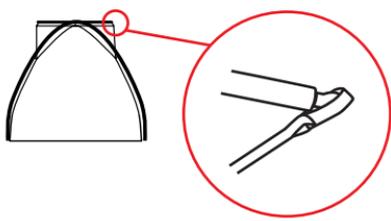


PLACE BROW POLE ON TOP OF MAIN POLES
AND INSERT INTO PLASTIC CAPS

5

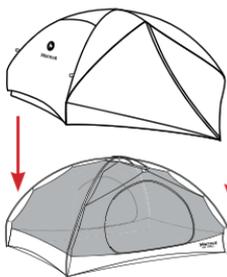


PULL RAINFOLY OVER TENT BODY

6

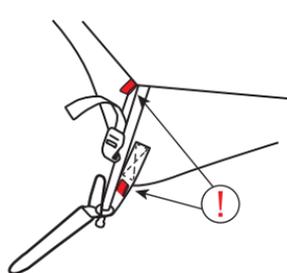


MATCH UP RED TABS ON FRONT CORNERS.
HOOK BUCKLE AROUND CORD AND PULL TO TIGHTEN

7

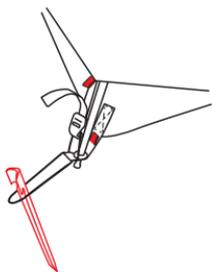


STAKE OUT CORNERS

8

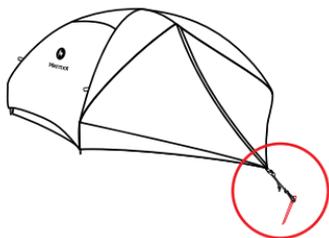


STAKE OUT VESTIBULES

OPTIONAL

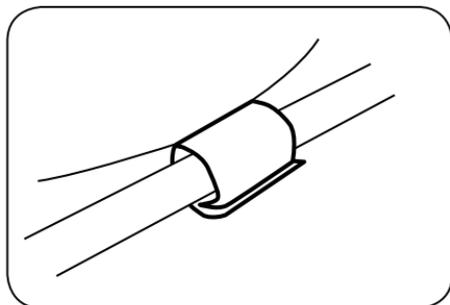

LOOK UNDER FLY - VELCRO FLY
TO TENT POLES

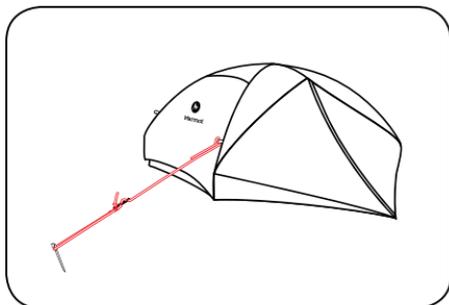

GUY OUT IN HIGH WIND

For additional information about your Marmot® tent
please visit www.marmot.com