

Description	Assembly Letter	Quantity	<b>Required Tools</b>
Left Floor	А	1	200
Left Side Panel	С	1	
Right Side Panel	D	1	
Left Back Panel	E	1	Safety Glasses
Right Door Panel	F	1	A
Right Back Panel	G	1	
Left Front Panel	Н	1	Rubber Mallet
Right Front Panel	J	1	Rubber Mallet
Left Door Panel	К	1	
Gable	M	2	- Opti
Left Roof Panel	N	1	Phillips Screw Driver
Right Roof Panel	Р	1	Fillings Screw Driver
Wall Connector	Q	4	
Ridge Beam	R	1	
Right Floor	U	1	SDAP
Lock Hasp	Х	1	Liquid Soap
#14 x 1.0" Combo Pan Head Screw	AA	24	
1/4-20 x 0.5" Combo Round Head Bo		2	
1/4-20 Flat Washer	CC	2	
1/4-Hex Nut	DD	2	
Roof Pin	EE	4	
			(2) Step Stools/Stepladders



## BIG MAX 7' x 3'6" RESIN **STORAGE BUILDING ASSEMBLY**

43<sup>3</sup>/8

## Pre-Assembly:

- Review the parts list and make sure that no parts are missing.
  Level the area where the shed will be located.
- · Areas of "fill dirt" should be tamped/compacted to prevent
- If a foundation is desired, it should be constructed before assembly.


## NOTE:


To simplify assembly and to ensure proper engagement of all components, apply a mild detergent to dovetail and snap fits before assembling.






Level construcion site before beginning assembly of shed. A foundation may be constructed if desired.

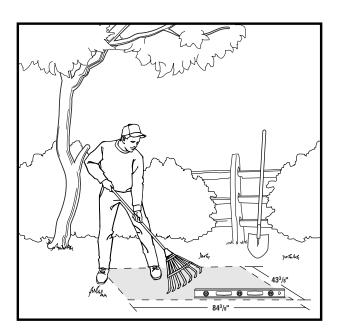


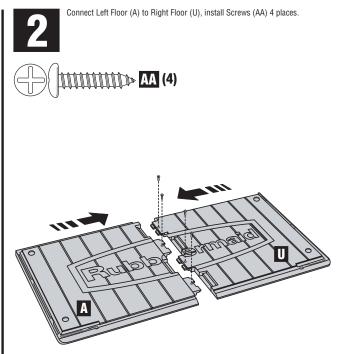





Using a srewdriver, punch out the screw holes on the top of Left Side Panel (C) 2 Places.

**OPTIONAL STEP:** If desired, recessed anchor locations (4 places) can be used to anchor the shed floor to a foundation.

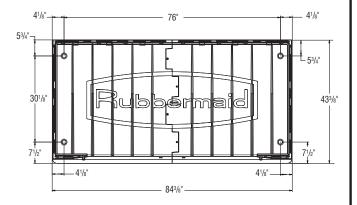


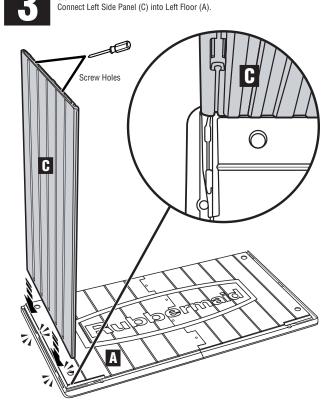

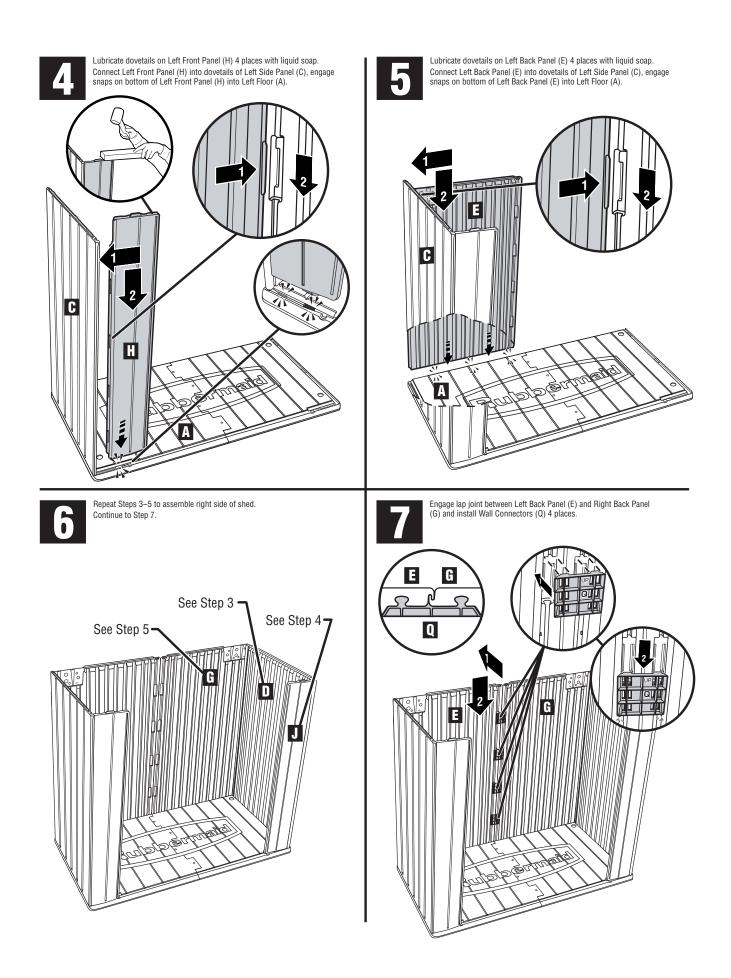



Install Gable (M) onto top of back wall engaging the 2 dovetails and snaps on the back panel and the dovetail on the side panel on both the left and right sides of the shed.

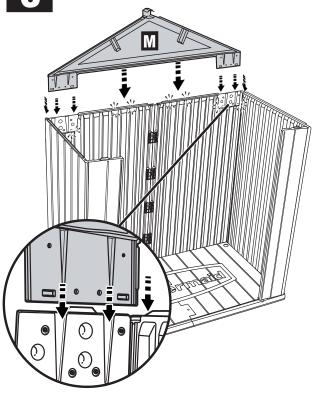




Install Left Door Panel (K) inserting the lower hinge pin into Left Floor (A) socket, lift the left end of the Gable (M) enough to insert the top hinge pin on Left Door Panel (K) into the Gable (M) socket.


**9** Instan


Install Gable (M) onto top of front wall engaging the 2 dovetails on the front panel and the dovetail on the side panel on both the left and right sides of the shed. **DO NOT ENGAGE THE SNAPS.** 

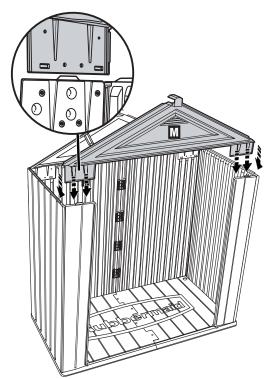






Install Right Door Panel (F) inserting the lower hinge pin into Right Floor (U) socket, lift the right end of the Gable (M) enough to insert the top hinge pin on Right Door Panel (F) into the Gable (M) socket. Install Lock Hasp (X) into back side of Right Door Panel (F). Engage Gable (M) snaps on front wall.

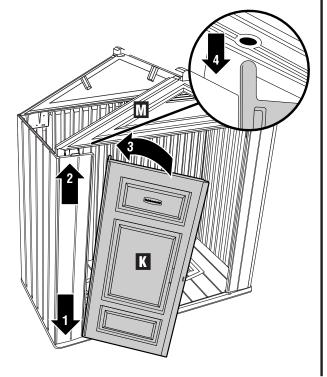


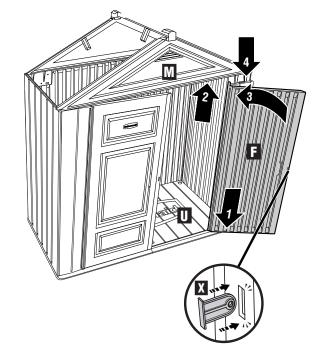


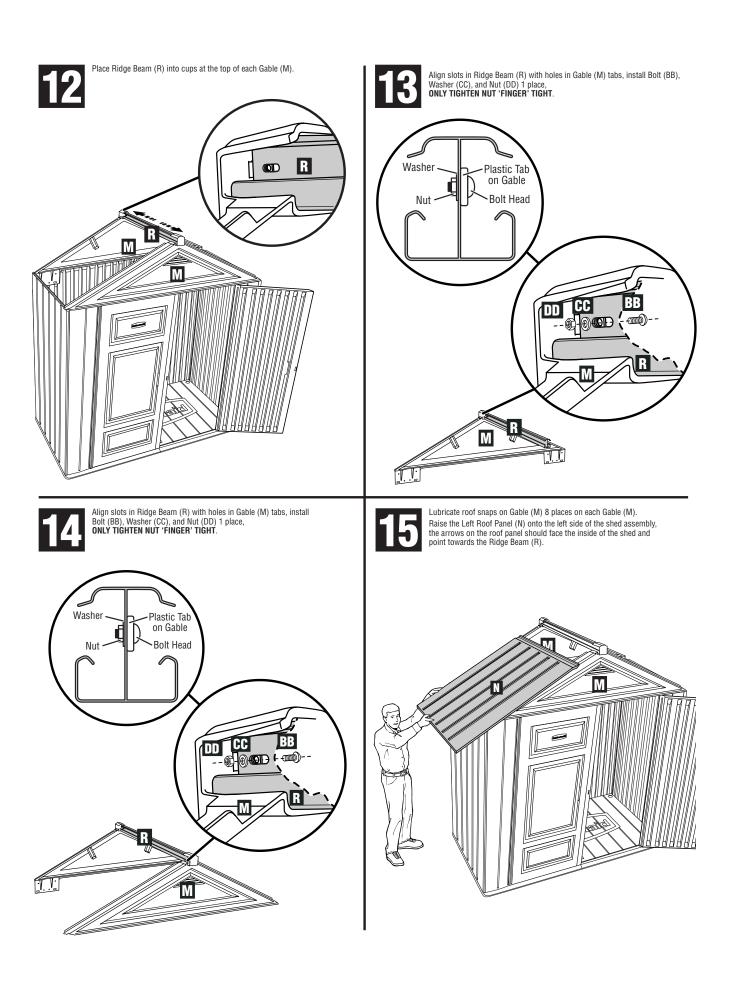

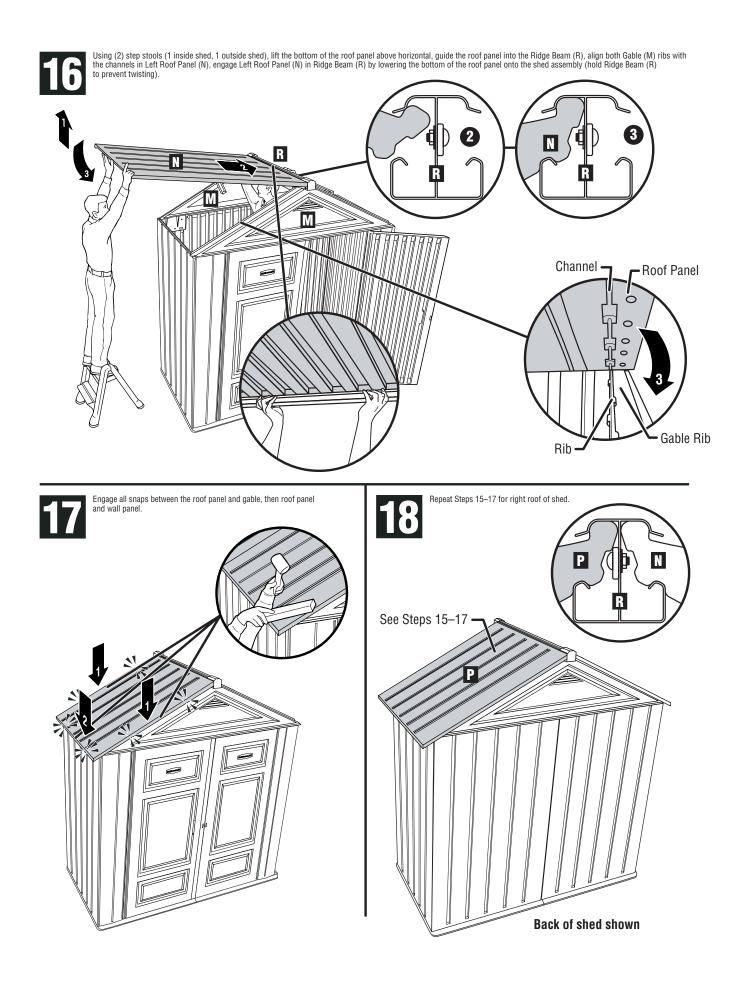

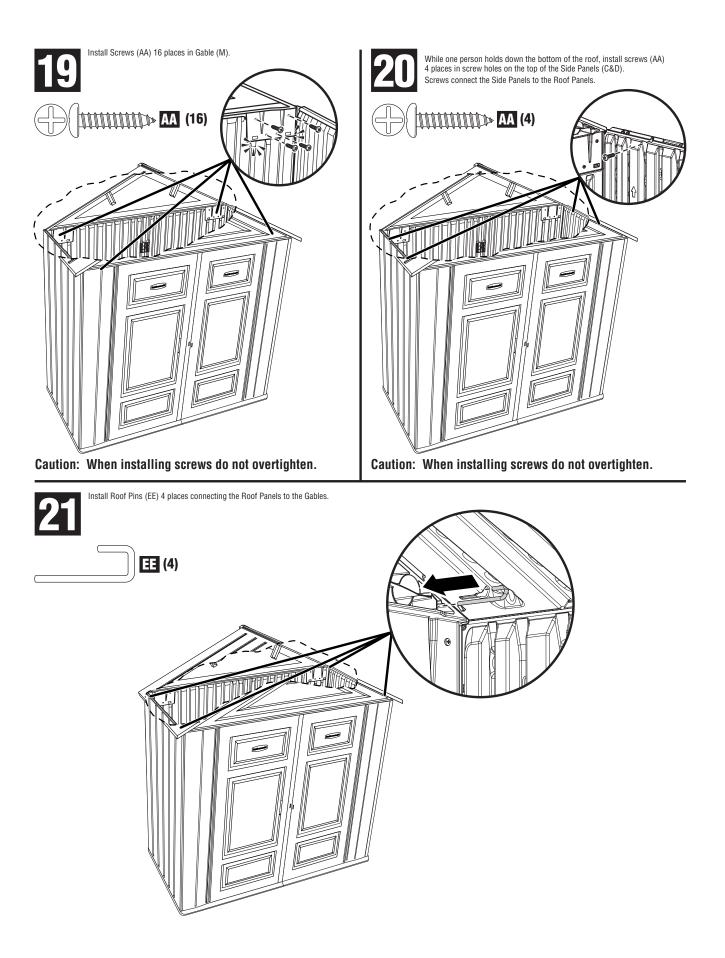

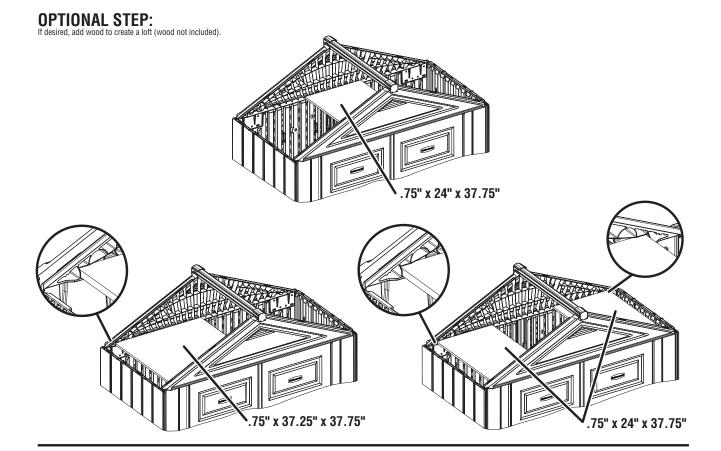

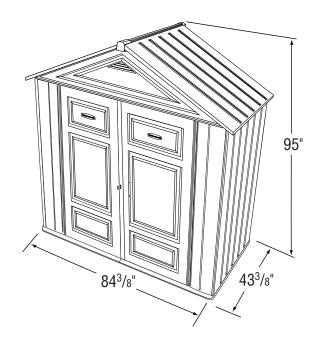



Printed in U.S.A. Imprimé aux Ètats-Unis. Impreso en los EE.UU. © 2003 Rubbermaid Home Products, Wooster, OH, U.S.A. 44691-6000 A **Newell**Rubbermaid Company

Customer Service Toll Free: 1-888-895-2110 M–F 8AM to 5PM EST or visit us at www.rubbermaid.com

02-2298-0S