

# 3-6ft Deluxe Closet Kit



3H88

## configurations™

by **Rubbermaid**

Rubbermaid Home Products, Fairlawn, Ohio 44333-3306 • 1-888-895-2110  
www.rubbermaidcloset.com A **Newell Rubbermaid** Company

### Tools Needed for Installation

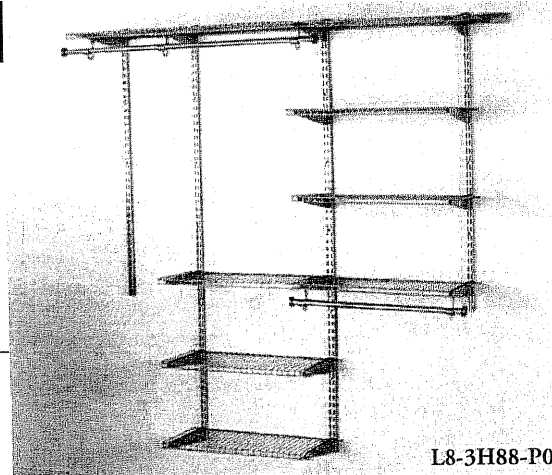

L8-3H88-P0


Please read through the instructions completely and check that you have all parts before beginning. Depending on the configuration you choose to install, you may not use all the components.

Description	Part Number	Quantity	
36.25" Shelf (labeled A)	3G61	1	
36.25" Shelf (labeled B)	3J61	1	
26.25" Shelves (labeled A)	3G60	3	
26.25" Shelves (labeled B)	3J60	3	
47.5" Uprights	3G64	4	
25" Uprights	3G65	2	
Brackets	3G63	16	
36" Hang Rails	3G66	2	
22" Rail Covers	3J57	3	
Rod Hangers	3G68	8	
36" Inner Clothes Rod	3G74	1	
36" Outer Clothes Rod	3G75	1	
26" Inner Clothes Rod	3G72	1	
26" Outer Clothes Rod	3G73	1	


The following parts are packed together in a hardware bag:

Clothes Rod End Caps	3G71	6	
Screws	1603168	15	
Anchors	3J65	10	
Anchor Key	3J66	1	
Upright Clips	1070770	2	
6" Rail Covers	3J56	2	


# 1 Mount Extendable Hang Rails

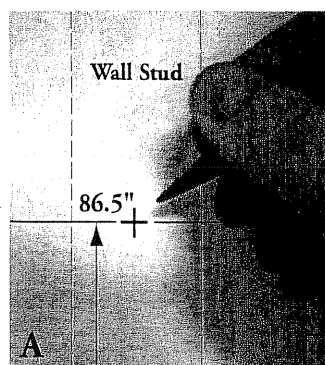

On closet wall locate all wall studs and mark them 86.5" above the floor.

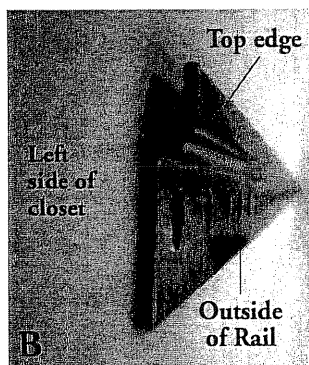

Position first Hang Rail so that the rail is touching the left side of your closet.

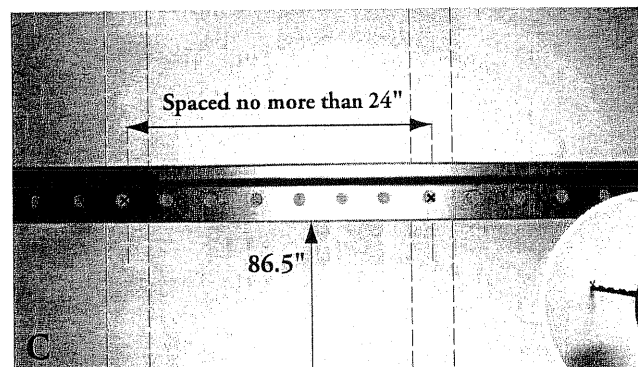


Level Hang Rail and mark holes 86.5" above floor that land on studs, then drill 1/8" pilot holes for screws.

If there is a wall stud within 4" of the LEFT end of the Hang Rail, proceed to step D.


## Wall Anchor Installation

(If there is not a wall stud within 4" of the LEFT end of the Hang Rail.)


Anchors for concrete, plaster or steel wall installation must be purchased separately.

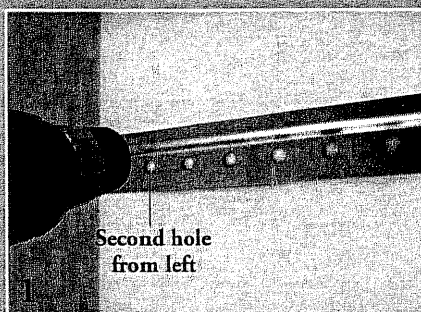


Mark and drill a 3/8" hole (for a Wall Anchor) in the second Hang Rail hole from the left.

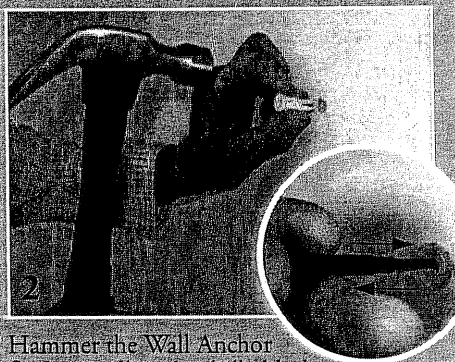


Hammer the Wall Anchor flush to wall in the drilled hole. Insert Anchor Key to engage Anchor.

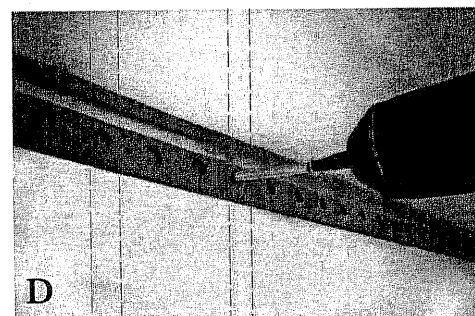

Starting at left side, fasten the FIRST TWO screws into studs (or anchors). Do not fasten remaining screws until after next step. **Note: Screws need to be fastened through Rail into EACH wall stud spaced no more than 24" apart.**

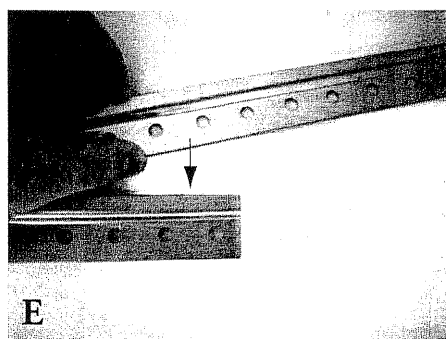


Slide second Hang Rail down behind the first from above.

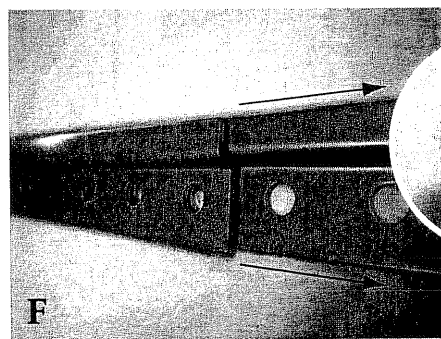


Slide second Hang Rail to the right wall of the closet, and then back it away from the right wall until the holes in the two Rails line up. Repeat Step C to secure to the wall.

If there is **not** a stud within 4" of the RIGHT end of the Hang Rail, repeat the **Wall Anchor Installation** step above.

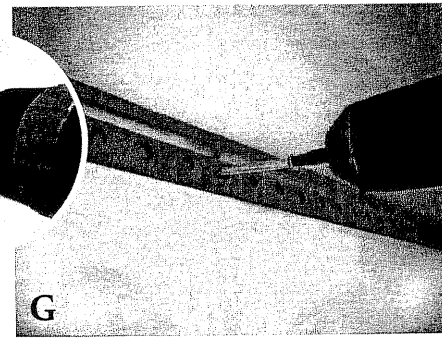


Install screws into studs (or anchors) along Rails.

## 2 Hang Uprights

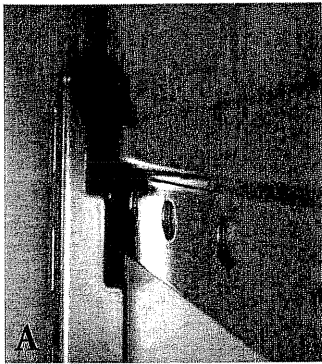


Hang first two 47.5" Uprights over the Hang Rail.

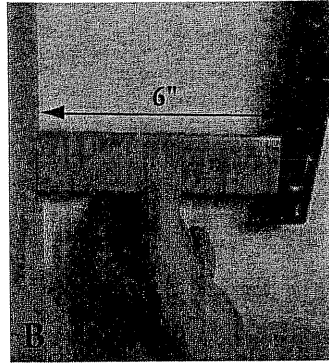

Position BOTH outside Uprights 6" from the right and left corners by using the 6" Rail Cover for spacing.



Mark bottom hole of Upright. Drill 1/8" pilot hole into stud. (Use Wall Anchor and 3/8" bit if there is no stud.)

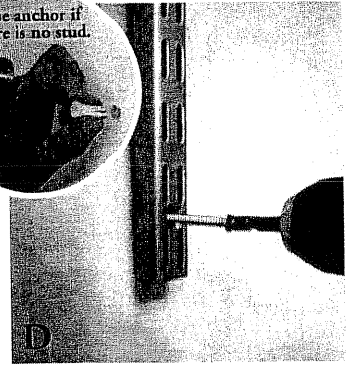


Fasten screw into stud or Wall Anchor. **No screws are needed in top holes of Uprights.**


**Helpful hint:** If the left side of closet is more accessible, space the remaining Uprights from left to right. If the right side of the closet is more accessible, space the remaining Uprights from right to left.



Clip 6" Rail Cover over Hang Rail.

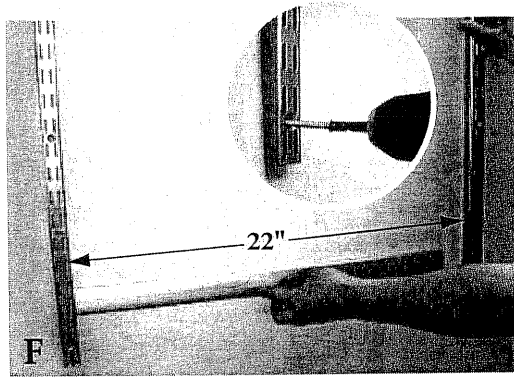


Hang another 47.5" Upright on the Rail and use one of the 22" Rail Covers to space over 22". Drill 1/8" pilot hole and fasten screws in bottom hole. (Use Wall Anchor and 3/8" bit if there is no stud.) Place 22" Rail Cover over Rail between Uprights. Repeat Step F for one or two more Uprights (if space allows).

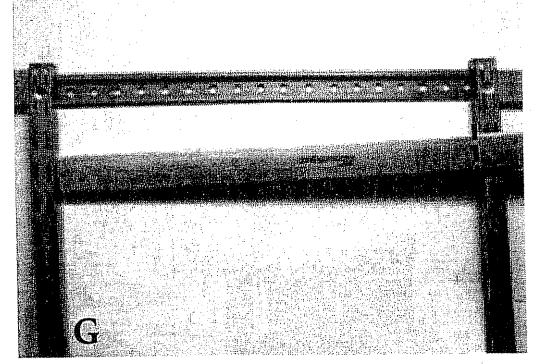


If the space between the last Uprights is less than 22", you may choose to cut Rail Cover with scissors to fit.

## 3 Install Upright Extensions


**Note:** Install these in the area of the closet where you would be most likely to install accessories (sold separately) or shelving closer to the floor.

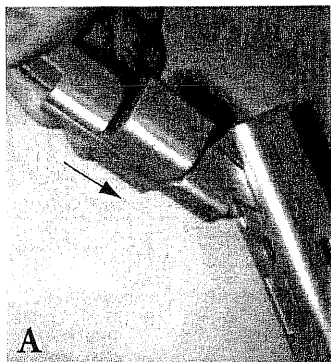


Slide one end of Upright connector into top two notches of short Upright.

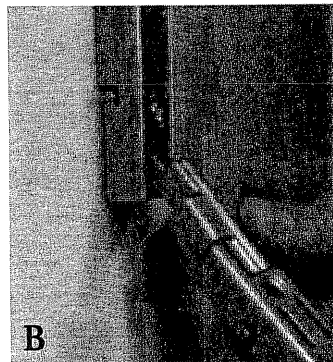


Slide other end of the Upright connector into the bottom two notches of the long Upright. Use a level to position the short Upright and mark the position of the top & bottom screw holes.

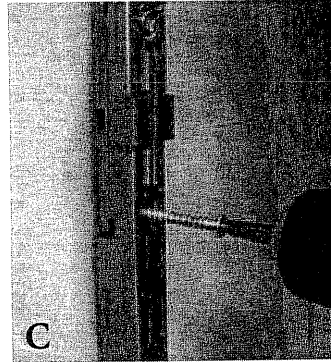


Drill 1/8" pilot hole and fasten both screws (Use Wall Anchor and 3/8" bit if there is not stud). To position the second Upright Extension, use 22" Rail Cover to ensure proper spacing from the first Upright Extension.

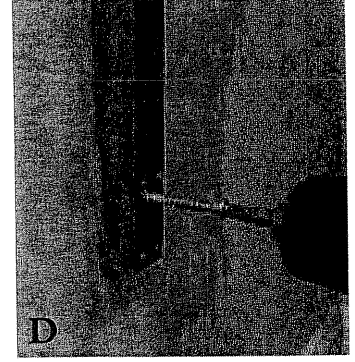


## 4 Install Brackets & Adjustable Shelves

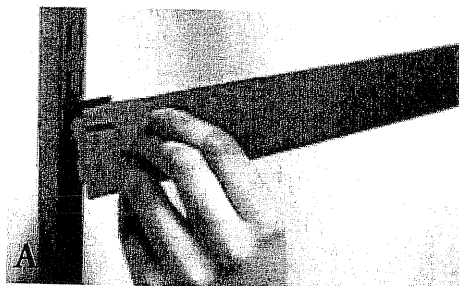

Insert Brackets into Uprights at desired locations. **Note: Install Brackets and shelving at the top first and work down. Brackets will not fit into upper slot of each Upright.**

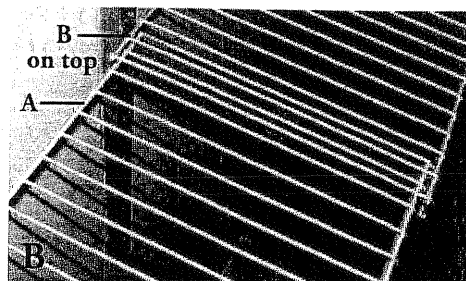


Shelves are fully adjustable and require no cutting. To adjust width, overlap the shelves making sure the shelf labeled A is placed first on the Brackets and the shelf labeled B is placed ON TOP of A.

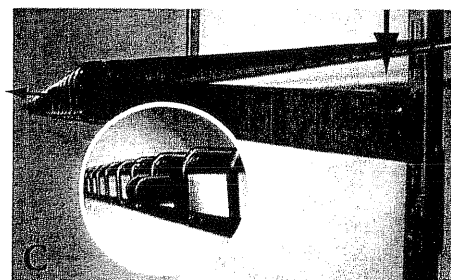


Make sure the Bracket locks are unlocked and install shelving making sure that the "nose" of the Bracket is projecting out through the front edge of the shelf.

**Note: For maximum weight capacity, do not insert Bracket into bottom slots of Upright.**


**IMPORTANT:** Regardless of overall Shelf length, when overlapping sections of shelving, shelves labeled "A" must be placed onto brackets before shelves labeled "B".

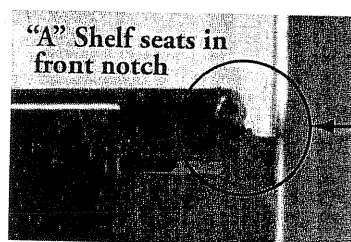

"A" Shelf seats in front notch

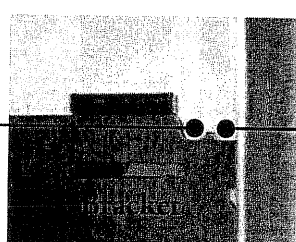

"B" Shelf seats in back notch

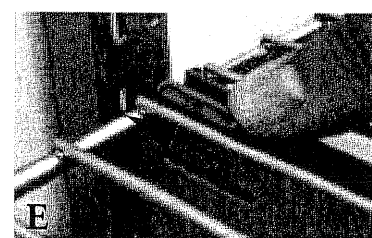


After all shelves are positioned properly, lock Shelves into Brackets by sliding the plastic locking clip towards the back wall. It will "SNAP" into locked position.

Shelf labeled "A" sits in front notch of Bracket. Shelf labeled "B" sits in back notch. Be sure each shelf slides back as far as possible before locking shelves into Brackets.


**! WARNING!** If shelves are installed in the incorrect notch, the front of the shelves may fall off the Bracket.

If overlapping 3 sections of shelving, use two A sections and one B section, placing A sections on the outside and gapping the bridge with the B section. For 4 or more overlapping sections, continue alternating between A and B sections, placing A shelves on brackets before B shelves.

## 5 Install Adjustable Clothes Rods

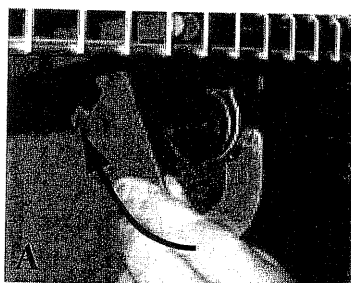

Install Rod Hanger into bottom of Bracket by tilting it backward until it locks in place.

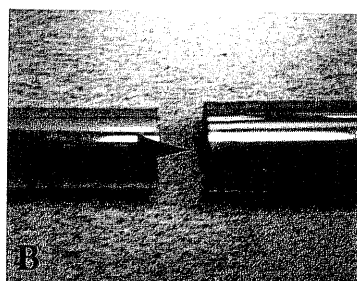


36" Rods can be used separately or telescoped together up to 6 ft. 26" Rods can be used separately or telescoped together up to 4 ft.


End Cap fit on Outer Clothes Rod



End Cap fit on Inner Clothes Rod

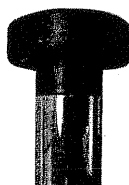

Place End Caps on the end of each Clothes Rod. End Caps will fit either diameter of Rod (as shown above).

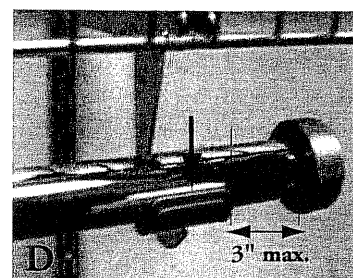

After expanding Clothes Rod to desired length, place into Rod Hangers and press down to snap into place. **Note: Do not extend more than 3" past Rod Hangers.**

### Fully Adjustable System

- Shelves and Clothes Rods can be adjusted or reconfigured anywhere on this system to meet your storage needs.
- Additional configurations can be created by overlapping shorter shelves to create longer shelves. (Example: overlapping three 2' shelves creates a 6' shelf)
- Change your closet design seasonally to better accommodate summer or winter clothing.

### Configurations™ Accessories

The following accessories are sold separately:

- Adjustable Shoe Shelves
- Shoe Rods
- Sliding Basket
- Sliding Pants Rack
- Tie and Belt Organizer