


configurations

by **Rubbermaid**

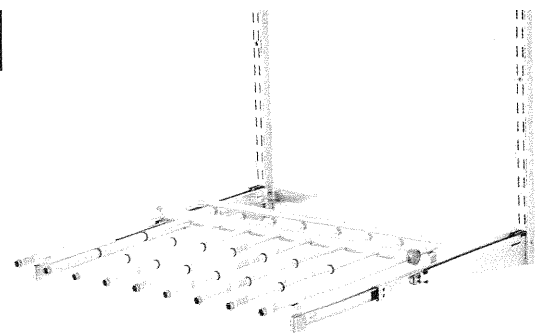

Rubbermaid Home Products, Fairlawn, Ohio 44333-3306 • 1-888-895-2110
 www.rubbermaidcloset.com A *NewellRubbermaid* Company


Tool Needed for Installation




L8-3J06-P1

Description	Part Number	Quantity	
Frame	10606130	1	
12" Bracket	3G63	2	
#8 x .3125" Phillips Screw	-	2	
Washer	-	2	
Plastic Lock	1060682	2	


Installation Steps

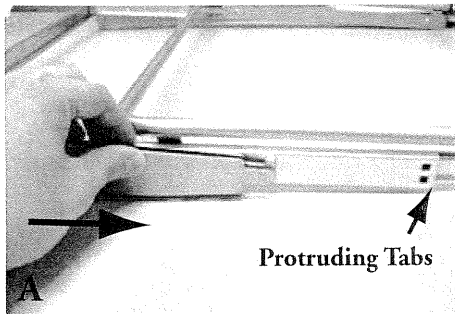

Install Brackets onto the left and right side of Frame (as pictured above). Slide the nose of the Bracket into protruding tabs on Frame.

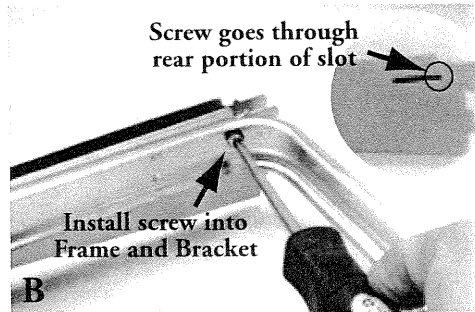


Place washer onto screw and install screw through Frame and into Bracket. **Do not fully tighten screw.** Repeat for opposite side. Note: Screws should insert through rear portion of Bracket slot.

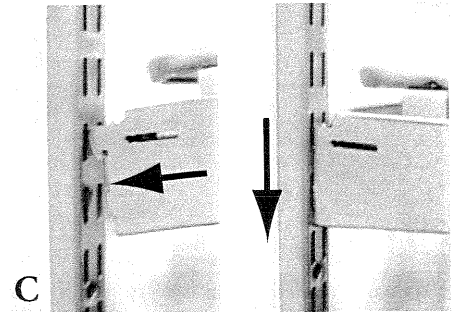


Angle Brackets into Upright slots and push down on both Brackets to lock into place. **Securely tighten screws from Step B.** Note: If Brackets do not line up with slots in the Uprights, loosen screw(s) on Uprights before installing. Once installed, retighten screw(s) in Uprights.


Optional: Adding a Shelf beside the Sliding Pants Rack

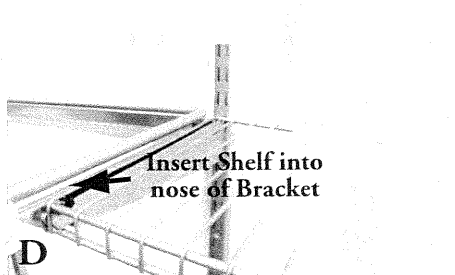

Insert Shelf into the nose of the Bracket and lower Shelf onto backside of Bracket.

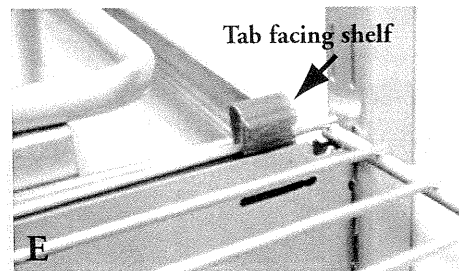

Insert Plastic Lock into Bracket and over Shelf making sure the tab is facing Shelf.

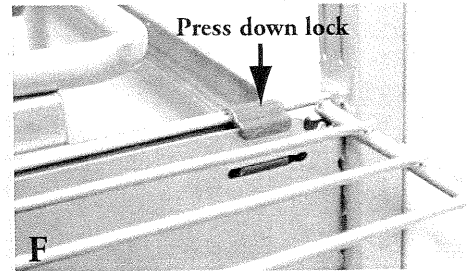

Press Plastic Lock down into the Bracket to lock the Shelf in place.