

Rubbermaid®



FastTrack®

5M14 – Sliding Shelf Base Cabinet Assembly Steps

L8-5M14-P0

Rubbermaid Incorporated,
Huntersville, NC USA 28078-1801
U.S.A. 1-888-895-2110
Canada 1-866-595-0525
www.rubbermaid.com

A **Newell Rubbermaid** Company

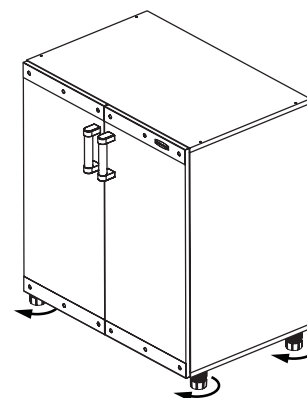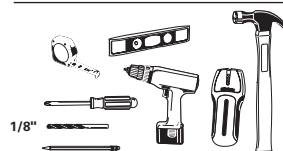


Pieces		Qty	Pieces		Qty
Right/Left Vertical Panel (3814713)		2	Set of 16" Roller Glides and Shelf Sides (1618208)		2
Top/Bottom Panel (3814705)		2	Shelf Front Clips		2
Backer Board (2901884)		1	Plastic Glide Spacers, 1.25" (1812272)		8
Left Door (3814739)		1	Handles with Screws, #8 x 1-1/4", Phillips (NP5M2100)		2
Right Door (3814721)		1			4
Hinge Plates (1608770)		4	Euro Screws, 6mm x 10mm (1602392)		36
Hinges (NP5M2200)		4	Confirmat Screws, 5mm x 40mm (1602376)		8
Slide Out Shelf Back (3814549)		2	Nails (1608217)		22
Slide Out Shelf Front (3814557)		2	Hinge Plate Screws, #6 x 5/8" (1602160)		8
Slide Out Shelf Bottom (3814531)		2	Pan Head Screws, #8 x 1/2", Phillips (1604281)		12
Metal Plates (NP5M2400)		4	Feet with Screws, #8 x 5/8", Phillips, Flat Head (NP5M2300)		4
Metal Plate Fasteners with Screws (NP5M2500)		12			12
Upright Bracket (L/R) (NP5M2000)		2	Door Pads (1811399)		4
Plastic Screw Covers (1812256)		4			

STEP 1

Parts Required


- Left Vertical Panel (1)
- Right Vertical Panel (1)
- Hinge Plates (4)
- Euro Screws (8)

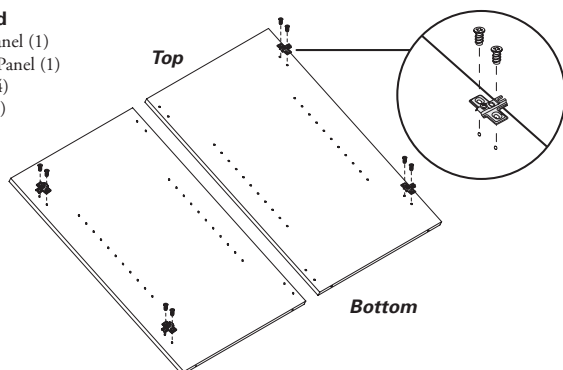

STEP 2

Parts Required


- Glide Spacers (8)
- Euro Screws (16)

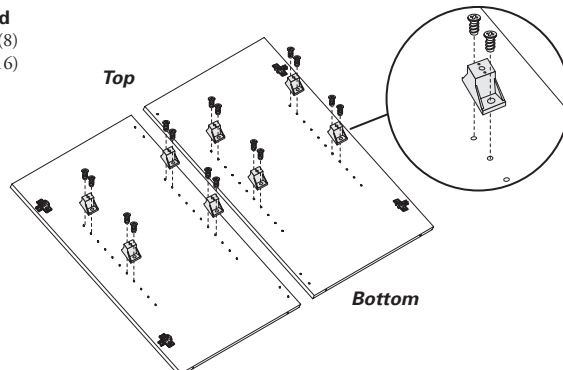

STEP 3

Parts Required


- 16" Roller Glides (4)
- Euro Screws (8)

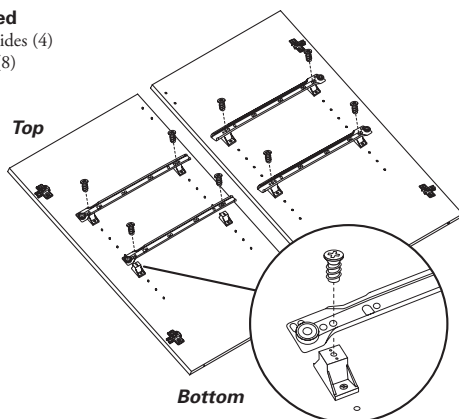

STEP 4

Parts Required

- Top Panel (1)
- Confirmat Screws (4)
- Screw Covers (4)

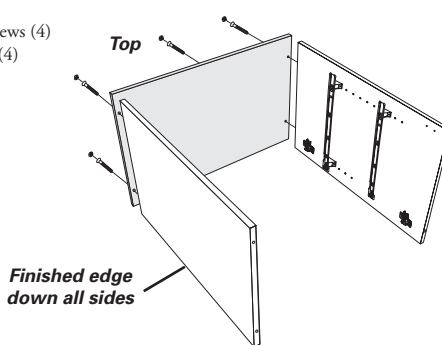


Choose Your Installation Method, Upright Mount or Floor Mount

STEP 5A

Upright Mount Instructions

Parts Required

- Bottom Panel (1)
- Confirmat Screws (4)

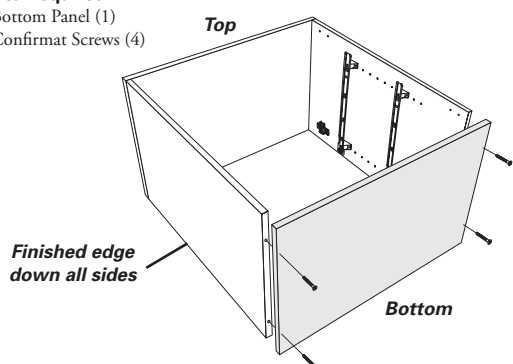


STEP 5B

Floor Mount Instructions

Parts Required

- Foot (4)
- Foot Screws (12)
- Bottom Panel (1)
- Confirmat Screws (4)

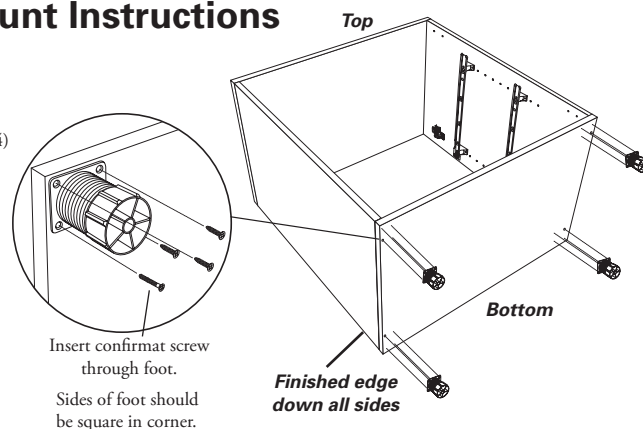


STEP 6

Use the upright brackets for upright mounting only.

Parts Required


- Upright Brackets (2)
- Pan Head Screws (4)
- Euro Screws (4)

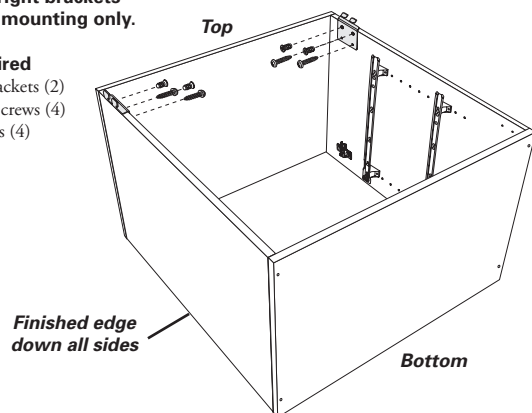

STEP 7


Parts Required

- Backer Board (1)
- Nails (22)

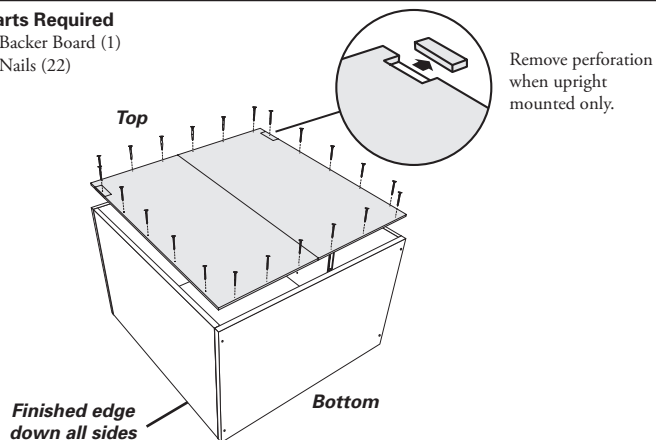

STEP 13

Insert shelves into cabinet.

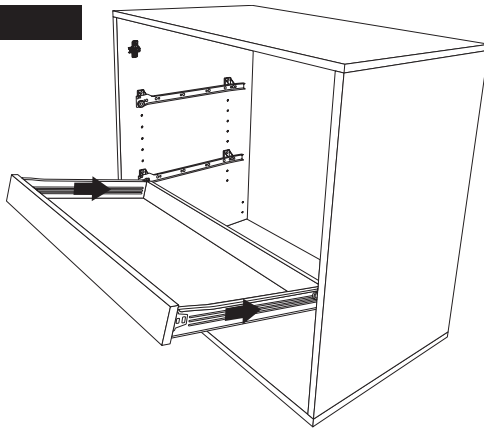

STEP 14


Door Assembly Instructions

Parts Required

- Hinges (4)

Install hinges to hinge plates. Repeat for other side.


Center hinge plate screw in hinge slot.

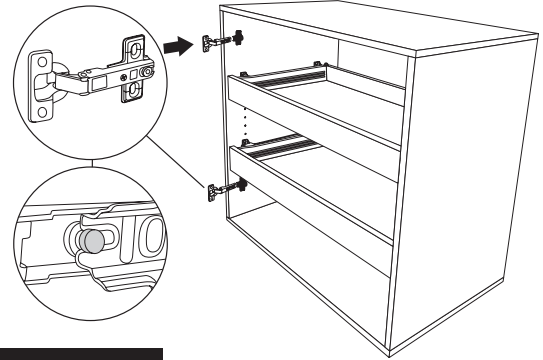

STEP 15

Parts Required


- Doors (2)
- Metal Plates (4)
- Metal Plate Fasteners with Screws (12)

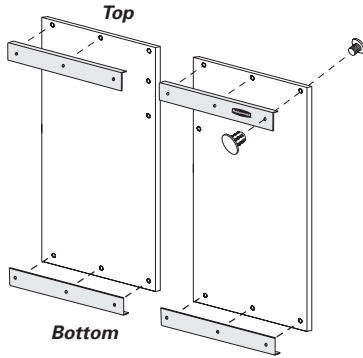

STEP 16

Parts Required

- Handles (2)
- Handle Screws (4)

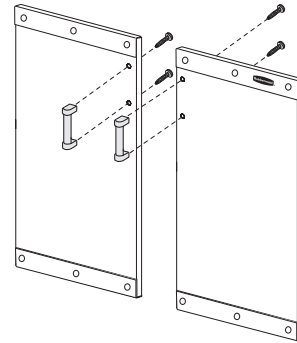


STEP 17


Parts Required

- Hinge Plate Screws (8)
- Door Pads (4)

Assemble doors to the cabinet.

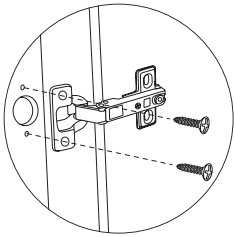

Adhere door pads to top and bottom corners of doors.

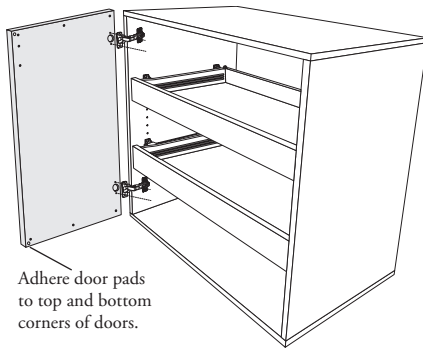


STEP 18

Floor Mounting Adjusting Feet

Place cabinet in desired location against wall. Level cabinet using adjustable feet.


Raise Front (turn right)

Raise Side (turn right)

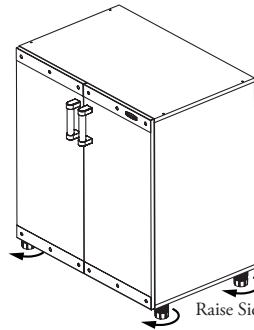


STEP 19

Ensure cabinet is square prior to adjusting hinges.

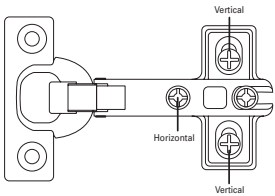


HORIZONTAL ADJUSTMENT





Adjusts gap size between doors.

VERTICAL ADJUSTMENT



For doors not flush at top or bottom.

Load Capacity

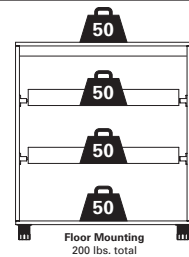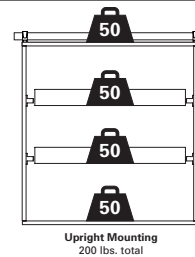

Upright Mounting
200 lbs. total

Floor Mounting
200 lbs. total

Base top of cabinet Base top of cabinet

5M17 WorkTop Installation

Intended for use with two FastTrack® base cabinets

1

- Remove shelves from inside of cabinets.
- Use 1/8" drill bit. Drill through cabinet tops four times equally spaced. Refer to Figure 1

2

- Align worktop over two base cabinets.
- Screw (4) #8 - 1" wood screws into the holes. (NOT INCLUDED)

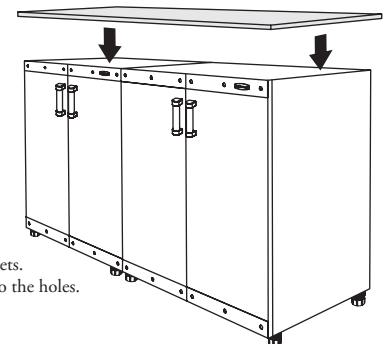


Figure 1


Measurements

Rail mounting requires a minimum height of 39.25" for base cabinets. Center to center measurement between rails is 30-3/16". Attach rail to wall per instructions provided with rail. (Dimensions to top of rail).

Important:

One upright must be attached to stud.


If two cabinets share an upright it must be attached to stud.

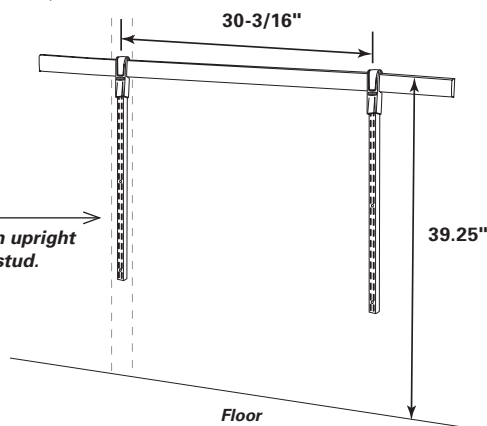

HAZARD: If upright is not attached to stud, the load claim is null and void.

STEP 8

Upright Mounting Instructions

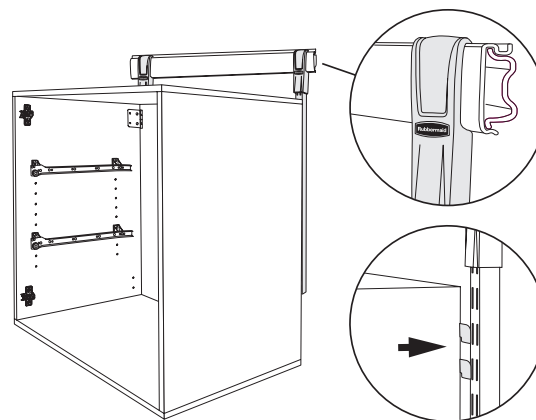

Top hook should be inserted in the 2nd open notch from the gripper on the inside row of notches.


HAZARD: Use two or more people to install cabinet. Failure to do so can result in back or other injury.

STEP 9

Sliding Shelf Assembly Instructions

Parts Required


- Shelf Sides (2)
- Slide Out Shelf Back (1)
- Pan Head Screws (2)

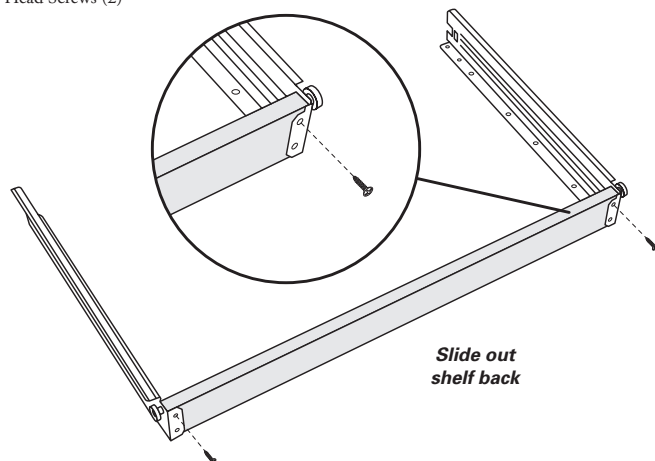

STEP 10

Parts Required


- Slide Out Shelf Bottom (1)
- Pan Head Screws (2)

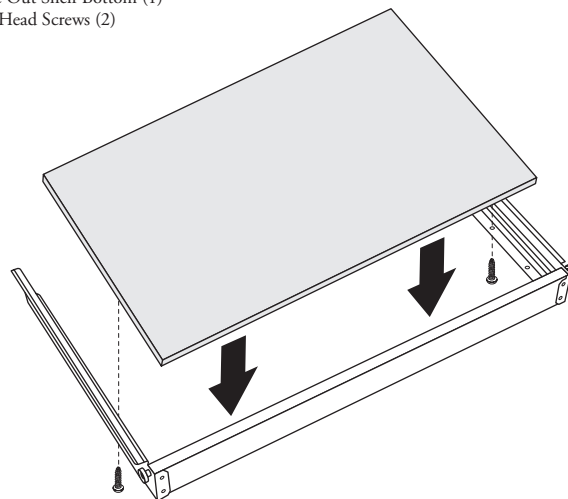

STEP 11

Parts Required

- Shelf Front Clips (2)
- Slide Out Shelf Front (1)

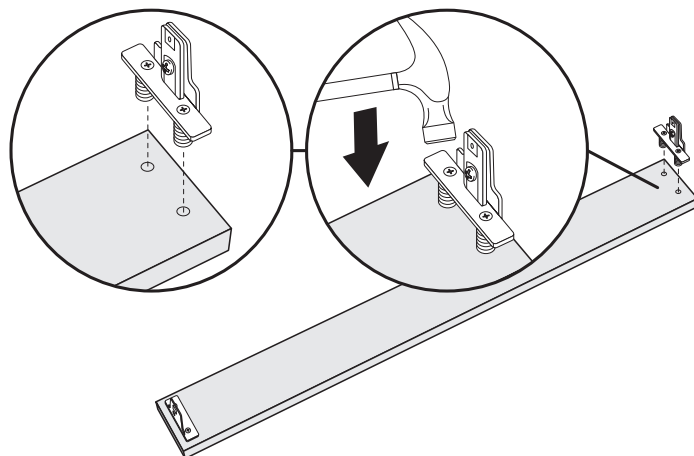

STEP 12

Insert slide out shelf front into shelf side. Tighten screws. Repeat for other sliding shelf.

